

# Washer-Extractor

12, 22, 25 and 105 Models

Refer to Page 5 for Model Numbers



[www.alliancelaundry.com](http://www.alliancelaundry.com)

Part No. D2409R5  
April 2024



# Table of Contents

Title	Page
Parts Ordering Information.....	4
Serial Plate Location .....	4
Model Identification .....	5
Serial Label .....	6
Logo Label .....	8
Upper Frame .....	10
Lower Frame .....	12
Stabilizing Spring - AF Non-Brand, H, HY, IY, J, LP, NY, SY and UY Models.....	14
Stabilizing Springs - AF, FX, HX, LY, MWF, PY, QW and SW Models .....	16
Stabilizing Springs - AF, IY, JY and NY Models .....	18
Stabilizing Springs - FX and PY Models .....	20
Cabinet - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 1 of 2) .....	22
Cabinet - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 2 of 2) .....	24
Cabinet - H, IY and J Models (Drawing 1 of 2) .....	26
Cabinet - H, IY and J Models (Drawing 2 of 2) .....	28
Cabinet - AF, FX, HX, LY, MWF, PY, QW and SW Models (Drawing 1 of 2) .....	30
Cabinet - AF, FX, HX, LY, MWF, PY, QW and SW Models (Drawing 2 of 2) .....	32
Cabinet - AF, IY, JY and NY Models (Drawing 1 of 3) .....	34
Cabinet - AF, IY, JY and NY Models (Drawing 2 of 3) .....	36
Cabinet - AF, IY, JY and NY Models (Drawing 3 of 3) .....	38
Cabinet - FX and PY Models (Drawing 1 of 2).....	40
Cabinet - FX and PY Models (Drawing 2 of 2).....	42
Cabinet (Drawing 1 of 3) .....	44
Cabinet (Drawing 2 of 3) .....	46
Cabinet (Drawing 3 of 3) .....	48
Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 1 of 5).....	50
Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 2 of 5).....	52
Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 3 of 5).....	54
Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 4 of 5).....	56
Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 5 of 5).....	58
Control Panel - H, IY and J Models (Drawing 1 of 4) .....	60
Control Panel - H, IY and J Models (Drawing 2 of 4) .....	62
Control Panel - H, IY and J Models (Drawing 3 of 4) .....	64
Control Panel - H, IY and J Models (Drawing 4 of 4) .....	66
Control Panel - AF, FX, HX, LY, MWF, PY, QW and SW Models (Drawing 1 of 2) .....	68
Control Panel - AF, FX, HX, LY, MWF, PY, QW and SW Models (Drawing 2 of 2) .....	70
Control Panel OPL - AF, IY and NY Models .....	72
Control Panel Vended - AF, IY and NY Models .....	74
Control Panel for Central Payment System - AF, IY and NY Models.....	76
Control Panel OPL - AF, IY, JY and NY Models .....	78
Control Panel Vended - AF, IY, JY and NY Models .....	80

© Copyright 2024, Alliance Laundry Systems LLC

All rights reserved. No part of the contents of this book may be reproduced or transmitted in any form or by any means without the expressed written consent of the publisher.

Control Panel for Central Payment System - AF, IY, JY and NY Models .....	82
Control Panel OPL - FX and PY Models .....	84
Control Panel OPL - FX and PY Models .....	86
Control Panel OPL - FX and PY Models .....	88
Control Panel Vended - FX and PY Models.....	90
Control Panel Vended - FX and PY Models.....	92
Control Panel Vended - FX and PY Models.....	94
Control Panel for Central Payment System - FX and PY Models .....	96
Control Panel for Central Payment System - FX and PY Models .....	98
Control Panel for Central Payment System - FX and PY Models .....	100
Control Panel OPL .....	102
Control Panel Vended .....	104
Control Panel for Central Payment System .....	106
Coin Meter Box .....	108
Coin Meter Box .....	110
Coin Meter (Drawing 1 of 3).....	112
Coin Meter (Drawing 2 of 3).....	114
Coin Meter (Drawing 3 of 3).....	116
Coin Meter - FX, LY and PY Models (Drawing 1 of 4) .....	118
Coin Meter - FX, LY and PY Models (Drawing 2 of 4) .....	120
Coin Meter - FX, LY and PY Models (Drawing 3 of 4) .....	122
Coin Meter - FX, LY and PY Models (Drawing 4 of 4) .....	124
Door (Drawing 1 of 4).....	126
Door (Drawing 2 of 4).....	128
Door (Drawing 3 of 4).....	130
Door (Drawing 4 of 4).....	132
Door - AF, IY, JY and NY Models .....	134
Door - FX and PY Models .....	136
Door Lock (Drawing 1 of 2) .....	138
Door Lock (Drawing 2 of 2) .....	140
Water Inlet System.....	142
Two Water Inlet System.....	144
Three Water Inlet System .....	146
Two Water Inlet System Without Soap Hopper .....	148
Three Water Inlet System Without Soap Hopper .....	150
Cabinet Reinforcement Without Soap Hopper .....	152
Drain System .....	154
Drain System .....	156
Drain System .....	158
Rear Panel (Drawing 1 of 3) .....	160
Rear Panel (Dra wing 2 of 3) .....	162
Rear Panel (Drawing 3 of 3) .....	164
Rear Panel - 230-400V with Neutral (Drawing 1 of 2).....	166
Rear Panel - 230-400V with Neutral (Drawing 2 of 2).....	168
Rear Panel - 400-440V (Drawing 1 of 2).....	170
Rear Panel - 400-440V (Drawing 2 of 2).....	172
Rear Panel - 230-400V CE Models with Neutral (Drawing 1 of 2).....	174
Rear Panel - 230-400V CE Models with Neutral (Drawing 2 of 2).....	176
Rear Panel - 400-440V Models (Drawing 1 of 2) .....	178
Rear Panel - 400-440V Models (Drawing 2 of 2) .....	180

Rear Panel - 230V/400V + Neutral (Drawing 1 of 2).....	182
Rear Panel - 230V/400V + Neutral (Drawing 2 of 2).....	184
Rear Panel - 400V / 440-480V (Drawing 1 of 2) .....	186
Rear Panel - 400V / 440-480V (Drawing 2 of 2) .....	188
Steam Heating .....	190
Steam Heating .....	192
Washing Drum and Tub (Drawing 1 of 2) .....	194
Washing Drum and Tub (Drawing 2 of 2) .....	196
Washing Drum and Tub (Drawing 1 of 3) .....	198
Washing Drum and Tub (Drawing 2 of 3) .....	200
Washing Drum and Tub (Drawing 3 of 3) .....	202
SoftWash - With Built-In Recirculation Pump.....	204
Drive.....	206
Bearing Housing .....	208
Elevated Base Frame .....	210
Base Frame with Built-In Filter .....	212
Soft Wash - Without Built-In Recirculation Pump.....	214
Liquid Soap Supply System - Pumps.....	216
Filter Tank .....	218
Wire Harnesses .....	220
Parts Index.....	221

## Parts Ordering Information


If literature or replacement parts are required, contact the source from whom the machine was purchased or contact Alliance Laundry Systems at (920) 748-3950 for the name and address of the nearest authorized parts distributor.

For technical assistance, call the number listed below:

(920) 748-3121   Ripon, Wisconsin

## Serial Plate Location

When calling or writing about your product, be sure to mention model and serial numbers. Model and serial numbers are located on serial plate(s).

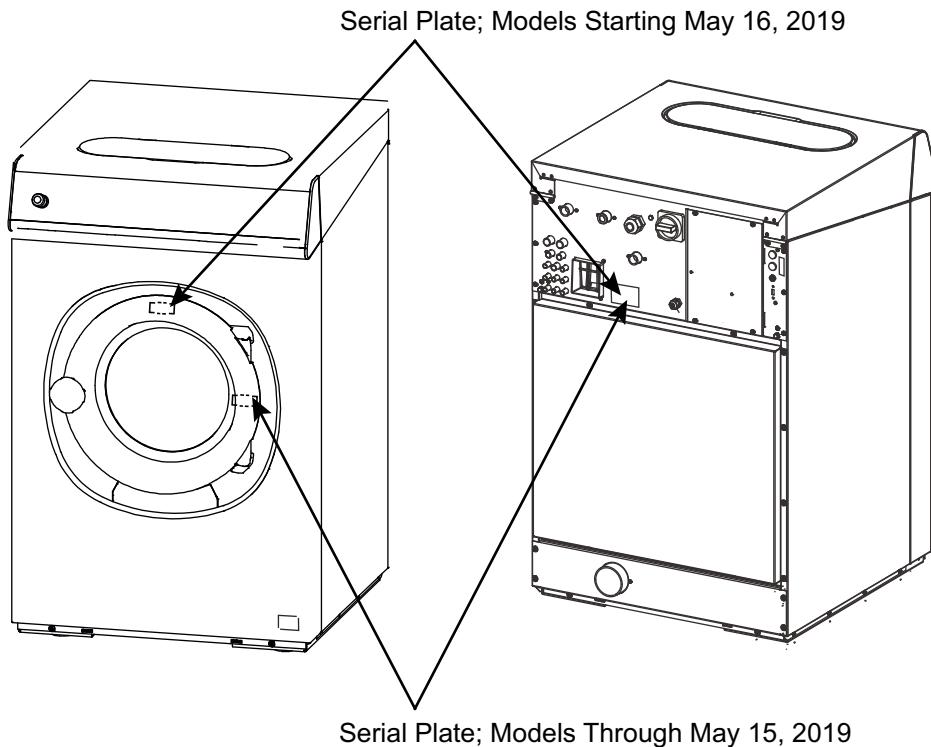


CFS1954P\_D2409

## Model Identification

Information in this manual is applicable to these washer-extractor models:

AF105_BASIC	HYR105F	LYU105X	PYR105V	UYR105I
AF105_GRAPHITRONIC_TOUCH_OPL	HYU105F	LYX105T	PYR105X	UYU105G
AF105_GRAPHITRONIC_TOUCH_VEND	HYW105F	LYX105X	PYU105G	UYU105I
AF105_PROFESSIONAL	HYX105F	LYY105T	PYU105T	UYW105I
AF105_X_CONTROL	IYA105G	LYY105X	PYU105V	UYX105I
AF105_X_CONTROL_PLUS	IYA105V	NYA105G	PYU105X	UYY105I
FX105_BUPA_X_CONTROL	IYC105G	NYA105V	PYX105T	
FX105_BUPA_X_CONTROL_PLUS	IYC105J	NYC105G	PYX105V	
FX105_X_CONTROL	IYC105R	NYC105T	PYX105X	
FX105_X_CONTROL_FLEX_OPL	IYC105V	NYC105V	PYY105T	
FX105_X_CONTROL_FLEX_PLUS_OPL	IYE105G	NYC105X	PYY105X	
FX105_X_CONTROL_FLEX_VEND	IYE105J	NYE105G	SYA105G	
FX105_X_CONTROL_PLUS	IYE105R	NYE105T	SYC105A	
HX105_X_CONTROL	IYE105V	NYE105V	SYC105D	
HX105_X_CONTROL_PLUS	IGY105J	NYE105X	SYC105G	
HY105_HC-200	IGY105R	NYH105T	SYE105A	
HY25_HC-200	IYH105J	NYH105X	SYE105D	
IY105_ARIES	IYH105R	NYM105G	SYE105G	
IY105_ARIES-ELITE	IYM105G	NYM105T	SYG105A	
IY105_EVOLIS_ELITE_OPL	IYM105J	NYM105X	SYG105D	
IY105_EVOLIS_OPL	IYM105R	NYR105T	SYH105A	
IY105_EVOLIS_VEND	IYN025R	NYR105V	SYH105D	
IY25_ARIES-ELITE	IYQ105J	NYR105X	SYM105A	
JLA22_ARIES	IYQ105R	NYU105G	SYM105D	
JLA22_ARIES-ELITE	IYR105J	NYU105T	SYM105G	
JLA22C_ARIES	IYR105R	NYU105V	SYN025D	
JLA22C_ARIES-ELITE	IYR105V	NYU105X	SYQ105A	
LPRFRFAF105E	IVU105G	NYX105T	SYQ105D	
MWFX25_X_CONTROL	IVU105J	NYX105V	SYR105A	
MWFX25_X_CONTROL_PLUS	IVU105R	NYX105X	SYR105D	
PY105_X_CONTROL_FLEX	IVU105V	NYY105T	SYU105A	
PY105_X_CONTROL_FLEX_PLUS	IYW105J	NYY105X	SYU105D	
PY25_X_CONTROL	IYW105R	PYA105G	SYU105G	
PY25_X_CONTROL_PLUS	IYX105J	PYA105V	SYW105A	
QW12_X_CONTROL_PLUS	IYX105R	PYC105G	SYW105D	
SW105	IYX105V	PYC105T	SYX105A	
SW12_X_CONTROL	IYY105J	PYC105V	SYX105D	
SY105_QED	IYY105R	PYC105X	SYY105A	
SY105_QED-SELECT	JYC105J	PYE105G	SYY105D	
SY25_QED-SELECT	JYC105R	PYE105T	UYA105G	
UY105_PROFORM	JYE105J	PYE105V	UYC105G	
UY25_PROFORM	JYE105R	PYE105X	UYC105I	
H105	JYE105V	PYH105T	UYE105G	
HYC105F	LYC105T	PYH105X	UYE105I	
HYE105F	LYC105X	PYM105G	UYG105I	
HYG105F	LYE105T	PYM105T	UYH105I	
HYH105F	LYE105X	PYM105X	UYM105G	
HYM105F	LYH105T	PYN025T	UYM105I	
HYN025F	LYH105X	PYN025X	UYN025I	
HYQ105F	LYU105T	PYR105T	UYQ105I	


# Serial Label

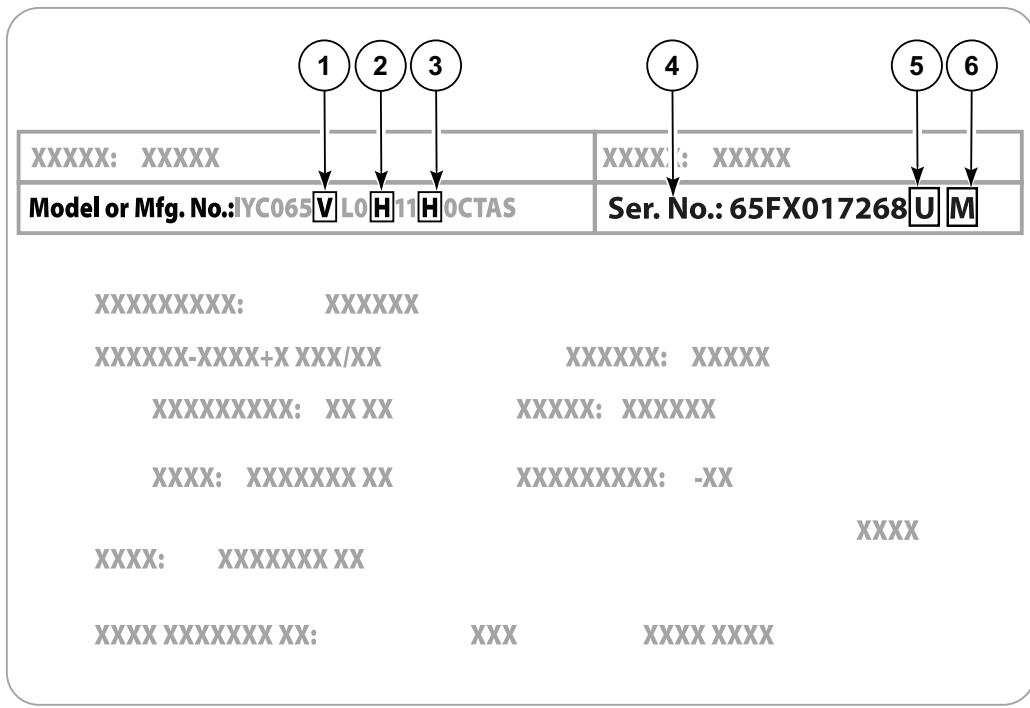

## Serial Label

REF	PART NO.	DESCRIPTION	COMMENTS
1	-	Control	A, D, F, I, J, R, T, V or X letter in 7th position of the model number
2	-	Speed	2, 3, 4, 6, H, N or U character in 10th position of the model number
3	-	Design	1, 2, 3, 4, 5, 6, 7, 8, A, B, C, D, G, H, J, K, L, M, N or P digits or characters in 13th position of the model number
4	-	Serial Number	
5	-	Manufacturing Date - Year	2009: P 2010: R 2011: T 2012: V 2013: X 2014: B 2015: D 2016: F 2017: H 2018: K 2019: M 2020: Q 2021: S 2022: U 2023: W 2024: Y 2025: Z
6	-	Manufacturing Date - Month	January: A or B February: C or D March: E or F April: G or H May: J or K June: L or M July: N or Q August: P or S September: R or U October: T or W November: V or Y December: X or Z

## Logo Label

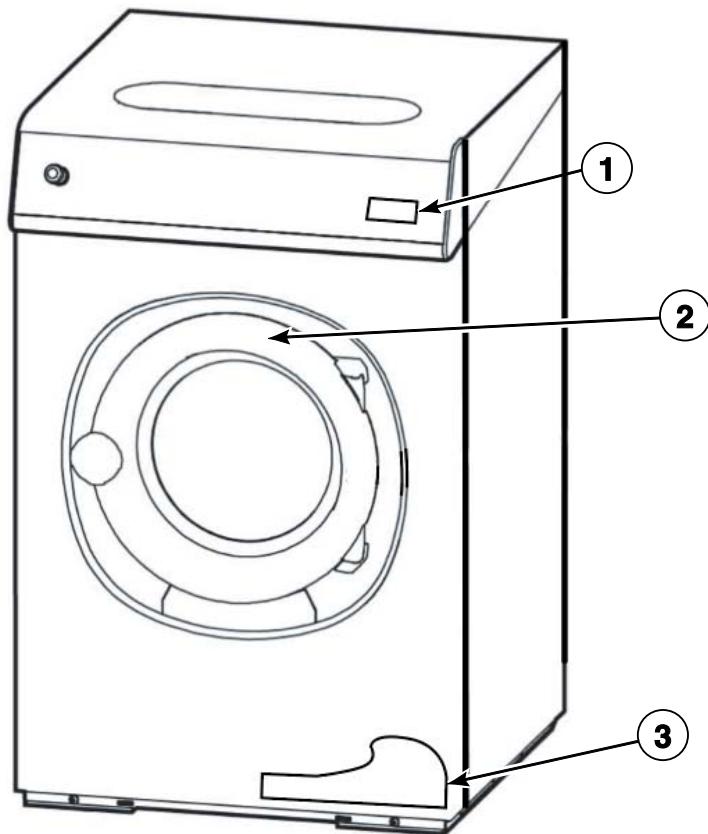


CFD3558P\_D2409

## Logo Label

REF	PART NO.	DESCRIPTION	COMMENTS
1	572486	Label	Lion Logo
2	576337	Label	Located on top inside of door; AF and NY models
3	572487	Label	Softwash

## Upper Frame

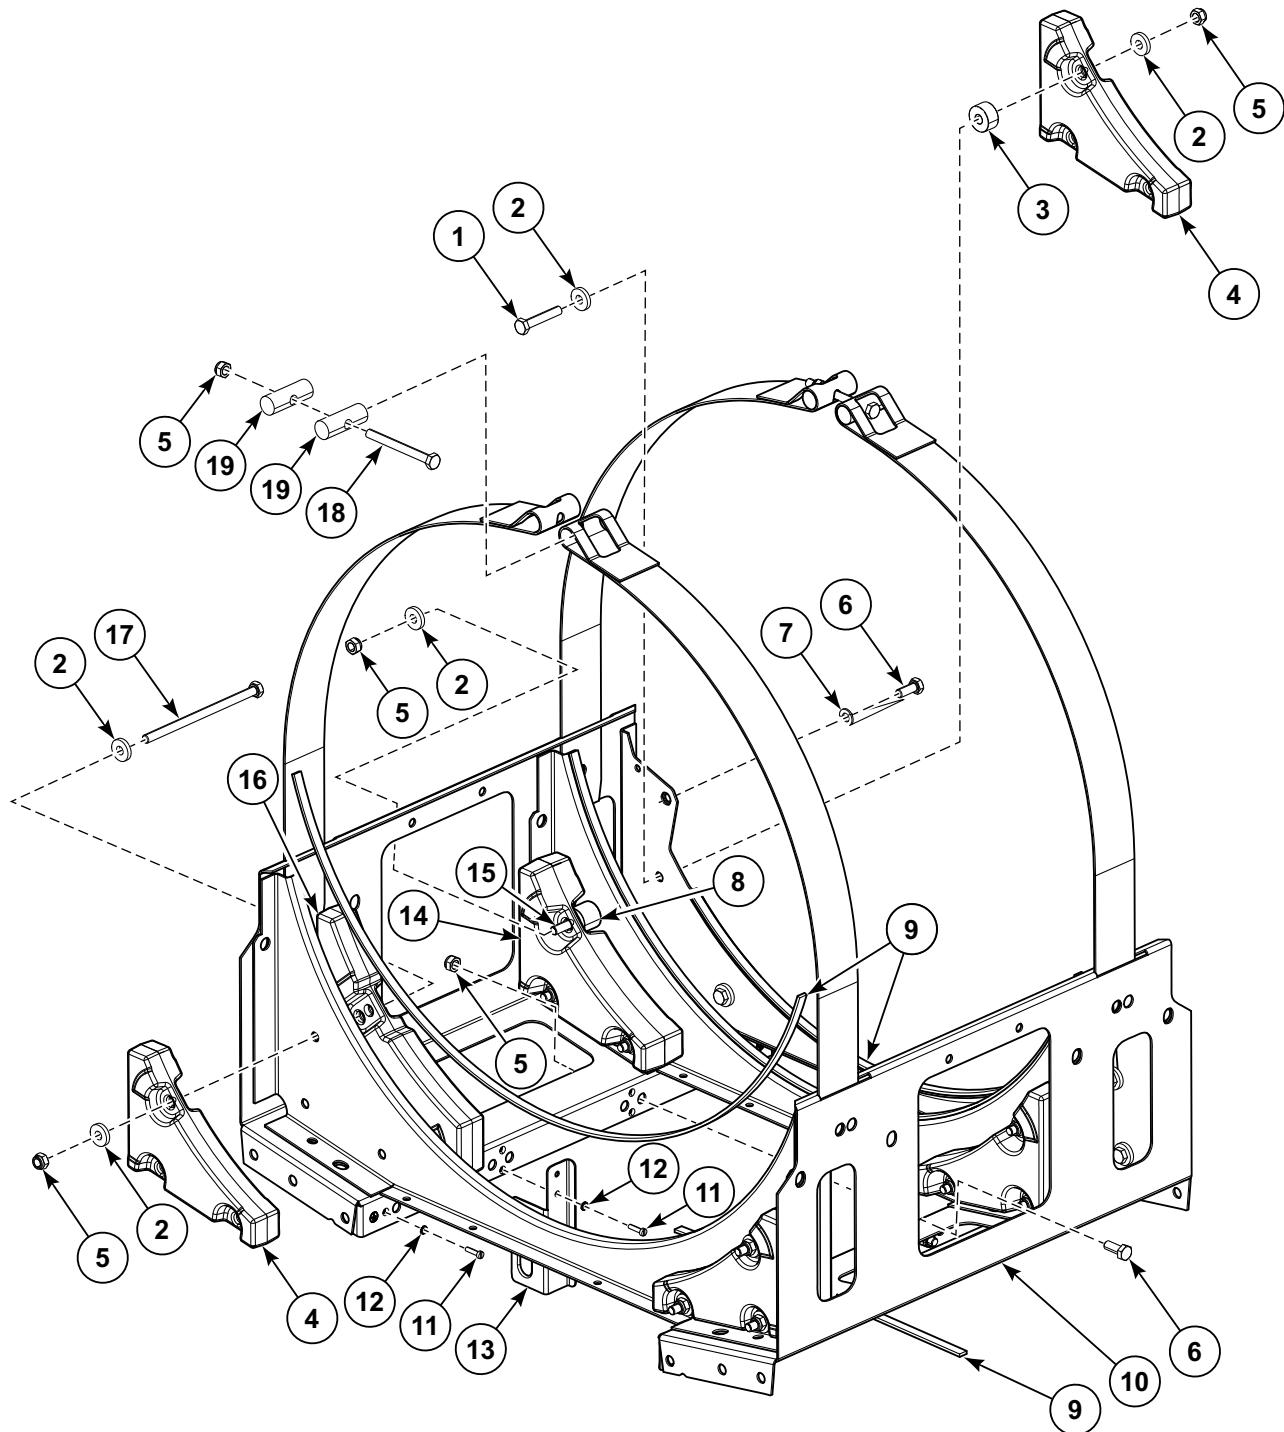


CZW115P\_D2409

## Upper Frame

REF	PART NO.	DESCRIPTION	COMMENTS
	SP245704003021	Adhesive	Used with external tub for fastening into frame
1	SP309933000845	Bolt	M8x45
2	SP525284	Washer	M8
3	SP515274	Distance Case	
4	SP533737	Lower Weight	
5	SP310985000008	Nut	M8
6	SP309933000820	Bolt	M8x20
7	SP311125000008	Washer	8.4
8	SP557472	Distance Case	
9	SP517232	Seal	
10	SP533756	Upper Frame	
11	SP309084000416	Bolt	M4x16
12	SP311679800004	Washer	M4
13	SP533388	Oscillation Limiter	
14	SP533753	Lower Weight	
15	SP521895	Bolt	M8x55
16	SP533784	Lower Weight	
17	SP309933000870	Bolt	M8x70
18	SP309933000880	Bolt	M8x80
19	SP533738	Cover Strip Pin	

## Lower Frame

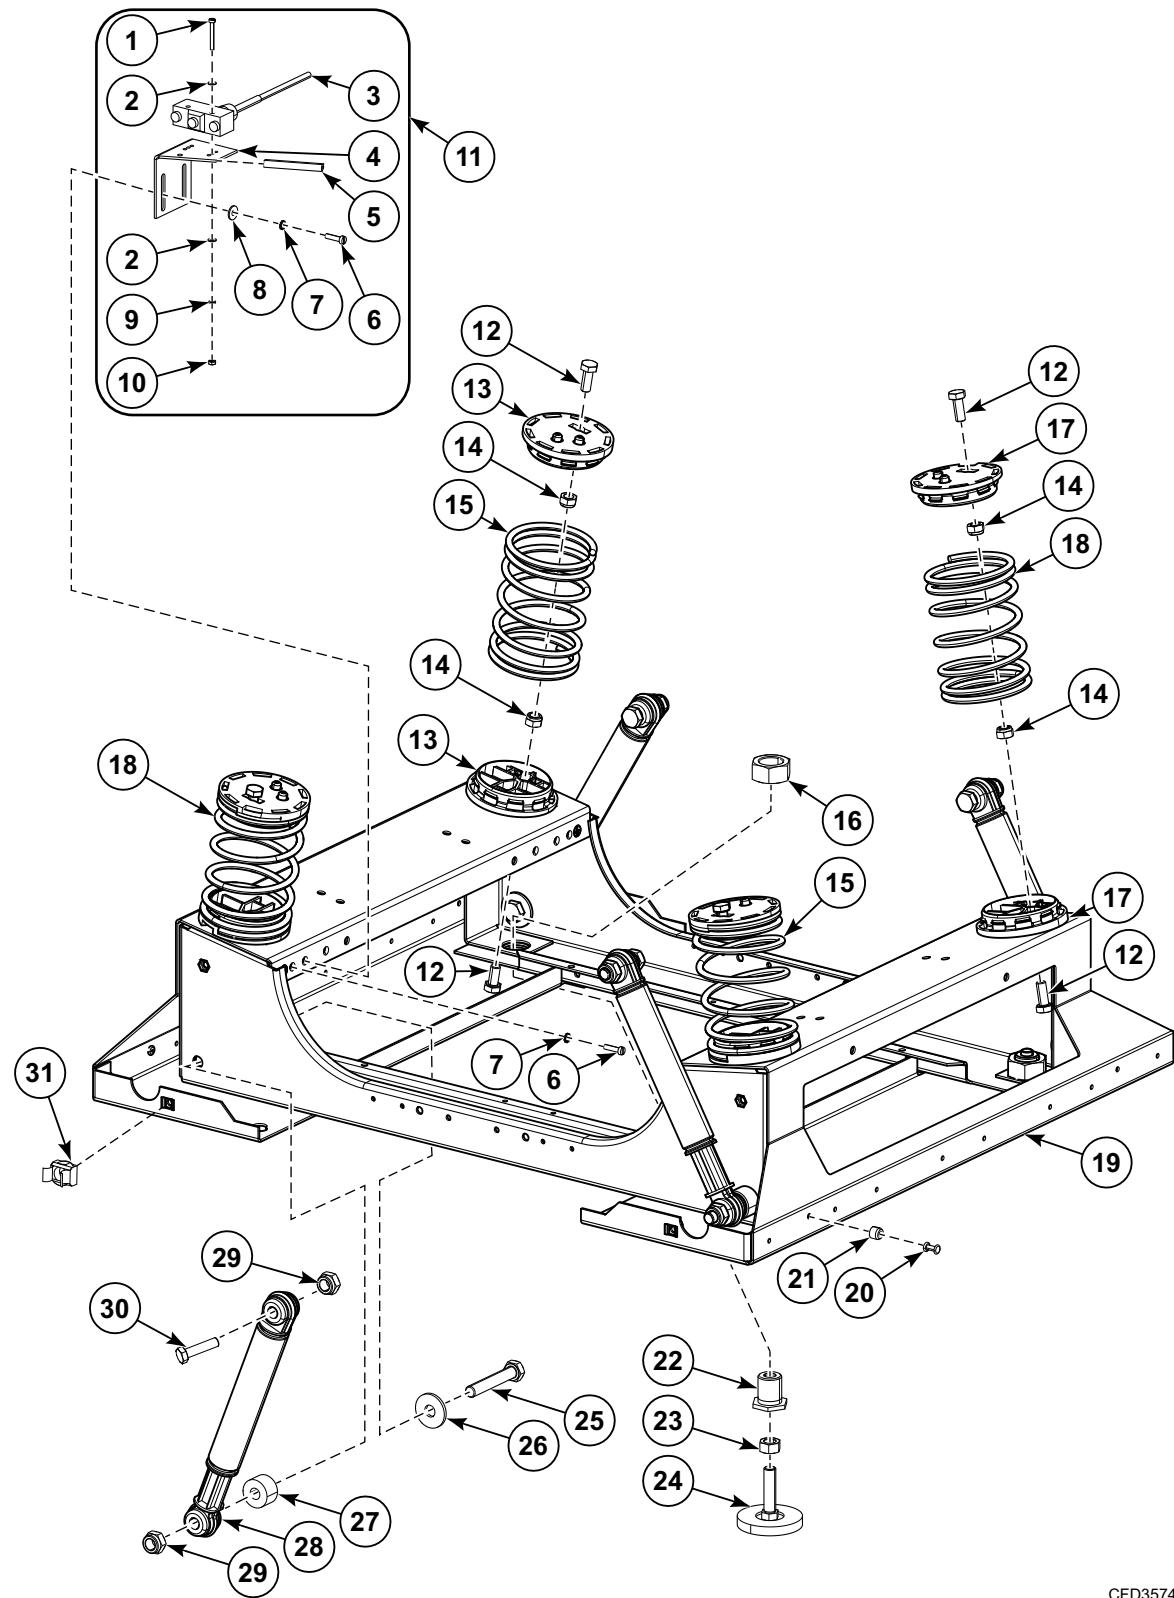


CFD3574P\_D2409

## Lower Frame

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP309084240325	Bolt	M3x25
2	SP311125000003	Washer	3.2
3	SP528309	Microswitch	Includes spring
4	SP533387	Vibration Switch Holder	
5	SPPRI505000058	Profiled Sealing	Through Serial No. 105FX014614SW
6	SP309084000416	Bolt	M4x16; Models Through 13 December 2022
	SP529206	Screw	4x11; Models Starting 14 December 2022
7	SP311679800004	Washer	M4; Models Through 13 December 2022
8	SP311902100004	Washer	M4 - 4.3/12/1; Models Through 13 December 2022
9	SP311679800003	Washer	M3
10	SP310934000003	Nut	M3
11	SP533391	Vibration Switch Assembly	Includes items 1-10
12	SP309933000820	Bolt	M8x20
13	SP534978	Spring Holder	Left
14	SP310985000008	Nut	M8
15	SP533765	Spring	Left
16	SP310934000020	Nut	M20
17	SP534977	Spring Holder	Right
18	SP533764	Spring	Right
19	SP533749	Lower Frame	
20	SP547779	Rivet	4x16.7
21	SP520408	Pin Insertion	
22	SP533726	Bolt	
23	SP310934000010	Nut	M10
24	SPPRI504000001	Adjustable Foot	
25	SP506432	Bolt	M10x60
26	SP311902100010	Washer	10
27	SP533727	Roller	
28	SP533716	Damper	4 required
29	SP310985000010	Nut	M10
30	SP527420	Bolt	M10x40
31	SP510923	Nut	M6

## **Stabilizing Spring - AF Non-Brand, H, HY, IY, J, LP, NY, SY and UY Models**

Models with A, D, F, I, J, R, T or X in 7th position of the model number

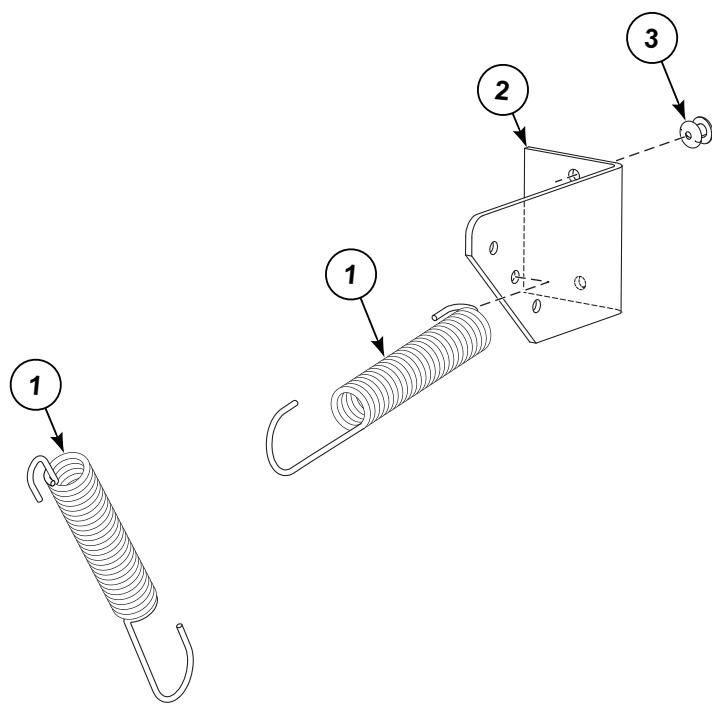


CZW431P\_D2409

## **Stabilizing Spring - AF Non-Brand, H, HY, IY, J, LP, NY, SY and UY Models**

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP505372	Spring	
2	SP550448	Rear Spring Holder	
3	505479	Rivet	4x8

# Stabilizing Springs - AF, FX, HX, LY, MWF, PY, QW and SW Models

Models with A, D, F, I, J, R, T or X in 7th position of the model number

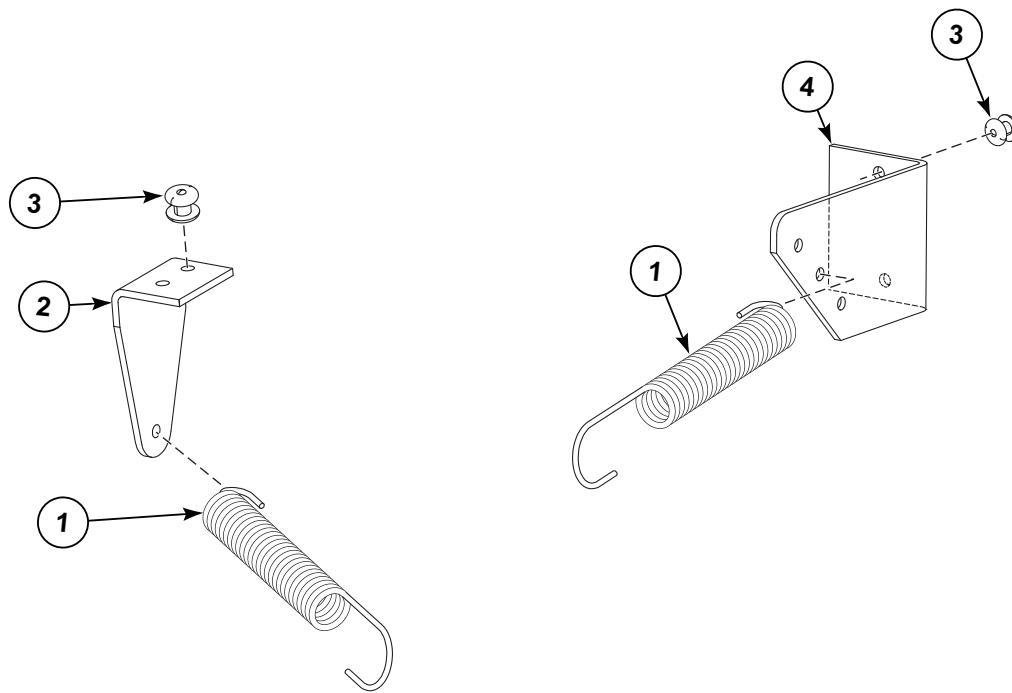


CZW432P\_D2409

## **Stabilizing Springs - AF, FX, HX, LY, MWF, PY, QW and SW Models**

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP505372	Spring	
2	SP550447	Front Spring Holder	
3	505479	Rivet	4x8
4	SP550448	Rear Spring Holder	

## Stabilizing Springs - AF, IY, JY and NY Models

Models with V in 7th position of the model number or models with G, H, J or K in 13th position of the model number

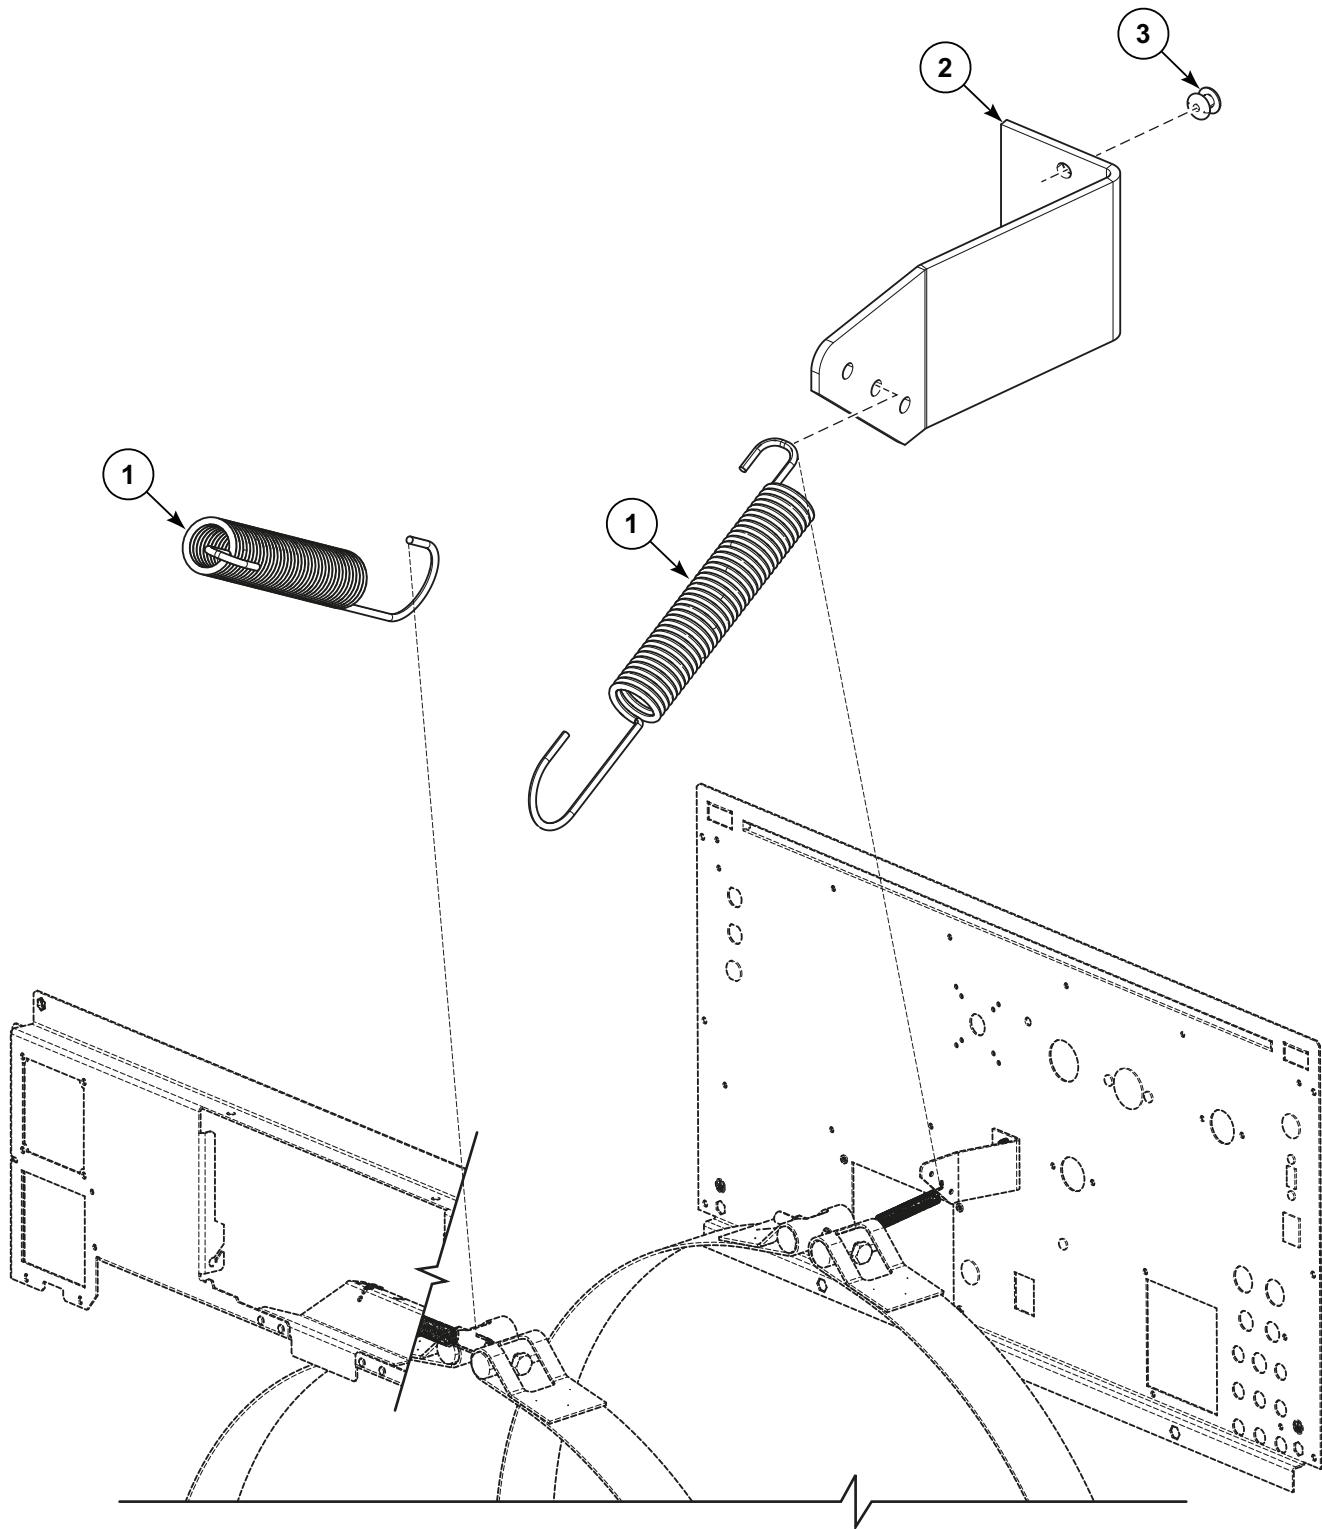


CZW419P\_D2409

## **Stabilizing Springs - AF, IY, JY and NY Models**

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP505372	Spring	
2	SP550448	Rear Spring Holder	
3	505479	Rivet	4x8

## Stabilizing Springs - FX and PY Models

Models with V or G in 7th position of the model number

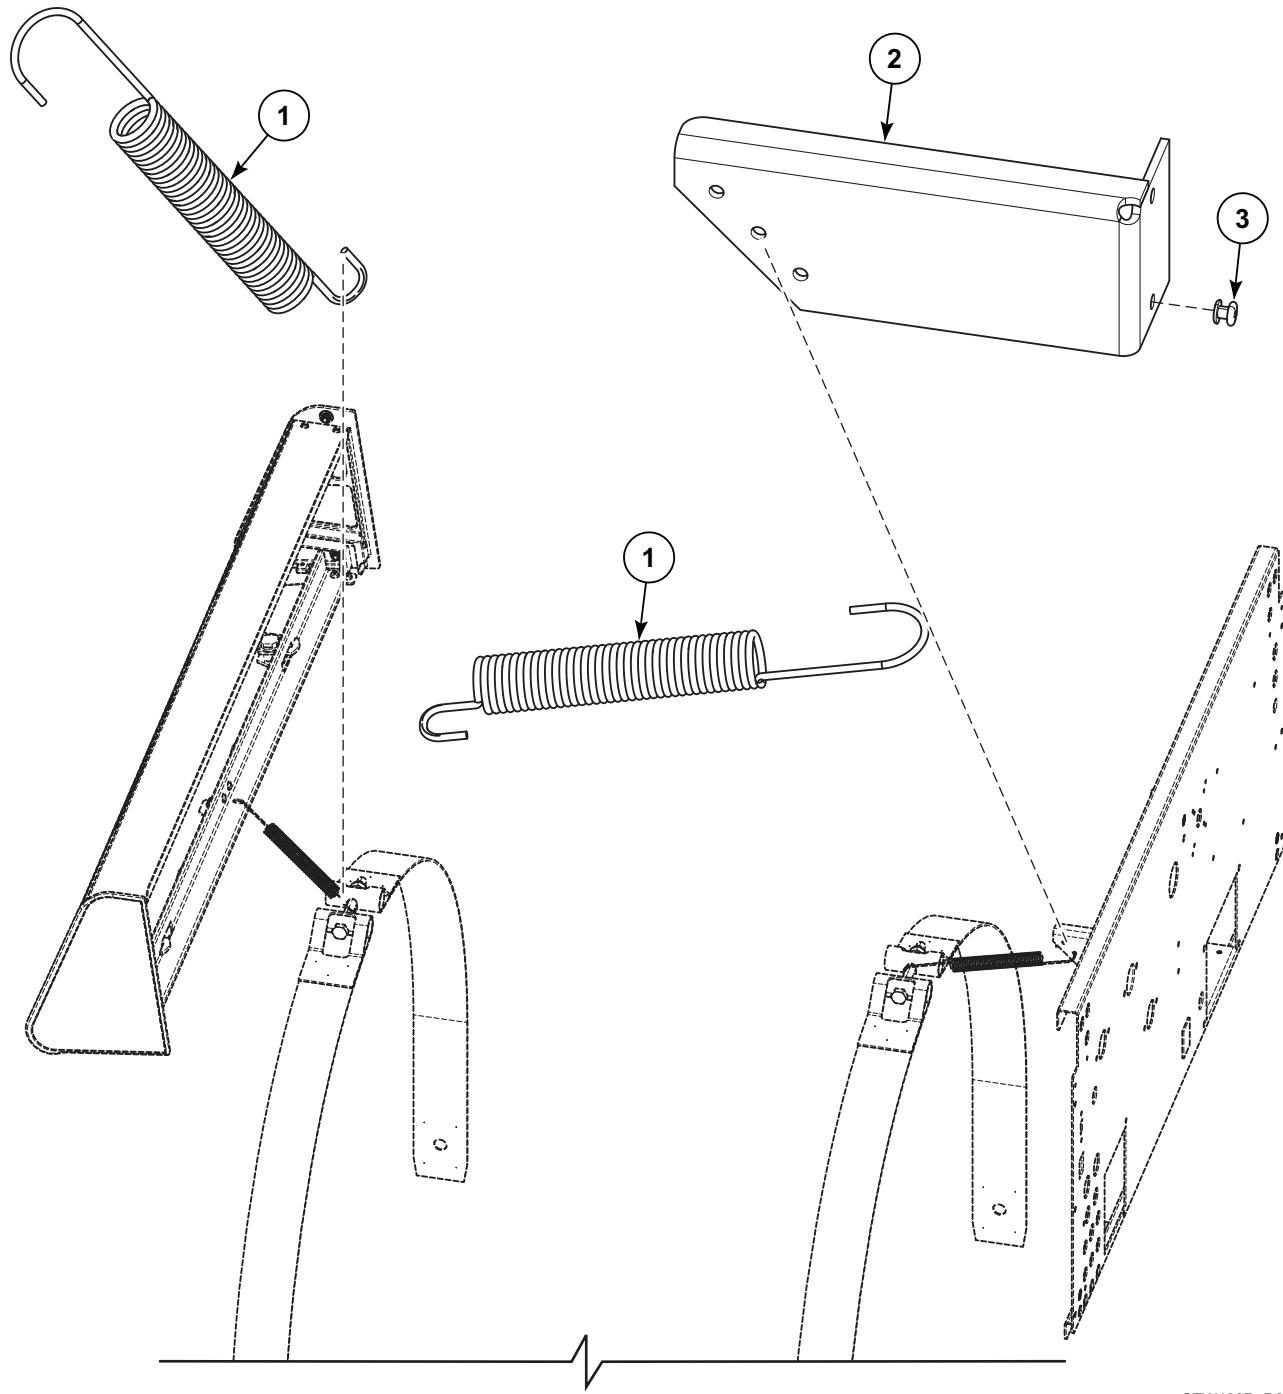


CZW420P\_D2409

## Stabilizing Springs - FX and PY Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP505372	Spring	
2	SP550448	Rear Spring Holder	
3	505479	Rivet	4x8

# Cabinet - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 1 of 2)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

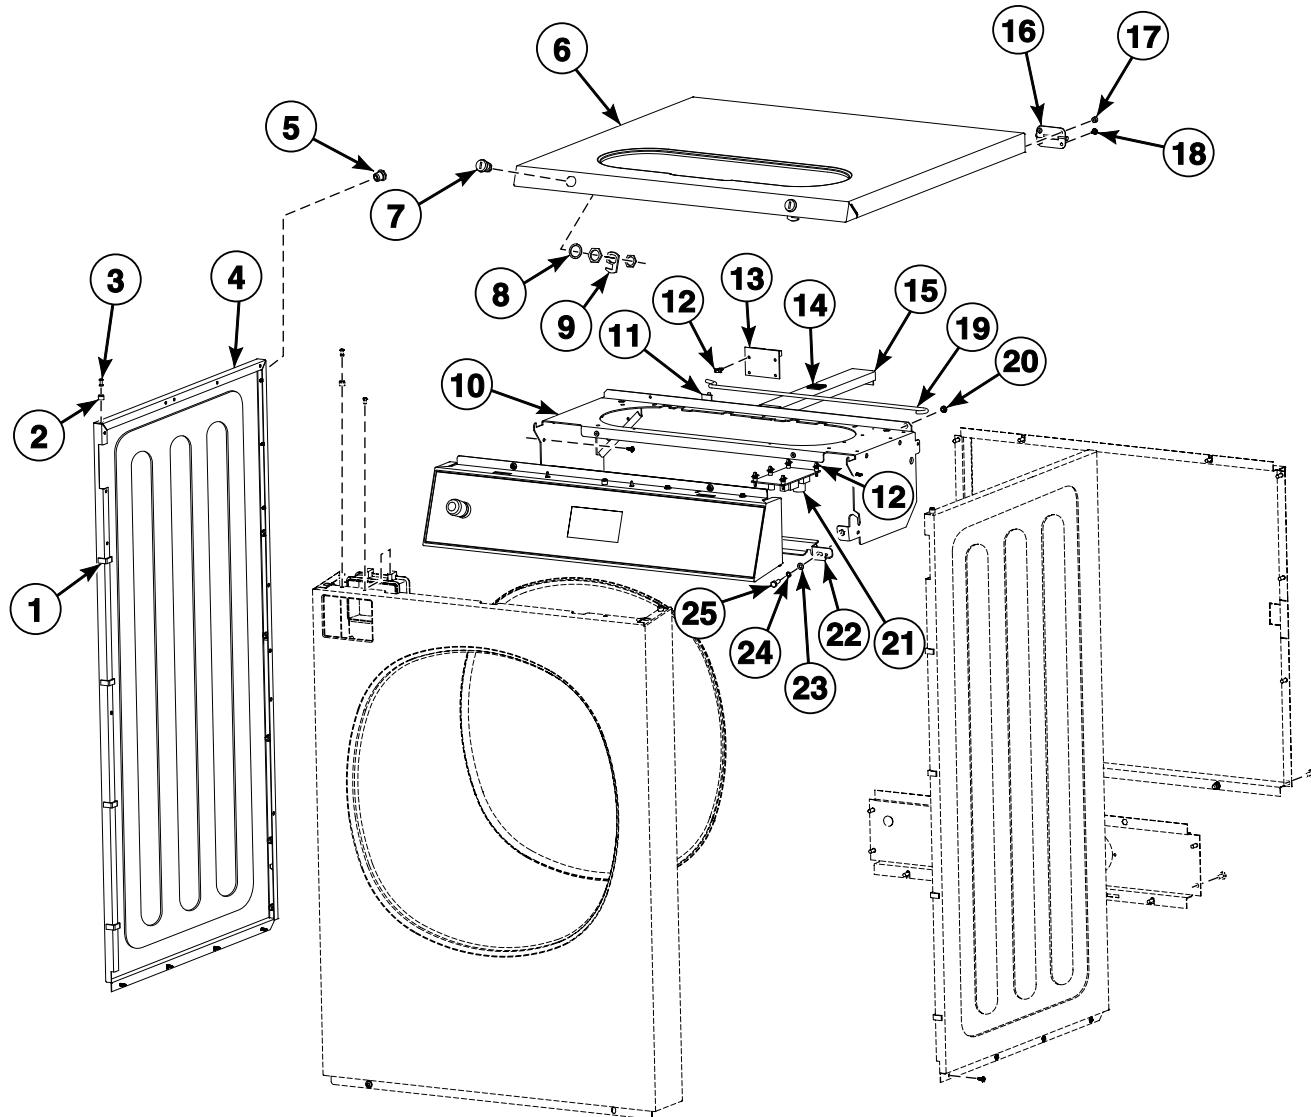

CFS1961P\_D2409


# Cabinet - AF Non-Brand, HY, LP, NY, SY and UY Models

## (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP517232	Seal	
2	SP520408	Pin Insertion	
3	SP547779	Rivet	4x16.7
4	SP557629	Side Panel	Left
	563500	Side Panel	Left; Painted; AF Non-Brand, LP and NY models
5	SP313251000006	Nut	M6
6	567873	Top Cover	Without soap hopper opening
	SP557645	Top Cover	
7	SP547527	Lock	
	SP550616	Key	Used with SP547527 Lock
8	SPPRI522000012	Washer	21x27x1
9	SPPRI610002007	Hook Lock	Small
10	SP557621	Panel Holder	
11	SPPRI551016250	Hook	Stick-on
12	SPPRI326002004	Holder	
13	545238	Automatic Unlocking Module Assembly	MC6; Includes item 11, SP547004 Autmatic Door Opening Module; SP345000160971 Binding Strip and SP545235 Door Timer Wiring
14	SP550115	Fastener	
15	SP547707	Top Cover Reinforcement	
16	SP516832	Hinge	
17	SP313250048008	Rivet	4.8x8
18	SP529206	Screw	4x11
19	SP533341	Upper Lid Prop	
20	SP273121005052	Cable Passage	5x2
21	SP552489	Automatic Unlocking Module Assembly	MC7; Includes item 11, SP553406 Automatic Door Opening Module, SP345000160971 Binding Strip, SP552455 Automatic Door Opening Module Wiring and SP552381 Power Terminal Protection
22	SP558880	Reinforcement	
23	SP311125000006	Washer	6.4
24	SP311127000006	Washer	6
25	SP309933000616	Bolt	M6x16

# Cabinet - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 2 of 2)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

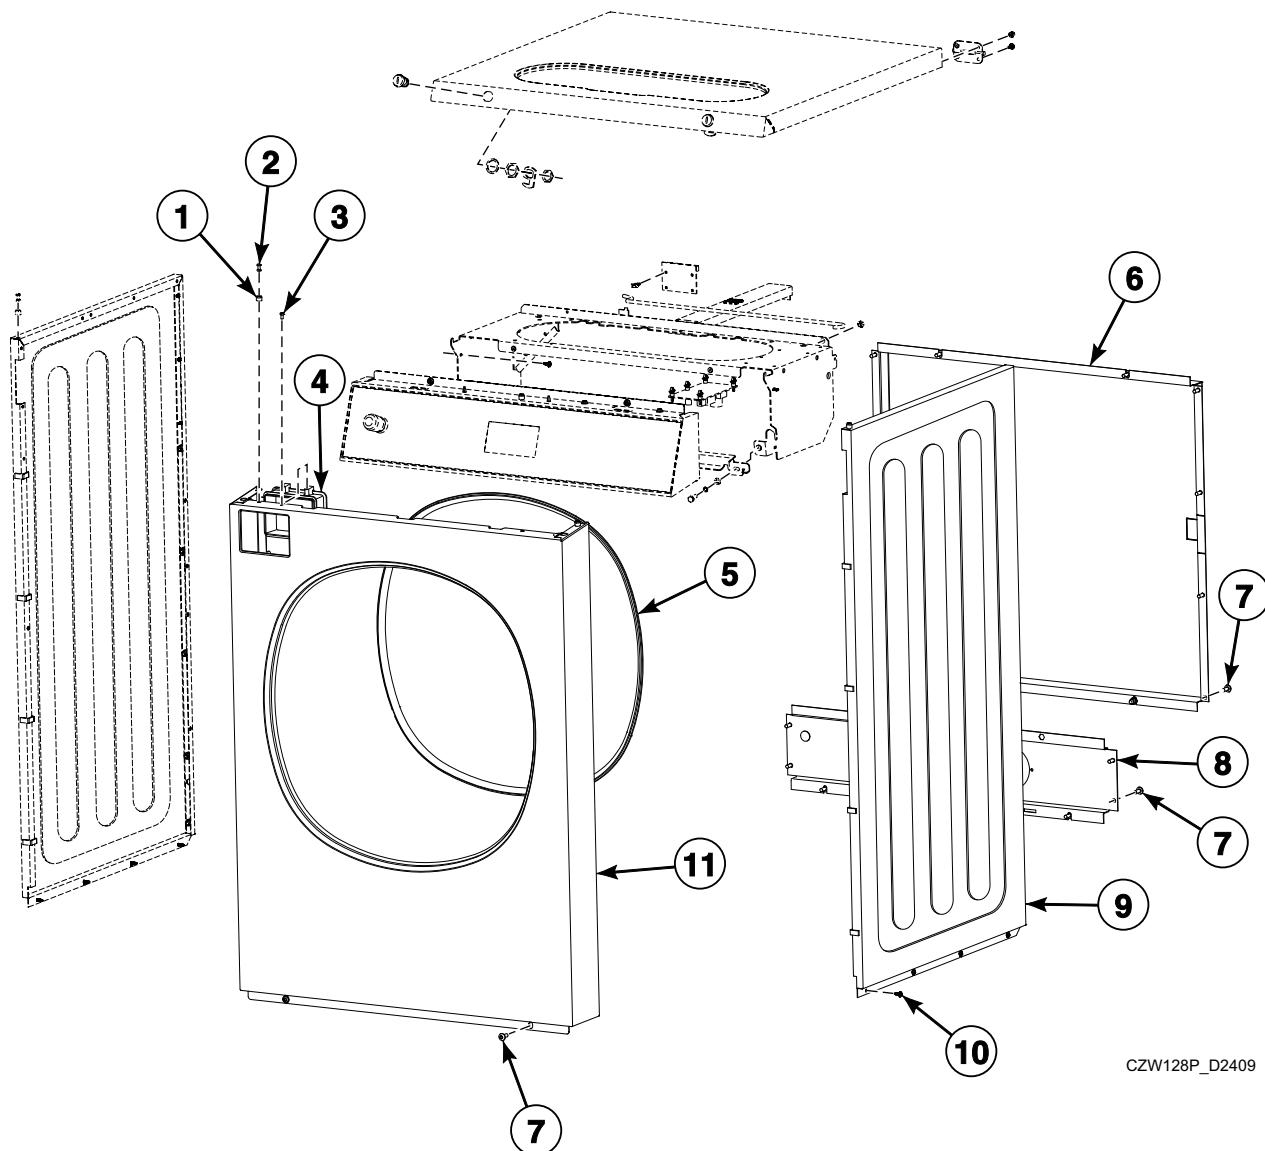


## Cabinet - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP520408	Pin Insertion	
2	SP547779	Rivet	4x16.7
3	SP309084000408	Bolt	M4x8
4	SP533103	Coin Vault Plate	
5	SP529068	Edge Protection	
6	SP533143	Rear Cover	
7	SP555658	Bolt	M6x16
8	SP533382	Lower Rear Cover	
9	SP557631	Side Panel	Right; Stainless
	563502	Side Panel	AF Non-Brand, LP and NY models; Right; Painted
10	SP529206	Screw	4x11
11	SP547752	Front Panel	OPL; Stainless
	SP547754	Front Panel	Vended; Stainless
	563458	Front Panel	AF Non-Brand, LP and NY models; OPL; Painted
	563460	Front Panel	AF Non-Brand, LP and NY models; Vended; Painted

# Cabinet - H, IY and J Models (Drawing 1 of 2)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

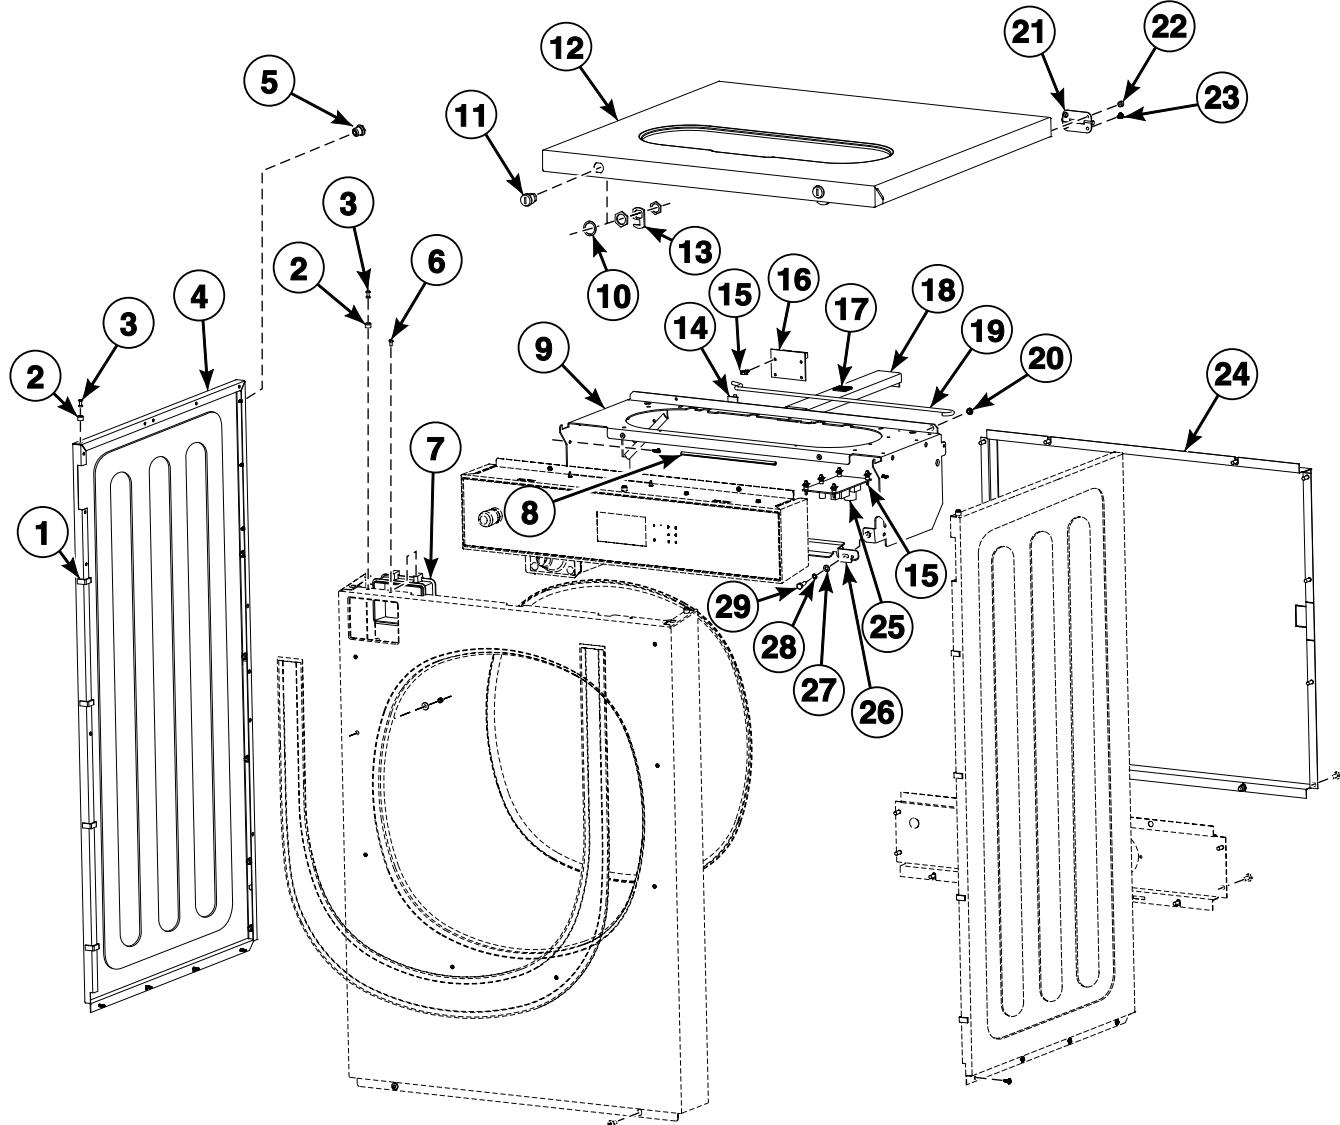


CFS1963P\_D2409

# Cabinet - H, IY and J Models (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP517232	Seal	
2	SP520408	Pin Insertion	
3	SP547779	Rivet	4x16.7
4	SP557629	Side Panel	Stainless; Left
	SP558976	Side Panel	Black; Left
5	SP313251000006	Nut	M6
6	SP309084000408	Bolt	M4x8
7	SP533103	Coin Vault Plate	
8	SPPRI505000058	Profiled Sealing	Through Serial No.105FX010098KZ
9	SP560302	Panel Holder	
10	SPPRI522000012	Washer	21x27x1
11	SP547527	Lock	
	SP550616	Key	Used with SP547527 Lock
12	SP558898	Top Cover	
13	SPPRI610002007	Hook Lock	Small
14	SPPRI551016250	Hook	Stick-on
15	SPPRI326002004	Holder	
16	545238	Automatic Unlocking Module Assembly	MC6; Includes item 14, SP547004 Automatic Door Opening Module, SP345000160971 Binding Strip and SP545235 Door Timer Wiring
17	SP550115	Fastener	
18	SP547707	Top Cover Reinforcement	
19	SP533341	Upper Lid Prop	
20	SP273121005052	Cable Passage	5x2
21	SP516832	Hinge	
22	SP313250048008	Rivet	4.8x8
23	SP529206	Screw	
24	SP533143	Rear Cover	
25	SP552489	Automatic Unlocking Module Assembly	MC7; Includes item 14, SP553406 Automatic Door Opening Module, SP345000160971 Binding Strip, SP552455 Automatic Door Opening Module Wiring and SP552381 Power Terminal Protection
26	SP558944	Reinforcement	
27	SP311125000006	Washer	6.4
28	SP311127000006	Washer	6
29	SP309933000616	Bolt	M6x16

## Cabinet - H, IY and J Models (Drawing 2 of 2)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

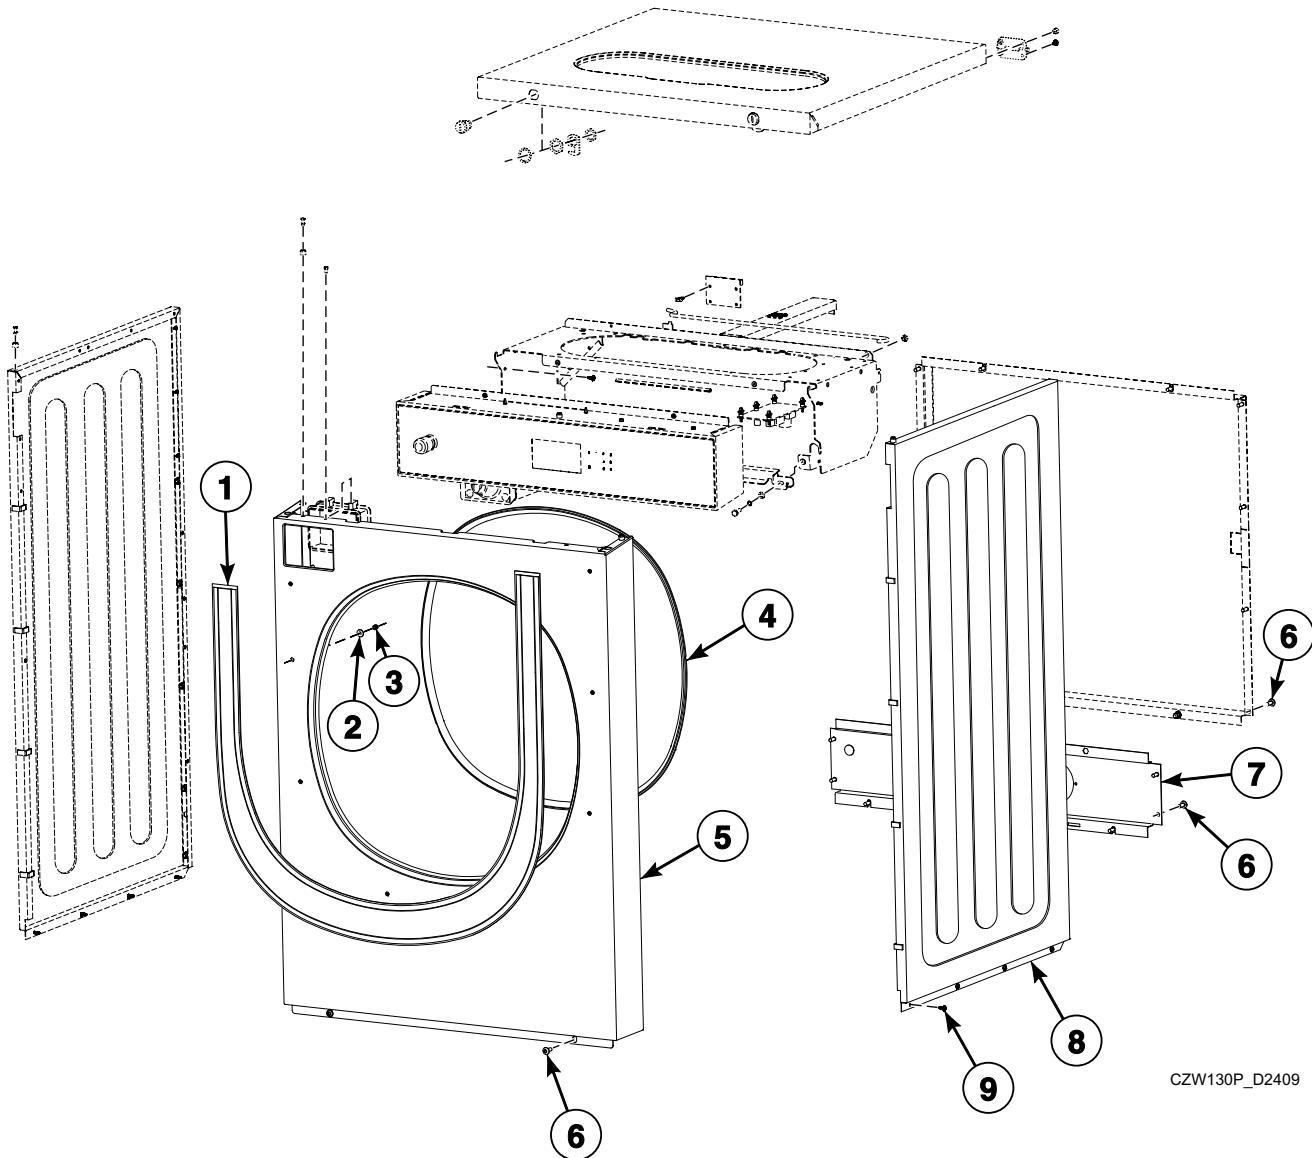


CZW130P\_D2409

## Cabinet - H, IY and J Models (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP556983	U Shape	OPL
	SP556984	U Shape	Vended
2	SP311902100004	Washer	M4
3	SP514193	Nut	M4
4	SP529068	Edge Protection	
5	SP557056	Front Panel	OPL; Stainless
	SP557057	Front Panel	Vended; Stainless
	SP562724	Front Panel	J models; OPL
	SP562725	Front Panel	J models; Vended
6	SP555658	Bolt	M6x16
7	SP533382	Lower Rear Cover	
8	SP557631	Side Panel	Stainless; Right
	SP558978	Side Panel	Black; Right
9	SP529206	Screw	

# Cabinet - AF, FX, HX, LY, MWF, PY, QW and SW Models (Drawing 1 of 2)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

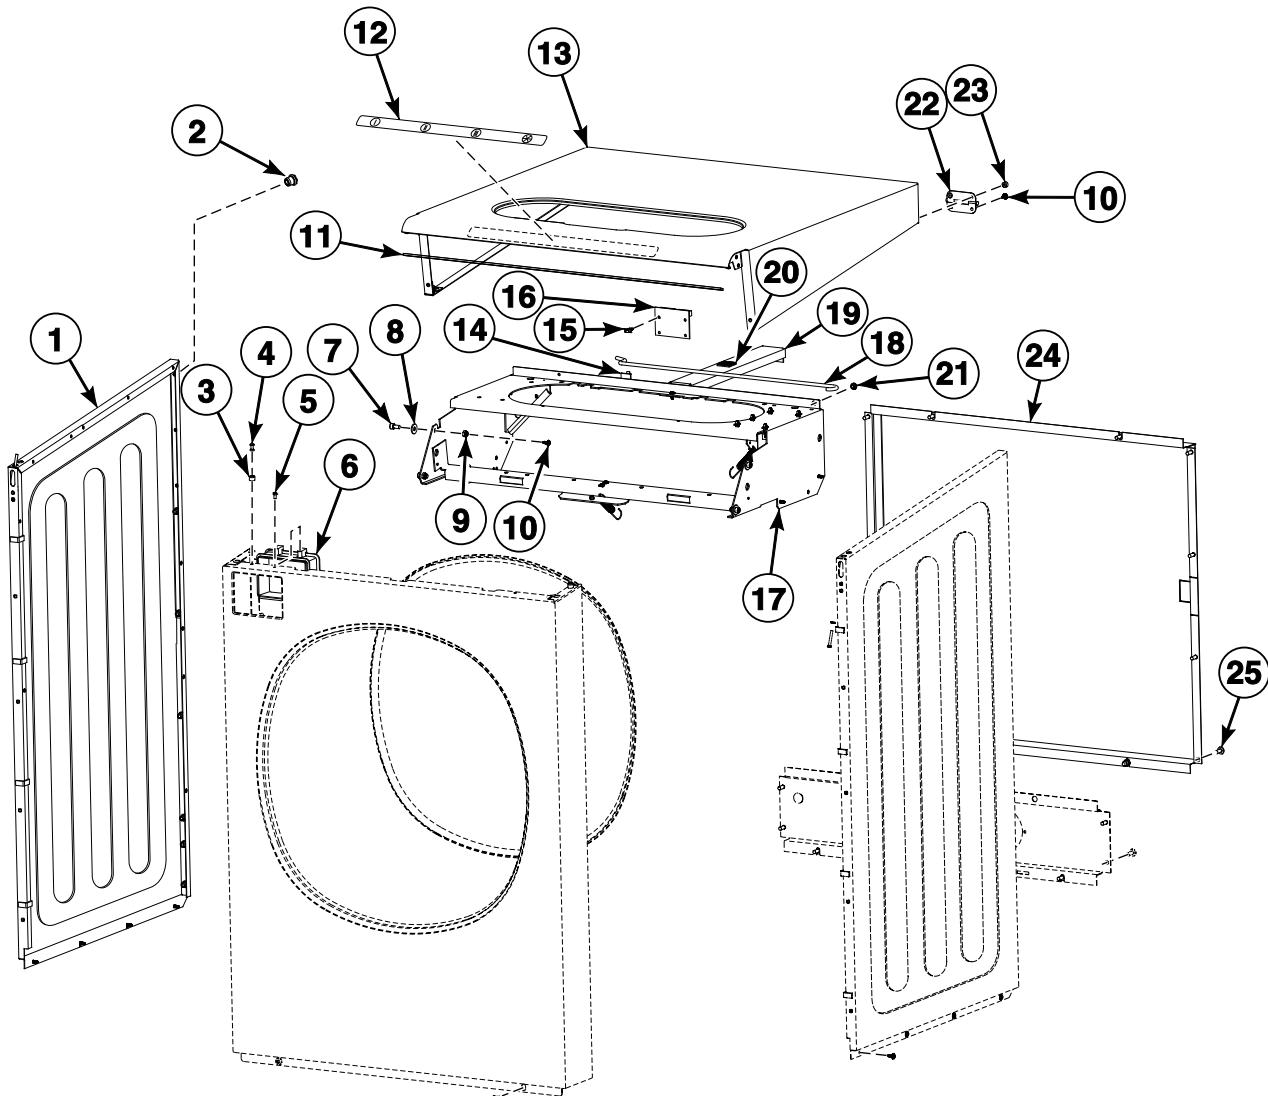

CFS1964P\_D2409


# Cabinet - AF, FX, HX, LY, MWF, PY, QW and SW Models

## (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP550320	Side Panel	Painted; Left; Models through Serial No. 105FX004382FD
	563472	Side Panel	Painted; Left; Models starting Serial No. 105FX004383FD
	SP550342	Side Panel	Stainless; Left
2	SP313251000006	Nut	M6
3	SP520408	Pin Insertion	
4	SP547779	Rivet	4x16.7
5	SP309084000408	Bolt	M4x8
6	SP533103	Coin Vault Plate	
7	SP506431	Bolt	M6x12
8	SP311902100006	Washer	6
9	SP310985000006	Nut	M6
10	SP529206	Screw	4x11
11	SP284000012003	Tape	
12	560786	Label	Soap Hopper; CSA
13	SP550303	Top Cover	
	SP551994	Top Cover	Without soap hopper opening
14	SPPRI551016250	Hook	Stick-on
15	SPPRI326002004	Holder	
16	545238	Automatic Unlocking Module Assembly	MC6; Includes item 14, SP547004 Automatic Door Opening Module, SP345000160971 Binding Strip and SP545235 Door Timer Wiring
	SP552489	Automatic Unlocking Module Assembly	MC7; Includes item 14, SP553406 Automatic Door Opening Module, SP345000160971 Binding Strip, SP552455 Automatic Door Opening Module Wiring and SP552381 Power Terminal Protection
17	SP533293	Panel Holder	
18	SP533341	Upper Lid Prop	
19	SP547707	Top Cover Reinforcement	
20	SP550115	Fastener	
21	SP273121005052	Cable Passage	5x2
22	SP516832	Hinge	
23	SP555658	Bolt	M6x16
24	SP533143	Rear Cover	
25	SP313250048008	Rivet	4.8x8

# Cabinet - AF, FX, HX, LY, MWF, PY, QW and SW Models (Drawing 2 of 2)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

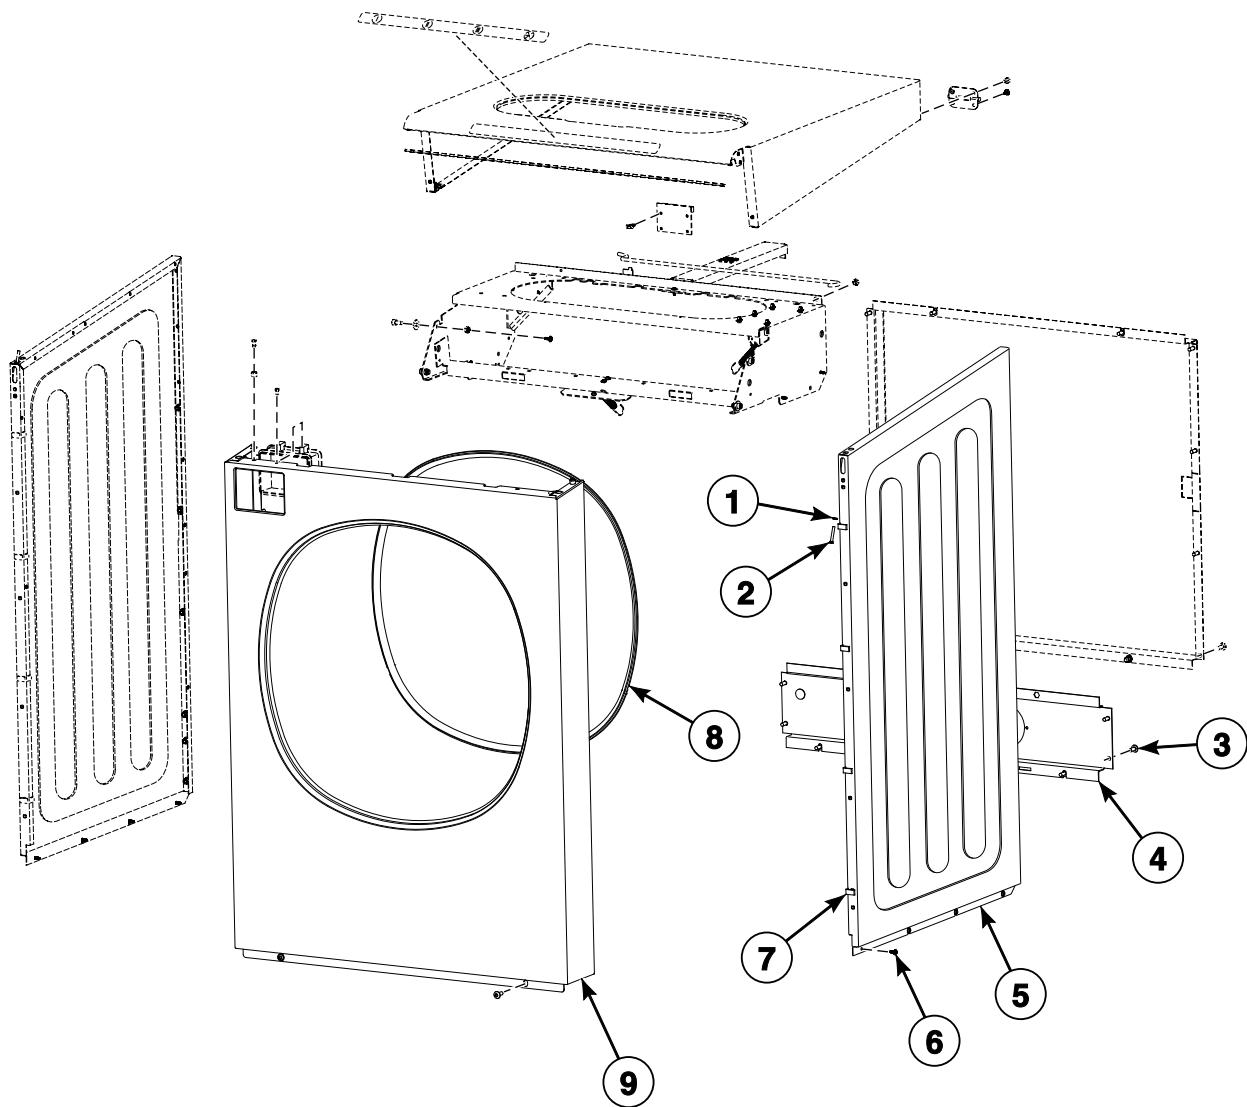


CZW132P\_D2409

## Cabinet - AF, FX, HX, LY, MWF, PY, QW and SW Models (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	SP552455	Automatic Door Opening Module Wiring	
1	SP311679800004	Washer	M4
2	SP550482	Bolt	M4x25
3	SP555658	Bolt	M6x16
4	SP533382	Lower Rear Cover	
5	SP550318	Side Panel	Painted; Right; Models through Serial No. 105FX004382FD
	563474	Side Panel	Painted; Right; Models starting Serial No. 105FX004383FD
	SP550344	Side Panel	Stainless; Right
6	SP529206	Screw	4x11
7	SP517232	Seal	
8	SP529068	Edge Protection	
9	SP547744	Front Panel	OPL; Painted; Models through Serial No. 105FX004382FD
	SP547746	Front Panel	Vended; Painted; Models through Serial No. 105FX004382FD
	SP547752	Front Panel	OPL; Stainless
	SP547754	Front Panel	Vended; Stainless
	563458	Front Panel	OPL; Painted; Models starting Serial No. 105FX004383FD
	563460	Front Panel	Vended; Painted; Models starting Serial No. 105FX004383FD

# Cabinet - AF, IY, JY and NY Models (Drawing 1 of 3)

Models with V in 7th position of the model number or models with G, H, J or K in 13th position of the model number

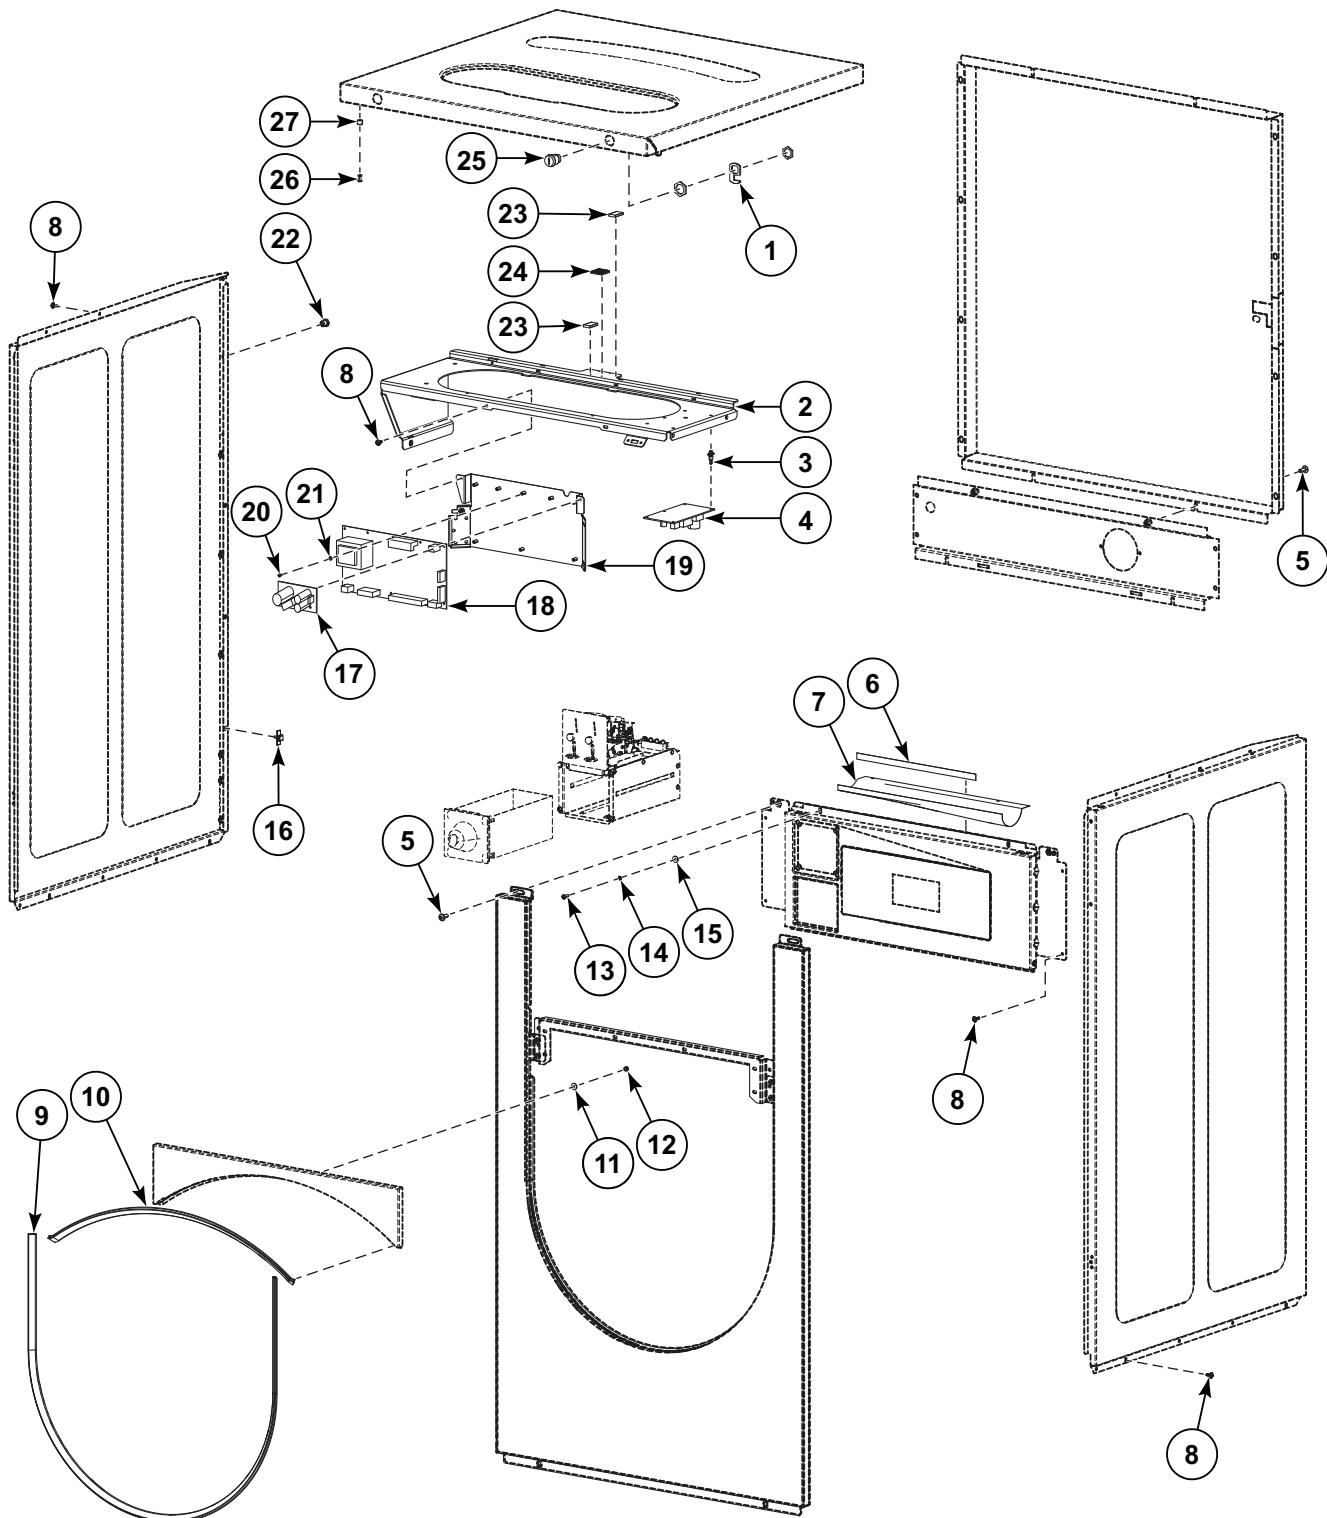


CZW635P\_D2409

# Cabinet - AF, IY, JY and NY Models (Drawing 1 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SPPRI610002007	Hook Lock	
2	567960	Panel Holder	
3	SPPRI326002004	Holder	
4	SP552489	Automatic Unlocking Module Assembly	MC7; Includes item 3, SP553406 Automatic Door Opening Module, SP345000160971 Binding Strip, SP552455 Automatic Door Opening Module Wiring and SP552381 Power Terminal Protection
5	SP555658	Bolt	M6x16
6	SP537896	Adhesive	Reversible
7	569656	Cover	
8	SP529206	Screw	4x11
9	SP529068	Edge Protection	1.6m
10	SP529068	Edge Protection	0.66m
11	SP311902100004	Washer	4
12	SP514193	Nut	M4
13	SP555504	Bolt	M4x12
14	SP311127000004	Washer	4
15	SP311902100004	Washer	M4
16	SP528313	Cable Holder	
17	N/A	Module	Door Lock
18	SP553405	Control Board I/O	MC7
	553444	Control Board I/O	MC10; Power; Used with 569701 Interconnection Flat Cable
19	569578	Programmer Holder	Includes SPPRI212000055 Nut
20	SP309798500306	Bolt	M3x6
21	SP311679800003	Washer	M3
22	SP313251000006	Nut	M6
23	564202	Seal	0.05m
24	SP550115	Fastener	
25	SP547527	Lock	includes Nuts - 2pieces
26	SP547779	Rivet	
27	SP520408	Pin Insertion	

# Cabinet - AF, IY, JY and NY Models (Drawing 2 of 3)

Models with V in 7th position of the model number or models with G, H, J or K in 13th position of the model number

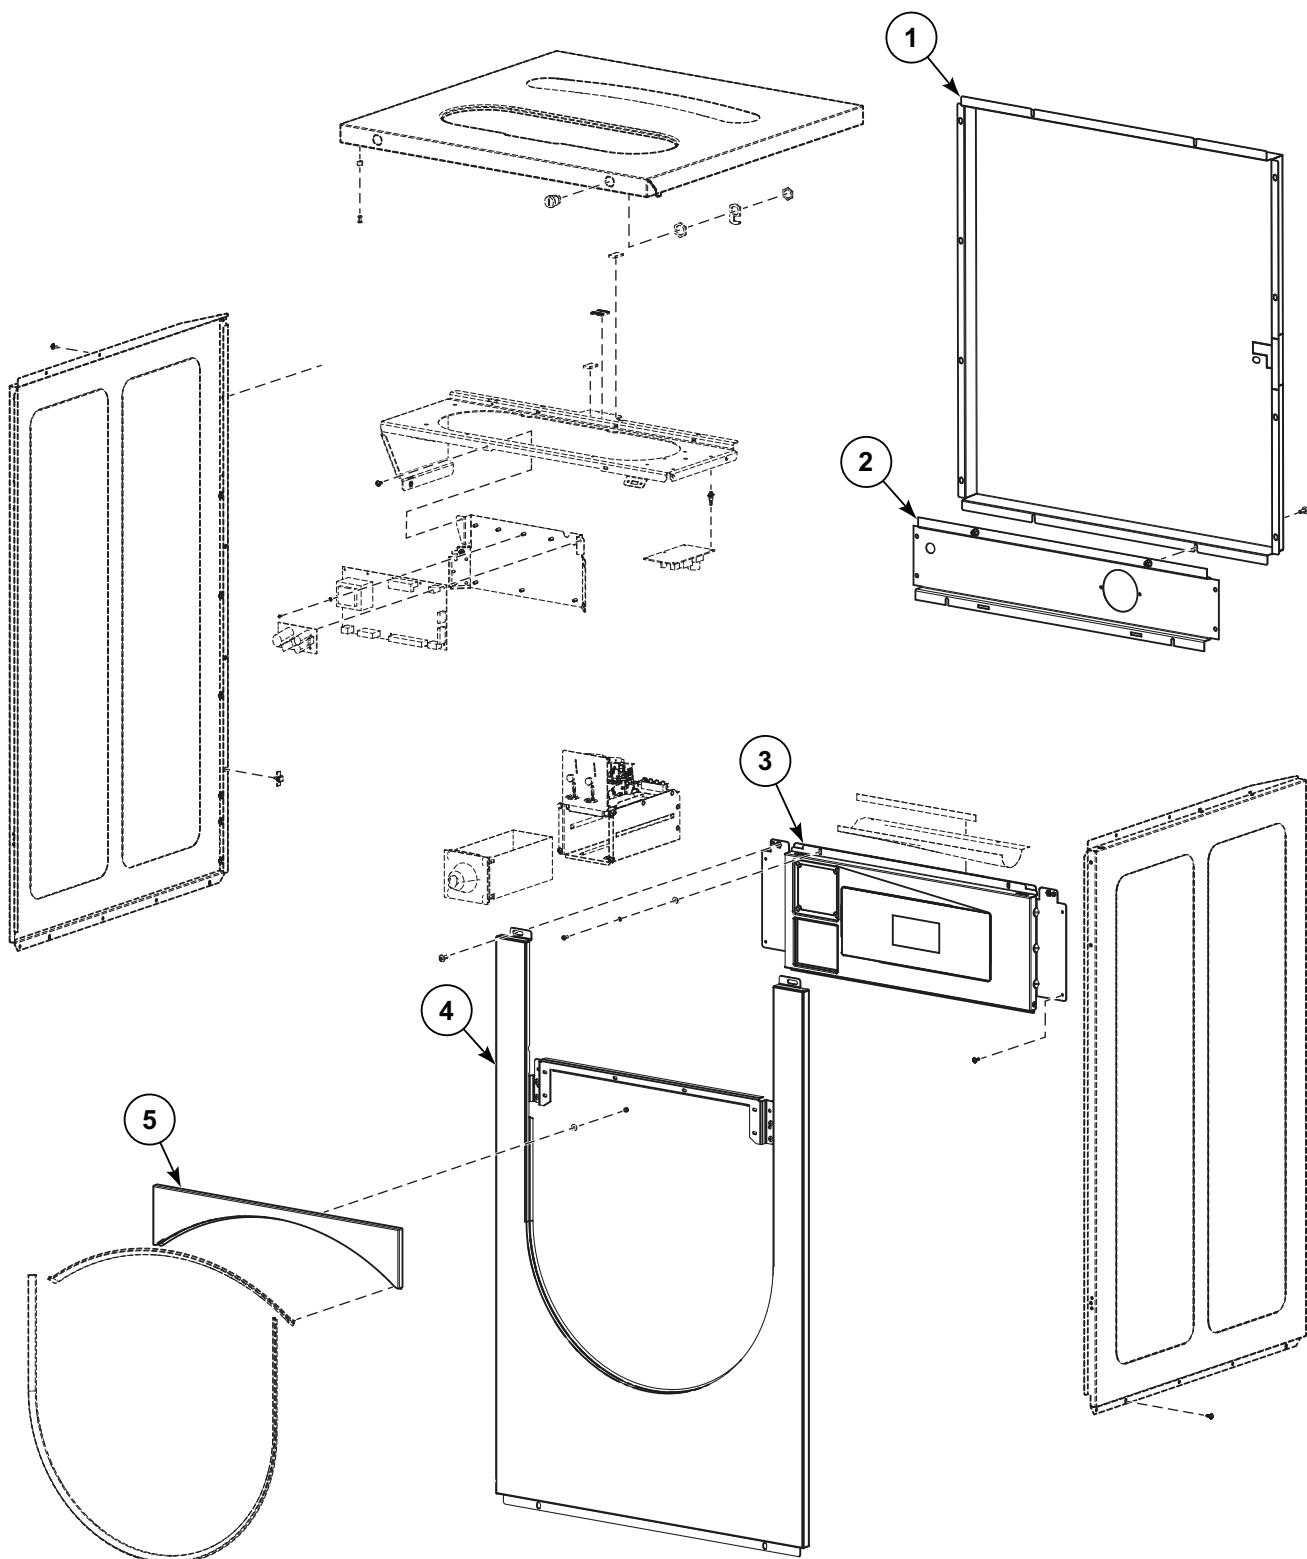


CZW636P\_D2409

## Cabinet - AF, IY, JY and NY Models (Drawing 2 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
1	570468	Rear Cover	
2	SP533382	Lower Rear Cover	
3	573025	Control Panel Frame	
4	574091	Front Panel	AF and NY models; Gray
5	573014	Front Cover	Stainless steel

## Cabinet - AF, IY, JY and NY Models (Drawing 3 of 3)

Models with V in 7th position of the model number or models with G, H, J or K in 13th position of the model number

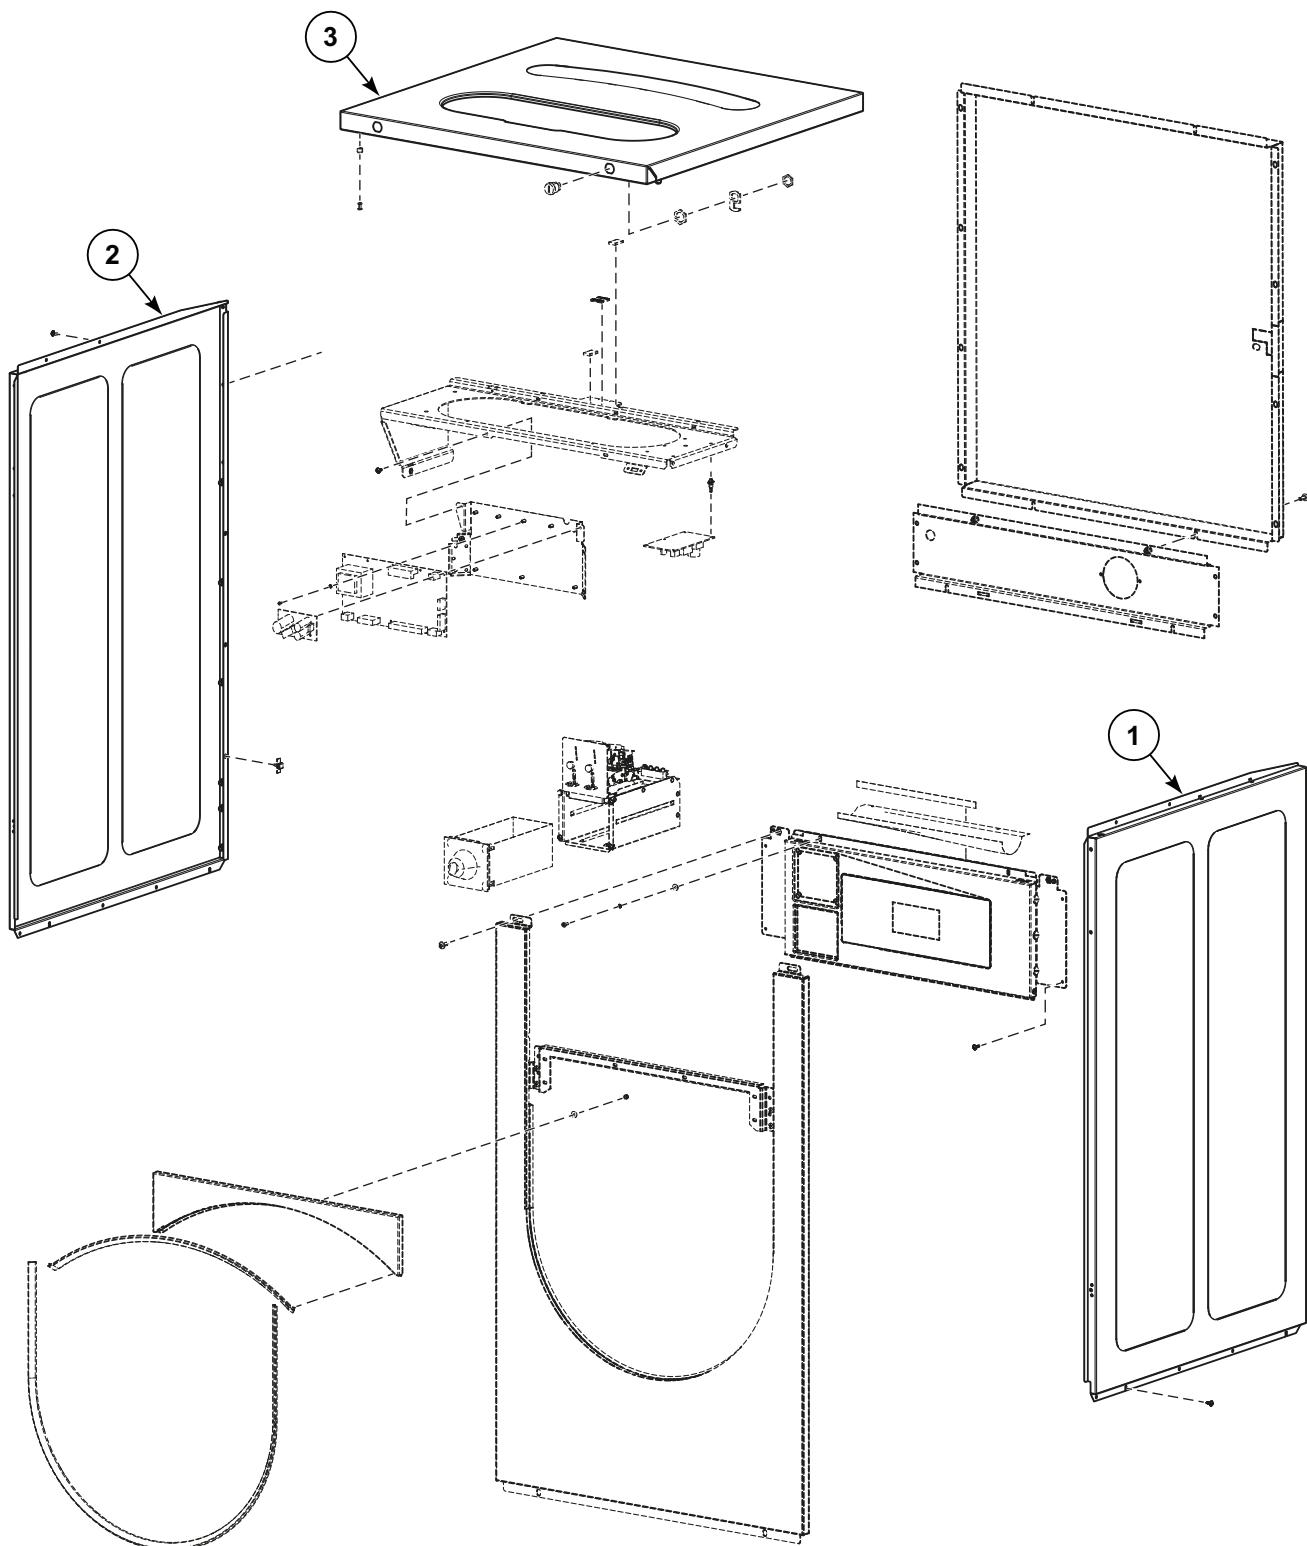


CZW637P\_D2409

## Cabinet - AF, IY, JY and NY Models (Drawing 3 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
1	572008	Side Panel	Stainless; Right; Includes SP313251000006 Nut
	573044	Side Panel	IY and J models; Black; Right; Includes SP313251000006 Nut
	574062	Side Panel	AF and NY models; Gray; Right; Includes SP313251000006 Nut
2	572007	Side Panel	Stainless; Left; Includes SP313251000006 Nut
	573042	Side Panel	IY and J models; Black; Left; Includes SP313251000006 Nut
	574061	Side Panel	AF and NY models; Gray; Left; Includes SP313251000006 Nut
3	567965	Top Cover	Includes SP547527 Lock, SP550616 Key, SPPRI610002007 Hook Lock, SP520408 Pin Insertion, SP547779 Rivet and SP550115 Fastener
	569645	Top Cover	Without soap hopper opening, Includes SP547527 Lock, SP550616 Key, SPPRI610002007 Hook Lock, SP520408 Pin Insertion, SP547779 Rivet and SP550115 Fastener

# Cabinet - FX and PY Models (Drawing 1 of 2)

Models with V in 7th position of the model number

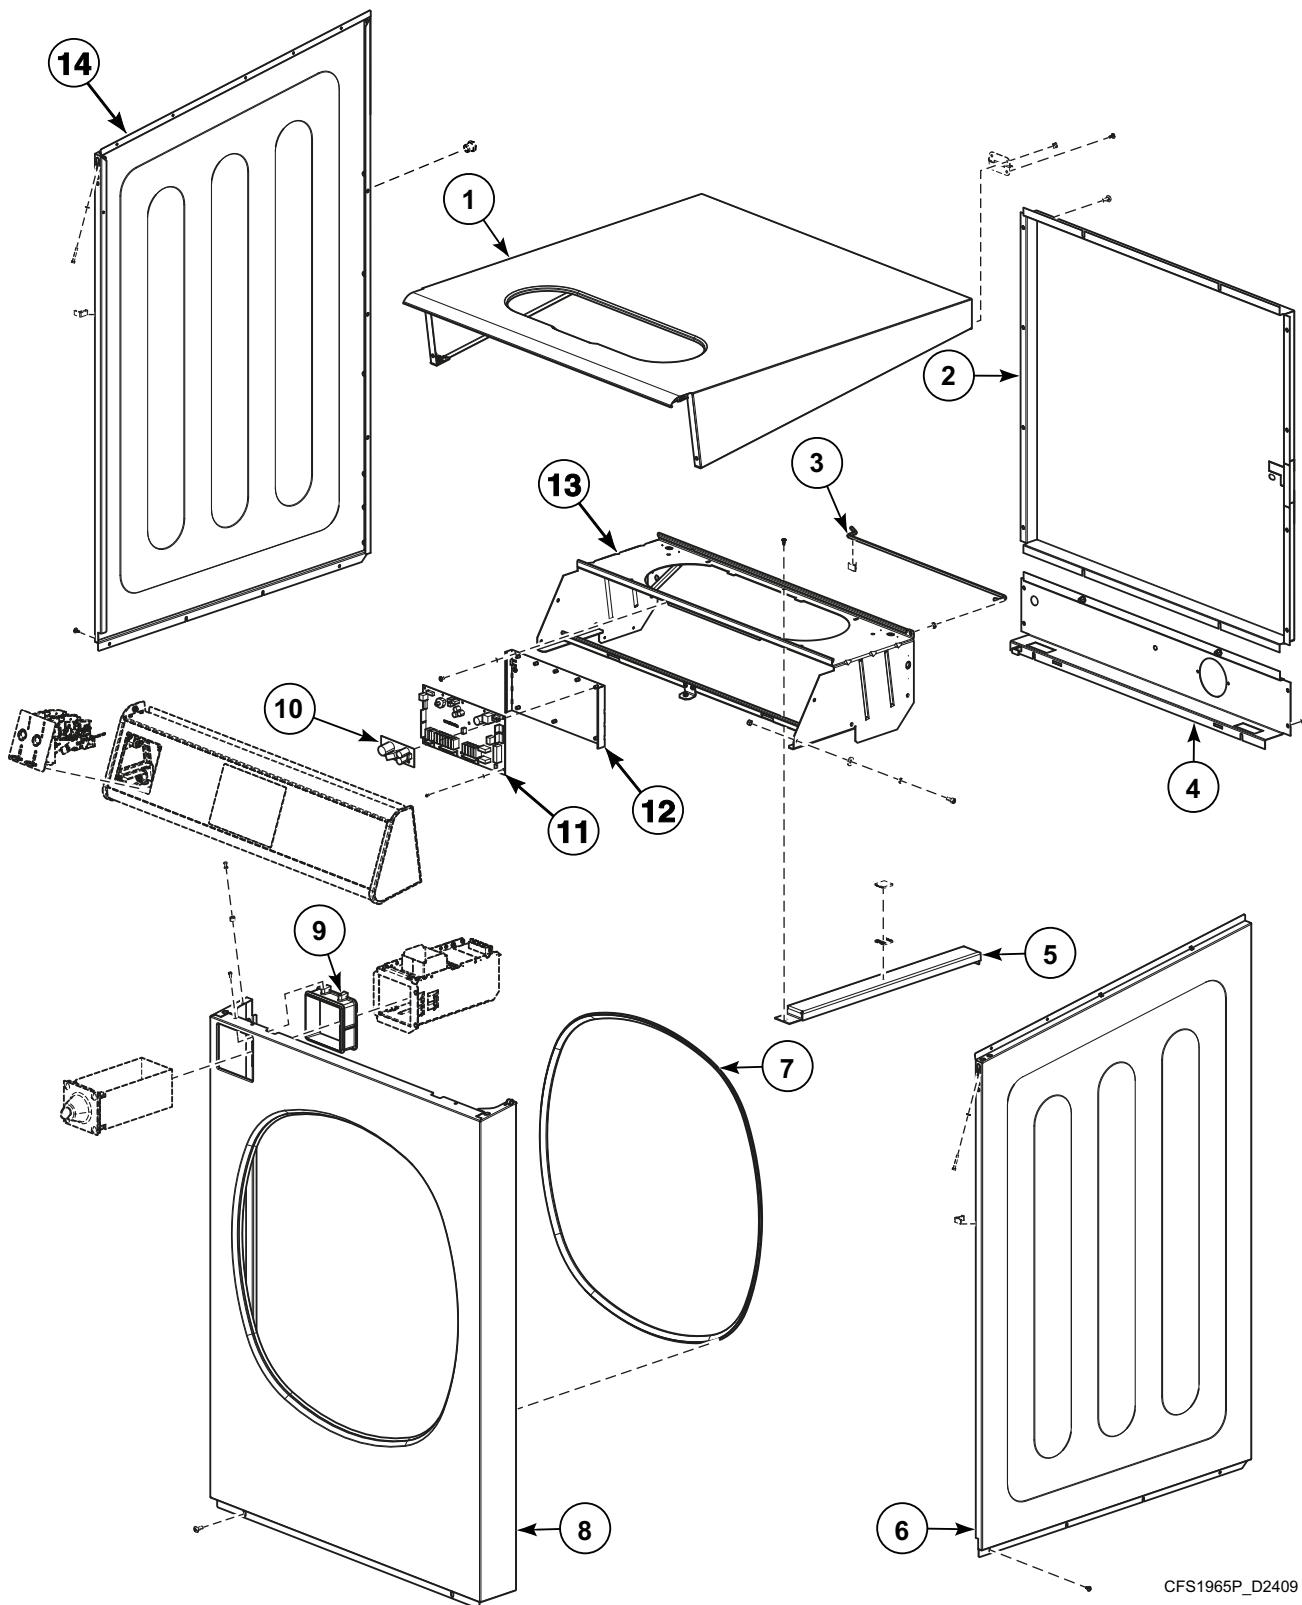


CFS1965P\_D2409

## Cabinet - FX and PY Models (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	574197	Top Cover	
	574252	Top Cover	Without soap hopper opening
2	570468	Rear Cover	
3	SP533341	Upper Lid Prop	
4	SP533382	Lower Rear Cover	
5	SP547707	Top Cover Reinforcement	
6	574131	Side Panel Assembly	Painted; Right
	574132	Side Panel Assembly	Stainless; Right
7	SP529068	Edge Protection	2.06m
8	572537	Front Panel	OPL; Painted
	572538	Front Panel	Vended; Painted
	572535	Front Panel	OPL; Stainless
	572536	Front Panel	Vended; Stainless
9	566737	Coin Vault Plate	
10	553189	Module	Door Lock
11	553444	Control Board I/O	MC10; Power; Used with 569701 Interconnection Flat Cable
12	573934	Programmer Holder	Includes 527279 Nut
13	573938	Panel Holder	
14	574135	Side Panel Assembly	Painted; Left
	574136	Side Panel Assembly	Stainless; Left

# Cabinet - FX and PY Models (Drawing 2 of 2)

Models with V in 7th position of the model number

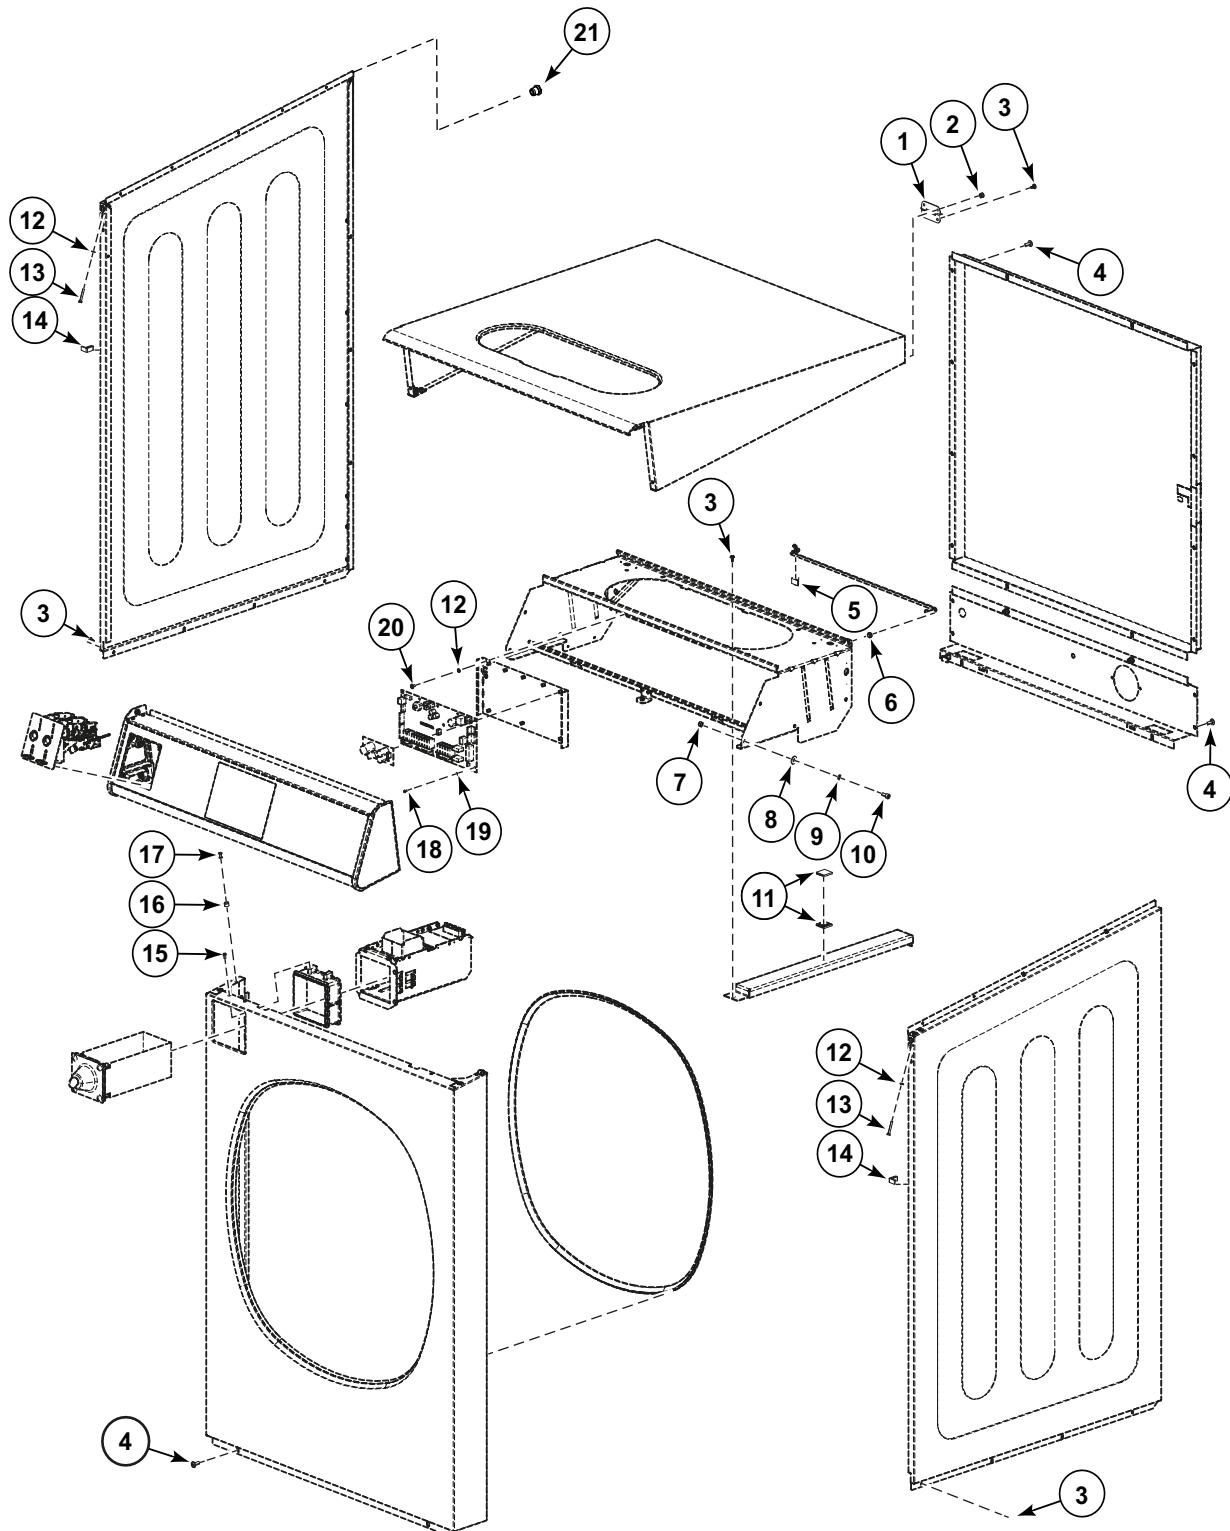


CFS1966P\_D2409

## Cabinet - FX and PY Models (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP516832	Hinge	
2	SP313250048103	Rivet	
3	SP529206	Screw	4x11
4	SP555658	Bolt	M6x16
5	SPPRI551016250	Hook	Stick-on
6	SP273121005052	Cable Passage	5.5x2
7	SP310985000006	Nut	M6
8	SP311902100006	Washer	6
9	576338	Washer	
10	SP506431	Bolt	M6x12
11	SP550115	Fastener	
12	SP311679800004	Washer	M4
13	SP550482	Bolt	M4x25
14	SP517232	Seal	
15	SP309084000408	Bolt	M4x8
16	SP520408	Pin Insertion	
17	SP547779	Rivet	4x16.7
18	SP309798500306	Bolt	M3x6
19	SP311679800003	Washer	M3
20	SP506013	Bolt	M4x8
21	SP313251000006	Nut	M6

# Cabinet (Drawing 1 of 3)

Models with G in 7th position of the model number

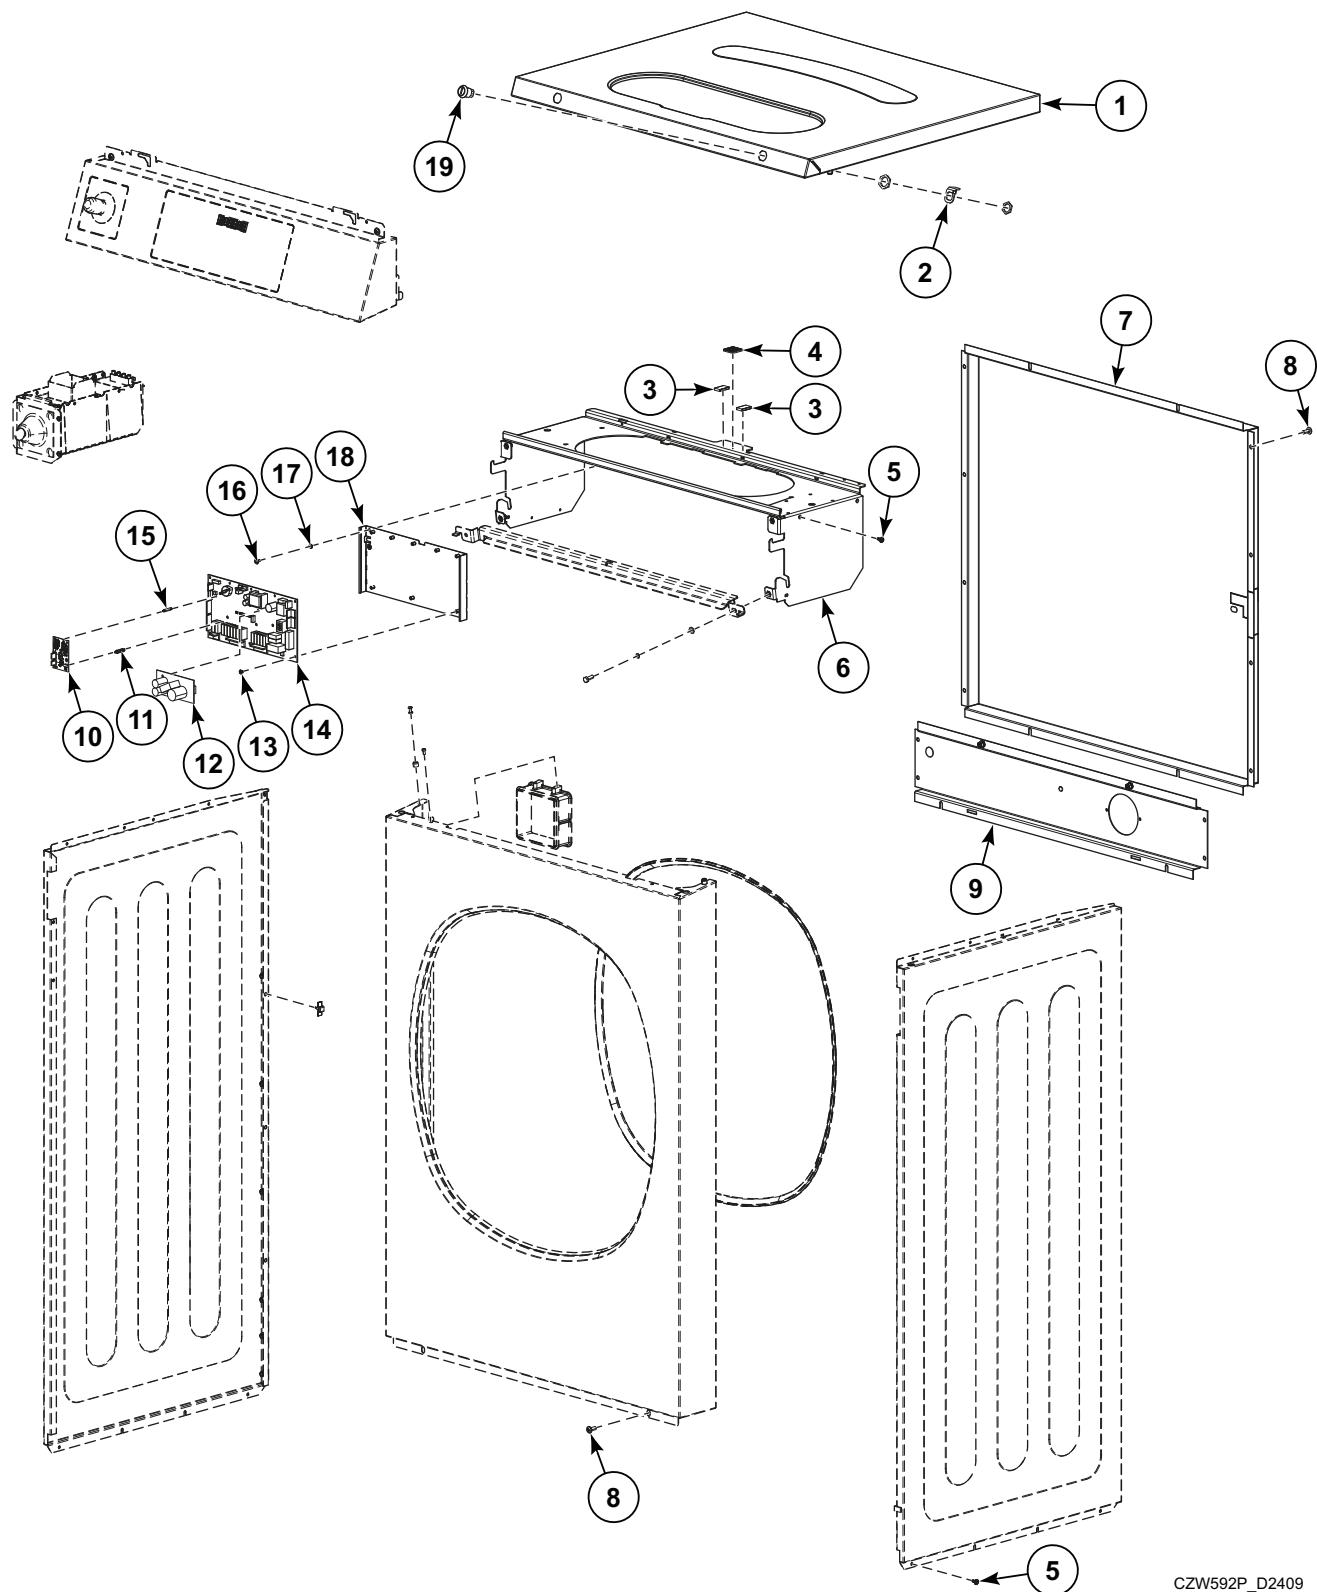


CZW592P\_D2409

## Cabinet (Drawing 1 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
1	580674	Top Cover	
	580780	Top Cover	Without soap hopper opening
2	581001	Lock Hook	
3	564202	Seal	0.05m
4	SP550115	Fastener	Velcro (hook and loop)
5	SP529206	Screw	4x11
6	580773	Panel Holder	
7	570468	Rear Cover	
8	555658	Bolt	M6x16
9	533382	Rear Cover	Lower
10	553439	Conversion Board	
11	577693	Plastic Post	
12	553189	Module	Door Lock
13	563123	Bolt	M3x6
14	553444	Control Board I/O	MC10; Power; Used with 569702 Interconnection Flat Cable
15	577689	Plastic Post	
16	SP506013	Bolt	M4x8
17	SP311679800004	Washer	M4
18	573394	Control Board Holder	
19	SP547527	Lock	Requires SP550616 Key

## Cabinet (Drawing 2 of 3)

Models with G in 7th position of the model number

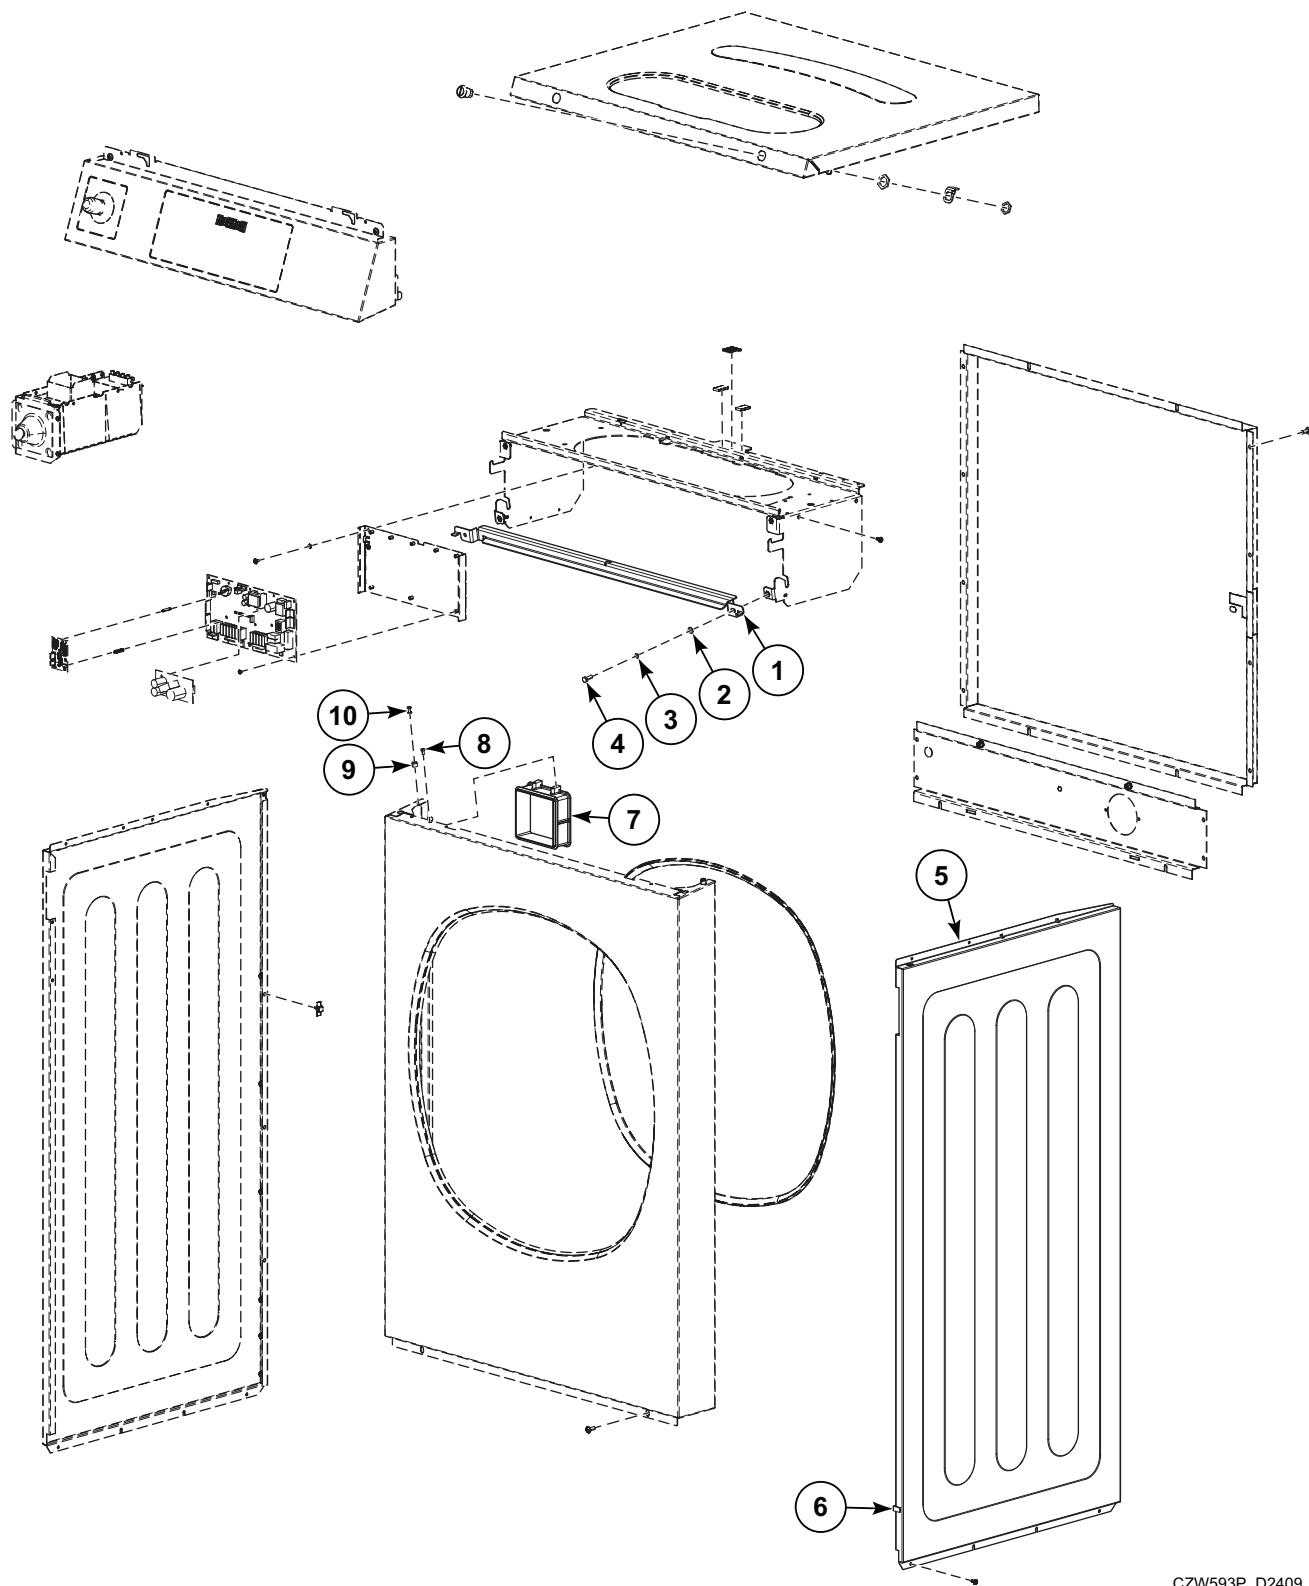


CZW593P\_D2409

## Cabinet (Drawing 2 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP558880	Reinforcement	
2	SP311125000006	Washer	6.4
3	SP311127000006	Washer	6
4	SP309933000616	Bolt	M6x16
5	580697	Side Panel	Right; Stainless steel
	581606	Side Panel	IY models; Right; Black
	580725	Side Panel	AF, NY, PY and FX models; Right; Painted
6	SP517232	Seal	Self-adhesive foam
7	566737	Coin Vault Plate	
8	SP309084000408	Bolt	M4x8
9	SP520408	Pin Insertion	
10	SP547779	Rivet	4x16.7

## Cabinet (Drawing 3 of 3)

Models with G in 7th position of the model number

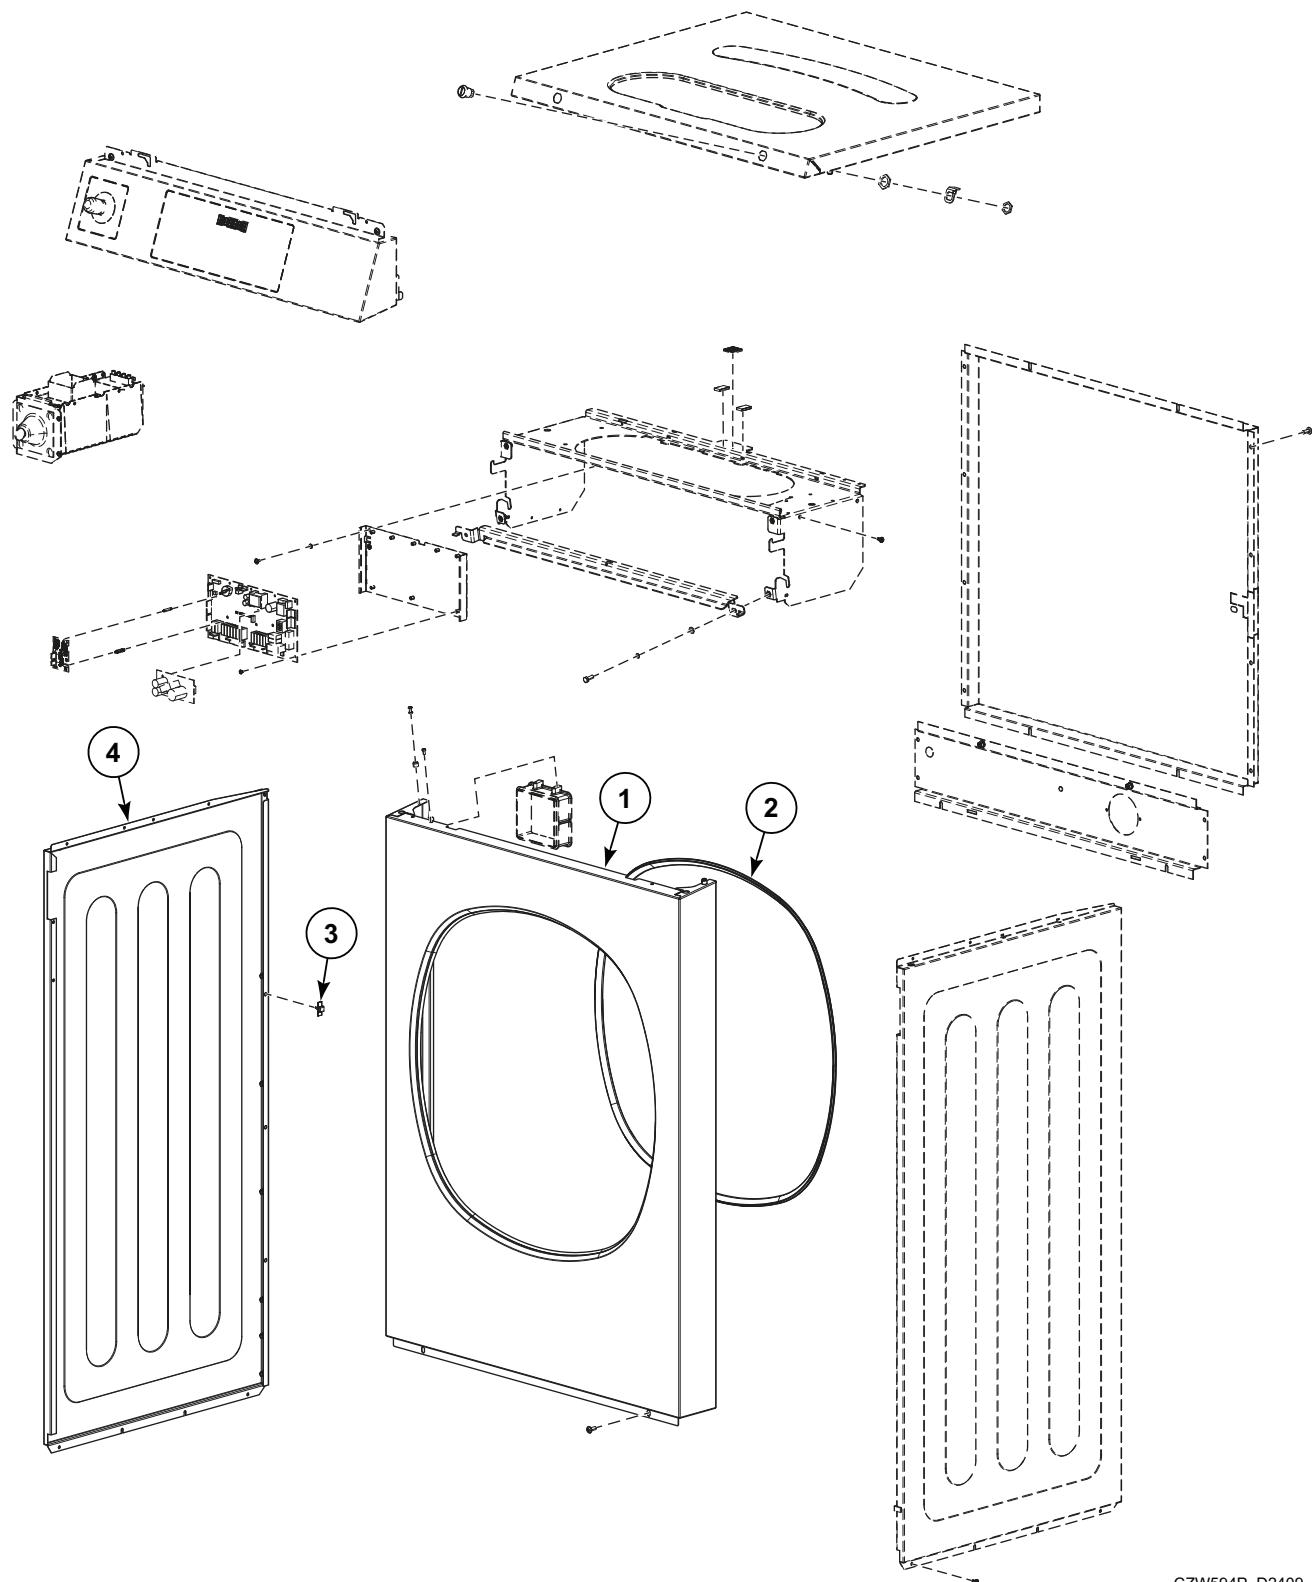


## Cabinet (Drawing 3 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
1	572535	Front Panel	OPL; Stainless steel
	572536	Front Panel	Vend; Stainless steel
	572537	Front Panel	OPL; Painted
	572538	Front Panel	Vended; Painted
2	SP529068	Edge Protection	
3	SP528313	Cable Holder	
4	580696	Side Panel	Left; Stainless steel
	581605	Side Panel	IY models; Left; Black
	580724	Side Panel	AF, NY, PY and FX models; Left; Painted

# Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 1 of 5)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

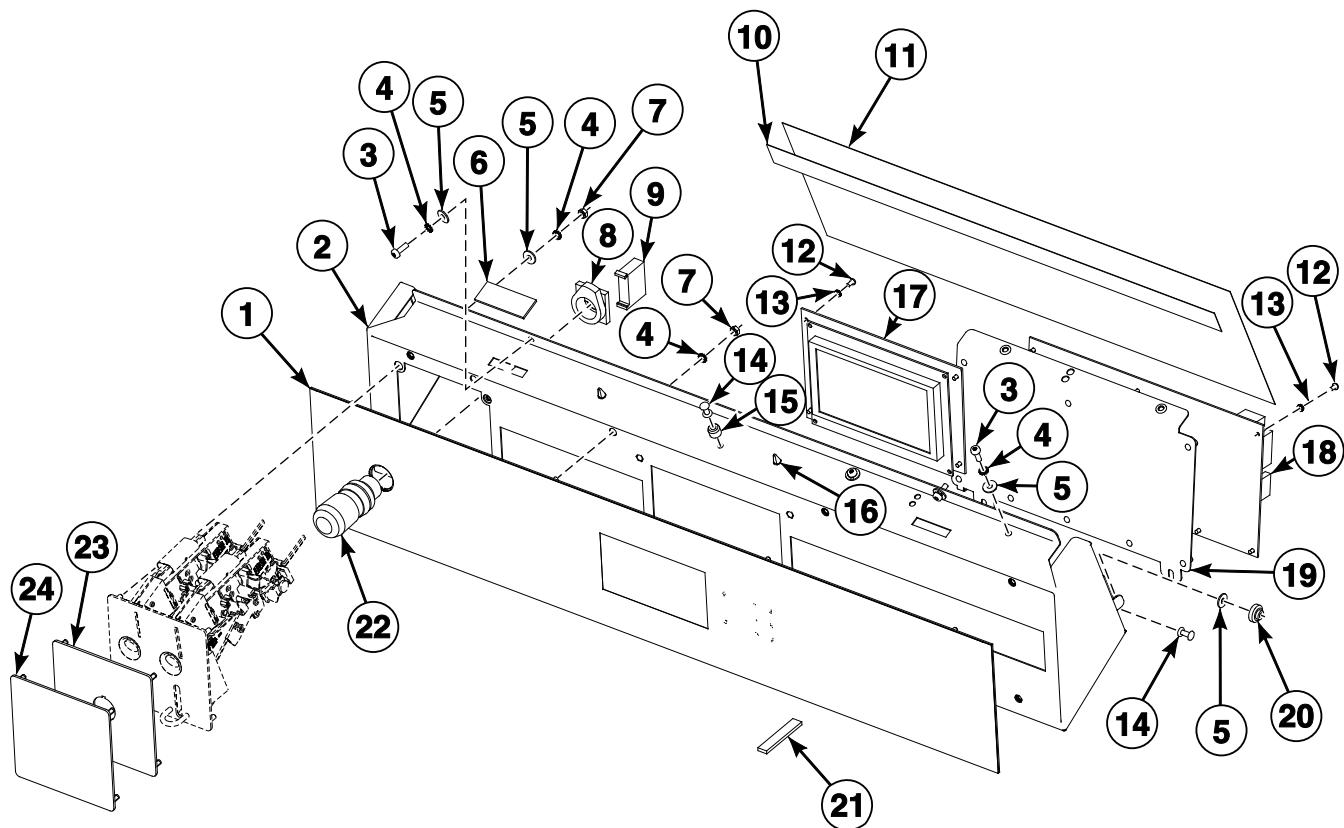


CFD2893P\_D2409

# Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 1 of 5)

REF	PART NO.	DESCRIPTION	COMMENTS
	569593	Network Installation Kit	Includes 569595 Holder, 203532 Wireless Network Control Assembly, 568363 Power Supply, 568362 Cable, 568378 Wiring, 568379 Wiring Diagram, SP345000626088 Binding Strip and connection accessories
	F8600501	Programming Cable	
1	SP557580	Keyboard	UY models; OPL
	SP557575	Keyboard	SY models; OPL
	SP557576	Keyboard	SY models; Vended
	SP557583	Keyboard	HY models; OPL
	SP547026	Keyboard	AF Non-Brand, LP and NY models; OPL; Professional; Black
	SP547025	Keyboard	AF Non-Brand, LP and NY models; OPL; Basic; Black
	SP547023	Keyboard	AF Non-Brand, LP and NY models; Vended; Basic; Black
	SP547024	Keyboard	AF Non-Brand, LP and NY models; CPS; Basic; Black
2	SP557614	Control Panel	
3	SP555504	Bolt	M4x12
4	SP311679800004	Washer	M4
5	SP311902100004	Washer	M4
6	SPMEC001410	Self-Adhesive Pad	
7	SP310934000004	Nut	M4
8	SP528311	Emergency Stop Connector	OPL
9	SP528312	Switching Unit	
10	SP510846	Tape	
11	SPPRI543000004	Cover	
12	SP309798500306	Bolt	M3x6
13	SP311679800003	Washer	M3
14	SP547779	Rivet	4x16.7
15	SP520408	Pin Insertion	
16	SP528313	Cable Holder	
17	SP553412	Control Board	MC7
	SP553411	Control Board	AF Non-Brand, LP and NY models; MC7
18	SP553405	Control Board I/O	MC7
	SP547005	Board Interconnection Cable	
19	SP557618	Programmer Holder	
20	SP550113	Leading Pin	
21	SP284000012003	Tape	
22	SP528310	Emergency Stop Knob	OPL
	SP520032	Emergency Stop Wiring	OPL
	SP520033	Emergency Stop Interconnection	Vended
23	SP558929	Coin Meter Cover Plate	SY models; Black
24	SP558930	CPS Cover Plate	SY models; Black

# Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 2 of 5)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

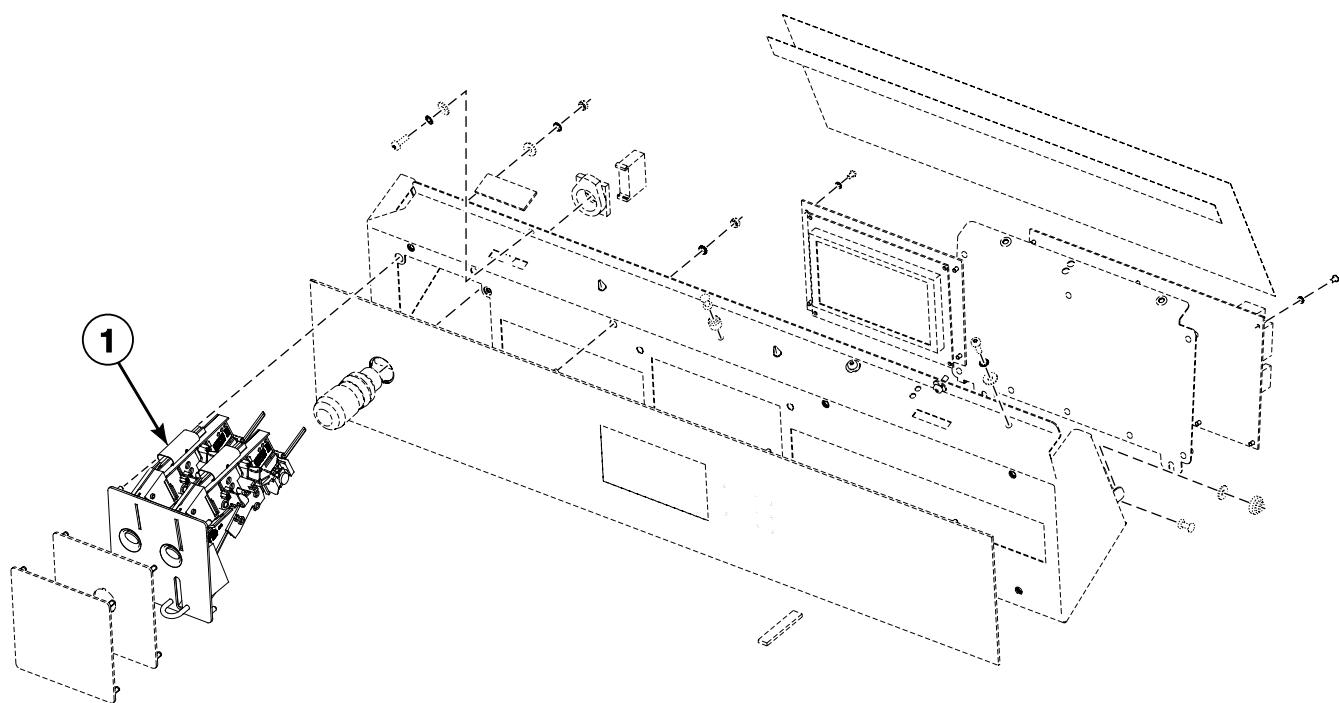


CFD2894P\_D2409

# Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 2 of 5)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP547601	Coin Meter	5K Primus jeton
	SP547602	Coin Meter	7K Primus jeton
	SP547603	Coin Meter	10K Primus jeton
	SP547604	Coin Meter	12K Primus jeton
	SP547605	Coin Meter	15K Primus jeton
	SP547606	Coin Meter	D jeton
	SP547648	Coin Meter	0.05EUR
	SP547638	Coin Meter	0.2EUR
	SP547616	Coin Meter	0.5EUR
	SP547614	Coin Meter	1EUR
	SP547647	Coin Meter	2EUR
	SP547622	Coin Meter	0.2EUR + 0.5EUR
	SP547639	Coin Meter	0.2EUR + 1EUR
	SP547617	Coin Meter	0.5EUR + 1EUR
	SP547656	Coin Meter	0.5EUR + 2EUR
	SP547631	Coin Meter	1EUR + 2EUR
	SP547652	Coin Meter	7K + D jeton
	SP547666	Coin Meter	7K jeton and 2EUR
	SP547665	Coin Meter	D jeton and 2EUR
	SP547600	Coin Meter	1AUD + 20C
	SP547607	Coin Meter	1POND + 20PC
	SP547608	Coin Meter	1POND + 50PC
	SP547609	Coin Meter	100YEN
	SP547610	Coin Meter	500JPY + 100JPY
	SP547611	Coin Meter	5DKK
	SP547612	Coin Meter	20DKK
	SP547613	Coin Meter	5ILS + 1ILS
	SP547615	Coin Meter	1MYR
	SP547618	Coin Meter	1DKK + 5DKK
	SP547619	Coin Meter	10NOK + 20NOK
	SP547620	Coin Meter	2DKK + 5DKK
	SP547621	Coin Meter	5NOK
	SP547623	Coin Meter	1NZD + 2NZD
	SP547624	Coin Meter	10 NOK
	SP547625	Coin Meter	10NT + 50NT
	SP547626	Coin Meter	2DKK
	SP547627	Coin Meter	Lucky Winner jeton
	SP547628	Coin Meter	10TWD
	SP547629	Coin Meter	10CZK + 20CZK
	SP547630	Coin Meter	7K Equipos Par Lavar jeton
	569921	Coin Meter	0.2GBP, 0.5GBP, 1GBP, 2GBP, 0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR; Electronic EMPv7
	SP547634	Coin Meter	500WON
	SP547635	Coin Meter	0.25USD
	SP547636	Coin Meter	1AUD + 2AUD
	SP547637	Coin Meter	5DK + 10DK
	SP547640	Coin Meter	Sun Wash jeton

# Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 3 of 5)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

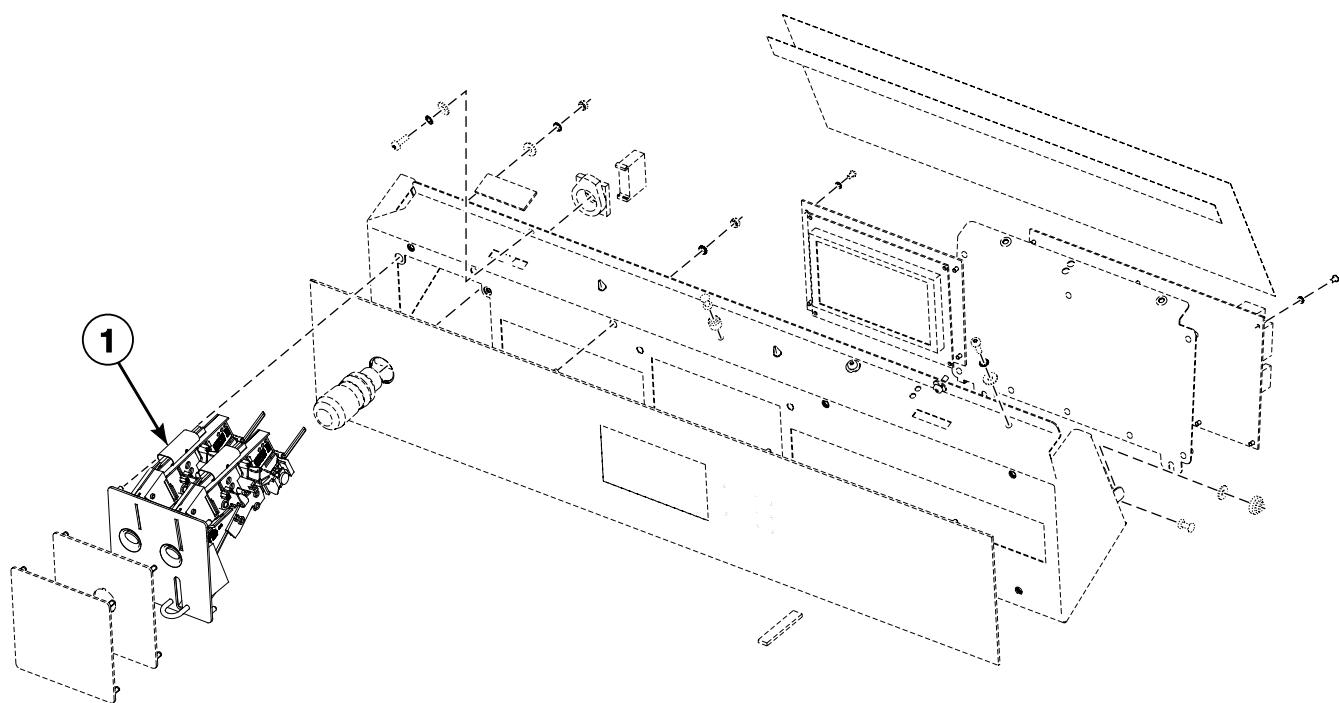


CFD2894P\_D2409

# Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 3 of 5)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP547641	Coin Meter	2DK + 10DK
	SP547642	Coin Meter	1AUD
	SP547643	Coin Meter	1CHF
	SP547644	Coin Meter	5NOK + 10NOK
	SP547645	Coin Meter	1 TopMos jeton + 1LEV jeton
	SP547646	Coin Meter	1 Vendo jeton
	SP547649	Coin Meter	1 jeton
	569951	Coin Meter	0.5MAD, 1MAD, 2MAD, 5MAD, 10MAD; Electronic EMPv7
	SP547651	Coin Meter	20 penny
	SP547653	Coin Meter	1 Wascator jeton, jeton diamater 22.2 mm
	SP547654	Coin Meter	1 Unibel jeton, jeton diamater 18.55 mm
	SP547657	Coin Meter	50HUF + 100HUF
	SP547658	Coin Meter	1 jeton without coining, jeton diamater 20 mm
	SP547659	Coin Meter	1 Volund jeton, jeton diamater 22.5 mm
	SP547660	Coin Meter	1 Wascator jeton, jeton diamater 19 mm
	SP547661	Coin Meter	1 Miele jeton
	SP547662	Coin Meter	1 jeton without coining, jeton diamater 26 mm
	SP547663	Coin Meter	Three-groove jeton; jeton diamater 27 mm
	SP547664	Coin Meter	Three-groove jeton; jeton diamater 24.9 mm
	SP537996	Coin Meter	Top-Mosr jeton
	SP547667	Coin Meter	Milano Italy jeton
	SP547668	Coin Meter	5PLN + 1PLN
	SP547669	Coin Meter	Two-grooves jeton; jeton diamater 27 mm
	SP547670	Coin Meter	A.S.A.R.D. jeton, jeton diamater 25.8 mm
	SP547671	Coin Meter	20CZK
	SP547672	Coin Meter	Jeton ASARD, jeton diamater 22.3 mm
	SP547673	Coin Meter	Jeton Laundromatic Belgium, jeton diamater 22.3 mm
	SP547674	Coin Meter	1SGD
	SP547675	Coin Meter	Jeton Asard Wascator, jeton diamater 19.9 mm
	SP555502	Coin Meter	Easy Games jeton
	SP555543	Coin Meter	Brev.C jeton
	SP555546	Coin Meter	50 Malaysian cent
	SP555549	Coin Meter	Flat Polis jeton
	SP555550	Coin Meter	Butzi Wash jeton
	SP555578	Coin Meter	1 New Singapore Dollar
	SP555558	Coin Meter	Copper without grooves jeton
	569939	Coin Meter	0.1SGD, 0.2SGD, 0.5SGD, 1SGD; Electronic EMPv7
	SP555666	Coin Meter	2x50 Malaysian cent
	569933	Coin Meter	0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR; Electronic EMPv7
	SP555559	Coin Meter	Speedy Matic jeton
	SP555579	Coin Meter	Was-Salon Lavori jeton
	569948	Coin Meter	5CZK, 10CZK, 20CZK, 50CZK; Electronic EMPv7
	SP560744	Coin Meter	Electronic for Dobi Ekspress jeton
	569964	Coin Meter	0.2GBP, 0.5GBP, 1GBP, 2GBP, 0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, jeton "KWL Aqua", jeton "Gettone"; Electronic EMPv7
	SP560089	Coin Meter	STD 118-1 jeton

# Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 4 of 5)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

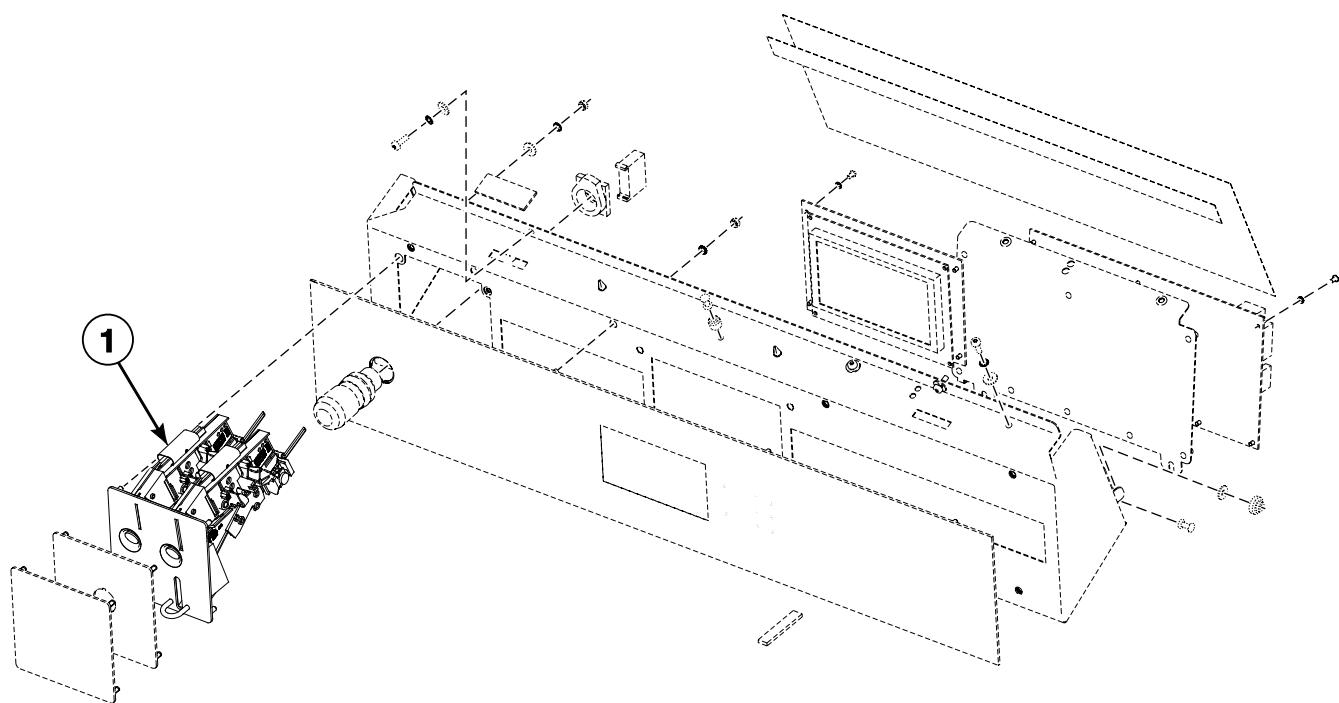


CFD2894P\_D2409

# Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 4 of 5)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP560082	Coin Meter	5k IPSO jeton
	SP560083	Coin Meter	7k IPSO jeton
	SP560084	Coin Meter	10k IPSO jeton
	SP560085	Coin Meter	12k IPSO jeton
	SP560086	Coin Meter	15k IPSO jeton
	561378	Coin Meter	10 Moroccan Dirham
	569918	Coin Meter	0.25USD, 1USD, 0.25CAD, 1CAD, 2CAD; Electronic EMPv7
	560073	Coin Meter	0.25 USD/1 USD
	569930	Coin Meter	1CNY, 0.1MYR, 0.2MYR, 0.5MYR; Electronic EMPv7
	569927	Coin Meter	0.2AUD, 1AUD, 2AUD, 0.2NZD, 1NZD, 2NZD, 5HKD, 10HKD, 500KRW; Electronic EMPv7
	561496	Coin Meter	Jeton Grupo Azkoyen CDS Automaten
	569936	Coin Meter	1PHP, 5PHP, 10PHP; Electronic EMPv7
	569942	Coin Meter	0.1MYR, 0.2MYR, 0.5MYR, 0.5SGD, 1SGD; Electronic EMPv7
	569945	Coin Meter	1HRK, 2HRK, 5HRK; Electronic EMPv7
	569924	Coin Meter	1DKK, 2DKK, 5DKK, 10DKK, 20DKK, 1NOK, 5NOK, 10NOK, 20NOK, 0.2EUR, 0.5EUR, 1EUR, 2EUR; Electronic EMPv7
	564484	Coin Meter	Jeton 118-5
	564486	Coin Meter	Jeton Barisart (LDL)
	569961	Coin Meter	0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, jeton IPSO 5K; Electronic EMPv7
	564489	Coin Meter	Jeton Sporrong
	569970	Coin Meter	0.5MYR, jeton "DOBI PAPA"; Electronic EMPv7
	553150	Coin Meter	Jeton with hole
	553151	Coin Meter	Jeton Deton Wash
	569901	Coin Meter	Brass jeton
	569912	Coin Meter	Jeton Wassalon lavoir
	569954	Coin Meter	1PLN, 2PLN, 5PLN, 0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, 10ISK, 50ISK, 100ISK; Electronic EMPv7
	569967	Coin Meter	0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, jeton G-FIS "LAVOIR BIANCA"; Electronic EMPv7
	569973	Coin Meter	1AUD, 2AUD, jeton "No Cash Value"; Electronic EMPv7
	569979	Coin Meter	0.5MYR, jeton "BUBBLELAB"; Electronic EMPv7
	569987	Coin Meter	Jeton HAUCK 2018
	569998	Coin Meter	100+500 ISK
	572301	Coin Meter	Token 118-16
	572304	Coin Meter	1ILS, 2ILS, 5ILS, 10ILS; Electronic EMPv7
	572307	Coin Meter	1ZAR, 2ZAR, 5ZAR; Electronic EMPv7
	572310	Coin Meter	5RUB, 10RUB; Electronic EMPv7
	572313	Coin Meter	50CLP, 100CLP, 500CLP; Electronic EMPv7
	572317	Coin Meter	100JPY, 500JPY, 10TWD, 50TWD; Electronic EMPv7
	572320	Coin Meter	0.5GEL, 1GEL, 2GEL; Electronic EMPv7
	572323	Coin Meter	0.2 EUR, 0.5EUR, 1EUR, 2EUR, Jeton 7K; Electronic EMPv7
	579812	Coin Meter	20HUF, 50HUF, 100HUF, 200HUF; Electronic EMPv7
	572342	Coin Meter	Token WH121
	579808	Coin Meter	1EAD, 1TK, 2TK; Electronic EMPv7

# Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 5 of 5)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

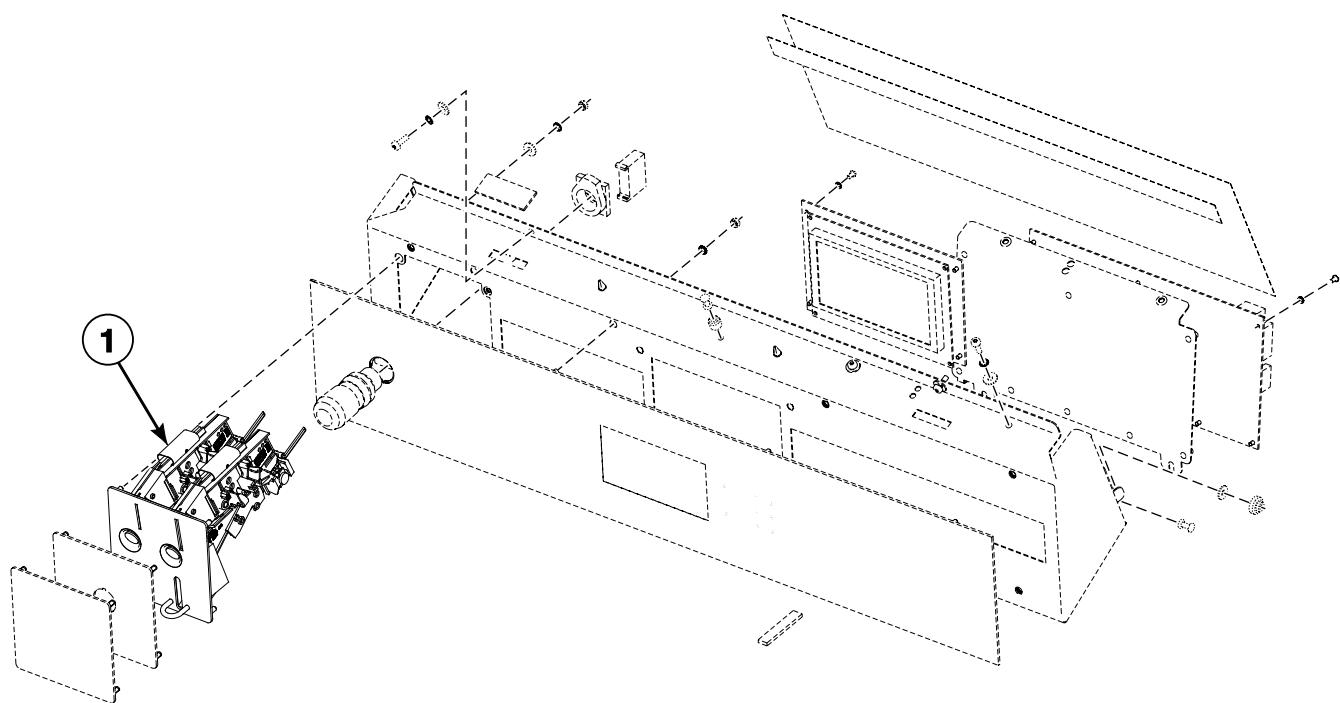


CFD2894P\_D2409

## **Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 5 of 5)**

REF	PART NO.	DESCRIPTION	COMMENTS
1	572358	Coin Meter	1THB, 2THB, 5THB, 10THB; 1TK, 2TK Jeton; Electronic EMPv7
	572391	Coin Meter	0.25CAD
	579812	Coin Meter	20 HUF, 50HUF, 100HUF, 200HUF; 1TK, 2TK, Jeton; Electronic EMPv7
	572383	Coin Meter	0.2CHF, 0.5CHF, 1CHF, 2CHF; 1TK, 2TK Jeton; Electronic EMPv7
	572339	Coin Meter	Getton Jeton (26mm diameter x 1.7mm)

# Control Panel - H, IY and J Models (Drawing 1 of 4)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

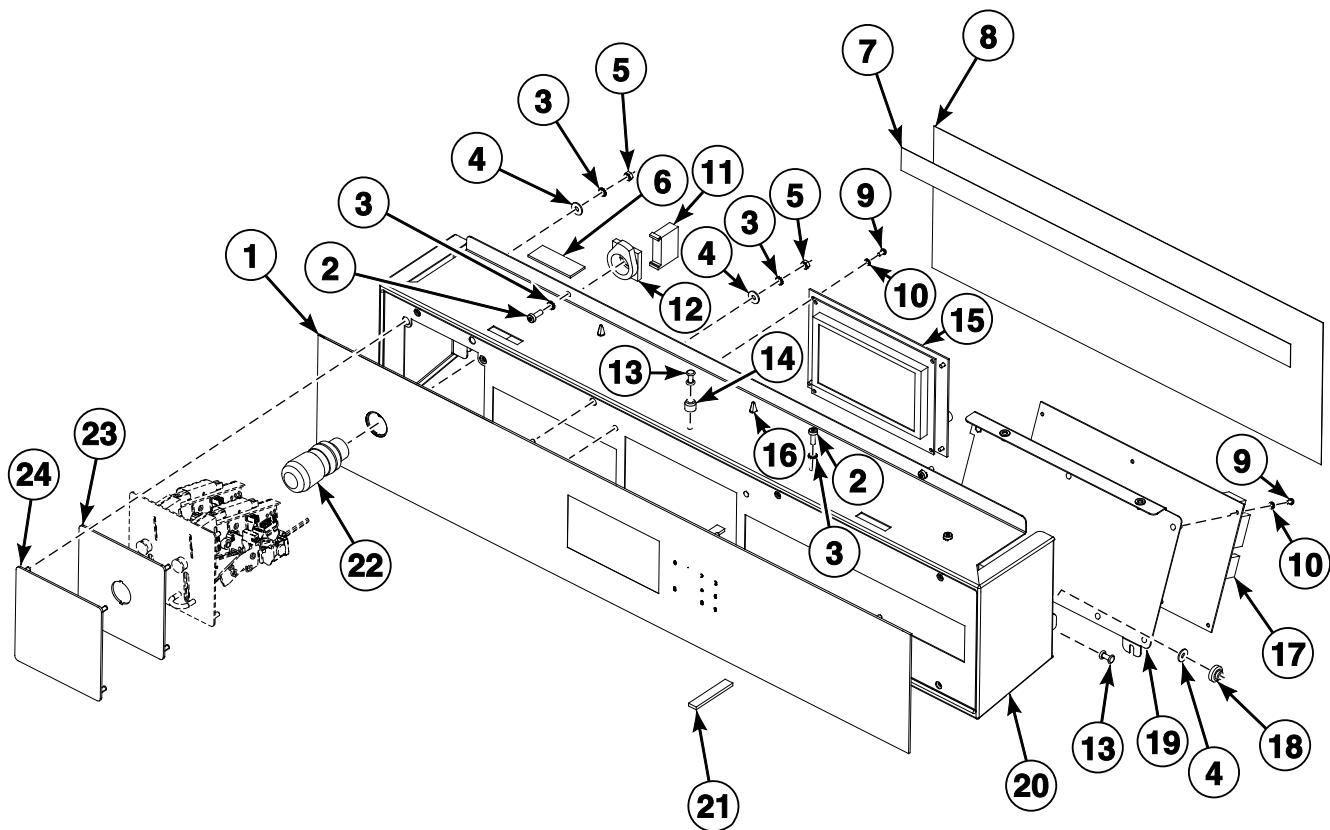


CFD2895P\_D2409

# Control Panel - H, IY and J Models (Drawing 1 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
	SP557744	USB Connection	J models
	569593	Network Installation Kit	Includes 569595 Holder, 203532 Wireless Network Control Assembly, 568363 Power Supply, 568362 Cable, 568378 Wiring, 568379 Wiring Diagram, SP345000626088 Binding Strip and connection accessories
	F8600501	Programming Cable	
1	SP557569	Keyboard	Aries-Elite
	SP557570	Keyboard	Aries
	SP560761	Keyboard	Without logo; With numeric keypad
	SP560762	Keyboard	Without logo; Without numeric keypad
	SP559392	Keyboard	J models; OPL
	SP559395	Keyboard	J models; Vended
2	SP555504	Bolt	M4x12
3	SP311679800004	Washer	M4
4	SP311902100004	Washer	M4
5	SP310934000004	Nut	M4
6	SPMEC001410	Self-Adhesive Pad	
7	SP510846	Tape	
8	SPPRI543000004	Cover	
9	SP309798500306	Bolt	M3x6
10	SP311679800003	Washer	M3
11	SP528312	Switching Unit	
12	SP528311	Emergency Stop Connector	
13	SP547779	Rivet	4x16.7
14	SP520408	Pin Insertion	
15	SP553419	Control Board	MC7
	SP553411	Control Board	MC7; J models
16	SP528313	Cable Holder	
17	SP553405	Control Board I/O	MC7
	SP547005	Board Interconnection Cable	
18	SP550113	Leading Pin	
19	SP558896	Programmer Holder	
20	SP558894	Control Panel	
21	SP284000012003	Tape	
22	SP528310	Emergency Stop Knob	OPL
	SP520032	Emergency Stop Wiring	OPL
	SP520033	Emergency Stop Interconnection	Vended
23	SP558929	Coin Meter Cover Plate	
24	SP558930	CPS Cover Plate	

## Control Panel - H, IY and J Models (Drawing 2 of 4)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

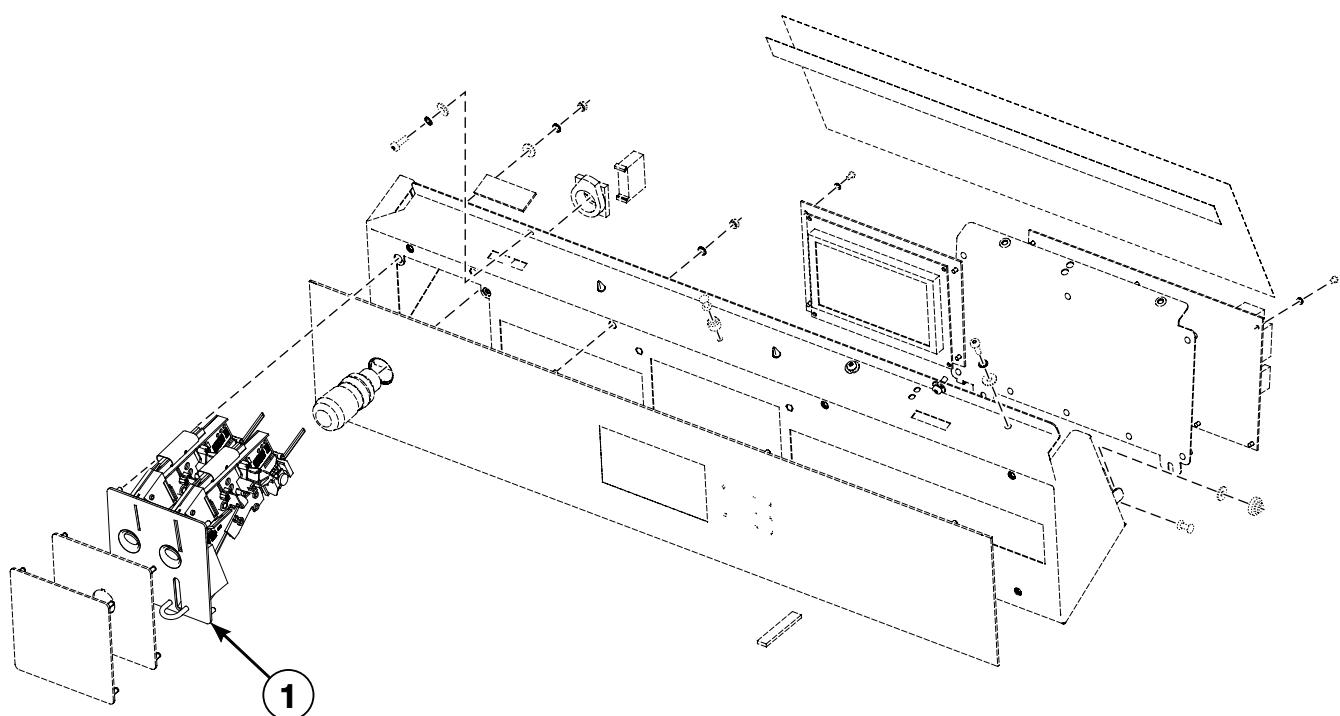


CFD2896P\_D2409

## Control Panel - H, IY and J Models (Drawing 2 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
1	569922	Coin Meter	0.2GBP, 0.5GBP, 1GBP, 2GBP, 0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR; Electronic EMPv7
	SP558958	Coin Meter	0.25USD
	SP558959	Coin Meter	0.5EUR and 1EUR
	SP560310	Coin Meter	1EUR
	SP560311	Coin Meter	0.5EUR
	SP560312	Coin Meter	1EUR and 2EUR
	SP559933	Coin Meter	5K Primus jeton
	SP559934	Coin Meter	10K Primus jeton
	569965	Coin Meter	0.2GBP, 0.5GBP, 1GBP, 2GBP, 0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, jeton "KWL Aqua", jeton "Gettone"; Electronic EMPv7
	SP559938	Coin Meter	STD 118-1 jeton
	SP560309	Coin Meter	7K Primus jeton
	SP560405	Coin Meter	12K Primus jeton
	SP560406	Coin Meter	15K Primus jeton
	SP560407	Coin Meter	2EUR
	SP560408	Coin Meter	0.2EUR and 0.5EUR
	SP560409	Coin Meter	0.2EUR
	SP560410	Coin Meter	1EUR and 0.2EUR
	SP560411	Coin Meter	2EUR and 0.5EUR
	SP560412	Coin Meter	1AUD and 0.2AUD
	SP560413	Coin Meter	1GBP and 20PC
	SP560414	Coin Meter	1GBP and 50PC
	SP560415	Coin Meter	100JPY
	SP560416	Coin Meter	500JPY and 100 JPY
	SP560417	Coin Meter	1AUD and 2AUD
	SP560418	Coin Meter	1AUD
	SP560419	Coin Meter	20PC
	SP560420	Coin Meter	50 Malaysian cent
	SP560421	Coin Meter	1SGD; New Singaporean dollar
	SP560422	Coin Meter	2MYR and 0.5MYR
	SP560423	Coin Meter	1SGD
	SP560424	Coin Meter	1NZD and 2NZD
	SP560425	Coin Meter	Easy games jeton
	SP560426	Coin Meter	Flat polis jeton
	SP560427	Coin Meter	Butzi wash jeton
	SP560428	Coin Meter	Speedy matic jeton
	SP560429	Coin Meter	Laundromatic Belgium jeton; Diameter 22.3mm
	569940	Coin Meter	0.1SGD, 0.2SGD, 0.5SGD, 1SGD; Electronic EMPv7
	569934	Coin Meter	0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR; Electronic EMPv7
	SP560432	Coin Meter	500WON
	SP560745	Coin Meter	Dobi ekspress jeton
	SP560751	Coin Meter	Lucky winner jeton
	SP559969	Coin Meter	Gettone jeton
	SP559949	Coin Meter	10 Taiwan dollar
	SP560090	Coin Meter	5K IPSO jeton

## Control Panel - H, IY and J Models (Drawing 3 of 4)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

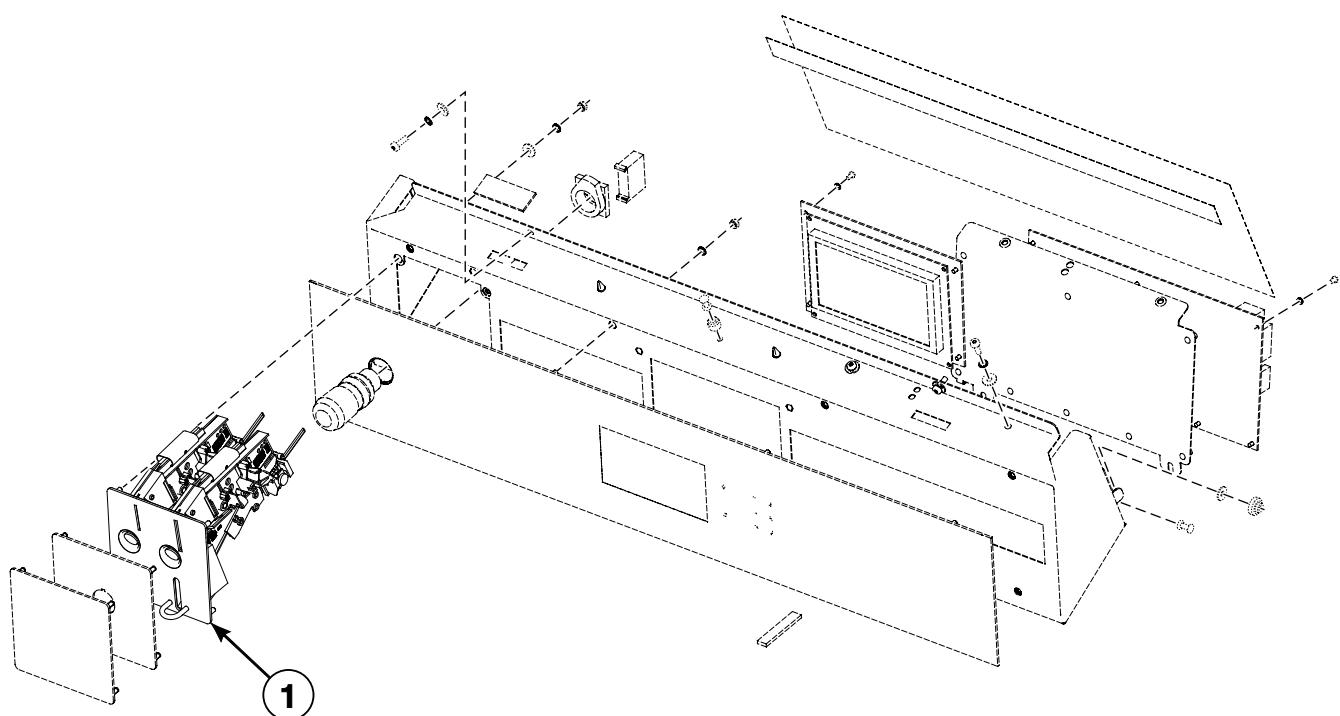


CFD2896P\_D2409

## Control Panel - H, IY and J Models (Drawing 3 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP560091	Coin Meter	7K IPSO jeton
	SP560092	Coin Meter	10K IPSO jeton
	SP560093	Coin Meter	12K IPSO jeton
	SP560094	Coin Meter	15K IPSO jeton
	SP560100	Coin Meter	Electrolux Asard jeton
	SP560087	Coin Meter	Gettone jeton
	SP560075	Coin Meter	5+1 Shekel
	SP560071	Coin Meter	1HKD
	569968	Coin Meter	0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, jeton G-FIS "LAVOIR BIANCA"; Electronic EMPv7
	569946	Coin Meter	1HRK, 2HRK, 5HRK; Electronic EMPv7
	569974	Coin Meter	1AUD, 2AUD, jeton "No Cash Value"; Electronic EMPv7
	561497	Coin Meter	Jeton Prinz Firbitex
	563405	Coin Meter	Token Ldl Chamberland Washing Machine
	569943	Coin Meter	0.1MYR, 0.2MYR, 0.5MYR, 0.5SGD, 1SGD; Electronic EMPv7
	569925	Coin Meter	1DKK, 2DKK, 5DKK, 10DKK, 20DKK, 1NOK, 5NOK, 10NOK, 20NOK, 0.2EUR, 0.5EUR, 1EUR, 2EUR; Electronic EMPv7
	564485	Coin Meter	Token 118-5
	564487	Coin Meter	Token Barisart (Ldl)
	569971	Coin Meter	0.5MYR, jeton "DOBI PAPA"; Electronic EMPv7
	553156	Coin Meter	Token Rotondi
	569905	Coin Meter	Brass jeton
	569911	Coin Meter	0.5CHF, 2CHF
	569919	Coin Meter	0.25USD, 1USD, 0.25CAD, 1CAD, 2CAD; Electronic EMPv7
	569928	Coin Meter	0.2AUD, 1AUD, 2AUD, 0.2NZD, 1NZD, 2NZD, 5HKD, 10HKD, 500KRW; Electronic EMPv7
	569931	Coin Meter	1CNY, 0.1MYR, 0.2MYR, 0.5MYR; Electronic EMPv7
	569937	Coin Meter	1PHP, 5PHP, 10PHP; Electronic EMPv7
	569949	Coin Meter	5CZK, 10CZK, 20CZK, 50CZK; Electronic EMPv7
	569952	Coin Meter	0.5MAD, 1MAD, 2MAD, 5MAD, 10MAD; Electronic EMPv7
	569955	Coin Meter	1PLN, 2PLN, 5PLN, 0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, 10ISK, 50ISK, 100ISK; Electronic EMPv7
	569962	Coin Meter	0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, jeton IPRSO 5K; Electronic EMPv7
	569980	Coin Meter	0.5MYR, jeton "BUBBLELAB"; Electronic EMPv7
	569988	Coin Meter	Jeton HAUCK 2018
	569993	Coin Meter	Jeton 08 MS
	569995	Coin Meter	Jeton D
	569999	Coin Meter	10+50 TWD
	570000	Coin Meter	100+500 ISK
	572302	Coin Meter	Token 118-16
	572305	Coin Meter	1ILS, 2ILS, 5ILS, 10ILS; Electronic EMPv7
	572308	Coin Meter	1ZAR, 2ZAR, 5ZAR; Electronic EMPv7
	572311	Coin Meter	5RUB, 10RUB; Electronic EMPv7
	572314	Coin Meter	50CLP, 100CLP, 500CLP; Electronic EMPv7
	572318	Coin Meter	100JPY, 500JPY, 10TWD, 50TWD; Electronic EMPv7

## Control Panel - H, IY and J Models (Drawing 4 of 4)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

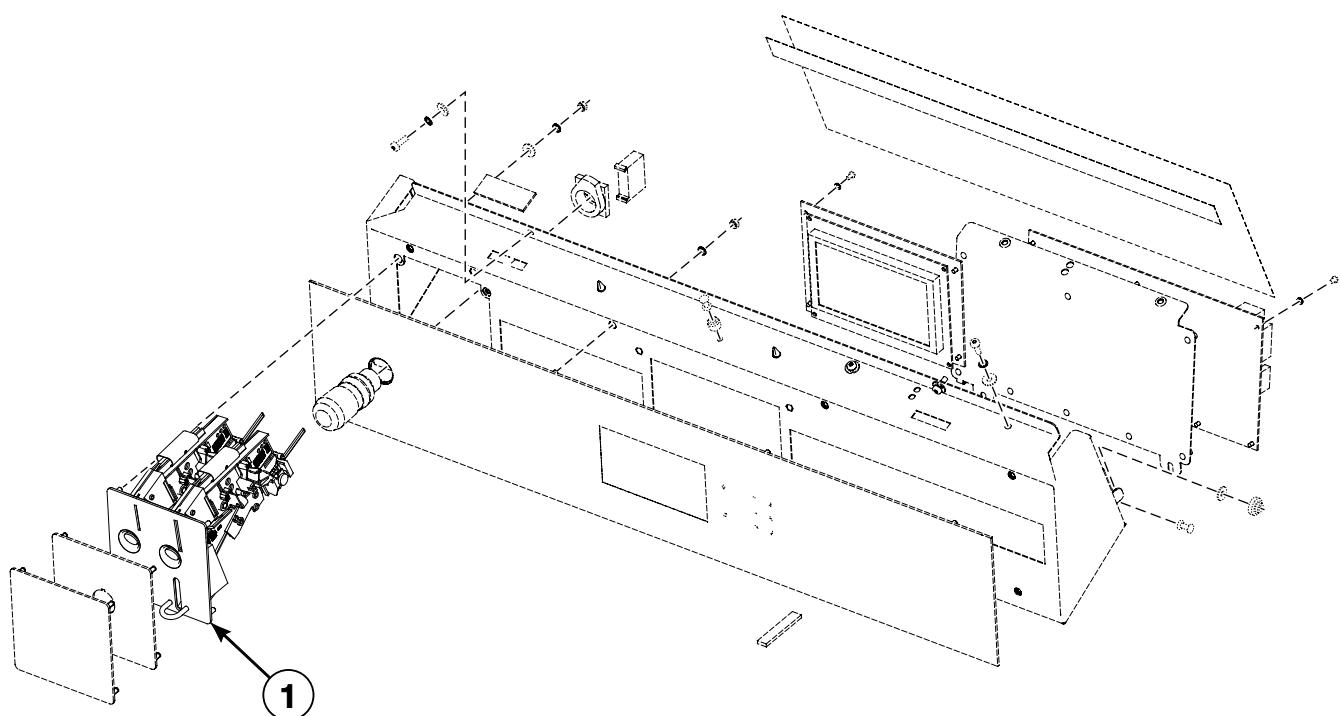

CFD2896P\_D2409


## Control Panel - H, IY and J Models (Drawing 4 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
1	572321	Coin Meter	0.5GEL, 1GEL, 2GEL; Electronic EMPv7
	579809	Coin Meter	1EAD, 1TK, 2TK; Electronic EMPv7
	572324	Coin Meter	0.2 EUR, 0.5EUR, 1EUR, 2EUR, Jeton 7K; Electronic EMPv7
	572343	Coin Meter	Token WH121
	572355	Coin Meter	Token 1699360
	572359	Coin Meter	1THB, 2THB, 5THB, 10THB/TK1+2; ElectronicEMPv7
	579813	Coin Meter	20HUF, 50HUF, 100HUF, 200HUF; TK1, TK2; ElectronicEMPv7
	572389	Coin Meter	0.25CAD
	575276	Coin Meter	0.25USD + 1USD
	575277	Coin Meter	0.25CAD + 1CAD
	572384	Coin Meter	0.2CHF, 0.5CHF, 1CHF, 2CHF, TK1, TK2; Electronic EMPv7

# Control Panel - AF, FX, HX, LY, MWF, PY, QW and SW Models

## (Drawing 1 of 2)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

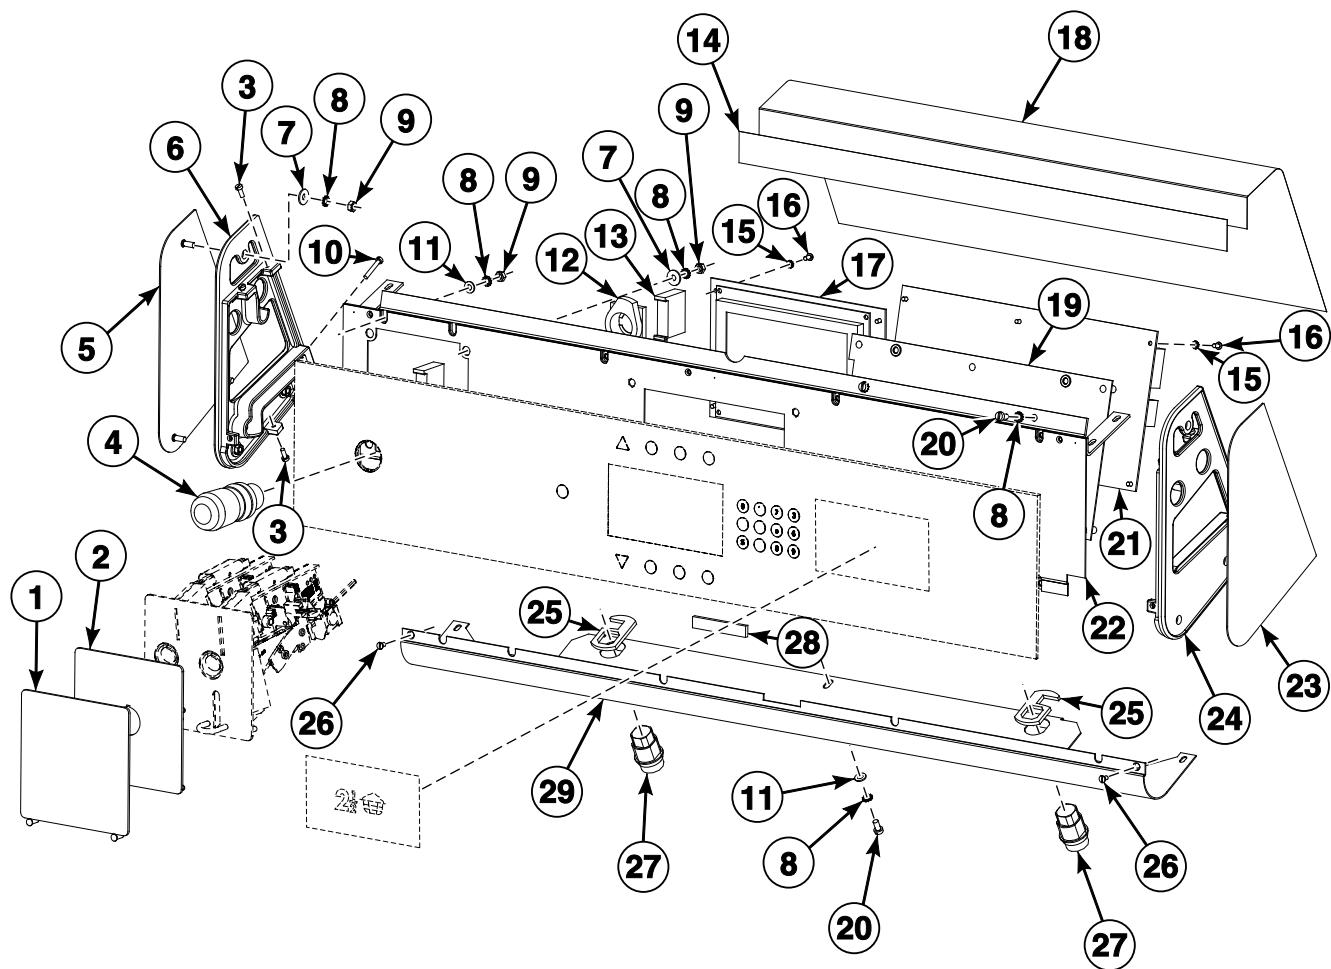

CZW134P\_D2409

# Control Panel - AF, FX, HX, LY, MWF, PY, QW and SW Models


## (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	F8600501	Programming Cable	
	569593	Network Installation Kit	Includes 569595 Holder, 203532 Wireless Network Control Assembly, 568363 Power Supply, 568362 Cable, 568378 Wiring, 568379 Wiring Diagram, SP345000626088 Binding Strip and connection accessories
1	SP550149	Cover Plate	PY models; North America
2	SP547565	Coin Meter Cover	
3	577761	Bolt	3x8
4	SP528310	Emergency Stop Knob	OPL
	SP520032	Emergency Stop Wiring	OPL
	SP520033	Emergency Stop Interconnection	Vended
5	SP547507	Side Sheet Metal	Left
6	570391	Side Board	Left
7	SP311902100004	Washer	M4
8	SP311679800004	Washer	M4
9	SP310934000004	Nut	M4
10	577763	Bolt	3x20
11	SP311125000004	Washer	M4
12	SP528311	Emergency Stop Connector	
13	SP528312	Switching Unit	
14	SP510846	Tape	
15	SP311679800003	Washer	M3
16	SP309798500306	Bolt	M3x6
17	SP547001	Control Board	MC6 (green color); Models through Serial No. 105FX002564BZ; Refer to NOTE*
	SP553411	Control Board	MC7 (blue color); Models starting Serial No. 105FX002565BZ; Refer to NOTE*
18	SPPRI54300004	Cover	
19	SP547513	Programmer Holder	
20	SP555504	Bolt	M4x12
21	SP547002	Control Board Power	MC6
	SP553405	Control Board I/O	MC7
	SP537995	Board Interconnection Cable	QW models
	SP547005	Board Interconnection Cable	All other models
22	SP547510	Programmer Holder	
23	SP547506	Side Sheet Metal	Right
24	570392	Side Board	Right
25	SPPRI610002007	Hook Lock	Small; MC7; OPL
26	577762	Bolt	3x8
27	SP547527	Lock	
	SP550616	Key	Used with SP547527 Lock
28	SP284000012003	Tape	
29	SP547515	Lower Lath	

\* NOTE: For machines within the Serial No. range 105FX002566BZ - 105FX002988DF, contact the After Sales department.

# Control Panel - AF, FX, HX, LY, MWF, PY, QW and SW Models (Drawing 2 of 2)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

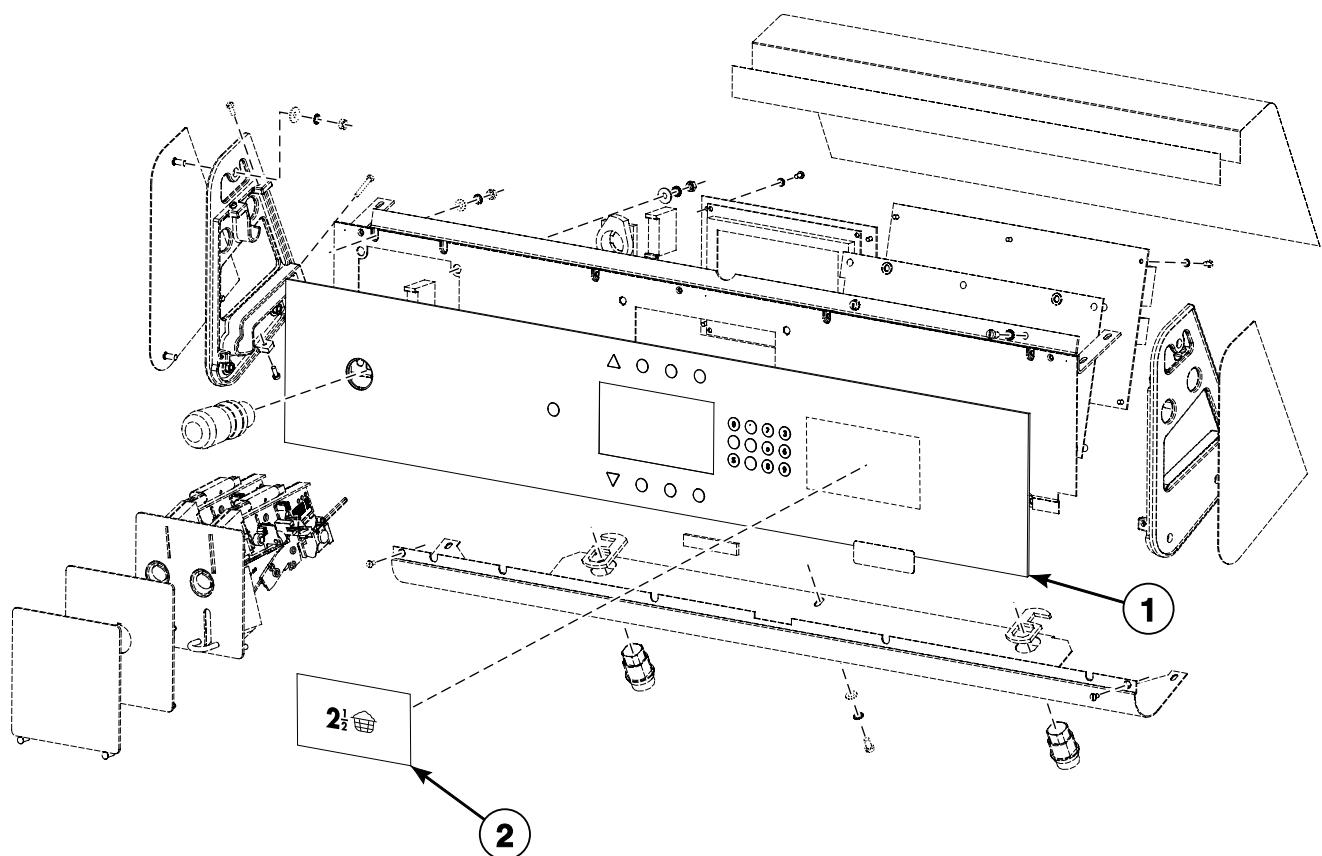


CZW135P\_D2409

## Control Panel - AF, FX, HX, LY, MWF, PY, QW and SW Models (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP560755	Keyboard	X Control; North America
	SP547014	Keyboard	FX, MWF and PY models; OPL; X Control Plus; Gray-black; CE
	SP547013	Keyboard	FX, MWF and PY models; OPL; X Control; Gray-black; CE
	SP547011	Keyboard	FX, MWF and PY models; Vended; X Control; Gray-black; CE
	SP547012	Keyboard	FX, MWF and PY models; CPS; X Control; Gray-black; CE
	SP547026	Keyboard	AF and LY models; OPL; X Control Plus; Black; CE
	SP547025	Keyboard	AF and LY models; OPL; X Control; Black; CE
	SP547023	Keyboard	AF and LY models; Vended; X Control; Black; CE
	SP547024	Keyboard	AF and LY models; CPS; X Control; Black; CE
	SP547038	Keyboard	FX, MWF and PY models; OPL; X Control Plus; Gray; CE
	SP547037	Keyboard	FX, MWF and PY models; OPL; X Control; Gray; CE
	SP547035	Keyboard	FX, MWF and PY models; Vended; X Control; Gray; CE
	SP547036	Keyboard	FX, MWF and PY models; CPS; X Control; Gray; CE
	SP537994	Keyboard	QW models; CE
2	SP556112	Keyboard	SW models; CE
	SP552911	Keyboard	HX models; CE
2	SP563290	Label	Basket Capacity; 2.5; Vended; North America

# Control Panel OPL - AF, IY and NY Models

Models with A, D, F, I, J, R, T or X in 7th position of the model number

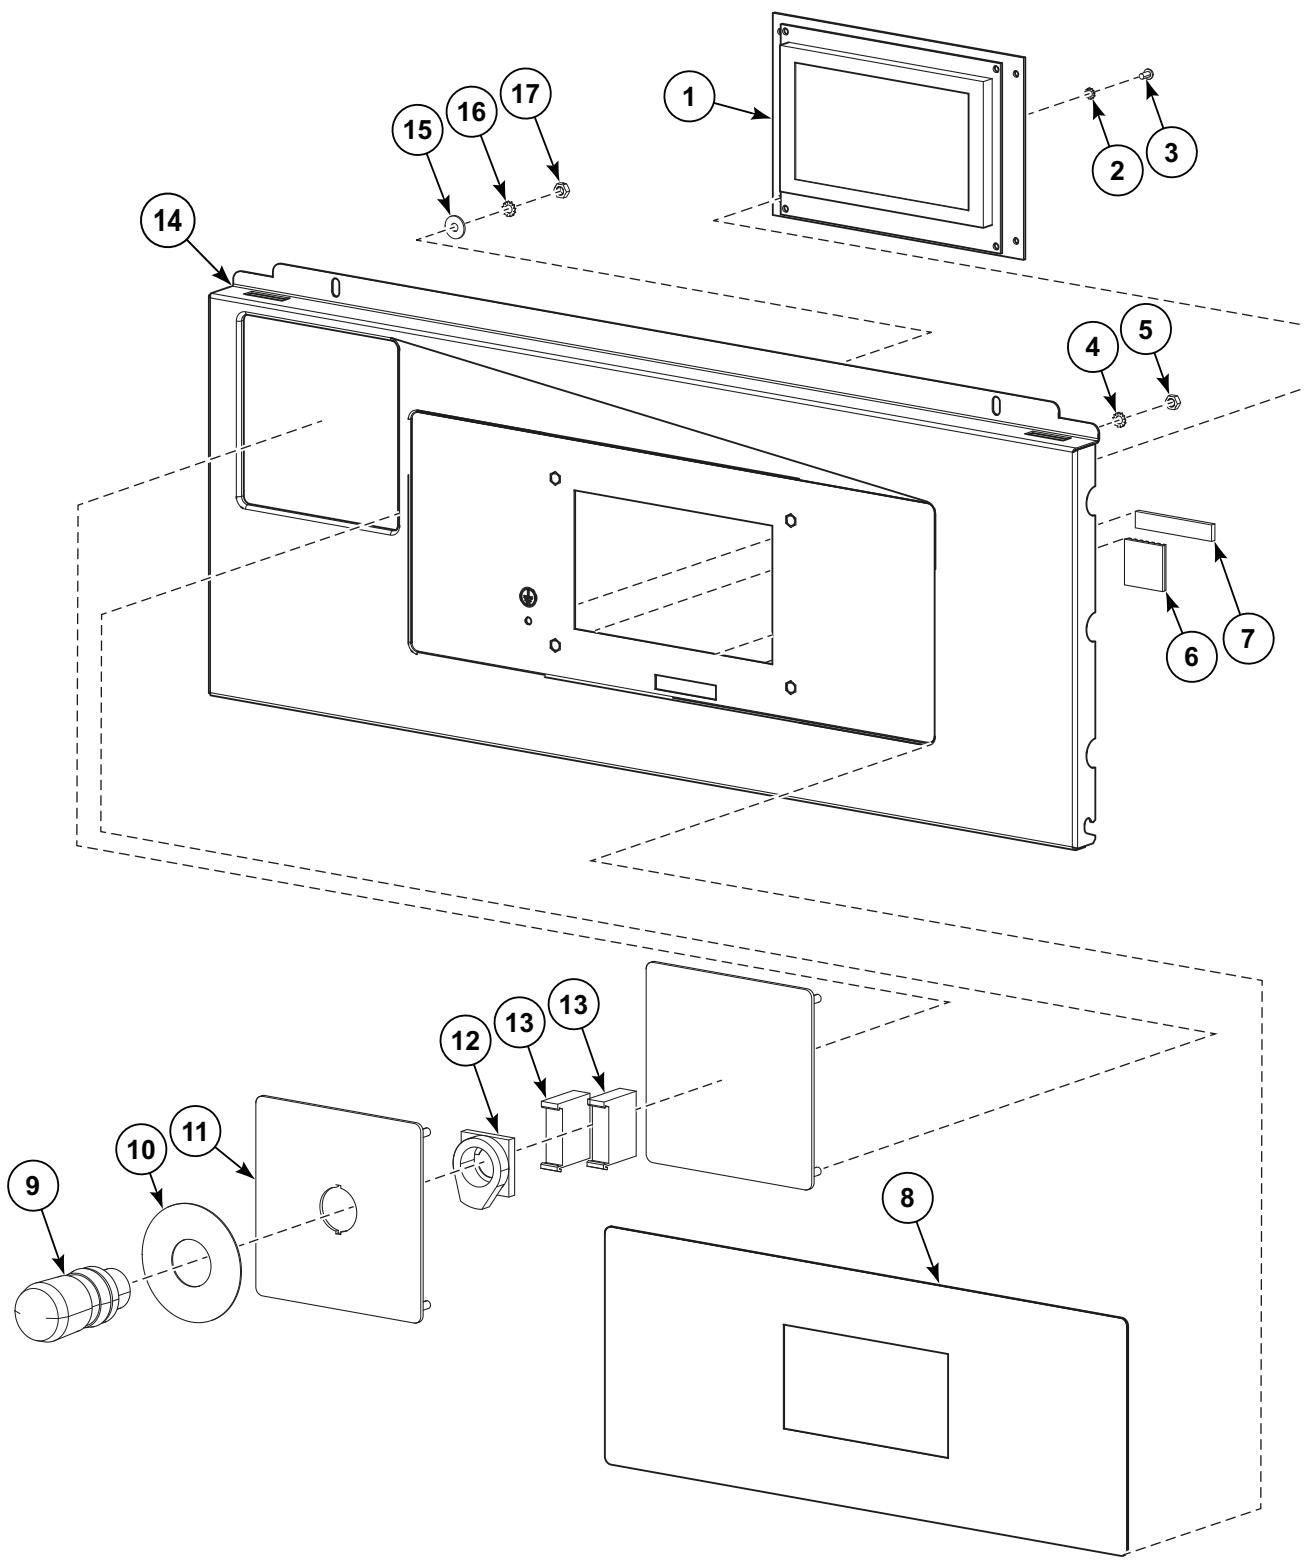


CZW284P\_D2409

## Control Panel OPL - AF, IY and NY Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP553419	Control Board	IY models; MC7
	553411	Control Board	AF and NY Models; MC7
2	SP311679800003	Washer	M3
3	SP309798500306	Bolt	M3x6
4	SP311679800004	Washer	M4
5	SP310934000004	Nut	M4
6	SP550115	Fastener	
7	SP284000012003	Tape	
8	SP557565	Keyboard	IY models; Aries Elite
	SP557566	Keyboard	IY models; Aries
	547087	Keyboard	AF and NY Models; Professional; Black
	547088	Keyboard	AF and NY Models; Basic; Black
	560748	Keyboard	Without logo; With numeric keypad
	560747	Keyboard	Without logo; Without numeric keypad
9	SP528310	Emergency Stop Knob	Used with SP520032 Emergency Stop Wiring
10	SPPRI551005248	Emergency Stop Label	
11	567924	Coin Meter Cover	
12	SP528311	Emergency Stop Connector	
13	SP528312	Switching Unit	
14	573064	Control Panel	
15	SP311902100004	Washer	M4
16	SP311679800004	Washer	M4
17	SP310934000004	Nut	M4

## Control Panel Vended - AF, IY and NY Models

Models with A, D, F, I, J, R, T or X in 7th position of the model number

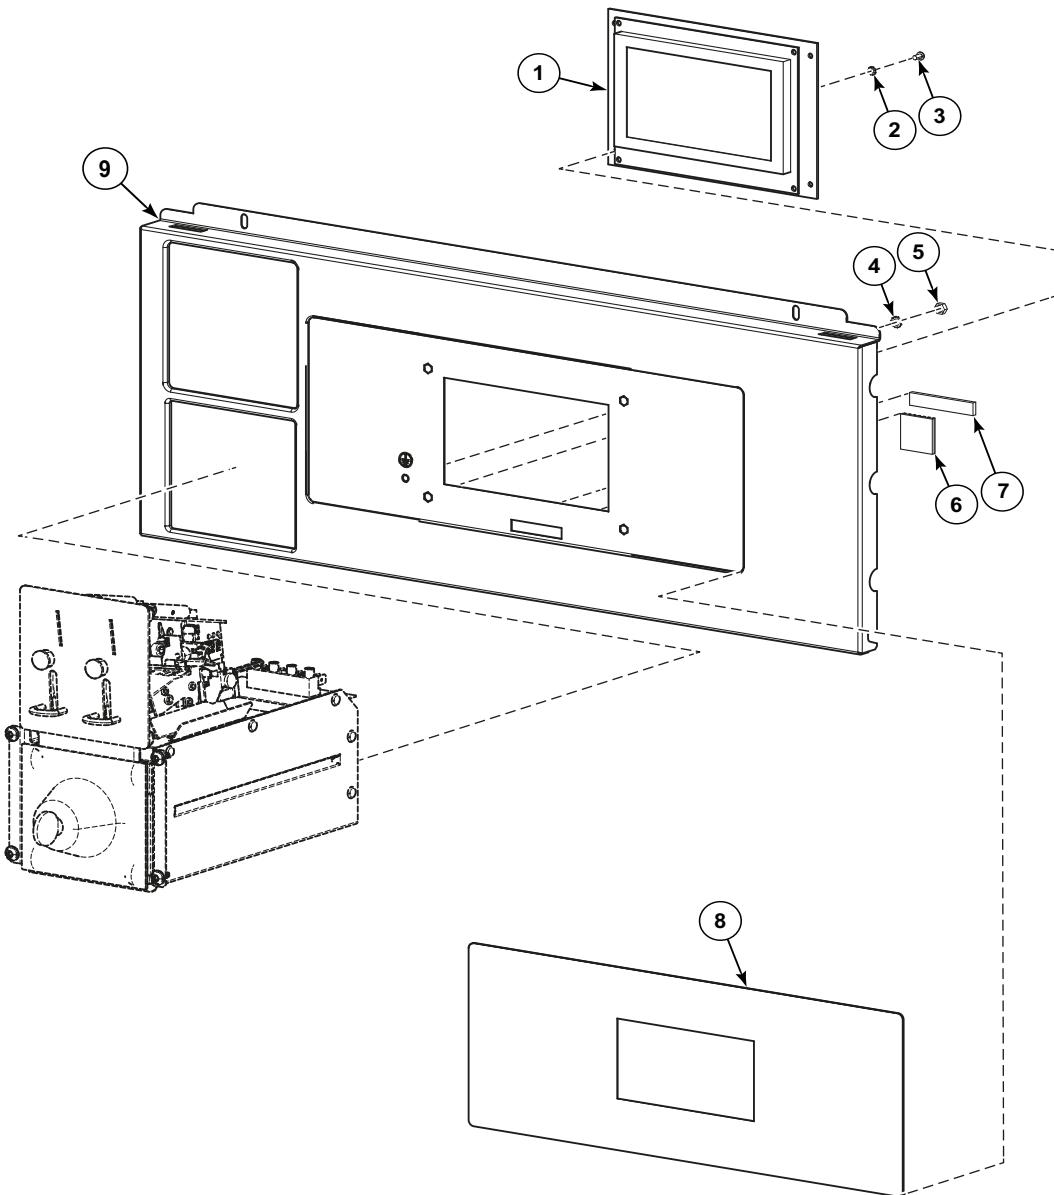


CZW285P\_D2409

## Control Panel Vended - AF, IY and NY Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP553419	Control Board	IY models; MC7
	553411	Control Board	AF and NY Models; MC7
2	SP311679800003	Washer	M3
3	SP309798500306	Bolt	M3x6
4	SP311679800004	Washer	M4
5	SP310934000004	Nut	M4
6	SP550115	Fastener	
7	SP284000012003	Tape	
8	SP557566	Keyboard	Aries
9	573062	Control Panel	

# Control Panel for Central Payment System - AF, IY and NY Models

Models with A, D, F, I, J, R, T or X in 7th position of the model number

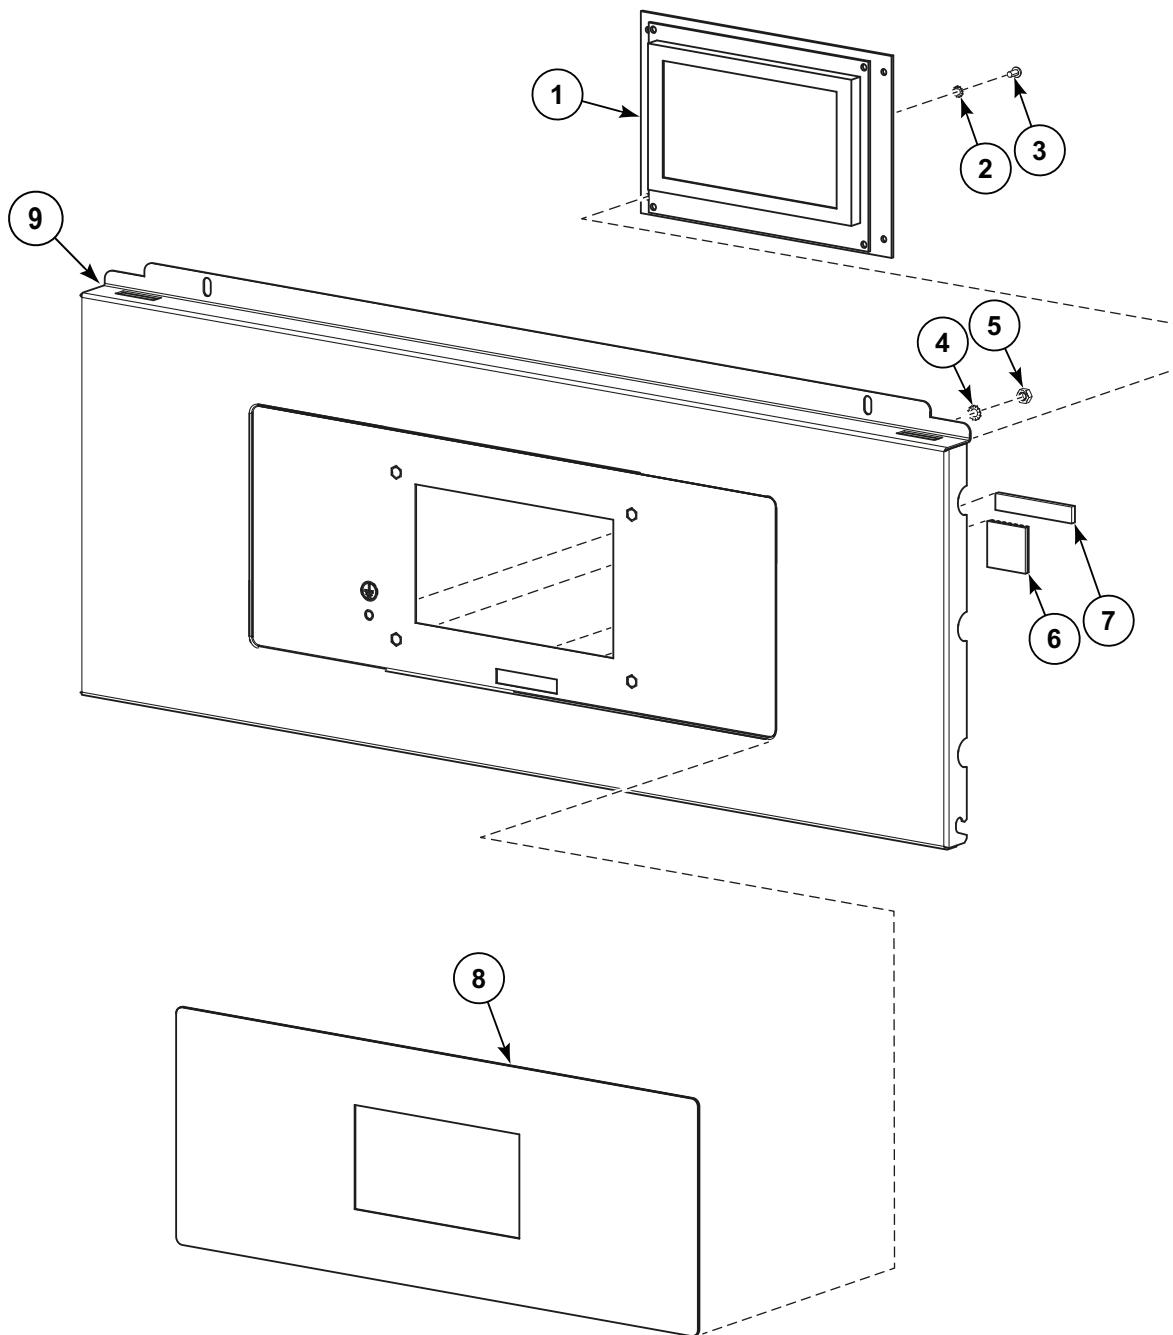


CZW286P\_D2409

## Control Panel for Central Payment System - AF, IY and NY Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP553419	Control Board	IY models; MC7
	553411	Control Board	AF and NY Models; MC7
2	SP311679800003	Washer	M3
3	SP309798500306	Bolt	M3x6
4	SP311679800004	Washer	M4
5	SP310934000004	Nut	M4
6	SP550115	Fastener	
7	SP284000012003	Tape	
8	SP557566	Keyboard	Aries
9	573074	Control Panel	105 models

# Control Panel OPL - AF, IY, JY and NY Models

Models with V in 7th position of the model number

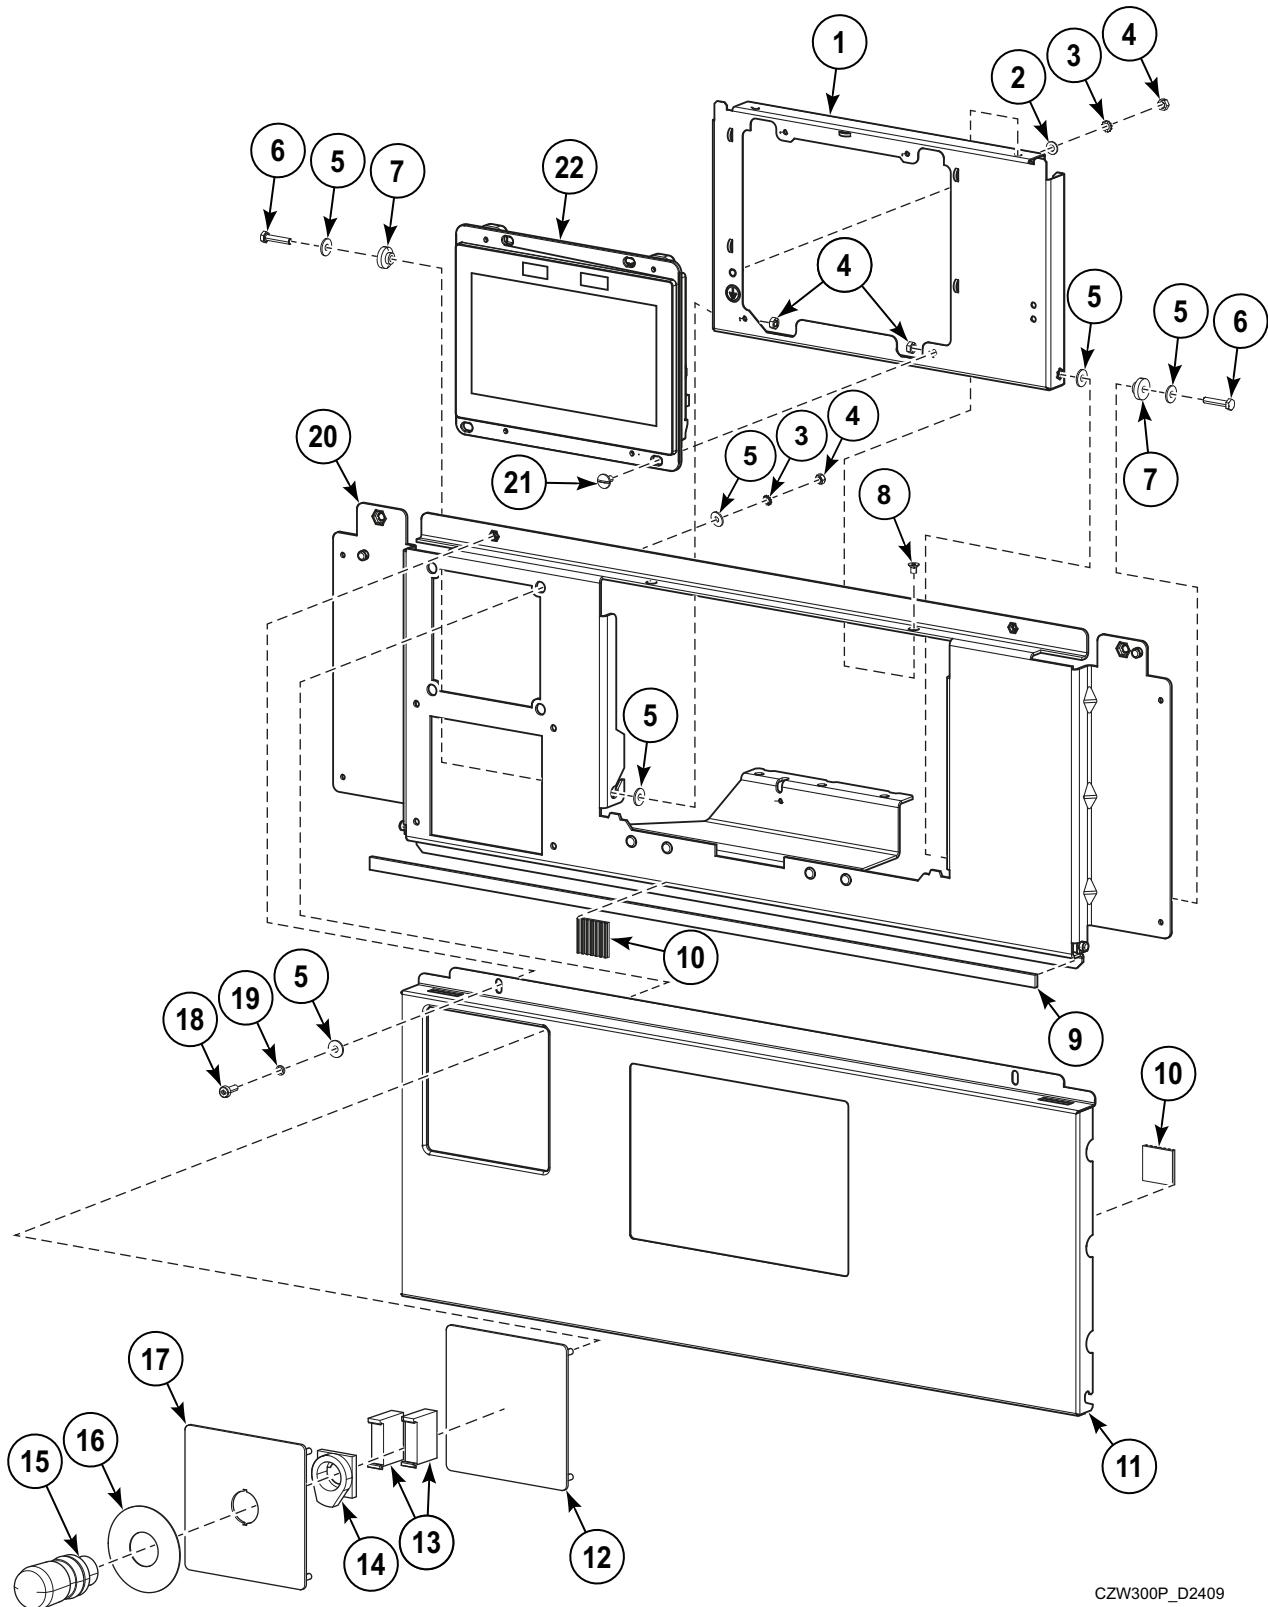


CZW300P\_D2409

## Control Panel OPL - AF, IY, JY and NY Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	571041	Control Holder	
2	SP311125000004	Washer	M4
3	SP311679800004	Washer	M4
4	SP310934000004	Nut	M4
5	SP311902100004	Washer	M4
6	569655	Bolt	M4x25
7	SP550113	Leading Pin	
8	SP309965240408	Bolt	M4x8
9	SP284000012003	Tape	0.558m
10	SP550115	Fastener	
11	573117	Control Panel	
12	567925	Label Covering	
13	SP528312	Switching Unit	
14	SP528311	Emergency Stop Connector	
15	SP528310	Emergency Stop Knob	Used with SP520032 Emergency Stop Wiring
16	SPPRI551005248	Emergency Stop Label	
17	567924	Coin Meter Cover	
18	SP555504	Bolt	M4x12
19	SP311127000004	Washer	4
20	573025	Control Panel Frame	
21	309500240408	Bolt	M4x8
22	575632	Control	7", MC10

# Control Panel Vended - AF, IY, JY and NY Models

Models with V in 7th position of the model number

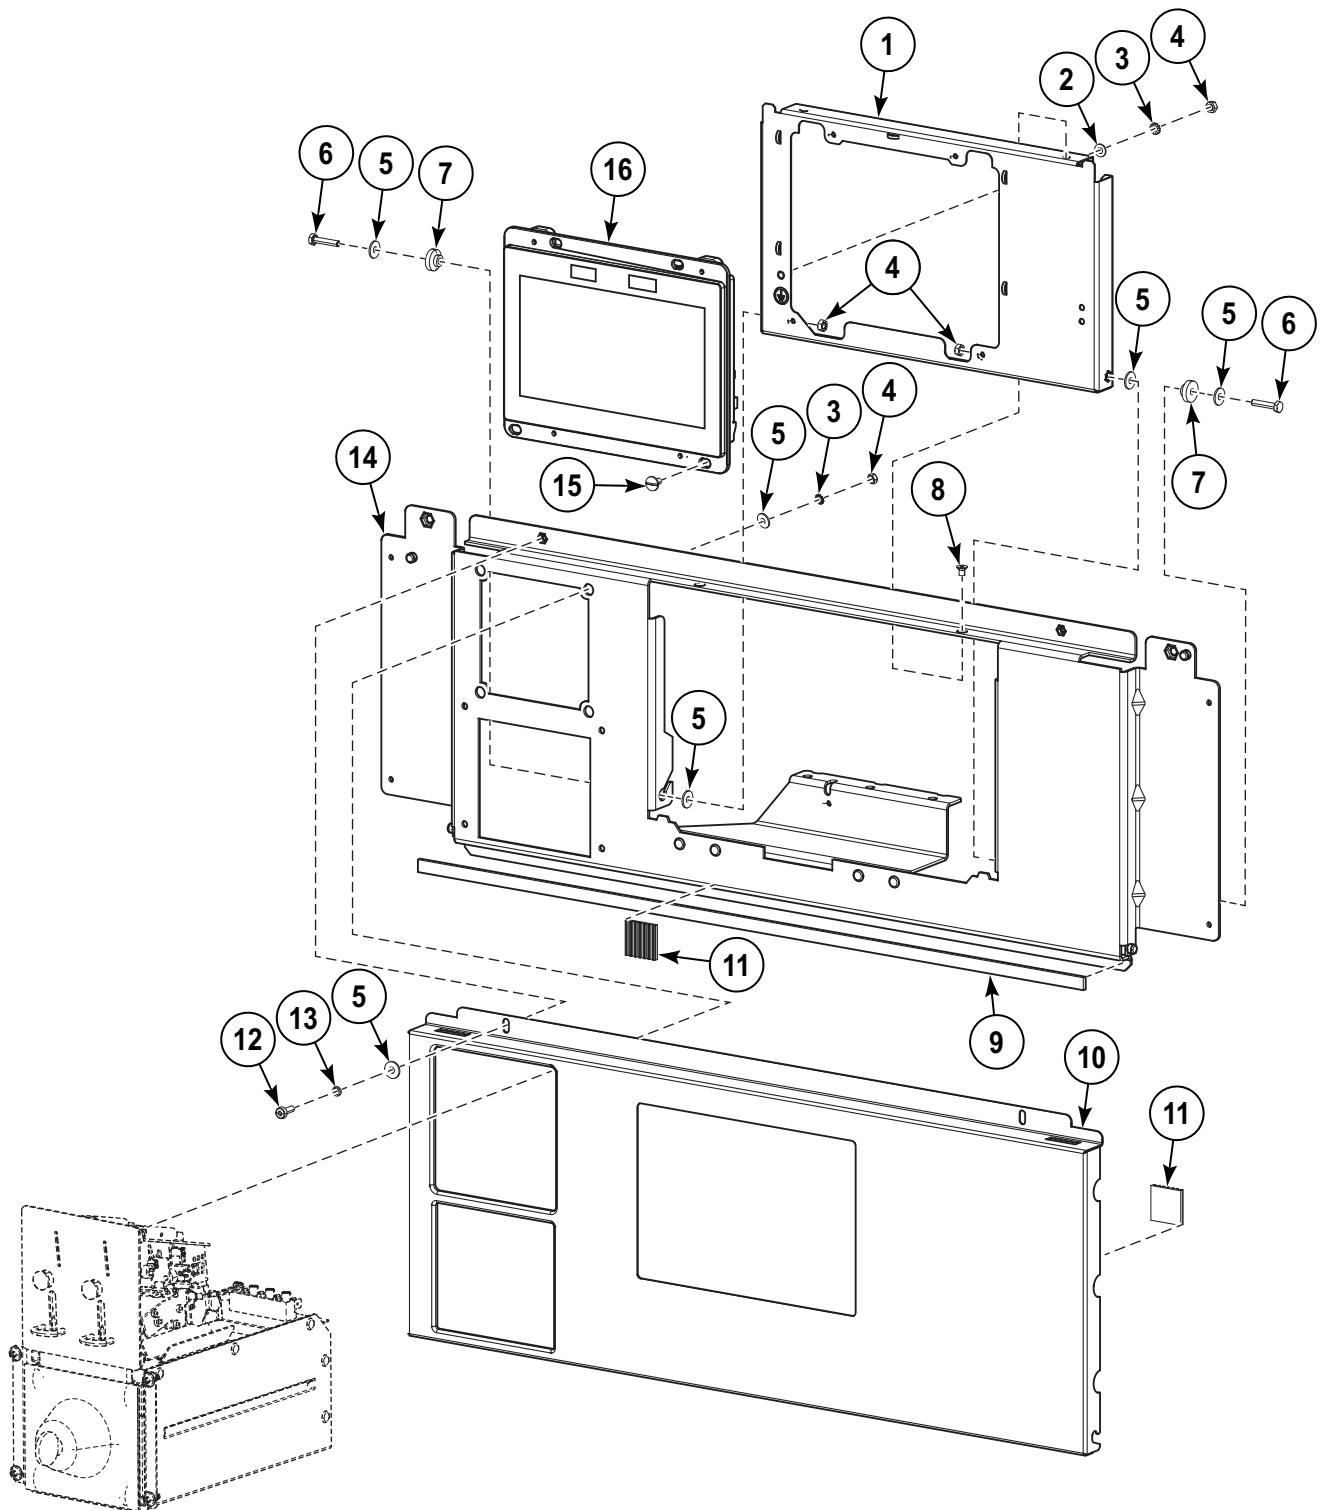


CZW301P\_D2409

## Control Panel Vended - AF, IY, JY and NY Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	571041	Control Holder	
2	SP311125000004	Washer	M4
3	SP311679800004	Washer	M4
4	SP310934000004	Nut	M4
5	SP311902100004	Washer	M4
6	569655	Bolt	M4x25
7	SP550113	Leading Pin	
8	SP309965240408	Bolt	M4x8
9	SP284000012003	Tape	0.558m
10	573115	Control Panel	
11	SP550115	Fastener	
12	SP555504	Bolt	M4x12
13	SP311127000004	Washer	4
14	573025	Control Panel Frame	
15	309500240408	Bolt	M4x8
16	575632	Control	7", MC10

# Control Panel for Central Payment System - AF, IY, JY and NY Models

Models with V in 7th position of the model number

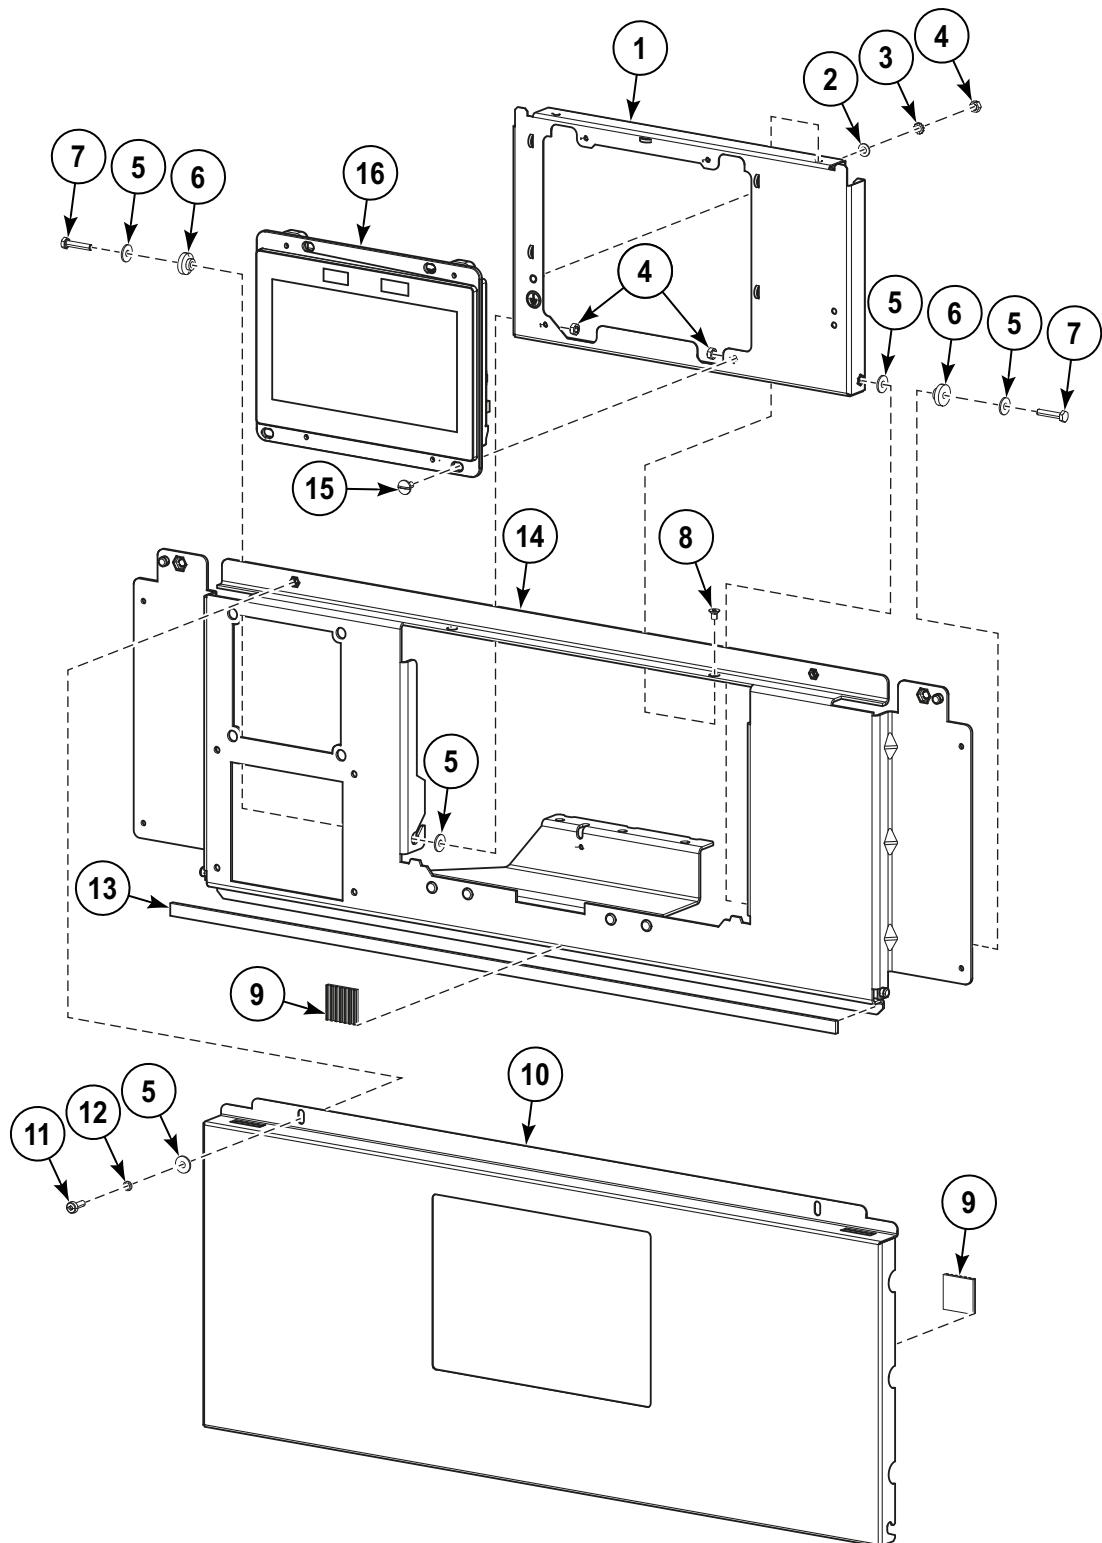


CZW302P\_D2409

# Control Panel for Central Payment System - AF, IY, JY and NY Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	571041	Control Holder	
2	SP311125000004	Washer	M4
3	SP311679800004	Washer	M4
4	SP310934000004	Nut	M4
5	SP311902100004	Washer	M4
6	SP550113	Leading Pin	
7	569655	Bolt	M4x25
8	SP309965240408	Bolt	M4x8
9	SP550115	Fastener	
10	573119	Control Panel	
11	SP555504	Bolt	M4x12
12	SP311127000004	Washer	4
13	SP284000012003	Tape	0.558m
14	573025	Control Panel Frame	
15	309500240408	Bolt	M4x8
16	575632	Control	7", MC10

## Control Panel OPL - FX and PY Models

Models with V in 7th position and with H or 6 in 10th position of the model number Through Serial No. 105FX013726SF

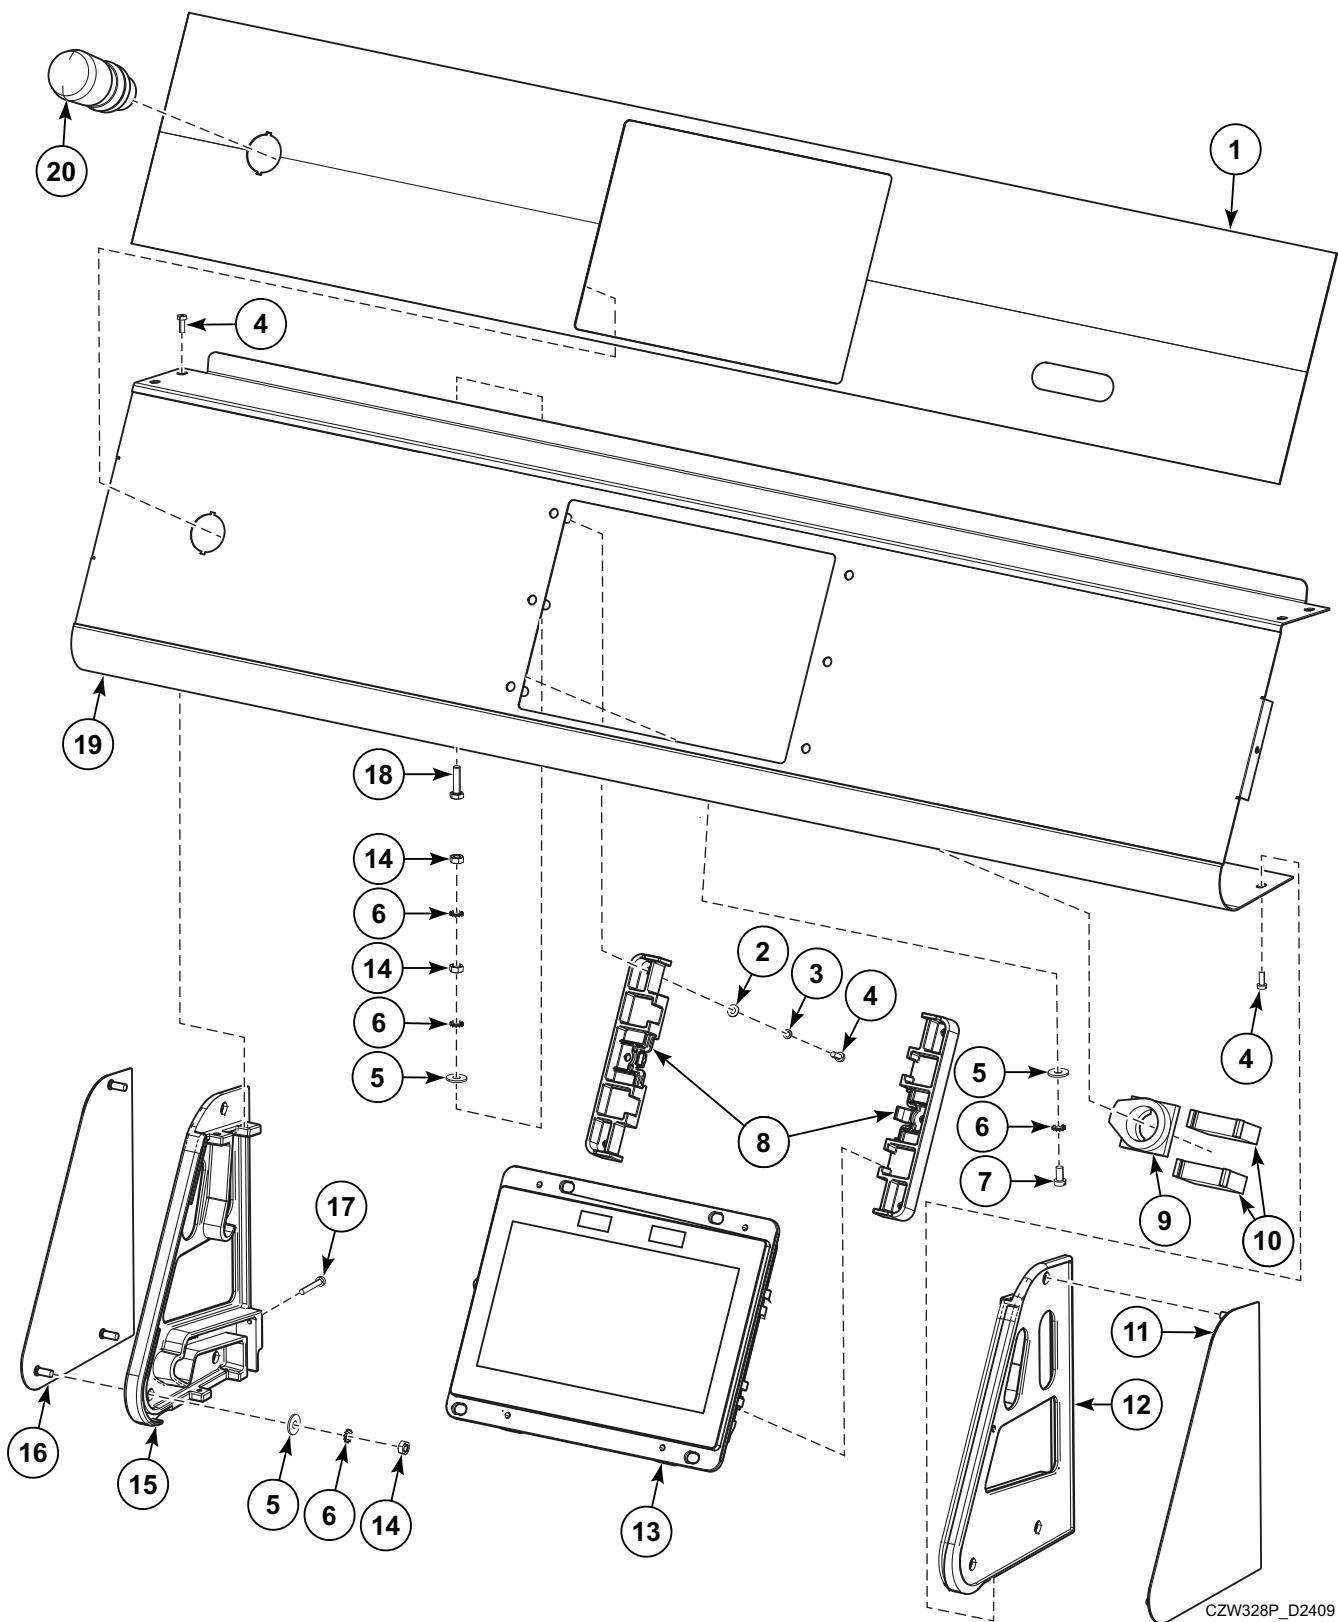


CZW328P\_D2409

## Control Panel OPL - FX and PY Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	573927	Overlay	
	574217	Overlay	OEM
2	SP311125000003	Washer	M3
3	SP311127000003	Washer	3
4	SP309084000308	Bolt	M3x8
5	SP311902100004	Washer	M4
6	SP311679800004	Washer	M4
7	SP309084000408	Bolt	M4x8
8	573929	Sidewall	
9	SP528311	Emergency Stop Connector	
10	SP528312	Switching Unit	
11	572586	Sidewall	Right
12	572572	Sidewall	Right
13	575632	Control	7", MC10
14	SP310934000004	Nut	M4
15	572571	Sidewall	Left
16	572588	Sidewall	Left
17	SP309084000320	Bolt	M3x20
18	SP309933000416	Bolt	M4x16
19	572582	Nose Assembly	Includes item 1 and 573930 Nut
	574235	Nose Assembly	OEM; Includes item 1 and 573930 Nut
20	SP528310	Emergency Stop Knob	Used with SP520032 Emergency Stop Wiring

## Control Panel OPL - FX and PY Models

Models with V in 7th position and with H or 6 in 10th position of the model number Starting Serial No. 105FX013727SF

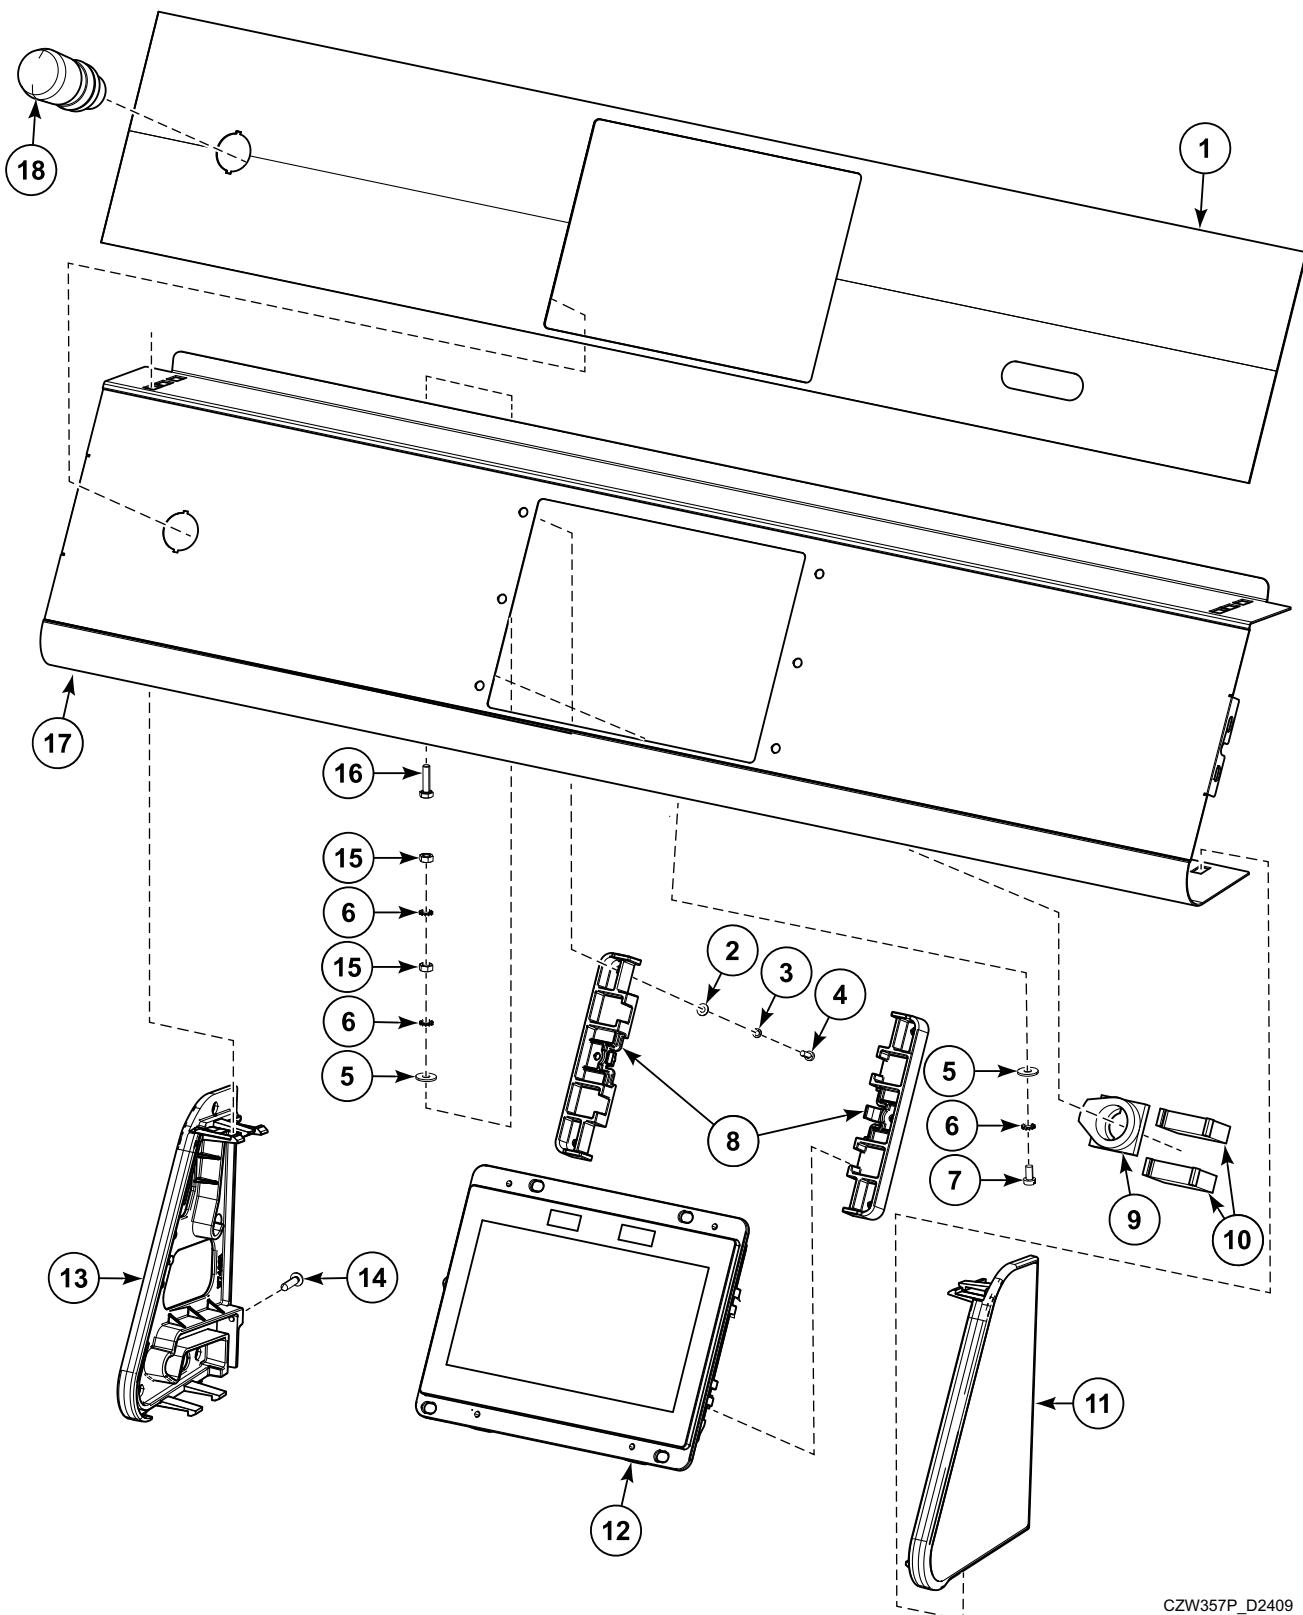


CZW357P\_D2409

## Control Panel OPL - FX and PY Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	573927	Overlay	
	574217	Overlay	OEM
2	SP311125000003	Washer	M3
3	SP311127000003	Washer	3
4	SP309084000308	Bolt	M3x8
5	SP311902100004	Washer	M4
6	SP311679800004	Washer	M4
7	SP309084000408	Bolt	M4x8
8	573929	Sidewall	
9	SP528311	Emergency Stop Connector	
10	SP528312	Switching Unit	
11	576070	Sidewall	Right
12	575632	Control	7", MC10
13	576069	Sidewall	Left
14	SP520407	Screw	
15	SP310934000004	Nut	M4
16	SP309933240412	Bolt	M4x12
17	576034	Nose Assembly	Includes item 1 and 573930 Nut
	576043	Nose Assembly	OEM; Includes item 1 and 573930 Nut
18	SP528310	Emergency Stop Knob	Used with SP520032 Emergency Stop Wiring

## Control Panel OPL - FX and PY Models

Models with V in 7th position and with N, U or 8 in 10th position of the model number Starting Serial No. 105FX016691WD

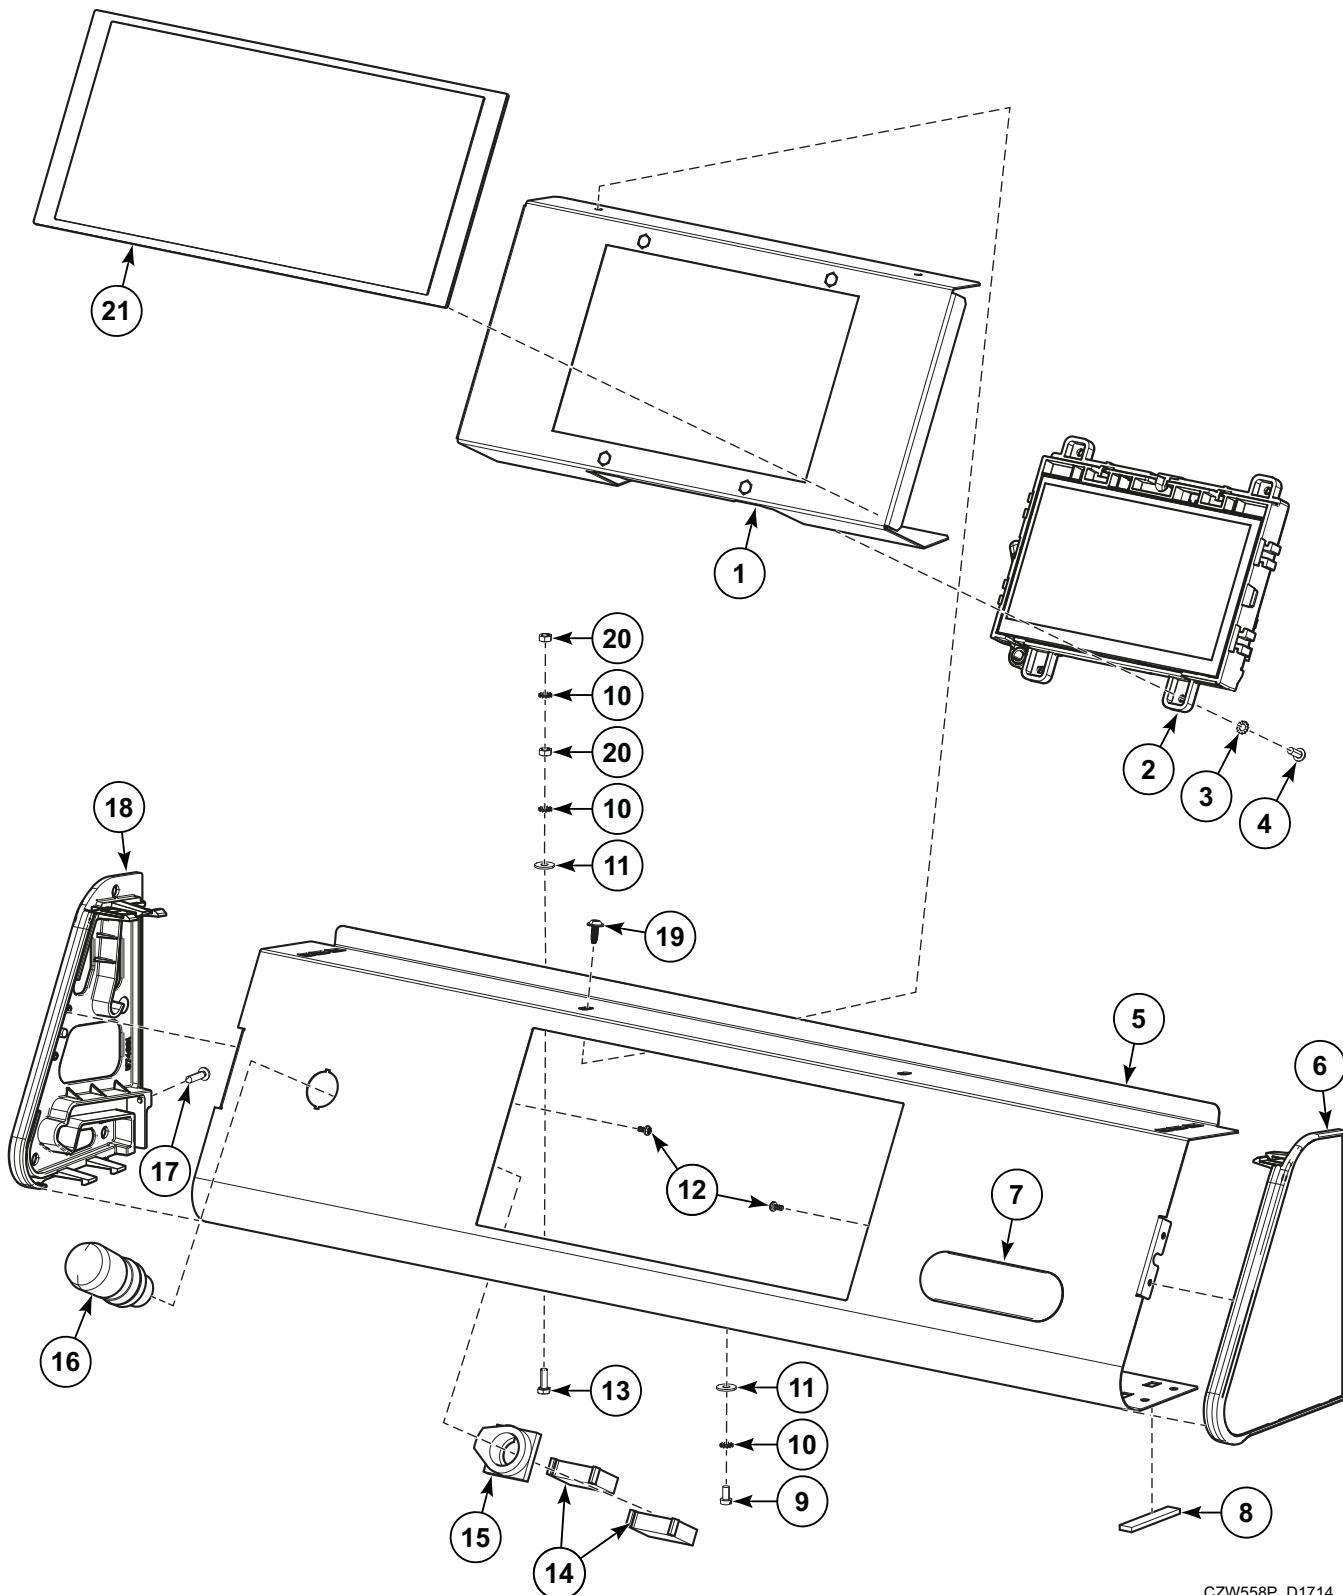


CZW558P\_D1714

## Control Panel OPL - FX and PY Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	582260	Holder	
2	582285	Control	7", MC10
3	SP311679800004	Washer	M4
4	582307	Bolt	M4x10
5	579187	Nose Assembly	
6	576070	Sidewall	Right
7	567887	Logo	
8	SP284000012003	Tape	0.5m; 2pcs
9	SP309084000408	Bolt	M4x8
10	SP311679800004	Washer	M4
11	SP311902100004	Washer	M4
12	582361	Screw	3x6
13	SP309933240412	Bolt	M4x12
14	SP528312	Switching Unit	
15	SP528311	Emergency Stop Connector	
16	SP528310	Emergency Stop Knob	Used with SP520032 Emergency Stop Wiring
17	SP520407	Screw	
19	SP529206	Screw	4x11
18	576069	Sidewall	Left
20	SP310934000004	Nut	M4
21	582274	Plastic Window	

## Control Panel Vended - FX and PY Models

Models with V in 7th position and with H or 6 in 10th position of the model number Through Serial No. 105FX013726SF

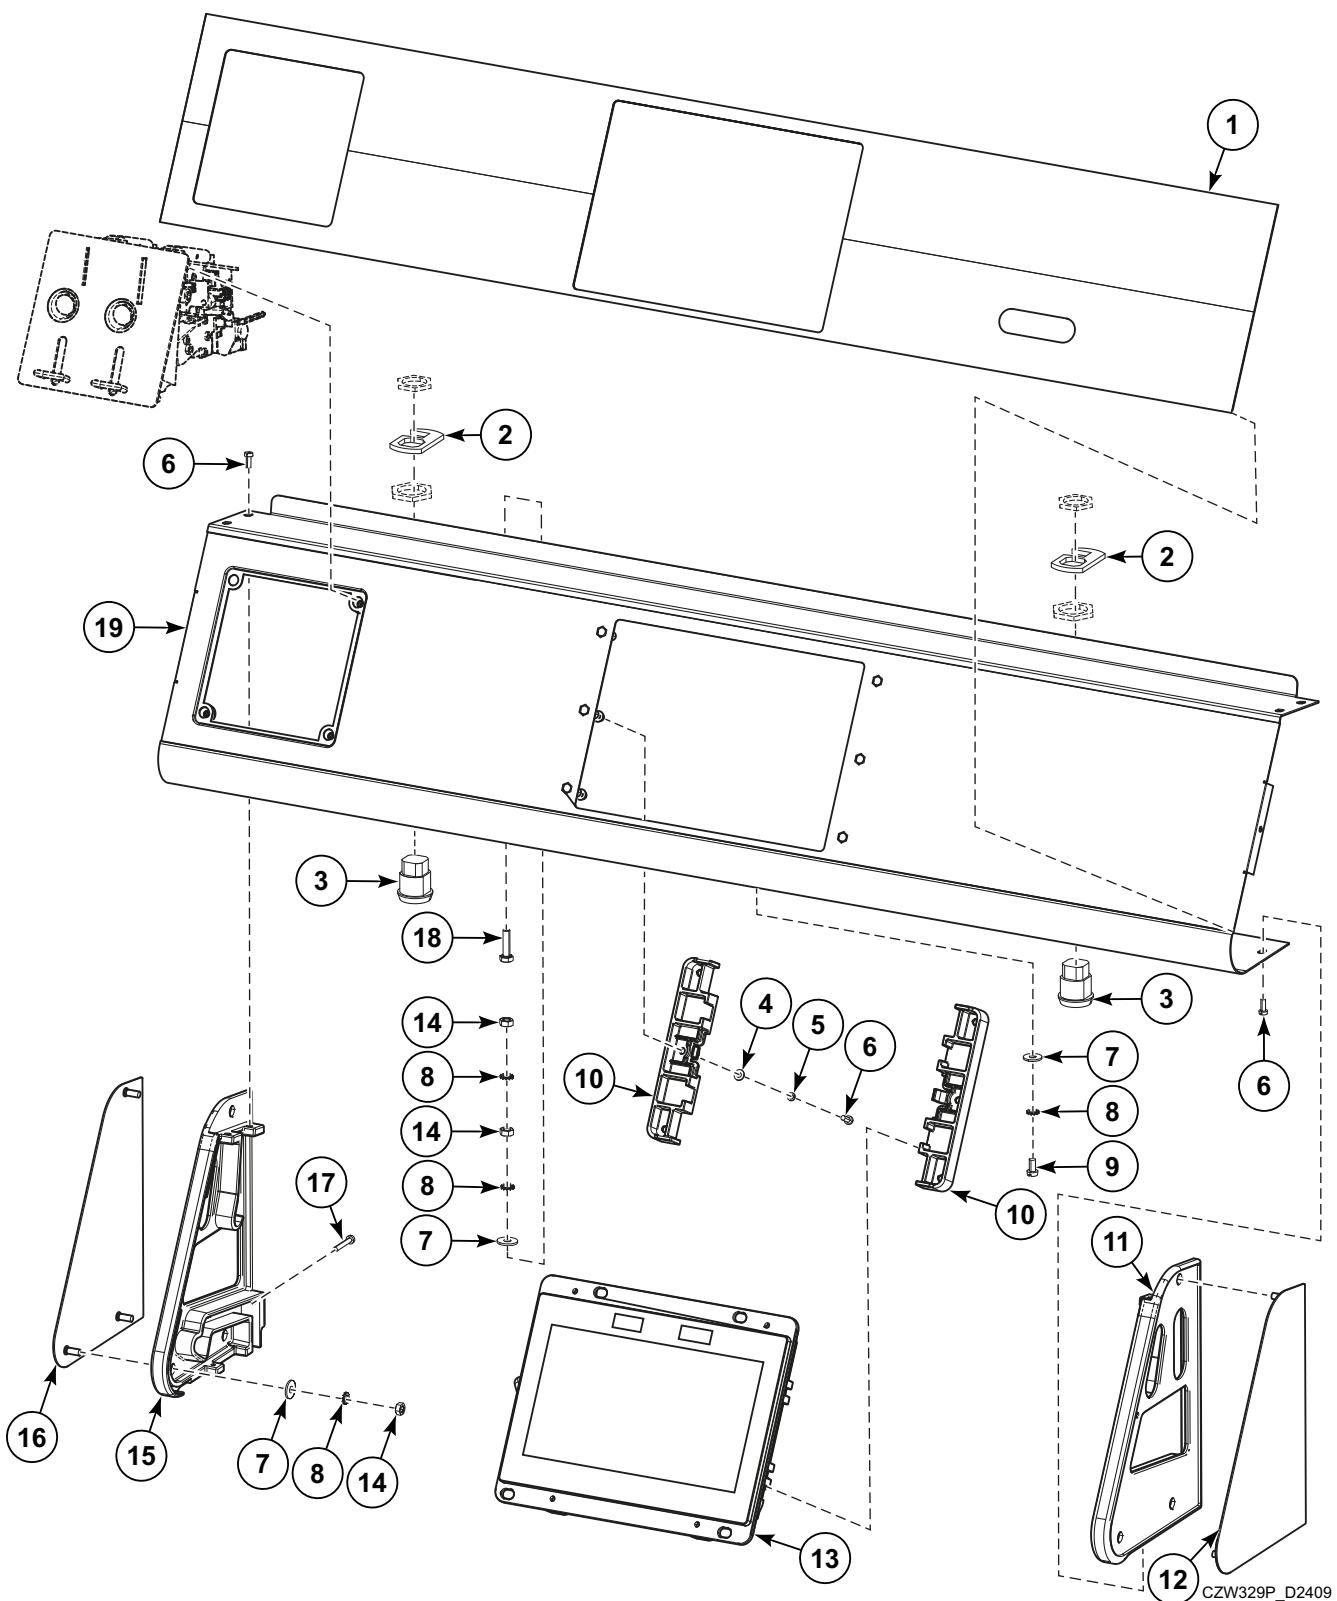


## Control Panel Vended - FX and PY Models

REF	PART NO.	DESCRIPTION	COMMENTS
	SP520033	Emergency Stop Interconnection	
1	573936	Overlay	
	574220	Overlay	OEM
2	SPPRI610002007	Hook Lock	
3	SP547527	Lock	Includes Nuts – 2 pieces
	SP550616	Key	Used with SP547527 Lock
4	SP311125000003	Washer	M3
5	SP311127000003	Washer	3
6	SP309084000308	Bolt	M3x8
7	SP311902100004	Washer	M4
8	SP311679800004	Washer	M4
9	SP309084000408	Bolt	M4x8
10	573929	Sidewall	
11	572572	Sidewall	Right
12	572586	Sidewall	Right
13	575632	Control	7", MC10
14	SP310934000004	Nut	M4
15	572571	Sidewall	Left
16	572588	Sidewall	Left
17	SP309084000320	Bolt	M3x20
18	SP309933000416	Bolt	M4x16
19	574126	Nose Assembly	Includes item 1 and 573930 Nut
	574238	Nose Assembly	OEM; Includes item 1 and 573930 Nut

## Control Panel Vended - FX and PY Models

Models with V in 7th position and with H or 6 in 10th position of the model number Starting Serial No. 105FX013727SF

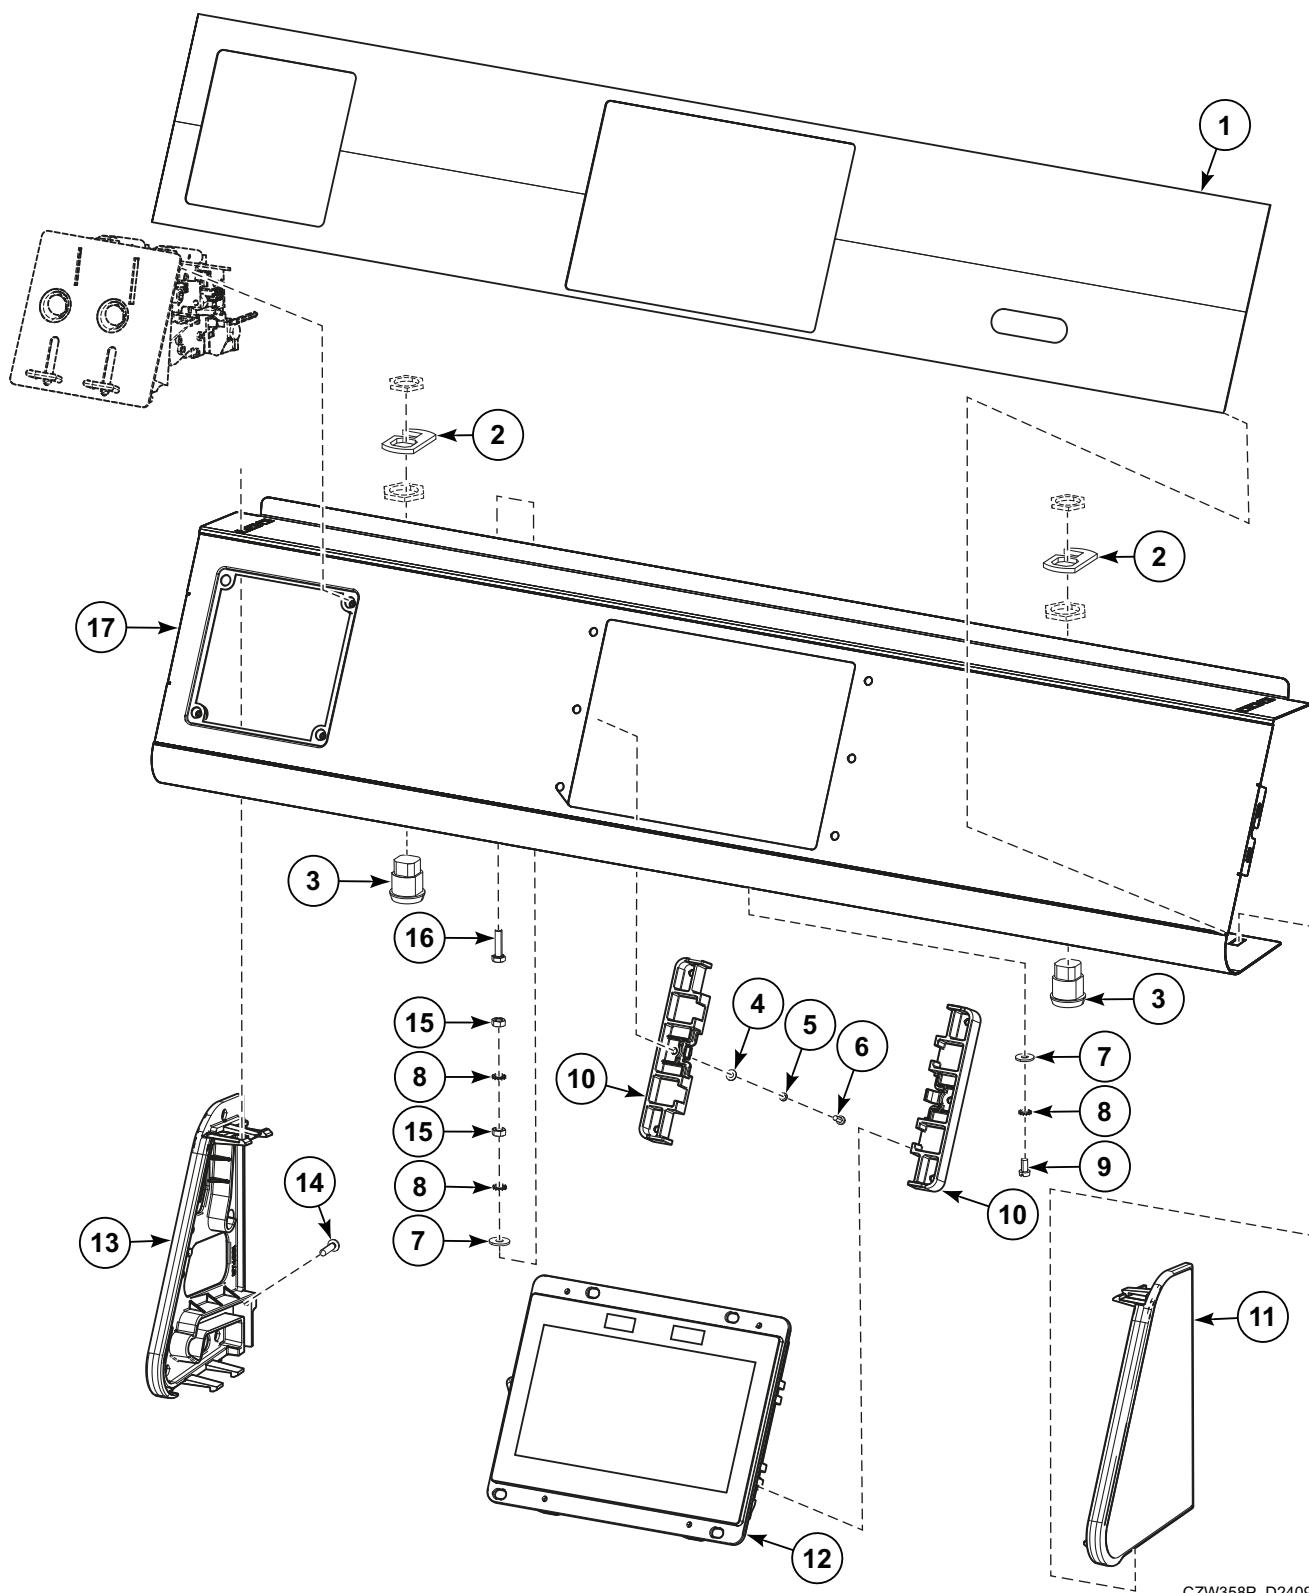


CZW358P\_D2409

## Control Panel Vended - FX and PY Models

REF	PART NO.	DESCRIPTION	COMMENTS
	SP520033	Emergency Stop Interconnection	
1	573936	Overlay	
	574220	Overlay	OEM
2	SPPRI610002007	Hook Lock	
3	SP547527	Lock	Includes Nuts – 2 pieces
	SP550616	Key	Used with SP547527 Lock
4	SP311125000003	Washer	M3
5	SP311127000003	Washer	3
6	SP309084000308	Bolt	M3x8
7	SP311902100004	Washer	M4
8	SP311679800004	Washer	M4
9	SP309084000408	Bolt	M4x8
10	573929	Sidewall	
11	576070	Sidewall	Right
12	575632	Control	7", MC10
13	576069	Sidewall	Left
14	SP520407	Screw	
15	SP310934000004	Nut	M4
16	SP309933240412	Bolt	M4x12
17	576037	Nose Assembly	Includes item 1 and 573930 Nut
	576046	Nose Assembly	OEM; Includes item 1 and 573930 Nut

## Control Panel Vended - FX and PY Models

Models with V in 7th position and with N, U or 8 in 10th position of the model number Starting Serial No. 105FX016691WD

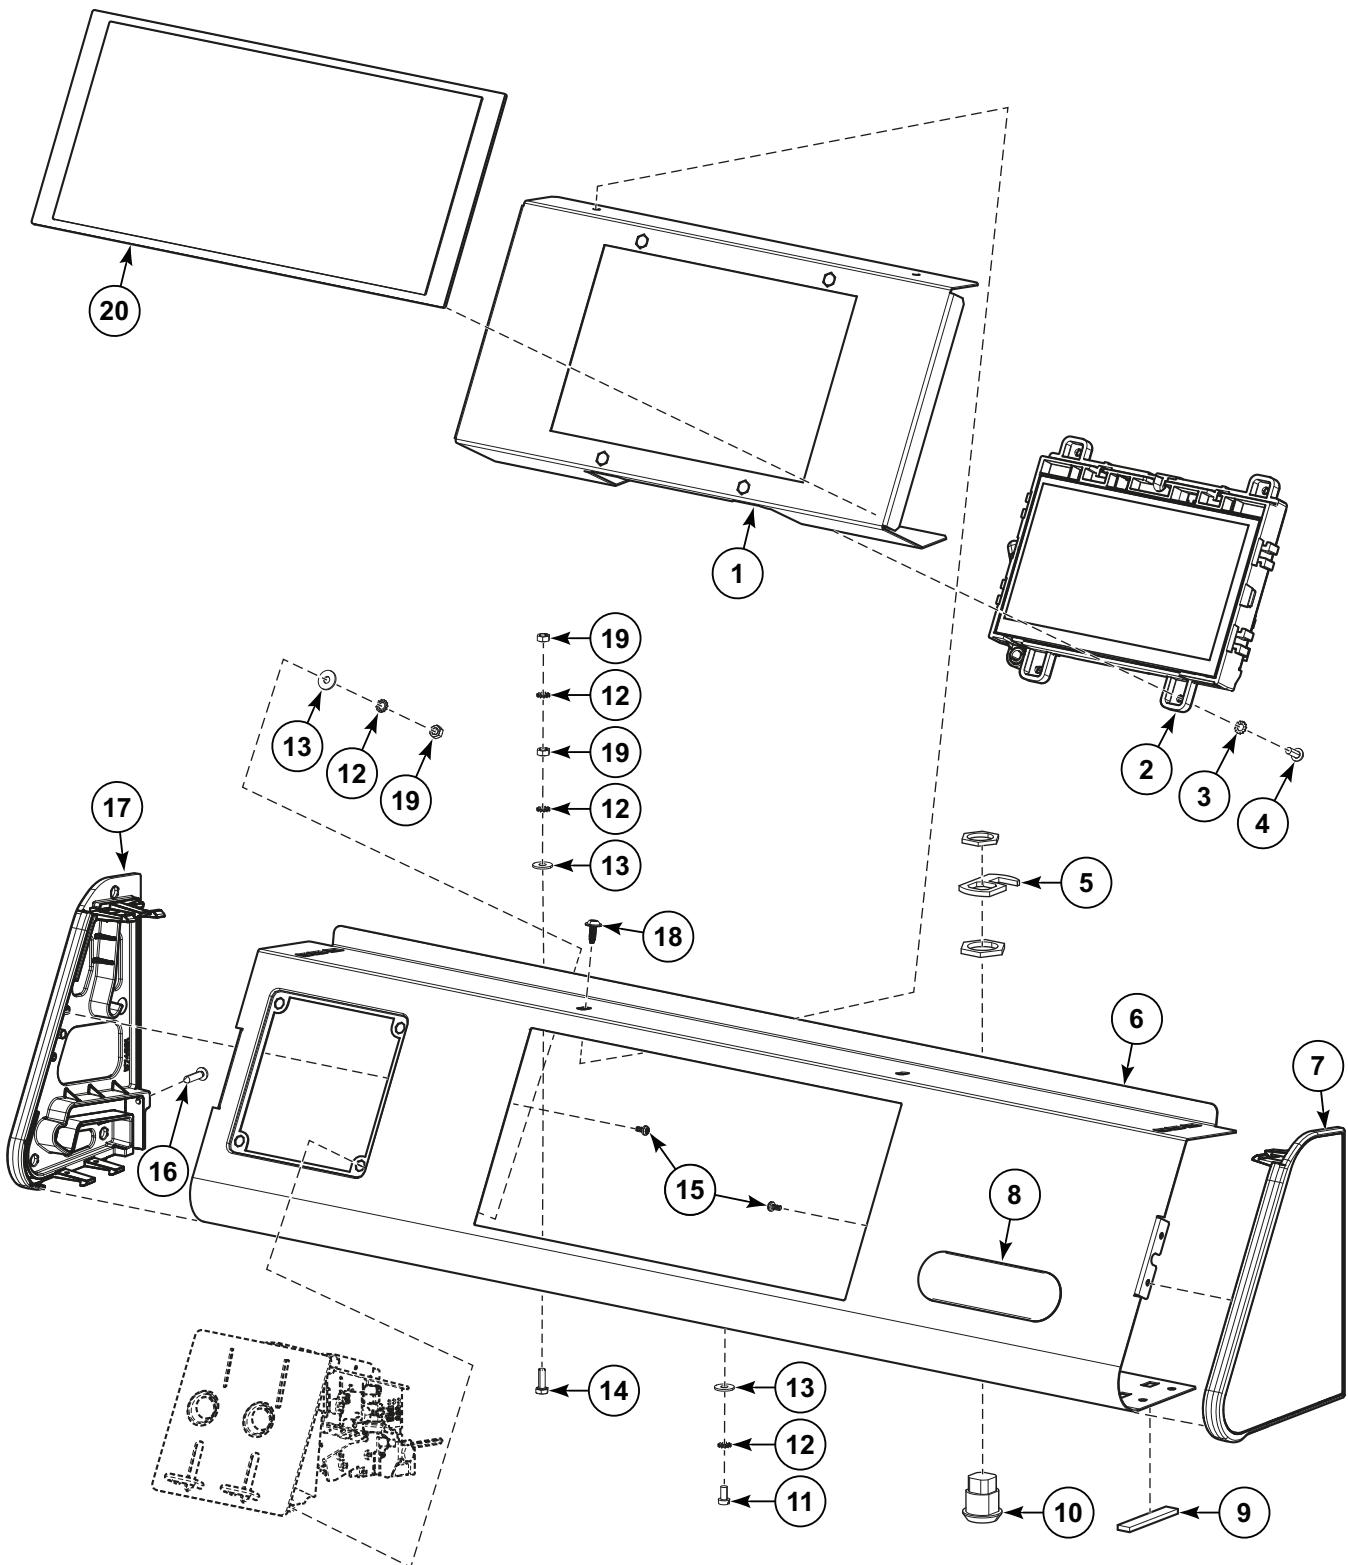


CZW560P\_D1714

## Control Panel Vended - FX and PY Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	582260	Holder	
2	582285	Control	7", MC10
3	SP311679800004	Washer	M4
4	582307	Bolt	M4x10
5	SPPRI610002007	Hook Lock	Small
6	581632	Nose Assembly	
7	576070	Sidewall	Right
8	567887	Logo	
9	SP284000012003	Tape	0.5m; 2pcs
10	SP547527	Lock	2pcs
	SP550616	Key	Used with SP547527 Lock
11	SP309084000408	Bolt	M4x8
12	SP311679800004	Washer	M4
13	SP311902100004	Washer	M4
14	SP309933240412	Bolt	M4x12
15	582361	Screw	3x6
16	SP520407	Screw	
17	576069	Sidewall	Left
18	SP529206	Screw	4x11
19	SP310934000004	Nut	M4
20	582274	Plastic Window	

# Control Panel for Central Payment System - FX and PY Models

Models with V in 7th position and with H or 6 in 10th position of the model number Through Serial No. 105FX013726SF

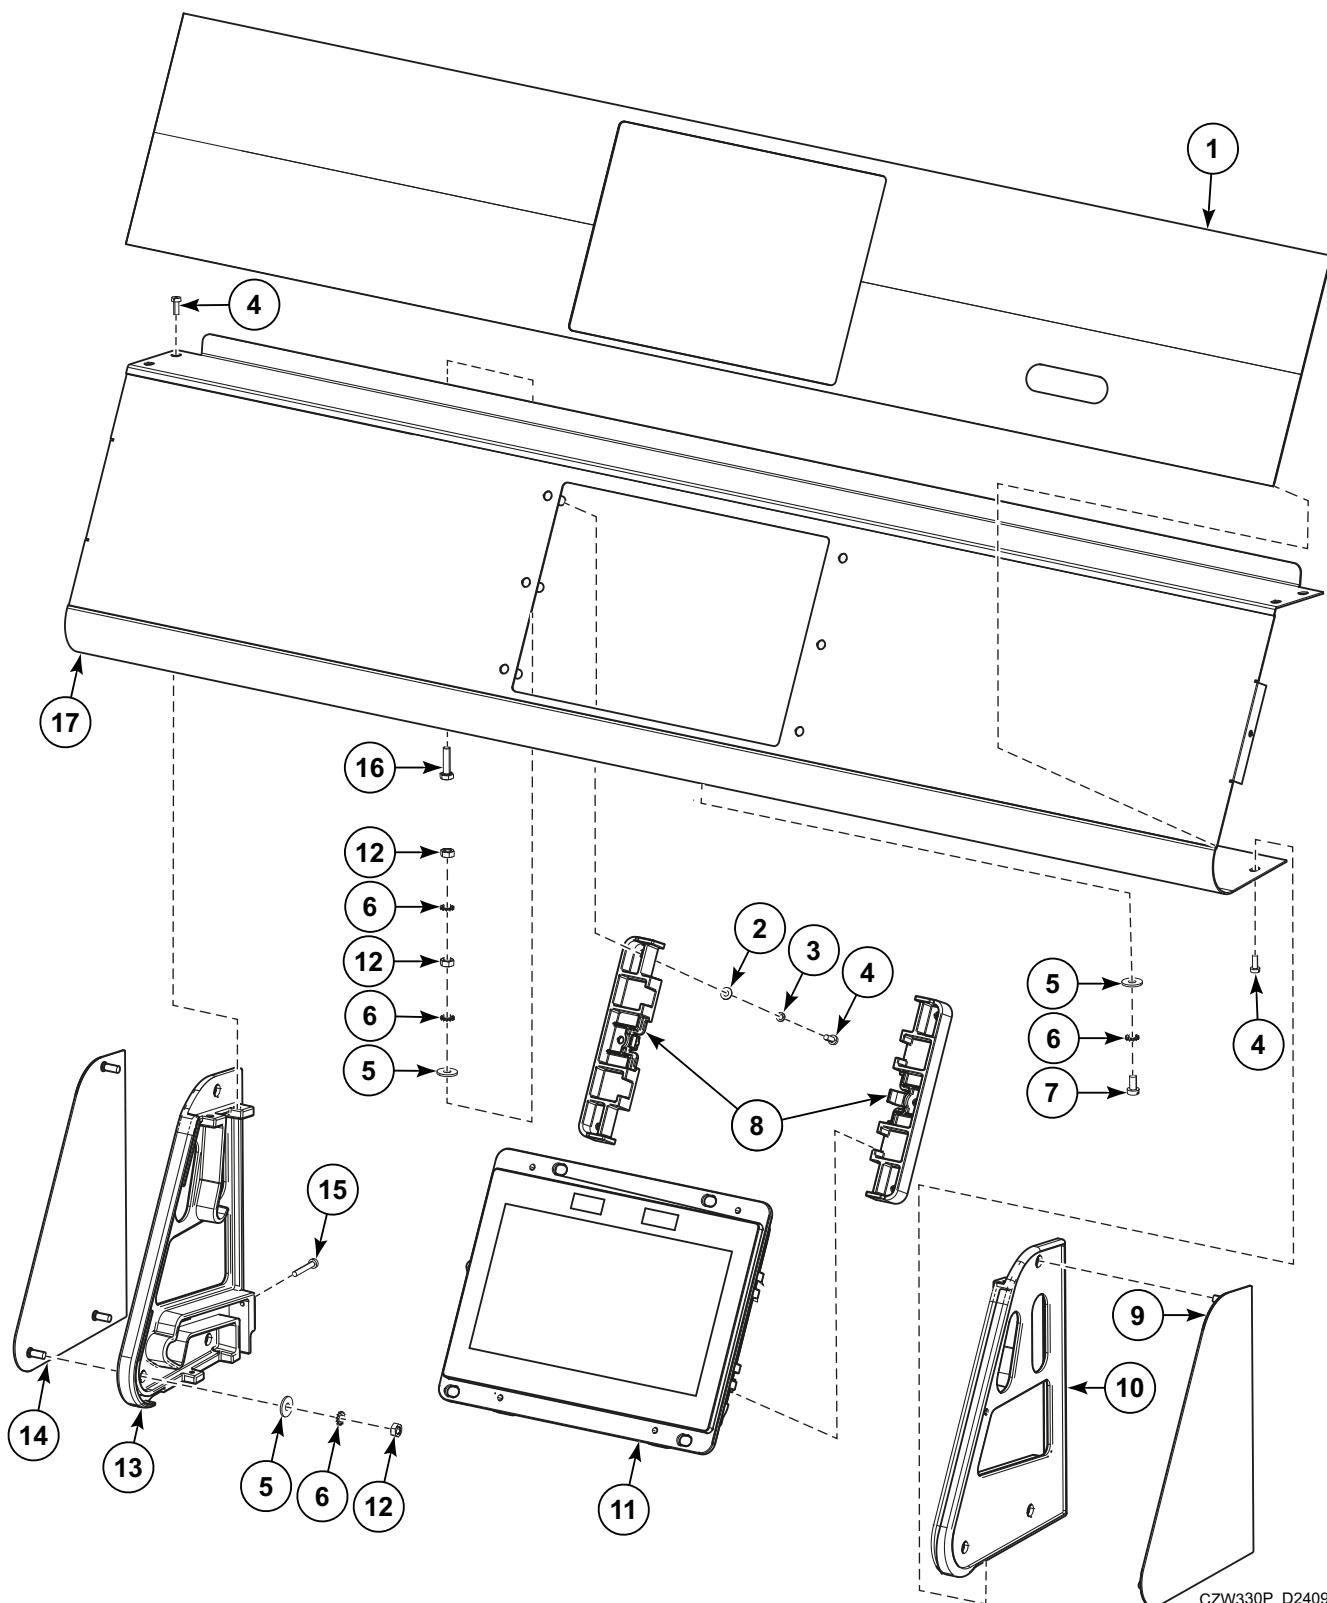


CZW330P\_D2409

# Control Panel for Central Payment System - FX and PY Models

REF	PART NO.	DESCRIPTION	COMMENTS
	571485	Emergency Stop Interconnection	
1	573951	Overlay	
	574223	Overlay	OEM
2	SP311125000003	Washer	M3
3	SP311127000003	Washer	3
4	SP309084000308	Bolt	M3x8
5	SP311902100004	Washer	M4
6	SP311679800004	Washer	M4
7	SP309084000408	Bolt	M4x8
8	573929	Sidewall	
9	572586	Sidewall	Right
10	572572	Sidewall	Right
11	575632	Control	7", MC10
12	SP310934000004	Nut	M4
13	572571	Sidewall	Left
14	572588	Sidewall	Left
15	SP309084000320	Bolt	M3x20
16	SP309933000416	Bolt	M4x16
17	573954	Nose Assembly	Includes item 1 and 573930 Nut
	574241	Nose Assembly	OEM; Includes item 1 and 573930 Nut

# Control Panel for Central Payment System - FX and PY Models

Models with V in 7th position and with H or 6 in 10th position of the model number Starting Serial No. 105FX013727SF

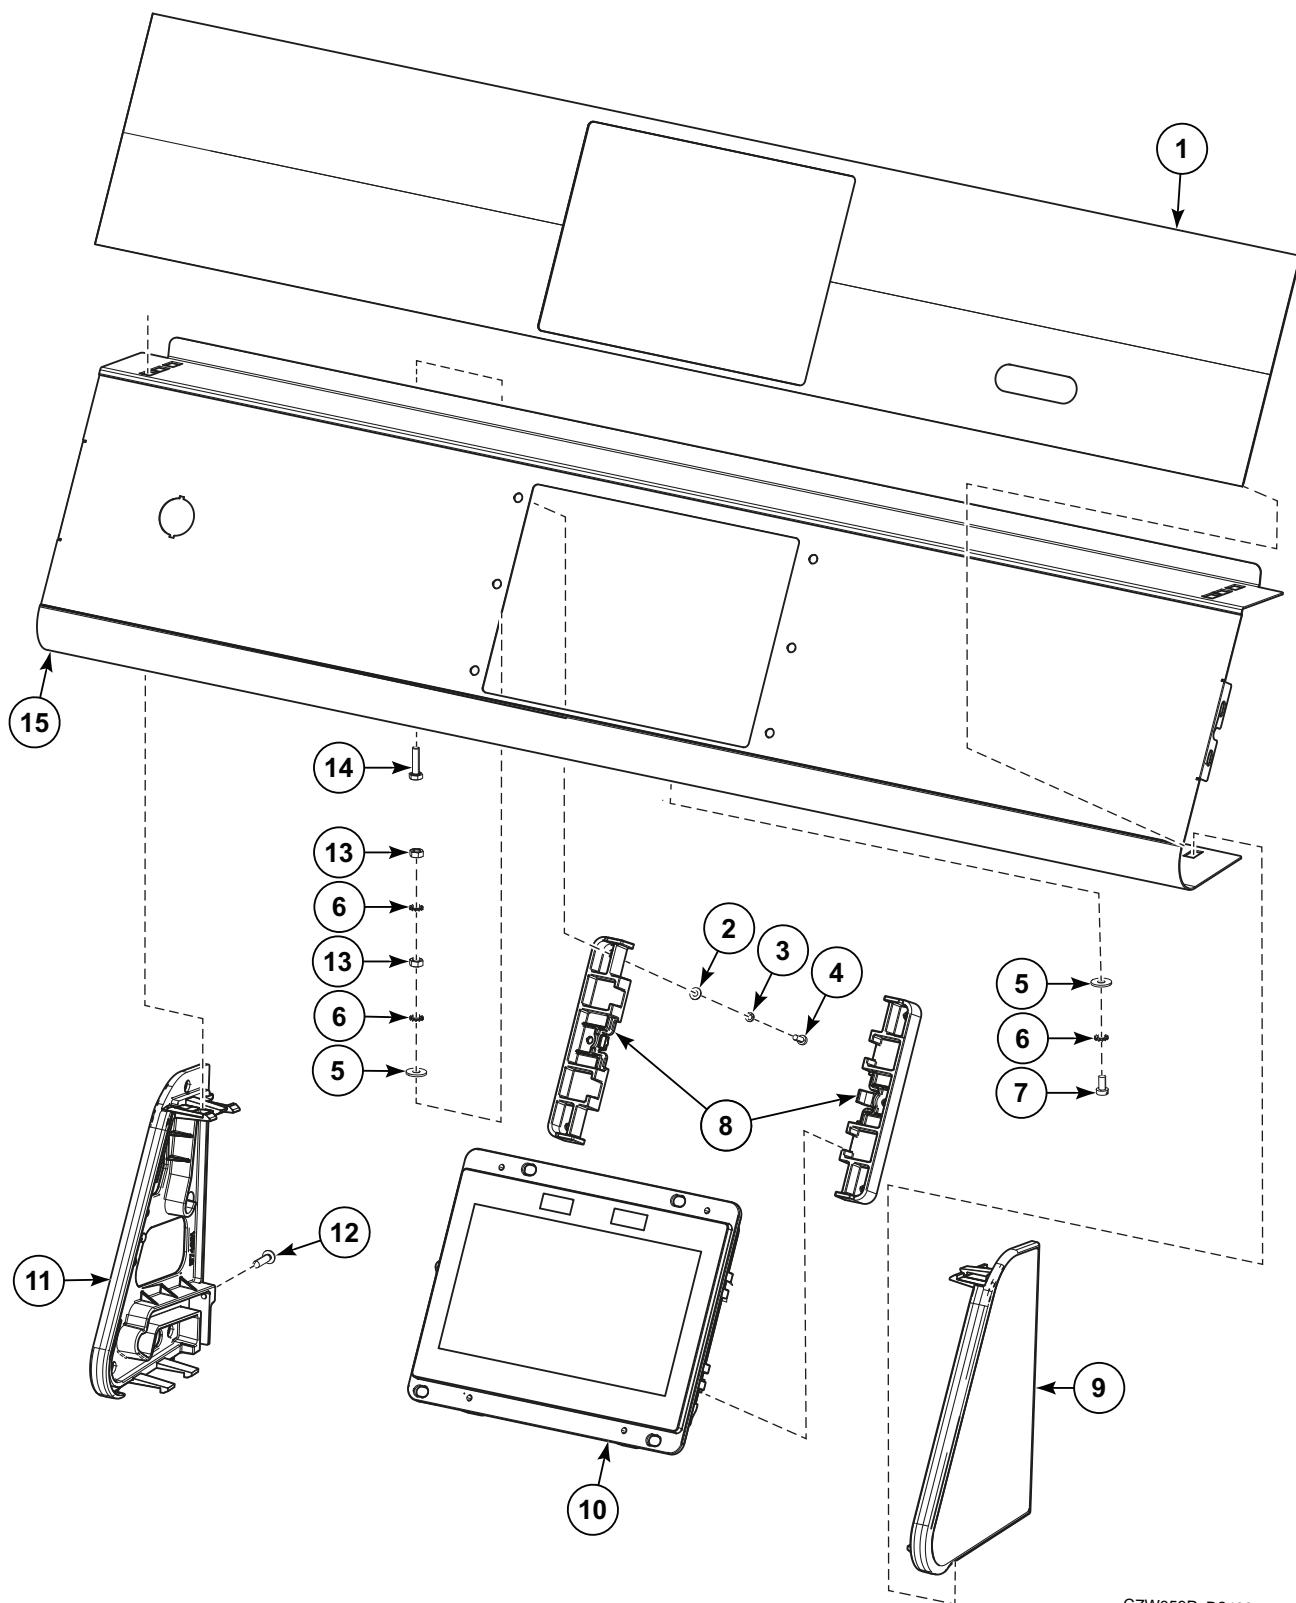


CZW359P\_D2409

# Control Panel for Central Payment System - FX and PY Models

REF	PART NO.	DESCRIPTION	COMMENTS
	571485	Emergency Stop Interconnection	
1	573951	Overlay	
	574223	Overlay	OEM
2	SP311125000003	Washer	M3
3	SP311127000003	Washer	3
4	SP309084000308	Bolt	M3x8
5	SP311902100004	Washer	M4
6	SP311679800004	Washer	M4
7	SP309084000408	Bolt	M4x8
8	573929	Sidewall	
9	576070	Sidewall	Right
10	575632	Control	7", MC10
11	576069	Sidewall	Left
12	SP520407	Screw	
13	SP310934000004	Nut	M4
14	SP309933240412	Bolt	M4x12
15	576040	Nose Assembly	Includes item 1 and 573930 Nut
	576049	Nose Assembly	OEM; Includes item 1 and 573930 Nut

# Control Panel for Central Payment System - FX and PY Models

Models with V in 7th position and with N, U or 8 in 10th position of the model number Starting Serial No. 105FX016691WD

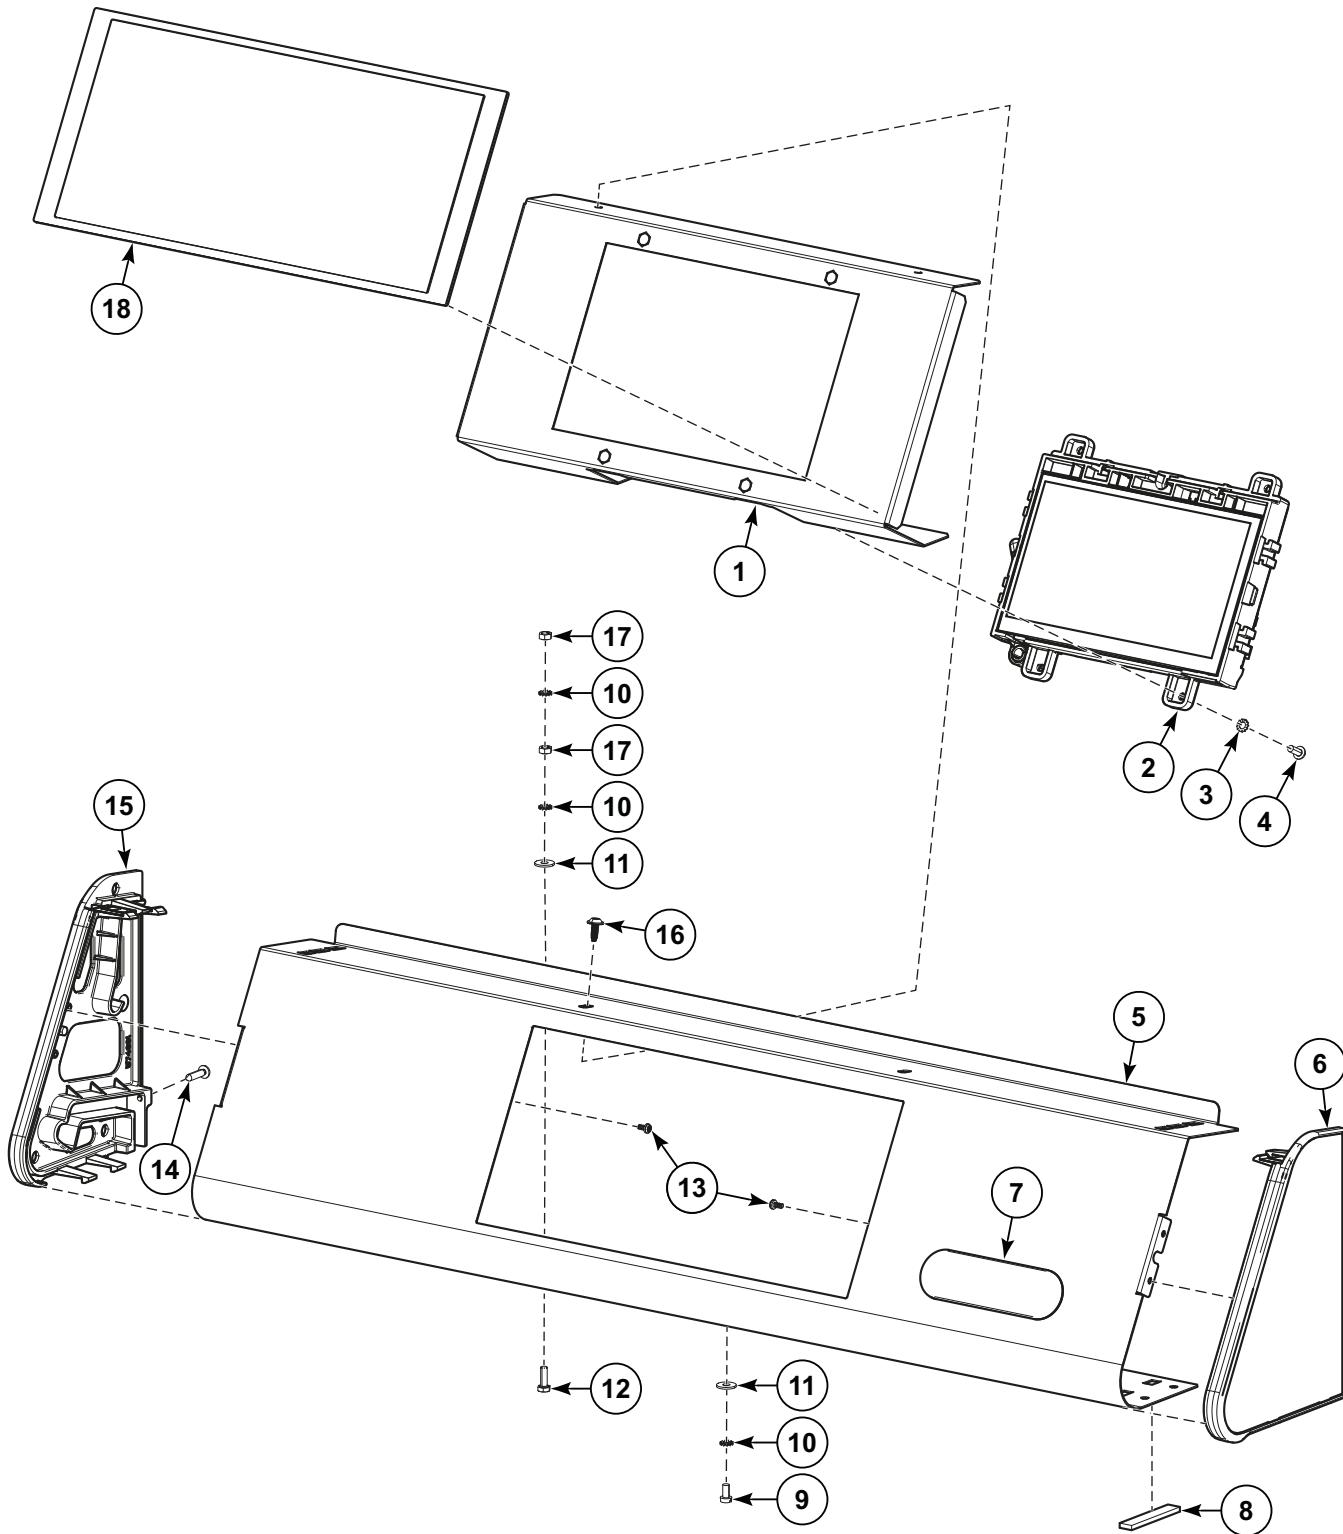


CZW559P\_D1714

# Control Panel for Central Payment System - FX and PY Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	582260	Holder	
2	582285	Control	7", MC10
3	SP311679800004	Washer	M4
4	582307	Bolt	M4x10
5	581638	Nose Assembly	
6	576070	Sidewall	Right
7	567887	Logo	
8	SP284000012003	Tape	0.5m; 2pcs
9	SP309084000408	Bolt	M4x8
10	SP311679800004	Washer	M4
11	SP311902100004	Washer	M4
12	SP309933240412	Bolt	M4x12
13	582361	Screw	3x6
14	SP520407	Screw	
15	576069	Sidewall	Left
16	SP529206	Screw	4x11
17	SP310934000004	Nut	M4
18	582274	Plastic Window	

# Control Panel OPL

Models with G in 7th position of the model number

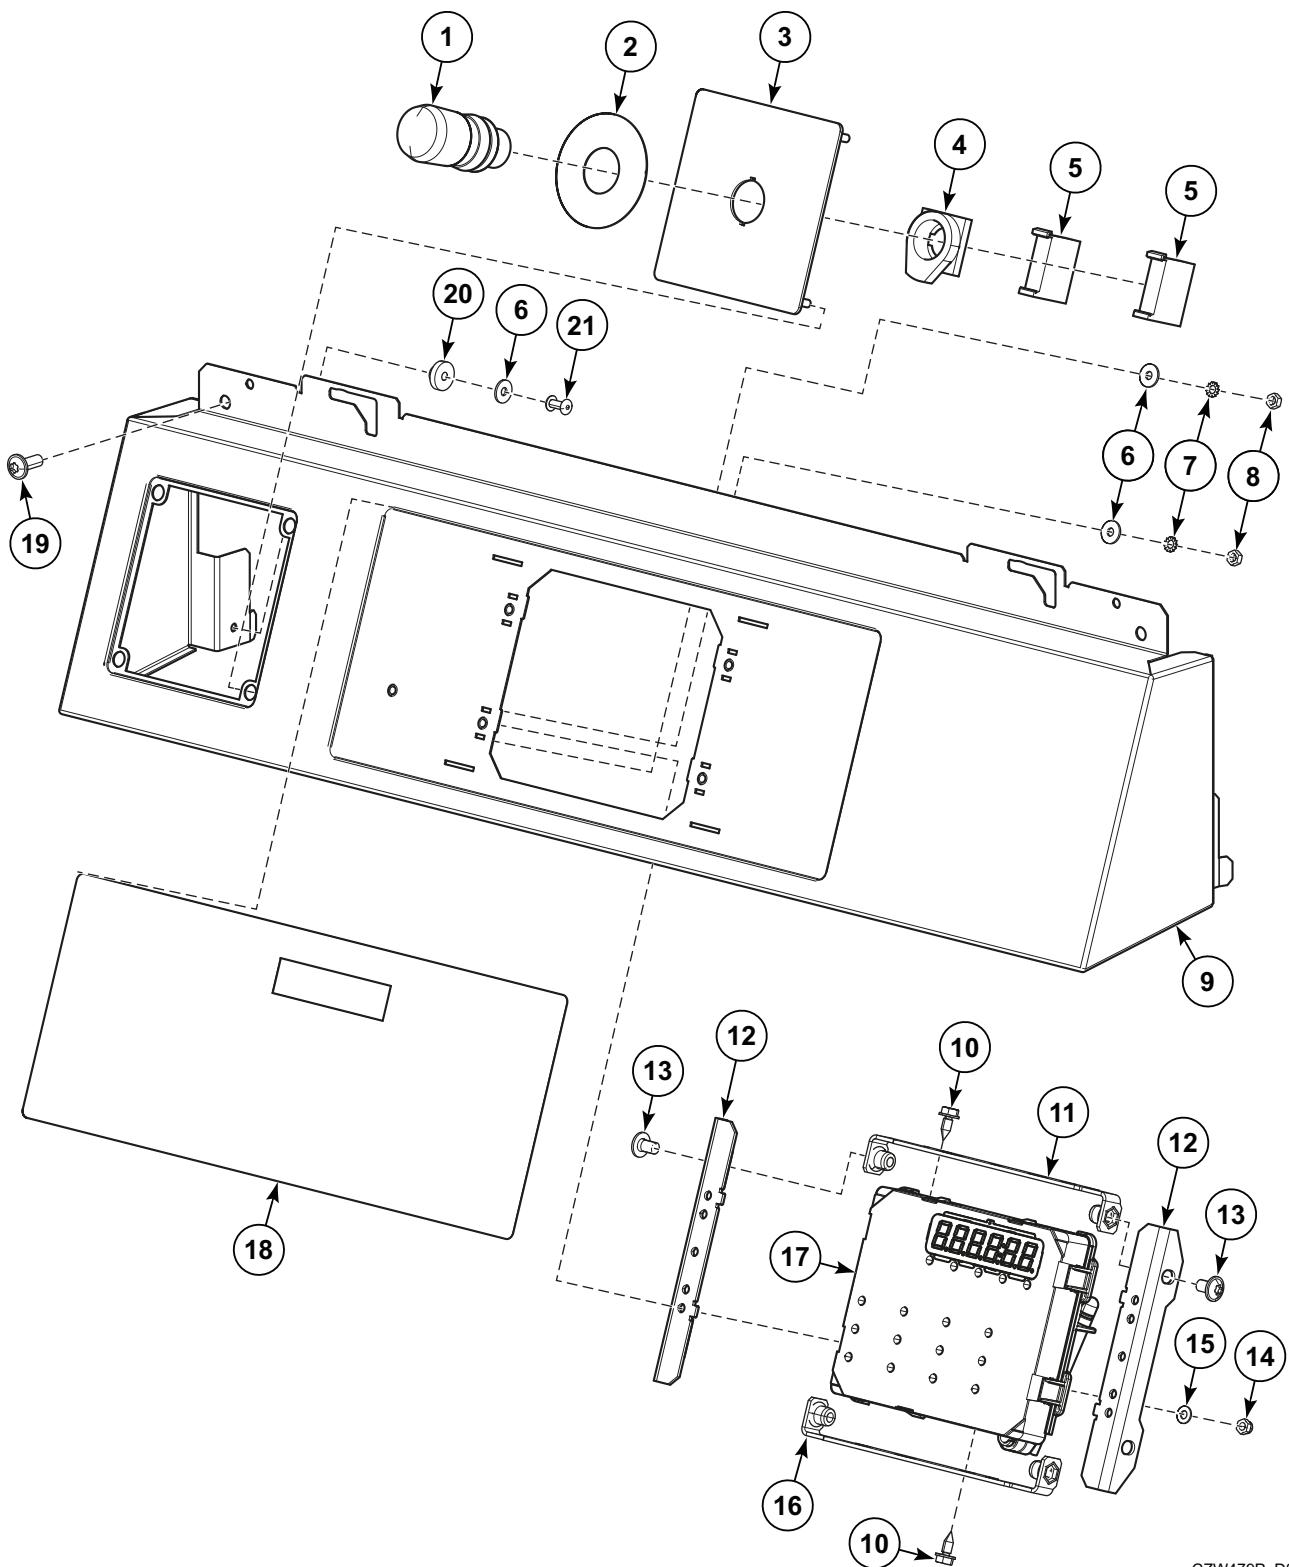


CZW479P\_D2064

## Control Panel OPL

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP528310	Emergency Stop Knob	Used with SP520032 Emergency Stop Wiring
2	SPPRI551005248	Emergency Stop Label	Yellow
3	SP547565	Coin Meter Cover	
4	SP528311	Emergency Stop Connector	
5	SP528312	Switching Unit	
6	SP311902100004	Washer	M4
7	SP311679800004	Washer	M4
8	SP310934000004	Nut	M4
9	580648	Control Panel	
10	SP100218	Screw	
11	581020	Control Holder	upper
12	581009	Control Support	
13	SP506012	Bolt	M6x10
14	SP514193	Nut	M4
15	SP311125000004	Washer	4x3
16	581021	Control Holder	lower
17	553446	Control Board	
	575865	Board Interconnection Cable	
18	577656	Keyboard	
19	555658	Bolt	M6x16
20	SP550113	Leading Pin	
21	SP547779	Rivet	4x16.7

# Control Panel Vended

Models with G in 7th position of the model number

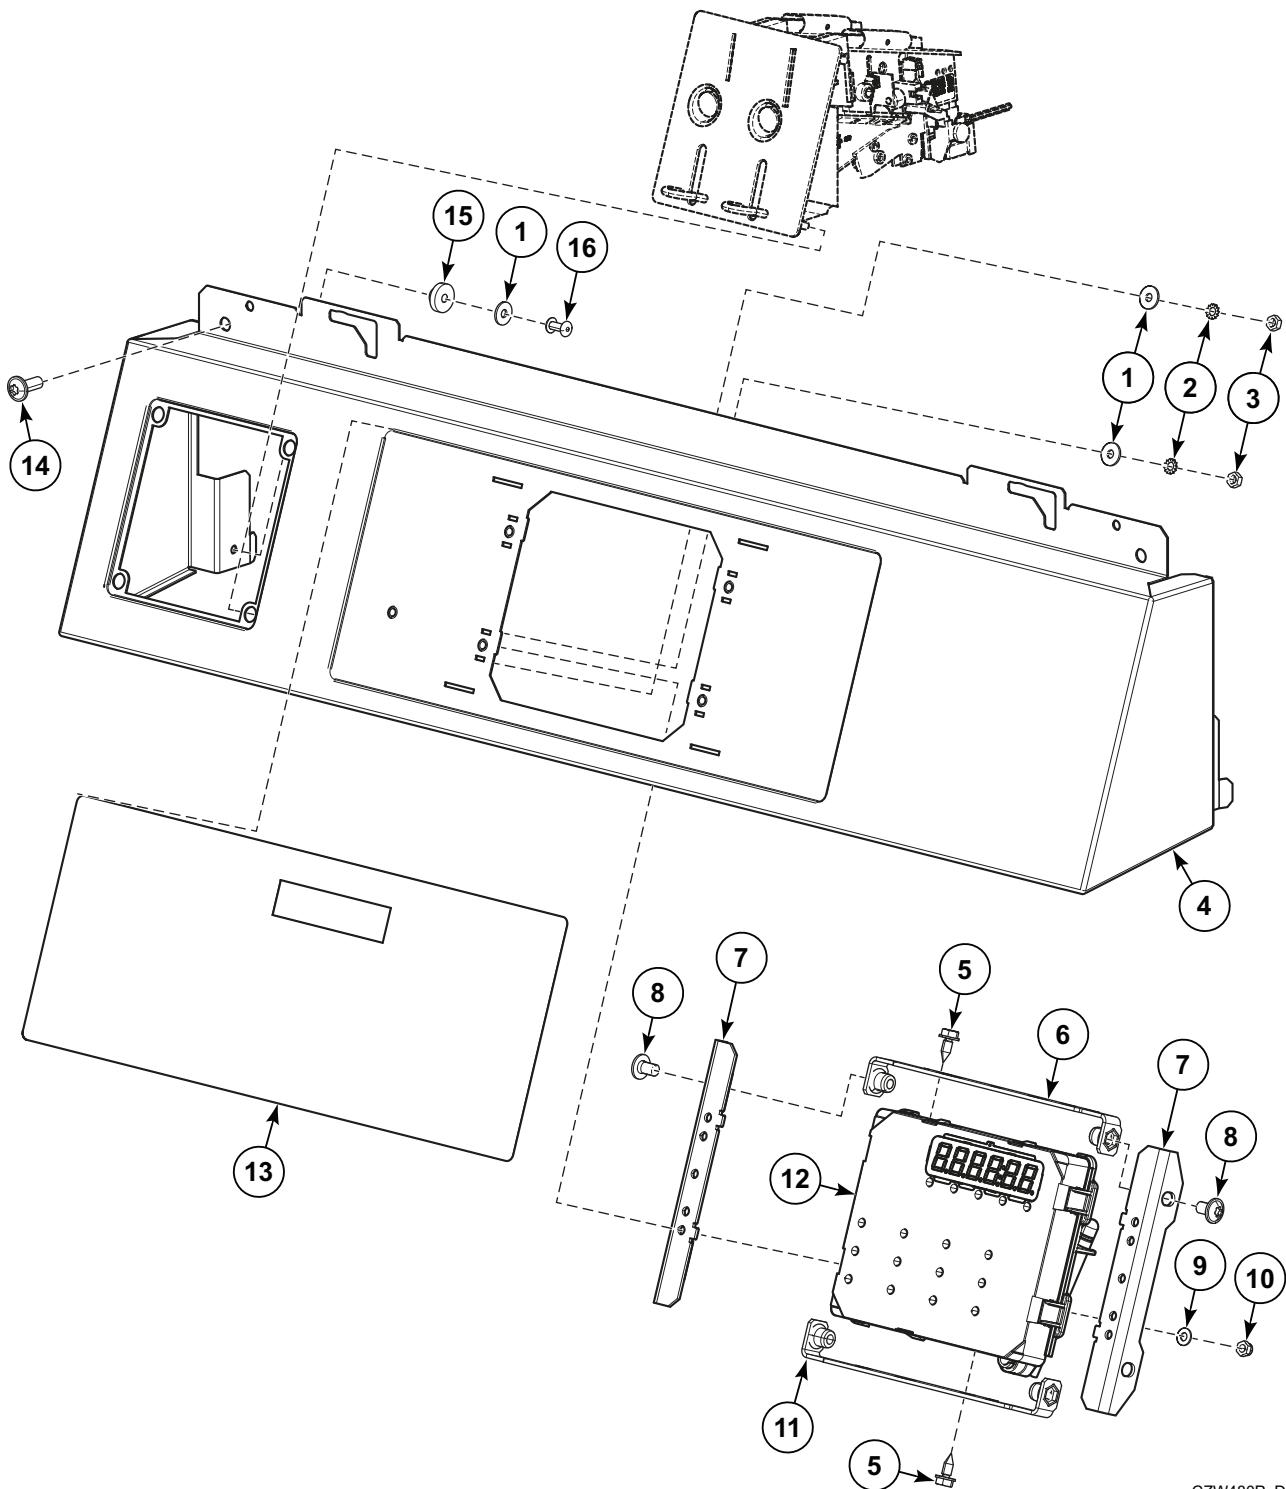


CZW480P\_D2064

## Control Panel Vended

REF	PART NO.	DESCRIPTION	COMMENTS
	SP520033	Emergency Stop Interconnection	Vend
1	SP311902100004	Washer	M4
2	SP311679800004	Washer	M4
3	SP310934000004	Nut	M4
4	580648	Control Panel	
5	SP100218	Screw	
6	581020	Control Holder	upper
7	581009	Control Support	
8	SP506012	Bolt	M6x10
9	SP311125000004	Washer	4x3
10	SP514193	Nut	M4
11	581021	Control Holder	lower
12	553446	Control Board	
	575865	Board Interconnection Cable	
13	577656	Keyboard	
14	555658	Bolt	M6x16
15	SP550113	Leading Pin	
16	SP547779	Rivet	4x16.7

# Control Panel for Central Payment System

Models with G in 7th position of the model number

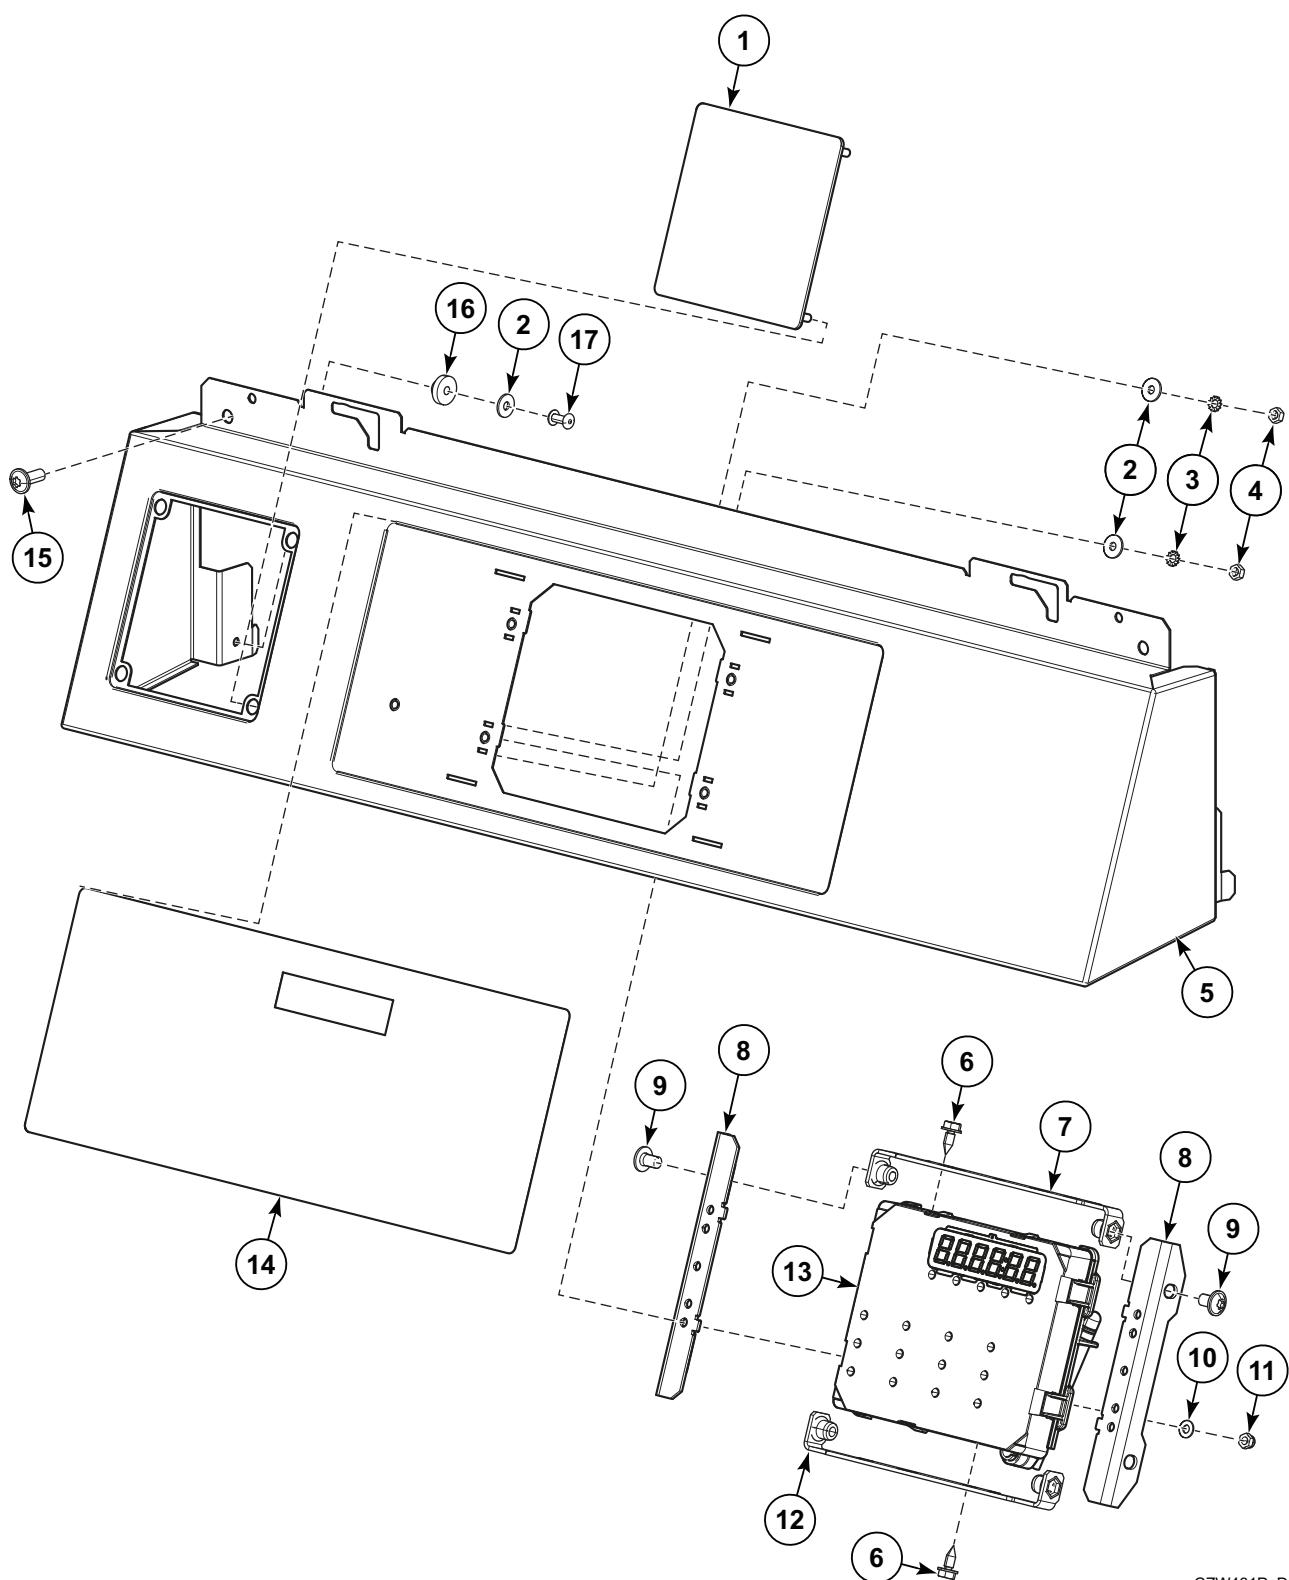


CZW481P\_D2064

# Control Panel for Central Payment System

REF	PART NO.	DESCRIPTION	COMMENTS
	SP520033	Emergency Stop Interconnection	Central Payment System
1	SP550149	Cover Plate	Central Payment System
2	SP311902100004	Washer	M4
3	SP311679800004	Washer	M4
4	SP310934000004	Nut	M4
5	580648	Control Panel	
6	SP100218	Screw	
7	581020	Control Holder	upper
8	581009	Control Support	
9	SP506012	Bolt	M6x10
10	SP311125000004	Washer	4x3
11	SP514193	Nut	M4
12	581021	Control Holder	lower
13	553446	Control Board	
	575865	Board Interconnection Cable	
14	577656	Keyboard	
15	555658	Bolt	M6x16
16	SP550113	Leading Pin	
17	SP547779	Rivet	4x16.7

## Coin Meter Box

All Models except AF, IY and NY Models with V in 7th position of the model number or AF, IY and NY Models with G, H, J or K in 13th position of the model number

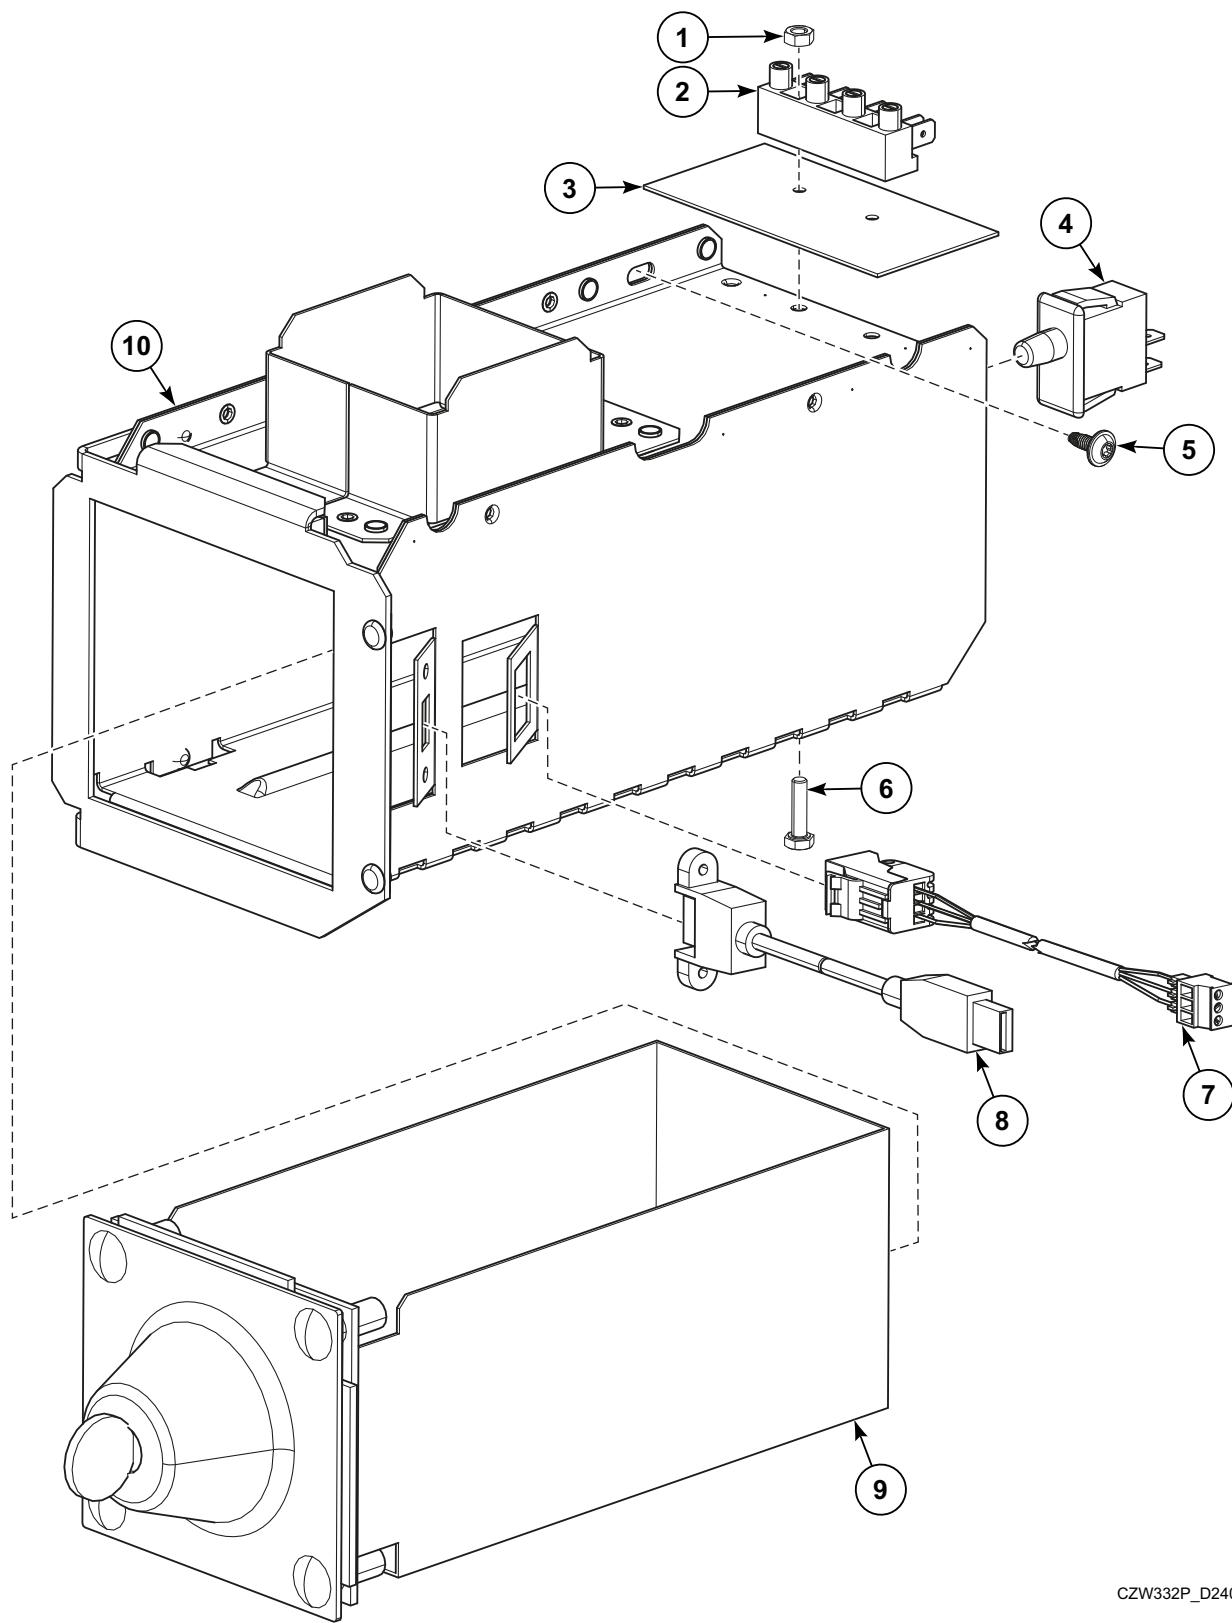

CZW332P\_D2409


## Coin Meter Box

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP310934000004	Nut	M4
2	SPPRI350000007	Terminal Board	
3	SPPRI350012007	Isolation Paper	
4	N/A	Microswitch	
5	SP529206	Screw	4x11
6	SP309933000416	Bolt	M4x16
7	SP545234	Cable	FX nd PY models; With connectors; RS485; optional
8	569668	USB Cable	FX nd PY models; optional
9	SP102532	Coin Meter Box	Models with A, D, F, I, J, R, T or X in 7th position of the model number
	100498	Coin Meter Box	Models with G or V in 7th position of the model number
10	571049	Coin Meter Case	Models with A, D, F, I, J, R, T or X in 7th position of the model number
	571055	Coin Meter Case	Models with V in 7th position of the model number
	572120	Coin Meter Case	Models with G in 7th position of the model number

N/A = Part no longer available

## Coin Meter Box

AF, IY and NY Models with V in 7th position of the model number or AF, IY and NY Models with G, H, J or K in 13th position of the model number

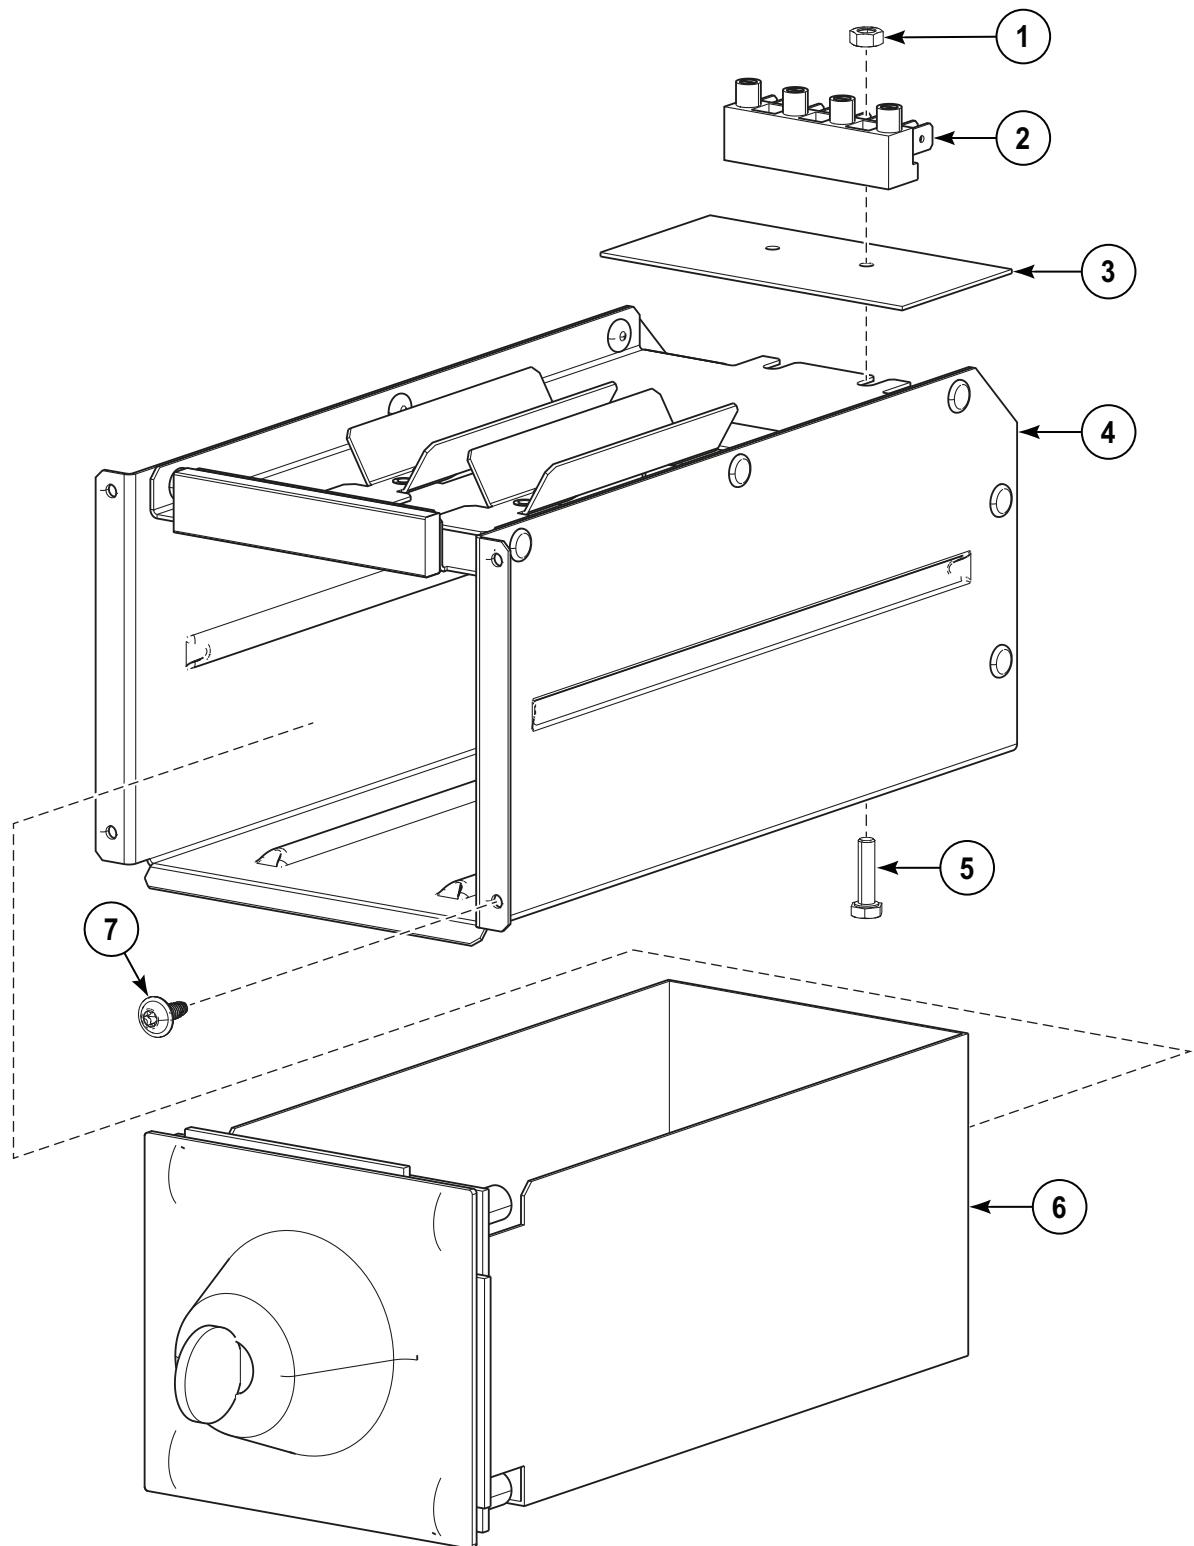


CZW287P\_D2409

## Coin Meter Box

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP310934000004	Nut	M4
2	SPPRI350000007	Terminal Board	
3	SPPRI350012007	Isolation Paper	
4	573009	Coin Meter Case	
5	SP309933000416	Bolt	M4x16
6	568036	Coin Meter Box	
7	SP529206	Screw	4x11

## Coin Meter (Drawing 1 of 3)

AF, IY and NY Models with V in 7th position of the model number or AF, IY and NY Models with G, H, J or K in 13th position of the model number

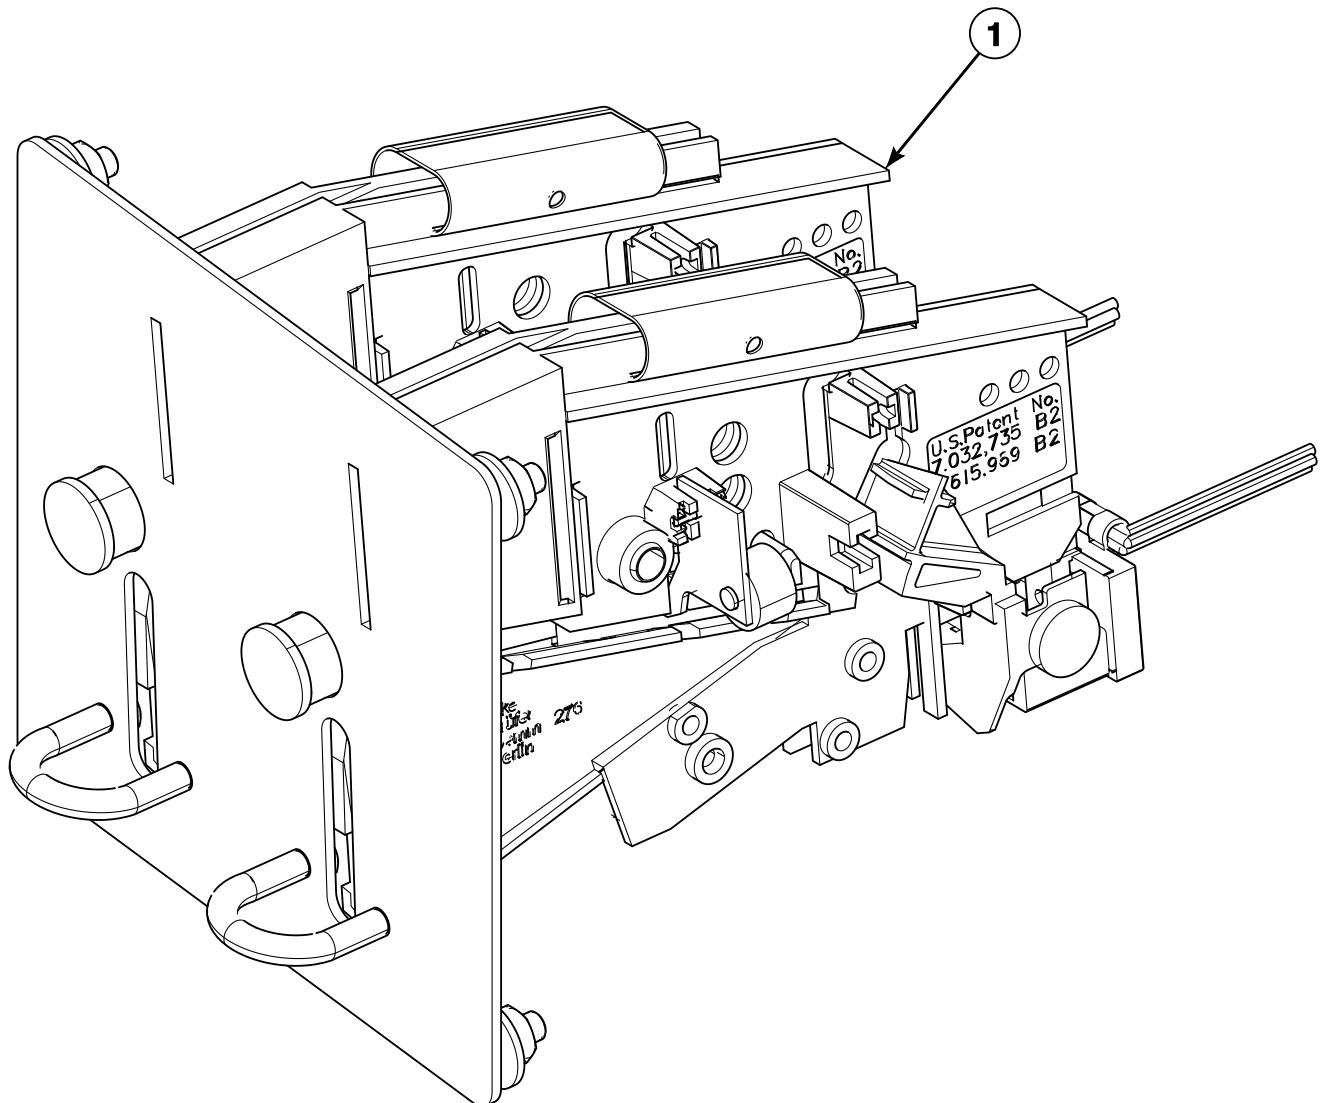


CZW233P\_D2409

# Coin Meter (Drawing 1 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP568002	Coin Meter	GBP / EUR; Electronic EMPv7
	SP568003	Coin Meter	5K jeton
	SP568004	Coin Meter	7K jeton
	SP568005	Coin Meter	10K jeton
	SP568006	Coin Meter	12K jeton
	SP568007	Coin Meter	15K jeton
	SP568008	Coin Meter	5K jeton
	SP568009	Coin Meter	1EUR
	SP568010	Coin Meter	0.5EUR
	SP568011	Coin Meter	1EUR + 2EUR
	SP568012	Coin Meter	2EUR
	SP568013	Coin Meter	0.2EUR + 0.5EUR
	SP568014	Coin Meter	0.25EUR
	SP568015	Coin Meter	0.2EUR + 1EUR
	SP568016	Coin Meter	0.5EUR + 2EUR
	SP568017	Coin Meter	0.25EUR
	575218	Coin Meter	1 Singapore dollar
	575219	Coin Meter	1NZD and 2NZD
	575220	Coin Meter	Easy games jeton
	575221	Coin Meter	Flat polis jeton
	575222	Coin Meter	Butzi wash jeton
	575223	Coin Meter	Speedy matic jeton
	575224	Coin Meter	Laundromatic Belgium jeton; Diameter 22.3mm
	575225	Coin Meter	500WON
	575226	Coin Meter	Dobi ekspress jeton
	575227	Coin Meter	Lucky winner jeton
	575228	Coin Meter	Gettone jeton
	575229	Coin Meter	10 Taiwan dollar
	575230	Coin Meter	Electrolux Asard jeton
	575231	Coin Meter	Gettone jeton
	575232	Coin Meter	5+1 Shekel
	575233	Coin Meter	1HKD
	575234	Coin Meter	Jeton Prinz Firbitex
	575235	Coin Meter	Token Ldl Chamberland Washing Machine
	575236	Coin Meter	Token 118-5
	575237	Coin Meter	Token Barisart (Ldl)
	575238	Coin Meter	Token Rotondi
	575239	Coin Meter	Brass jeton
	575240	Coin Meter	0.5CHF + 2CHF
	575241	Coin Meter	Jeton HAUCK 2018
	575242	Coin Meter	Jeton 08 MS, diameter 24.9mm
	575243	Coin Meter	Jeton D
	575244	Coin Meter	10+50 TWD
	575245	Coin Meter	100+500 ISK
	575246	Coin Meter	Token 118-16
	575248	Coin Meter	Token Nr. 1699360

## Coin Meter (Drawing 2 of 3)

AF, IY and NY Models with V in 7th position of the model number or AF, IY and NY Models with G, H, J or K in 13th position of the model number

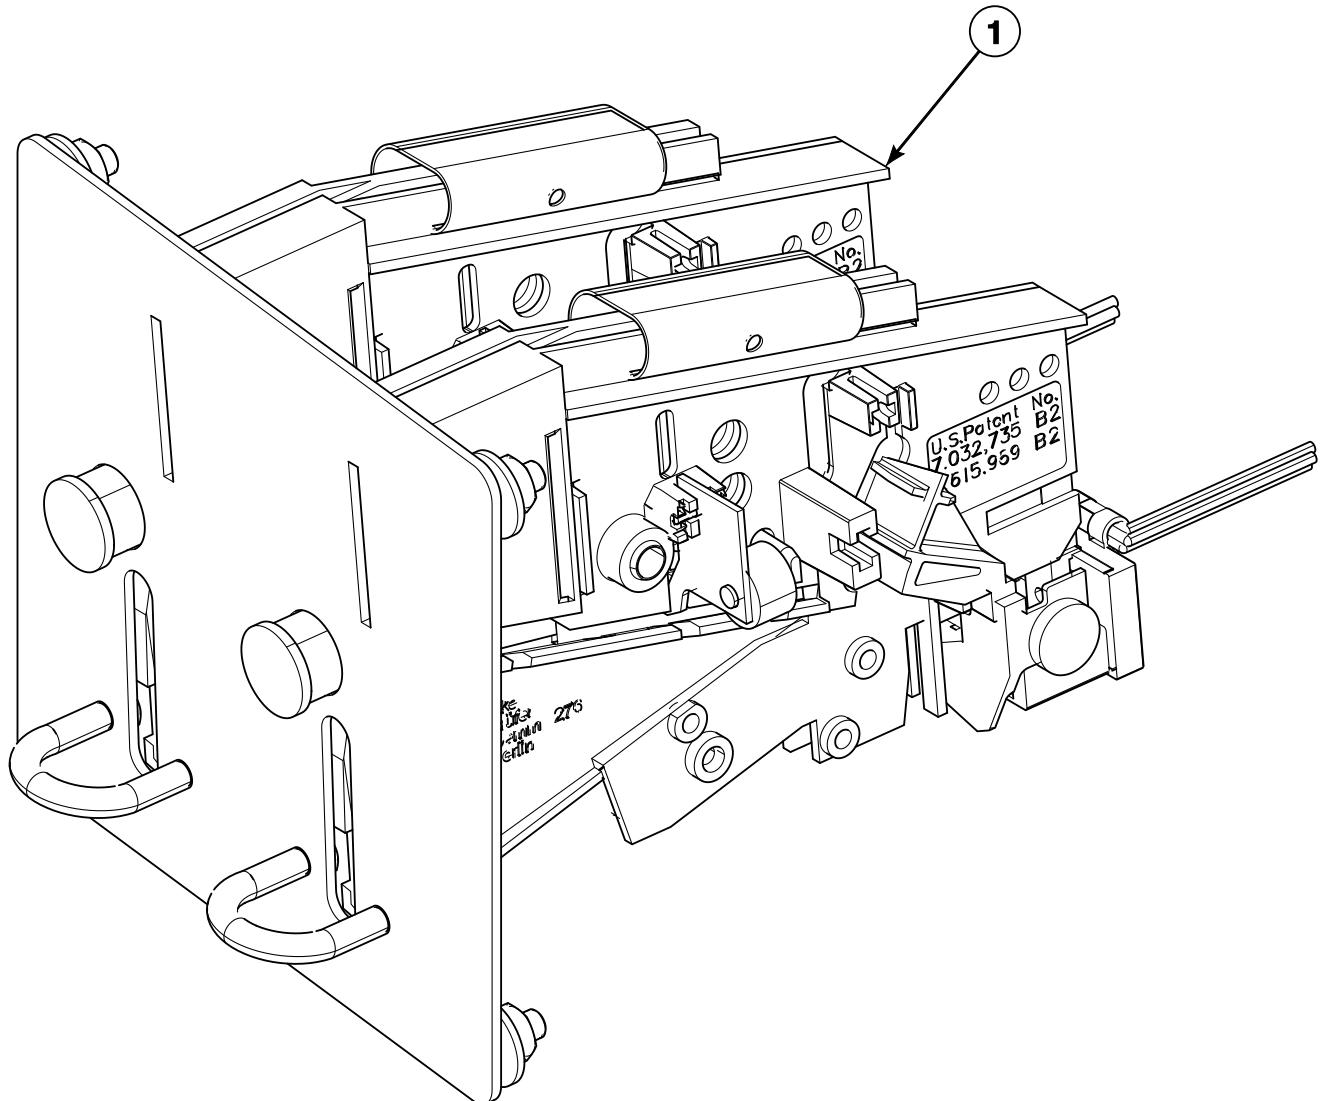


CZW233P\_D2409

## Coin Meter (Drawing 2 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
1	575278	Coin Meter	0.25USD + 1USD
	575279	Coin Meter	0.25CAD + 1CAD
	575249	Coin Meter	0.25USD + 1USD; 0.25CAD + 1CAD + 2CAD; TK1 + TK2; Electronic EMPv7
	568002	Coin Meter	0.2GBP + 0.5GBP + 1GBP + 2GBP; 0.1EUR + 0.2EUR + 0.5EUR + 1EUR + 2EUR; TK1 + TK2; Electronic EMPv7
	575250	Coin Meter	1DKK + 2DKK + 5DKK + 10DKK + 20DKK; 1NOK + 5NOK + 10NOK + 20NOK; 0.2EUR + 0.5EUR + 1EUR + 2EUR; TK1 + TK2; Electronic EMPv7
	575251	Coin Meter	0.2AUD + 1AUD + 2AUD; 0.2NZD + 1NZD + 2NZD; 5HKD + 10HKD; 500KRW; TK1 + TK2; Electronic EMPv7
	575252	Coin Meter	1CNY; 0.1MYR + 0.2MYR + 0.5MYR; TK1 + TK2; Electronic EMPv7
	575253	Coin Meter	0.1EUR + 0.2EUR + 0.5EUR + 1EUR + 2EUR; TK1 + TK2; Electronic EMPv7
	575254	Coin Meter	1PHP + 5PHP + 10PHP; TK1 + TK2; Electronic EMPv7
	575255	Coin Meter	0.1SGD + 0.2SGD + 0.5SGD + 1SGD; TK1 + TK2; Electronic EMPv7
	575256	Coin Meter	0.1MYR + 0.2MYR + 0.5MYR (old/new); 0.5SGD + 1SGD (old/new); TK1 + TK2; Electronic EMPv7
	575257	Coin Meter	1HRK + 2HRK + 5HRK; TK1 + TK2; Electronic EMPv7
	575258	Coin Meter	5CZK + 10CZK + 20CZK + 50CZK; Token Primus 7K; TK1 + TK2; Electronic EMPv7
	575259	Coin Meter	0.5MAD + 1MAD + 2MAD + 5MAD + 10MAD; TK1 + TK2; Electronic EMPv7
	575260	Coin Meter	1PLN + 2PLN + 5PLN; 0.1EUR + 0.2EUR + 0.5EUR + 1EUR + 2EUR; 10ISK + 50ISK + 100ISK; TK1 + TK2; Electronic EMPv7
	575261	Coin Meter	0.1EUR + 0.2EUR + 0.5EUR + 1EUR + 2EUR; jeton IPSO 5K; TK1 + TK2; Electronic EMPv7
	575262	Coin Meter	0.2GBP + 0.5GBP + 1GBP + 2GBP; 0.1EUR + 0.2EUR + 0.5EUR + 1EUR + 2EUR; TK1: jeton Gettone; TK2: jeton "KLW Aqua"; Electronic EMPv7
	575263	Coin Meter	0.1EUR + 0.2EUR + 0.5EUR + 1EUR + 2EUR, jeton G-FIS "LAVOIR BIANCA" (20x1.8); TK1 + TK2; Electronic EMPv7
	575264	Coin Meter	0.5MYR; jeton "DOBI PAPA" (22.5x2); TK1 + TK2; Electronic EMPv7
	575265	Coin Meter	1AUD + 2AUD, jeton "No Cash Value" (28.6x1.58); TK1 + TK2; Electronic EMPv7
	575266	Coin Meter	0.5MYR; jeton "BUBBLELAB"; TK1 + TK2; Electronic EMPv7
	575267	Coin Meter	1ILS + 2ILS + 5ILS + 10ILS; TK1 + TK2; Electronic EMPv7
	575268	Coin Meter	1ZAR + 2ZAR + 5ZAR; TK1 + TK2; Electronic EMPv7
	575269	Coin Meter	5RUB + 10RUB; TK1 + TK2; Electronic EMPv7
	575270	Coin Meter	50CLP + 100CLP + 500CLP; TK1 + TK2; Electronic EMPv7
	575271	Coin Meter	100JPY + 500JPY; 10TWD + 50TWD; TK1 + TK2; Electronic EMPv7
	575272	Coin Meter	0.5GEL + 1GEL + 2GEL; TK1 + TK2; Electronic EMPv7
	575273	Coin Meter	0.1EUR + 0.2 EUR + 0.5EUR + 1EUR + 2EUR; Jeton 7K; TK1 + TK2; Electronic EMPv7
	575275	Coin Meter	1THB + 2THB + 5THB + 10THB; TK1 + TK2; Electronic EMPv7
	572386	Coin Meter	0.2CHF + 0.5CHF + 1CHF + 2CHF; TK1 + TK2; Electronic EMPv7

## Coin Meter (Drawing 3 of 3)

AF, IY and NY Models with V in 7th position of the model number or AF, IY and NY Models with G, H, J or K in 13th position of the model number

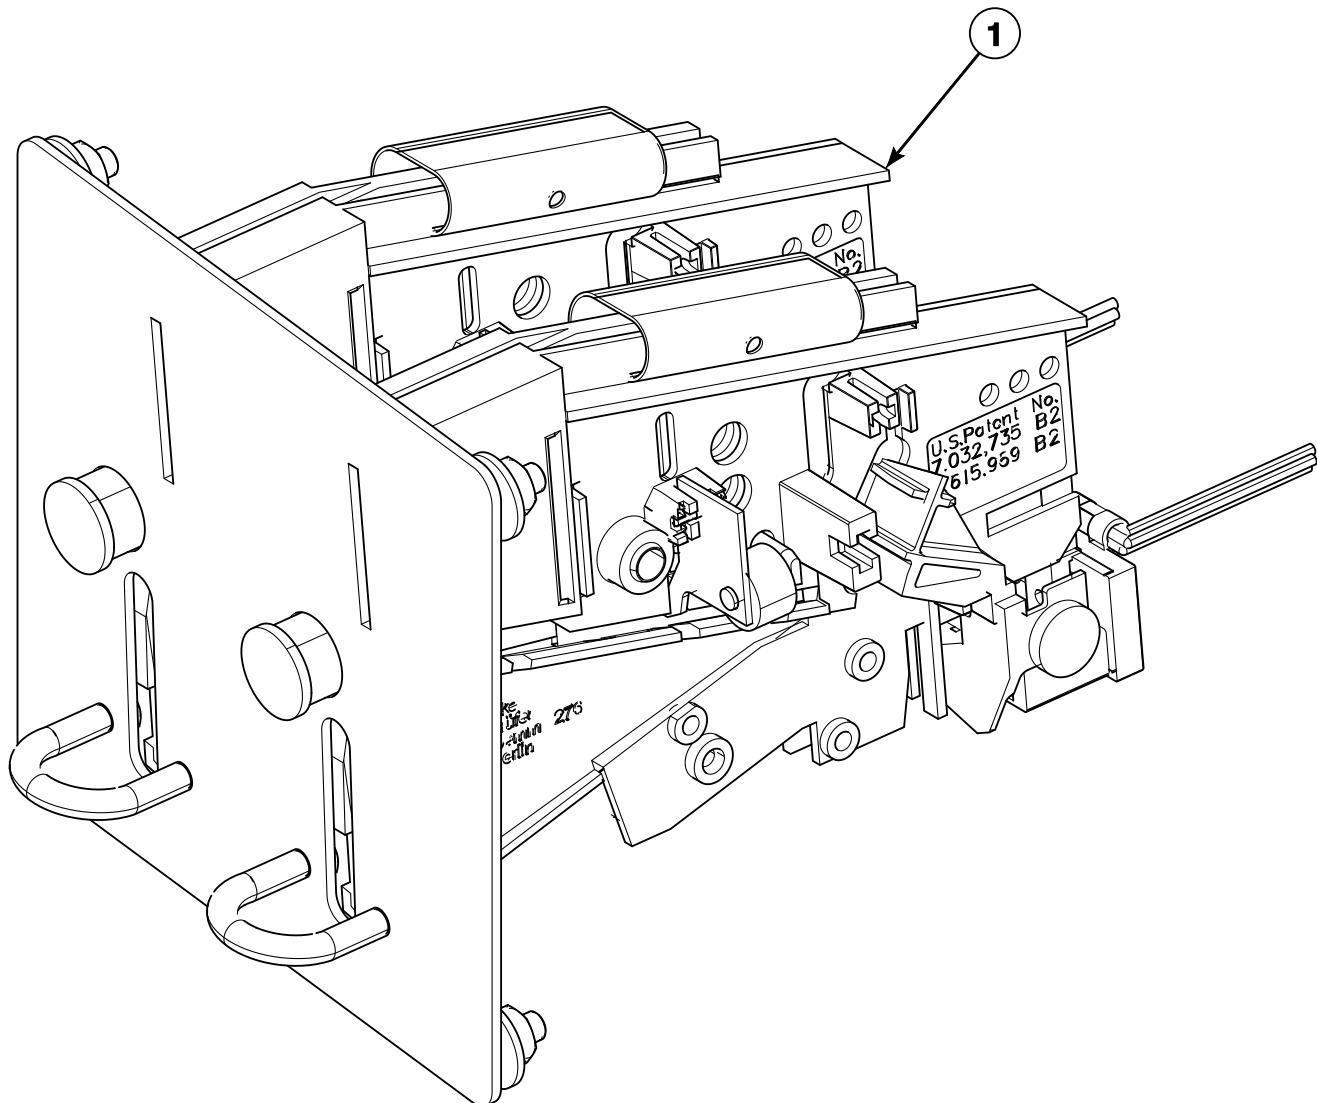


CZW233P\_D2409

## Coin Meter (Drawing 3 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
1	575201	Coin Meter	5K PRIMUS jeton
	575202	Coin Meter	10K PRIMUS jeton
	575203	Coin Meter	STD 118-1 jeton
	575204	Coin Meter	7K PRIMUS jeton
	575205	Coin Meter	12K PRIMUS jeton
	575206	Coin Meter	15K PRIMUS jeton
	575207	Coin Meter	1AUD + 0.2AUD
	575208	Coin Meter	1POND + 20PC
	575209	Coin Meter	1POND + 50PC
	575210	Coin Meter	100YEN
	575211	Coin Meter	100YEN + 500YEN
	575212	Coin Meter	1AUD + 2AUD
	575213	Coin Meter	1AUD
	575247	Coin Meter	Token WH121
	575214	Coin Meter	20 penny
	575215	Coin Meter	50 New Malaysian cent
	575216	Coin Meter	1 Singapore dollar
	575217	Coin Meter	2x50 Malaysian cent
	579815	Coin Meter	20HUF + 50HUF + 100HUF + 200HUF; TK1 + TK2 Jeton; Electronic EMPv7; new Hungarian Forint
	579811	Coin Meter	1EAD; TK1, TK2 Jeton; Electronic EMPv7

## Coin Meter - FX, LY and PY Models (Drawing 1 of 4)

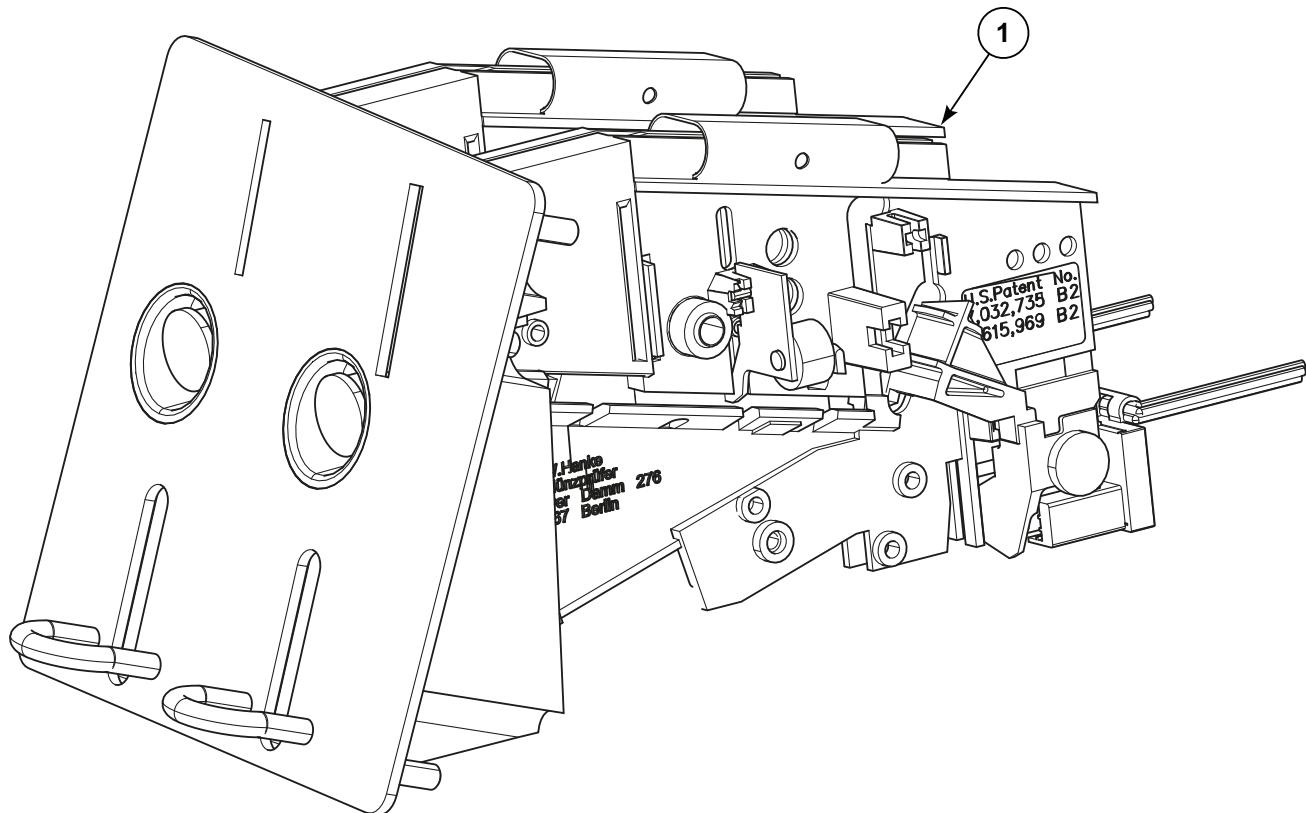


CZT185P\_D2409

# Coin Meter - FX, LY and PY Models (Drawing 1 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP547601	Coin Meter	5K Primus jeton
	SP547602	Coin Meter	7K Primus jeton
	SP547603	Coin Meter	10K Primus jeton
	SP547604	Coin Meter	12K Primus jeton
	SP547605	Coin Meter	15K Primus jeton
	SP547606	Coin Meter	D jeton
	SP547648	Coin Meter	0.05EUR
	SP547638	Coin Meter	0.2EUR
	SP547616	Coin Meter	0.5EUR
	SP547614	Coin Meter	1EUR
	SP547647	Coin Meter	2EUR
	SP547622	Coin Meter	0.2EUR + 0.5EUR
	SP547639	Coin Meter	0.2EUR + 1EUR
	SP547617	Coin Meter	0.5EUR + 1EUR
	SP547656	Coin Meter	0.5EUR + 2EUR
	SP547631	Coin Meter	1EUR + 2EUR
	SP547652	Coin Meter	7K + D jeton
	SP547666	Coin Meter	7K jeton and 2EUR
	SP547665	Coin Meter	D jeton and 2EUR
	SP547600	Coin Meter	1AUD + 20C
	SP547607	Coin Meter	1POND + 20PC
	SP547608	Coin Meter	1POND + 50PC
	SP547609	Coin Meter	100YEN
	SP547610	Coin Meter	500JPY + 100JPY
	SP547611	Coin Meter	5DKK
	SP547612	Coin Meter	20DKK
	SP547613	Coin Meter	5ILS + 1ILS
	SP547615	Coin Meter	1MYR
	SP547618	Coin Meter	1DKK + 5DKK
	SP547619	Coin Meter	10NOK + 20NOK
	SP547620	Coin Meter	2DKK + 5DKK
	SP547621	Coin Meter	5NOK
	SP547623	Coin Meter	1NZD + 2NZD
	SP547624	Coin Meter	10 NOK
	SP547625	Coin Meter	10NT + 50NT
	SP547626	Coin Meter	2DKK
	SP547627	Coin Meter	Lucky Winner jeton
	SP547628	Coin Meter	10TWD
	SP547629	Coin Meter	10CZK + 20CZK
	SP547630	Coin Meter	7K Equipos Par Lavar jeton
	569921	Coin Meter	0.2GBP, 0.5GBP, 1GBP, 2GBP, 0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR; Electronic EMPV7
	SP547634	Coin Meter	500WON
	SP547635	Coin Meter	0.25USD
	SP547636	Coin Meter	1AUD + 2AUD
	SP547640	Coin Meter	Sun Wash jeton

## Coin Meter - FX, LY and PY Models (Drawing 2 of 4)

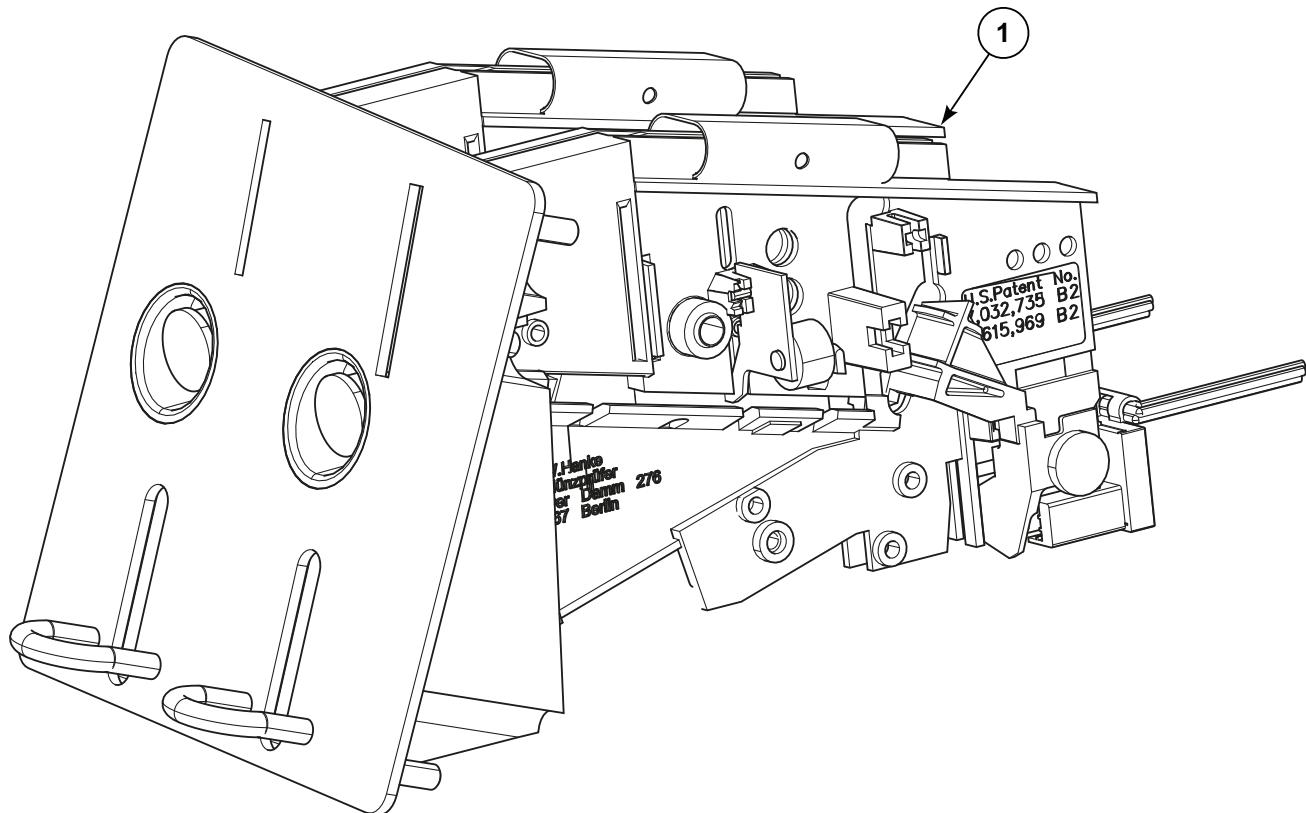


CZT185P\_D2409

## Coin Meter - FX, LY and PY Models (Drawing 2 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP547641	Coin Meter	2DK + 10DK
	SP547642	Coin Meter	1AUD
	SP547643	Coin Meter	1CHF
	SP547644	Coin Meter	5NOK + 10NOK
	SP547645	Coin Meter	1 TopMos jeton + 1LEV jeton
	SP547646	Coin Meter	1 Vendo jeton
	SP547649	Coin Meter	1 jeton
	569951	Coin Meter	0.5MAD, 1MAD, 2MAD, 5MAD, 10MAD; Electronic EMPv7
	SP547651	Coin Meter	20 penny
	SP547653	Coin Meter	1 Wascator jeton, jeton diamater 22.2 mm
	SP547654	Coin Meter	1 Unibel jeton, jeton diamater 18.55 mm
	SP547657	Coin Meter	50HUF + 100HUF
	SP547658	Coin Meter	1 jeton without coining, jeton diamater 20 mm
	SP547659	Coin Meter	1 Volund jeton, jeton diamater 22.5 mm
	SP547660	Coin Meter	1 Wascator jeton, jeton diamater 19 mm
	SP547661	Coin Meter	1 Miele jeton
	SP547662	Coin Meter	1 jeton without coining, jeton diamater 26 mm
	SP547663	Coin Meter	Three-groove jeton; jeton diamater 27 mm
	SP547664	Coin Meter	Three-groove jeton; jeton diamater 24.9 mm
	SP537996	Coin Meter	Top-Mosr jeton
	SP547667	Coin Meter	Milano Italy jeton
	SP547668	Coin Meter	5PLN + 1PLN
	SP547669	Coin Meter	Two-grooves jeton; jeton diamater 27 mm
	SP547670	Coin Meter	A.S.A.R.D. jeton, jeton diamater 25.8 mm
	SP547671	Coin Meter	20CZK
	SP547672	Coin Meter	Jeton ASARD, jeton diamater 22.3 mm
	SP547673	Coin Meter	Jeton Laundromatic Belgium, jeton diamater 22.3 mm
	SP547674	Coin Meter	1SGD
	SP547675	Coin Meter	Jeton Asard Wascator, jeton diamater 19.9 mm
	SP555502	Coin Meter	Easy Games jeton
	SP555543	Coin Meter	Brev.C jeton
	SP555546	Coin Meter	50 Malaysian cent
	SP555549	Coin Meter	Flat Polis jeton
	SP555550	Coin Meter	Butzi Wash jeton
	SP555578	Coin Meter	1 New Singapore Dollar
	SP555558	Coin Meter	Copper without grooves jeton
	569939	Coin Meter	0.1SGD, 0.2SGD, 0.5SGD, 1SGD; Electronic EMPv7
	SP555666	Coin Meter	2x50 Malaysian cent
	569933	Coin Meter	0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR; Electronic EMPv7
	SP555559	Coin Meter	Speedy Matic jeton
	SP555579	Coin Meter	Was-Salon Lavoir jeton.
	569948	Coin Meter	5CZK, 10CZK, 20CZK, 50CZK; Electronic EMPv7
	SP560744	Coin Meter	Electronic for Dobi Ekspress jeton
	569964	Coin Meter	0.2GBP, 0.5GBP, 1GBP, 2GBP, 0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, jeton "KWL Aqua", jeton "Gettone"; Electronic EMPv7
	SP560089	Coin Meter	STD 118-1 jeton

## Coin Meter - FX, LY and PY Models (Drawing 3 of 4)

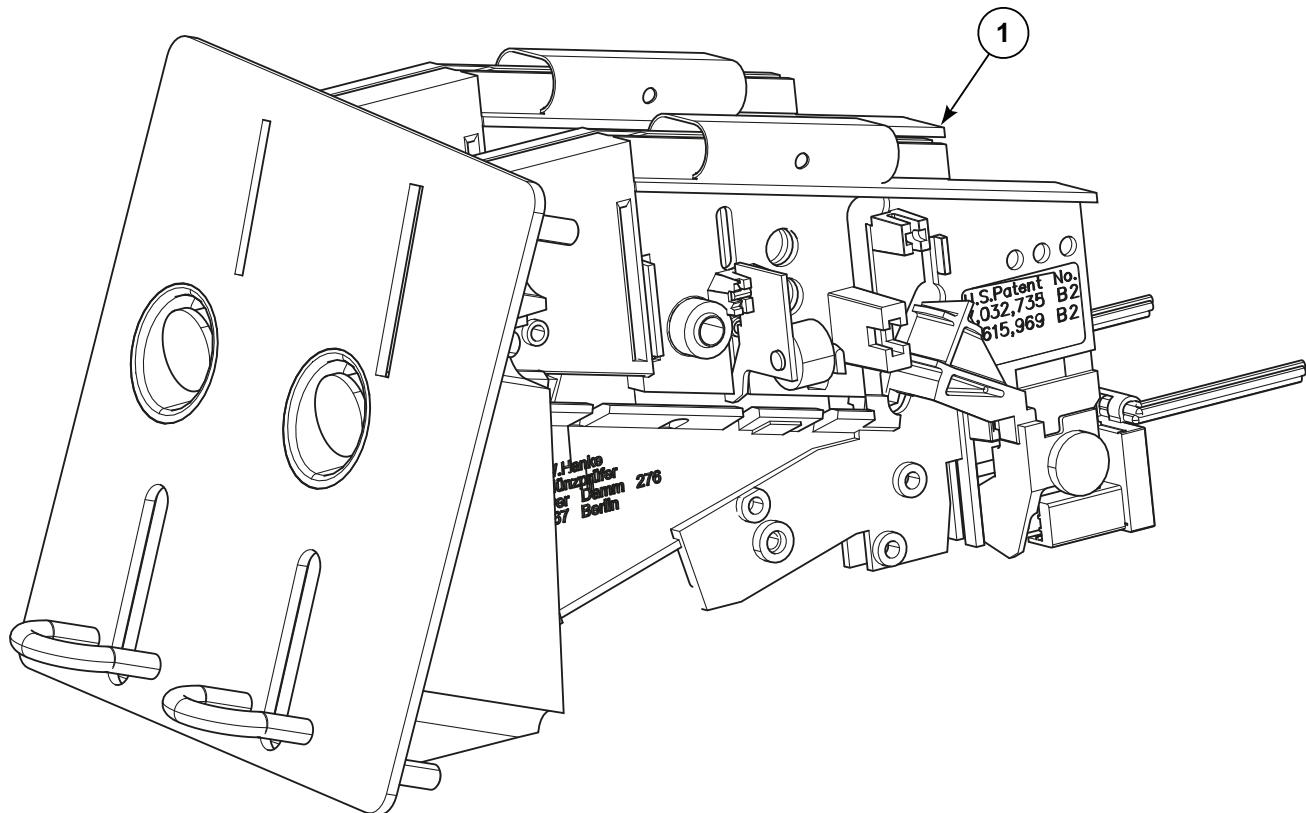


CZT185P\_D2409

# Coin Meter - FX, LY and PY Models (Drawing 3 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP560082	Coin Meter	5k IPSO jeton
	SP560083	Coin Meter	7k IPSO jeton
	SP560084	Coin Meter	10k IPSO jeton
	SP560085	Coin Meter	12k IPSO jeton
	SP560086	Coin Meter	15k IPSO jeton
	561378	Coin Meter	10 Moroccan Dirham
	569918	Coin Meter	0.25USD, 1USD, 0.25CAD, 1CAD, 2CAD; Electronic EMPv7
	560073	Coin Meter	0.25 USD/1 USD
	569930	Coin Meter	1CNY, 0.1MYR, 0.2MYR, 0.5MYR; Electronic EMPv7
	569927	Coin Meter	0.2AUD, 1AUD, 2AUD, 0.2NZD, 1NZD, 2NZD, 5HKD, 10HKD, 500KRW; Electronic EMPv7
	561496	Coin Meter	Jeton Grupo Azkoyen CDS Automaten
	569936	Coin Meter	1PHP, 5PHP, 10PHP; Electronic EMPv7
	569942	Coin Meter	0.1MYR, 0.2MYR, 0.5MYR, 0.5SGD, 1SGD; Electronic EMPv7
	569945	Coin Meter	1HRK, 2HRK, 5HRK; Electronic EMPv7
	569924	Coin Meter	1DKK, 2DKK, 5DKK, 10DKK, 20DKK, 1NOK, 5NOK, 10NOK, 20NOK, 0.2EUR, 0.5EUR, 1EUR, 2EUR; Electronic EMPv7
	564484	Coin Meter	Jeton 118-5
	564486	Coin Meter	Jeton Barisart (LDL)
	569961	Coin Meter	0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, jeton IPSO 5K; Electronic EMPv7
	564489	Coin Meter	Jeton Sporrong
	569970	Coin Meter	0.5MYR, jeton "DOBI PAPA"; Electronic EMPv7
	553150	Coin Meter	Jeton with hole
	553151	Coin Meter	Jeton Deton Wash
	569901	Coin Meter	Brass jeton
	569912	Coin Meter	Jeton Wassalon lavoir
	569954	Coin Meter	1PLN, 2PLN, 5PLN, 0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, 10ISK, 50ISK, 100ISK; Electronic EMPv7
	569967	Coin Meter	0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, jeton G-FIS "LAVOIR BIANCA"; Electronic EMPv7
	569973	Coin Meter	1AUD, 2AUD, jeton "No Cash Value"; Electronic EMPv7
	569979	Coin Meter	0.5MYR, jeton "BUBBLELAB"; Electronic EMPv7
	569987	Coin Meter	Jeton HAUCK 2018
	569998	Coin Meter	100+500 ISK
	572301	Coin Meter	Token 118-16
	572304	Coin Meter	1ILS, 2ILS, 5ILS, 10ILS; Electronic EMPv7
	572307	Coin Meter	1ZAR, 2ZAR, 5ZAR; Electronic EMPv7
	572310	Coin Meter	5RUB, 10RUB; Electronic EMPv7
	572313	Coin Meter	50CLP, 100CLP, 500CLP; Electronic EMPv7
	572317	Coin Meter	100JPY, 500JPY, 10TWD, 50TWD; Electronic EMPv7
	572320	Coin Meter	0.5GEL, 1GEL, 2GEL; Electronic EMPv7
	572323	Coin Meter	0.2 EUR, 0.5EUR, 1EUR, 2EUR, Jeton 7K; Electronic EMPv7
	579812	Coin Meter	20HUF, 50HUF, 100HUF, 200HUF; Electronic EMPv7
	SP547637	Coin Meter	5DK + 10DK

## Coin Meter - FX, LY and PY Models (Drawing 4 of 4)

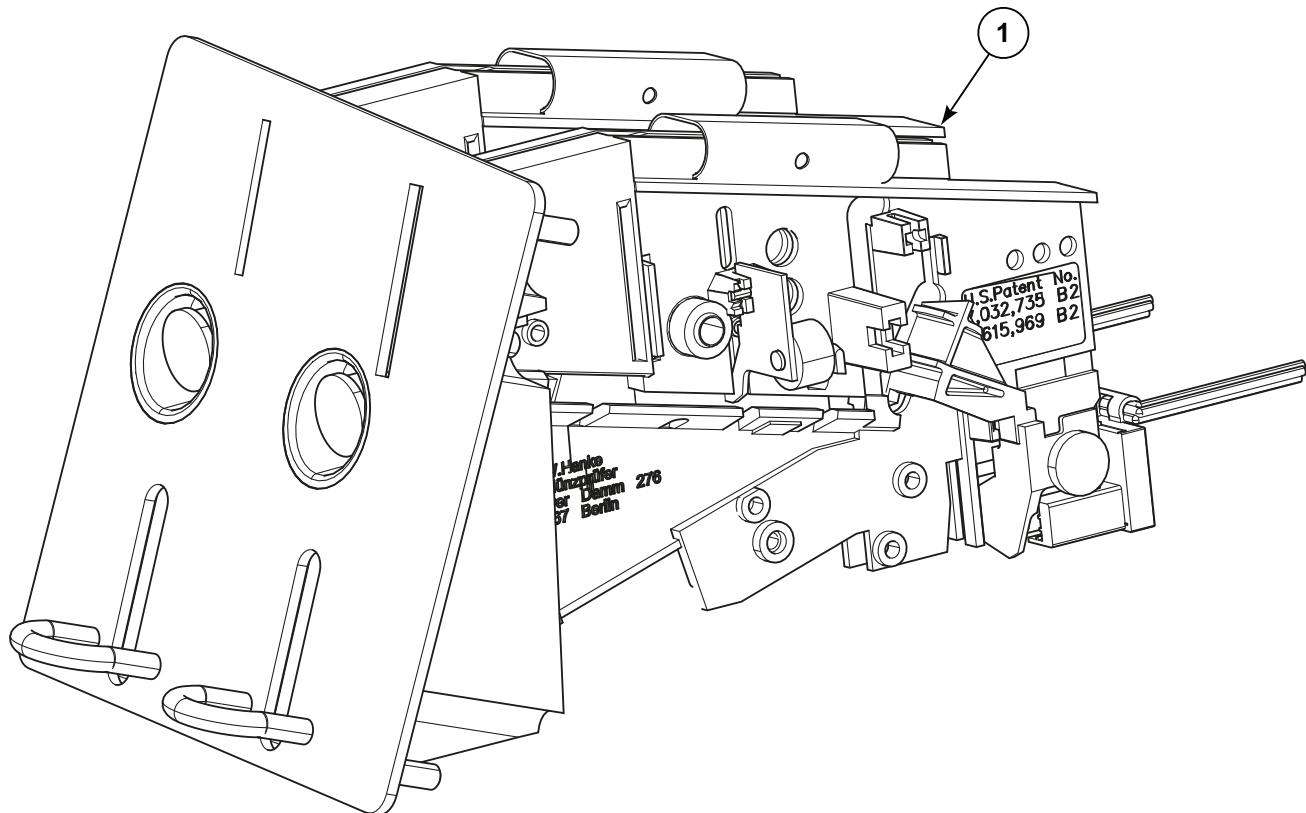


CZT185P\_D2409

## Coin Meter - FX, LY and PY Models (Drawing 4 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
1	572339	Coin Meter	Getton Jeton (26mm diameter x 1.7mm)
	572342	Coin Meter	Token WH121
	579808	Coin Meter	1EAD, 1TK, 2TK; Electronic EMPv7
	579812	Coin Meter	20 HUF, 50HUF, 100HUF, 200HUF; 1TK, 2TK, Jeton; Electronic EMPv7
	572383	Coin Meter	0.2CHF, 0.5CHF, 1CHF, 2CHF; 1TK, 2TK Jeton; Electronic EMPv7
	572391	Coin Meter	0.25CAD
	572358	Coin Meter	1THB, 2THB, 5THB, 10THB; 1TK, 2TK Jeton; Electronic EMPv7

## Door (Drawing 1 of 4)

All Models; Models AF, FX, IY, J, NY, PY with V in 7th position of the model number Starting 1 March 2021

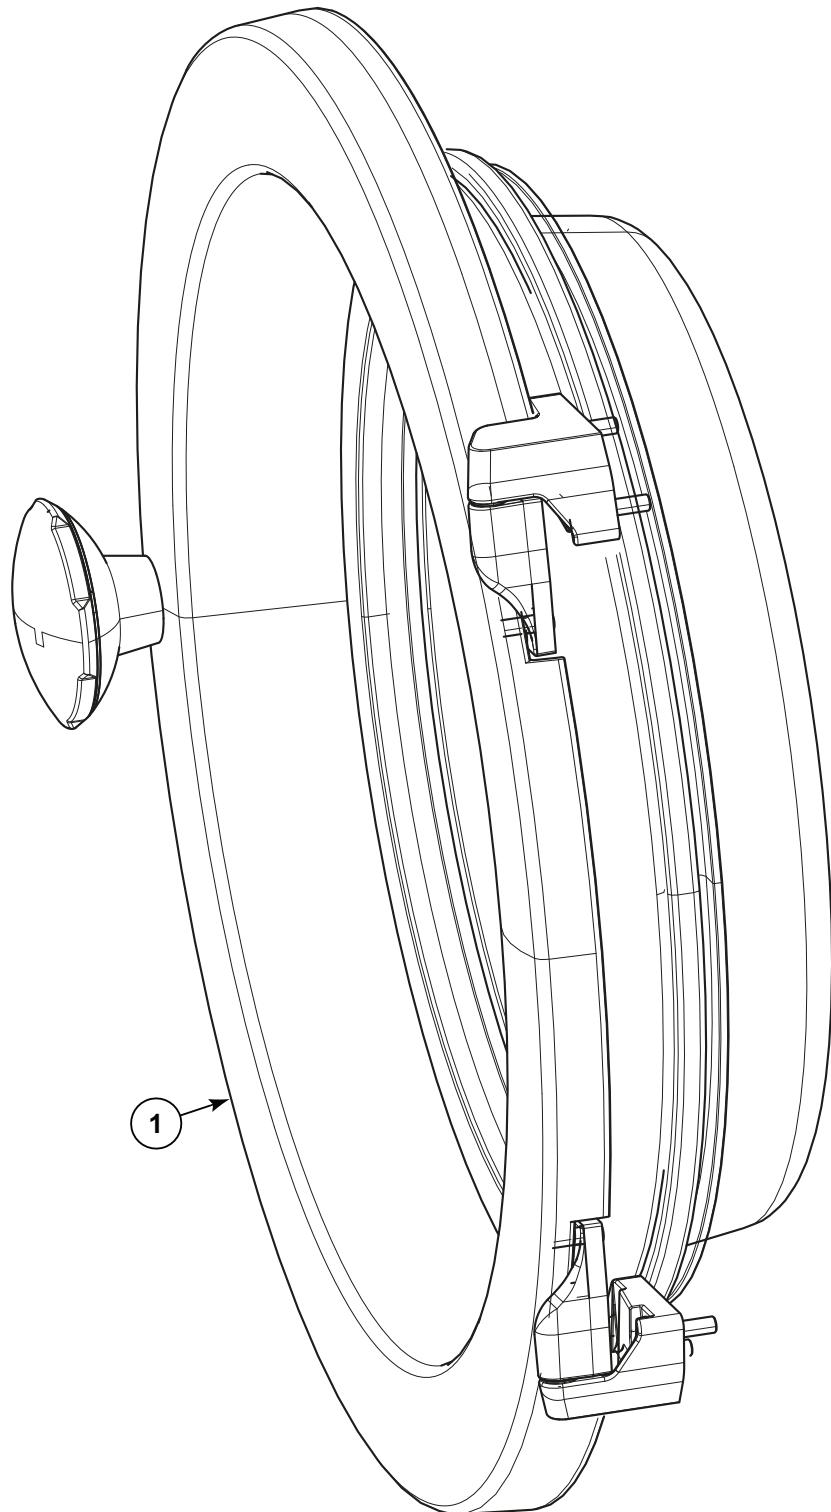


CZW586P\_D1714

# Door (Drawing 1 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
	582319	Plexiglass Assembly	Door-glass Insulation
	SP552454	Door Lock Wiring	MC7; CSA
	SP552453	Door Lock Wiring	MC7; CE
	SP528270	Door Lock Wiring	MC6 control board; CE
	569723	Door Lock Wiring	MC10 control board; CE
	SP537896	Adhesive	Reversible
	SP245704000603	Adhesive	Loctite 603; Used with SP537854 Bolt
	SP245704003021	Adhesive	Loctite 243
	568991	Service Door Kit	Includes 569353 Door Seal, 568804 Shim, 560069 Shim, PRI722000004 Plastic Protection, PRI722000001 Plastic Protection and SP345000160971 Binding Strip
1	556271	Door Assembly	HY, SY and UY models with A, D, F or I in 7th position of the model number; Items 1-13 in ( <i>Drawing 2 of 4</i> ), 1-17 in ( <i>Drawing 3 of 4</i> ) and 1-10 in ( <i>Drawing 4 of 4</i> )
	535415	Door Assembly	FX, HX, MWF, PY, QW and SW models with T, V or X in 7th position of the model number; Items 1-13 in ( <i>Drawing 2 of 4</i> ), 1-17 ( <i>Drawing 3 of 4</i> ) and 1-10 ( <i>Drawing 4 of 4</i> )
	553531	Door Assembly	FX and PY models with G in 7th position of the model number; Items 1-13 in ( <i>Drawing 2 of 4</i> ), 1-17 ( <i>Drawing 3 of 4</i> ) and 1-10 ( <i>Drawing 4 of 4</i> )
	582300	Door Assembly	FX and PY models with N, U or 8 in 10th position of the model number; Items 1-13 in ( <i>Drawing 2 of 4</i> ), 1-17 ( <i>Drawing 3 of 4</i> ) and 1-10 ( <i>Drawing 4 of 4</i> )
	574098	Door Assembly	AF and NY models with G, H, J or K in 13th position of the model number; Items 1-13 in ( <i>Drawing 2 of 4</i> ), 1-17 in ( <i>Drawing 3 of 4</i> ) and 1-10 in ( <i>Drawing 4 of 4</i> )
	535434	Door Assembly	AF, LY and NY models with T or X in 7th position of the model number; Items 1-13 in ( <i>Drawing 2 of 4</i> ), 1-17 in ( <i>Drawing 3 of 4</i> ) and 1-10 in ( <i>Drawing 4 of 4</i> )
	563371	Door Assembly	IY models with G, H, J or K in 13th position of the model number; Items 1-13 in ( <i>Drawing 2 of 4</i> ), 1-17 in ( <i>Drawing 3 of 4</i> ) and 1-10 in ( <i>Drawing 4 of 4</i> )
	556253	Door Assembly	IY models with J or R in 7th position of the model number; Items 1-13 in ( <i>Drawing 2 of 4</i> ), 1-17 in ( <i>Drawing 3 of 4</i> ) and 1-10 in ( <i>Drawing 4 of 4</i> )
	576075	Door Assembly	AF, IY, NY, SY and UY models with G in 7th position of the model number; Items 1-13 in ( <i>Drawing 2 of 4</i> ), 1-17 in ( <i>Drawing 3 of 4</i> ) and 1-10 in ( <i>Drawing 4 of 4</i> )
	573185	Door Assembly	Model JYE105V; Items 1-13 in ( <i>Drawing 2 of 4</i> ), 1-17 in ( <i>Drawing 3 of 4</i> ) and 1-10 in ( <i>Drawing 4 of 4</i> )
	562705	Door Assembly	J models with J or R in 7th position of the model number; Items 1-13 in ( <i>Drawing 2 of 4</i> ), 1-17 in ( <i>Drawing 3 of 4</i> ) and 1-10 in ( <i>Drawing 4 of 4</i> )

## Door (Drawing 2 of 4)

All Models; Models AF, FX, IY, J, NY, PY with V in 7th position of the model number Starting 1 March 2021

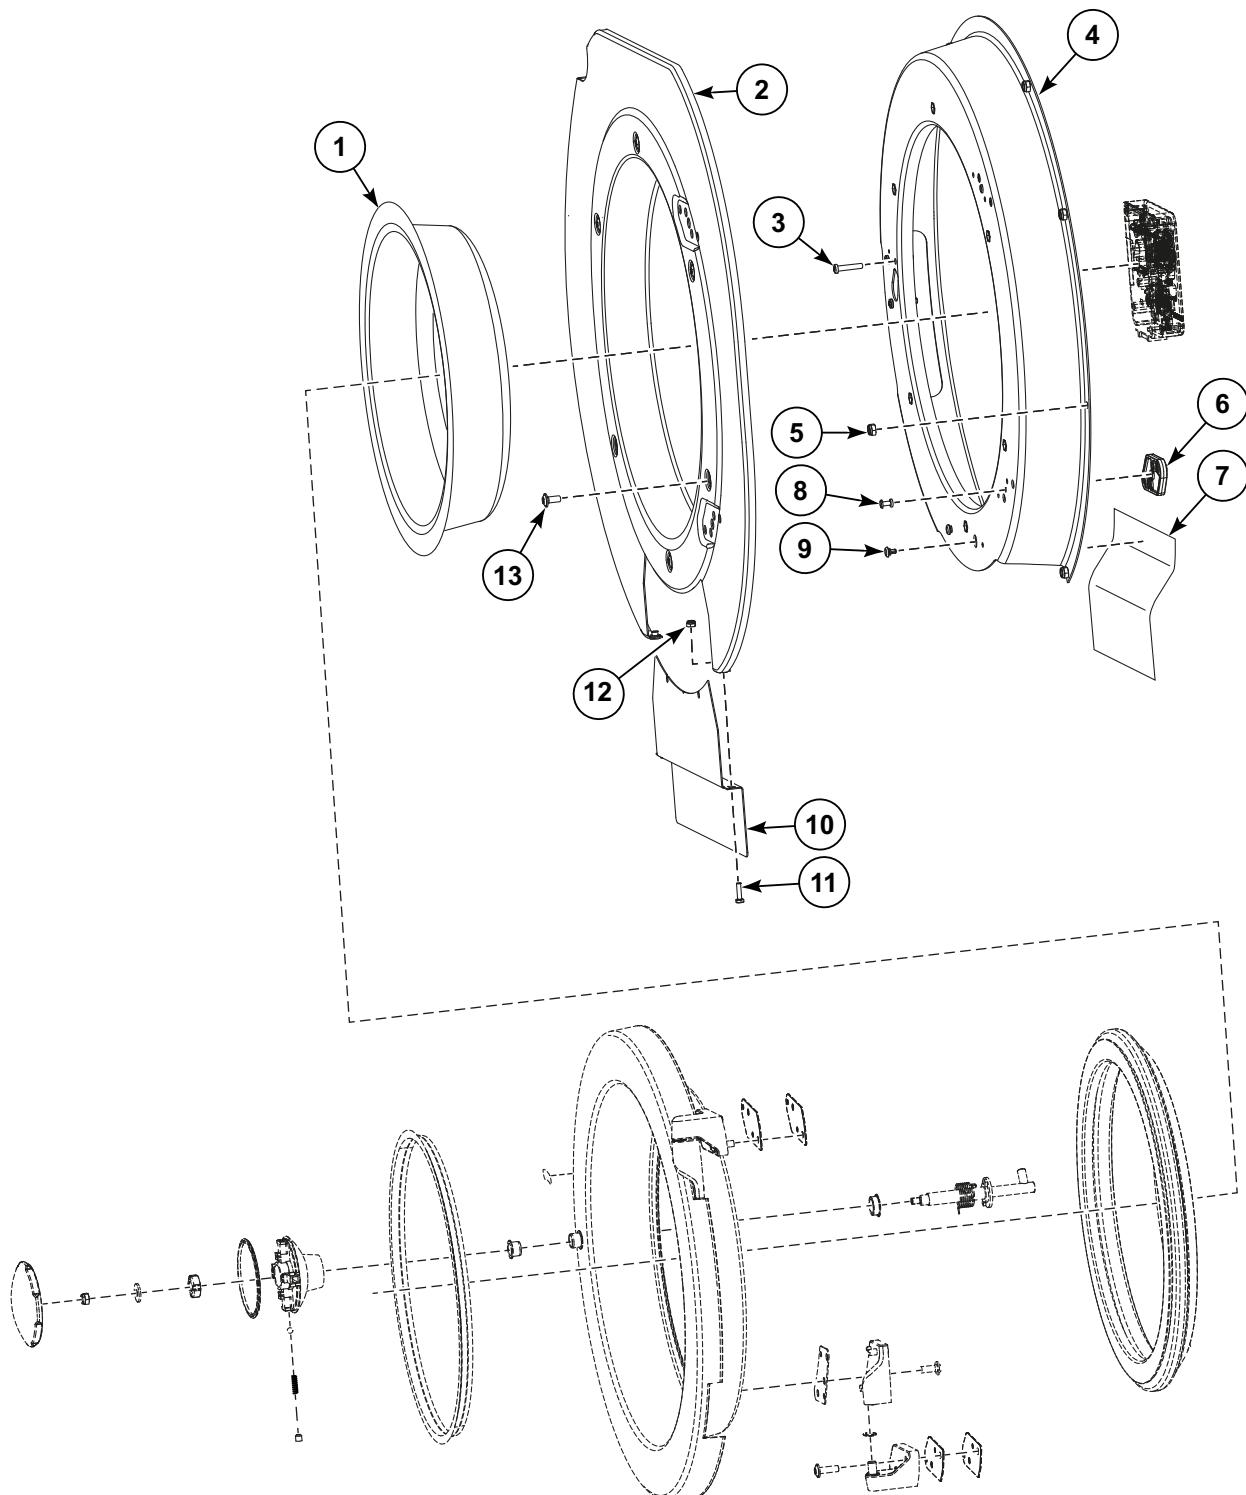


CZW370P\_D2409

## Door (Drawing 2 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP556227	Door Glass	IY models; With logo
	SP562702	Door Glass	J models with J or R in 7th position of the model number
	573191	Door Glass	J models with V in 7th position of the model number
	SP535417	Door Glass	AF, FX, HY, NY, PY, SY, UY models; Without logo
2	571722	Front Panel	Black
	571725	Front Panel	Stainless
	568976	Front Panel	Models with V in 7th position of the model number through 28 February 2021; Black
	568999	Front Panel	Models with V in 7th position of the model number through 28 February 2021; Stainless
3	SP556137	Bolt	M5x25
4	SP537853	Door and Lock Holder	used with SPPRI505000058 Profiled Sealing, length 0.22m
	568906	Door and Lock Holder	Models with V in 7th position of the model number through 28 February 2021; used with SPPRI505000058 Profiled Sealing, length 0.28m
5	SP310985000006	Nut	M6
6	SP537849	Hinge Spacer	
7	552972	Cover	Models with A, D, F, I, J, R, T or X in 7th position of the model number
	568938	Cover	Models with G or V in 7th position of the model number
8	SP547779	Rivet	4x16.7
9	SP537856	Connector	
10	SP563274	Heating Element Front Cover	Black
	568986	Heating Element Front Cover	Stainless
11	SP309084000416	Bolt	M4x16
12	SP313251002104	Nut	M4
13	SP537854	Bolt	M6x14

## Door (Drawing 3 of 4)

All Models; Models AF, FX, IY, J, NY, PY with V in 7th position of the model number Starting 1 March 2021

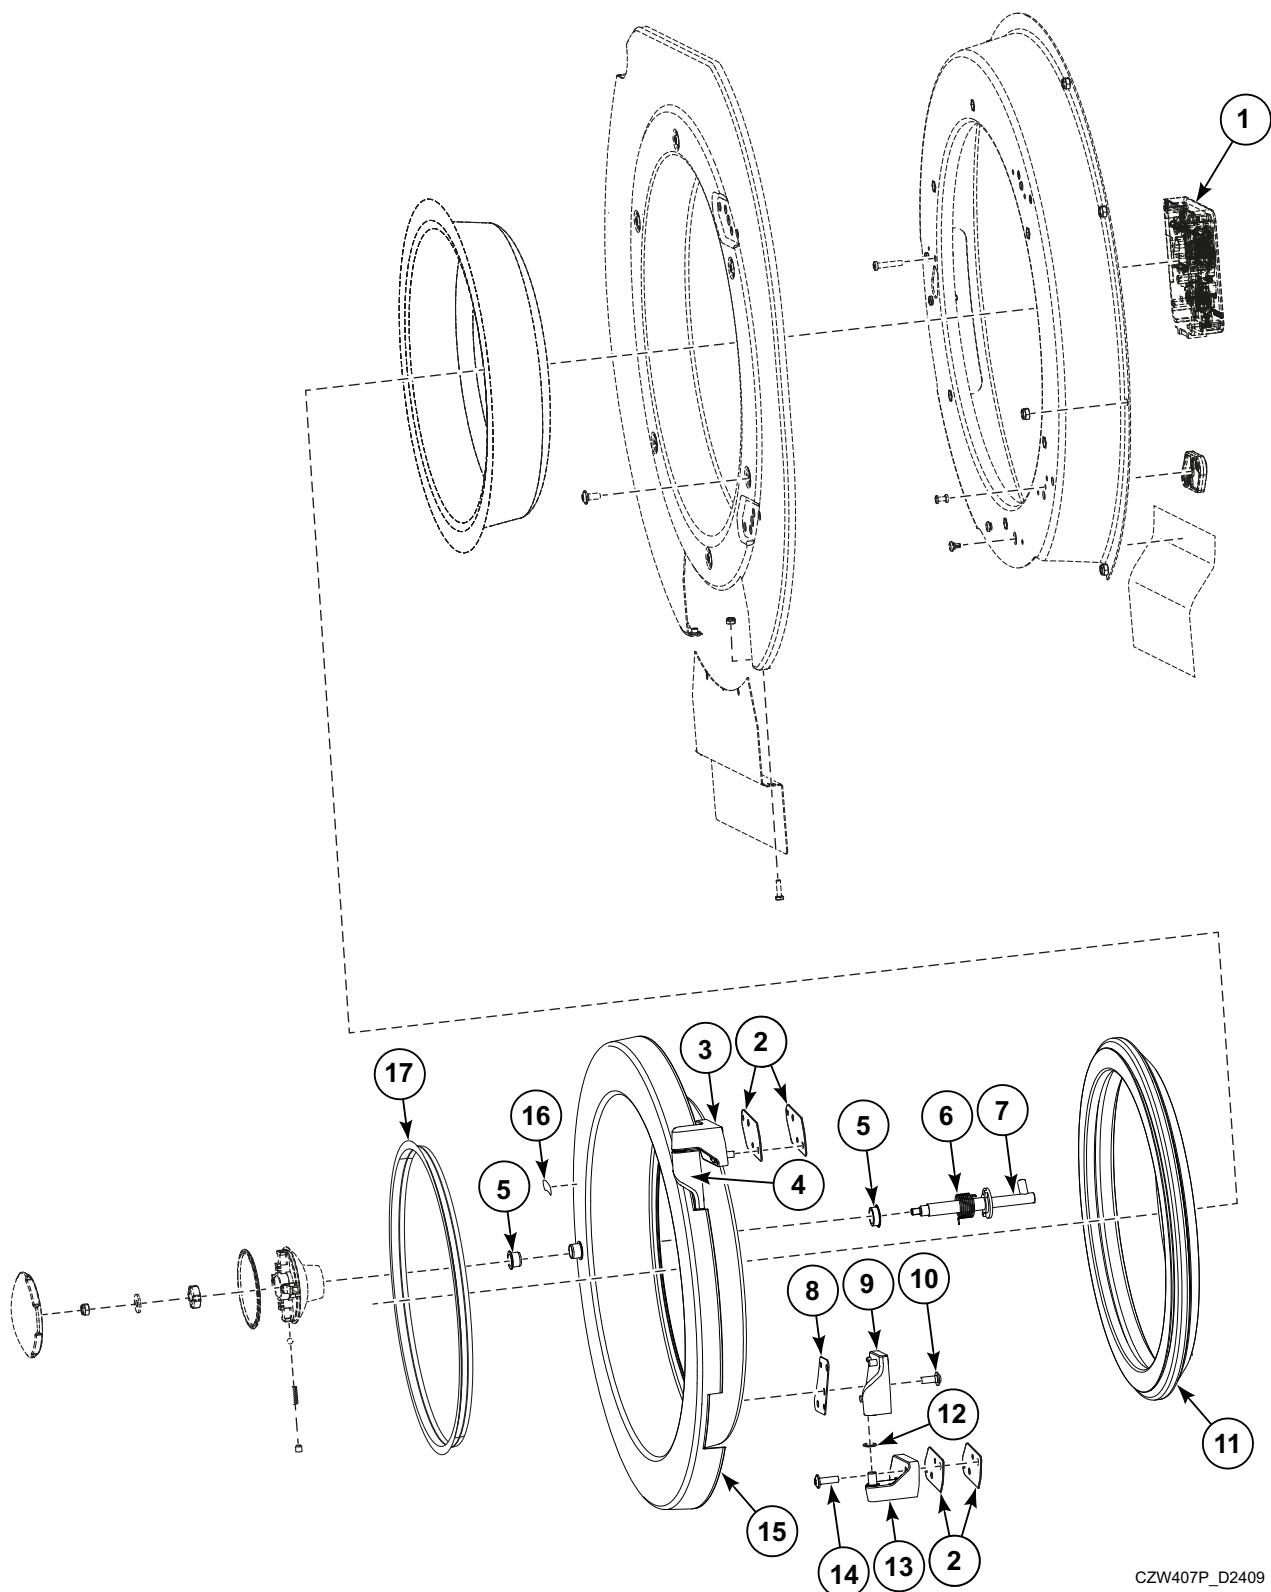


CZW407P\_D2409

## Door (Drawing 3 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
	F8301201	Double Check Valve	J models; CE; Used with SPPRI426001217 Pipe Nipple
	570554	Kit of Hinges	HY, SY and UY models with A, D, F or I in 7th position of the model number; includes 568981, 568984, 575962, 575965 and 571642
	570553	Kit of Hinges	AF, FX, HX, IY, JY, LY, NY, PY and QW models; HY, SY and UY models with G in 7th position of the model number; includes 568979, 568982, 575960, 575963 and 571642
1	SP537760	Lock	
2	N/A	Washer	
3	568981	Fixed Upper Hinge	HY, SY and UY models with A, D, F or I in 7th position of the model number
	568979	Fixed Upper Hinge	AF, FX, HX, IY, JY, LY, NY, PY and QW models; HY, SY and UY models with G in 7th position of the model number
4	575962	Upper Hinge	HY, SY and UY models with A, D, F or I in 7th position of the model number; with Case
	575960	Upper Hinge	AF, FX, HX, IY, JY, LY, NY, PY and QW models; HY, SY and UY models with G in 7th position of the model number; with Case
5	SP529739	Casing	
6	SP535402	Handle Torsion Spring	
7	SP537933	Lock Pin	
8	SP535421	Hinge Spacer	
9	575965	Lower Hinge	HY, SY and UY models with A, D, F or I in 7th position of the model number; with Case
	575963	Lower Hinge	AF, FX, HX, IY, JY, LY, NY, PY and QW models; HY, SY and UY models with G in 7th position of the model number; with Case
10	SP537864	Bolt	M6x16
11	568991	Service Door Kit	
12	571642	Washer	
13	568984	Fixed Lower Hinge	HY, SY and UY models with A, D, F or I in 7th position of the model number
	568982	Fixed Lower Hinge	AF, FX, HX, IY, JY, LY, NY, PY and QW models; HY, SY and UY models with G in 7th position of the model number
14	SP535479	Bolt	M6x25
15	SP535426	Door	HY, SY and UY models with A, D, F or I in 7th position of the model number; FX, HX, MWF, PY, QW and SW models through Serial No. 105FX010255MB; Chrome
	SP553526	Door	FX, HX, MWF, PY, QW and SW models starting Serial No. 105FX010256MB; Gray
	SP535428	Door	AF, AF Non-Brand, H, IY, J, LP, LY and NY models with J, R, X or T in 7th position of the model number; Black
	568837	Door	AF, IY, JY and NY models with G, H, J or K in 13th position of the model number; AF, IY, NY, SY and UY models with G in 7th position of the model number; Black
16	SP564831	Label	Door Lock; Vended; North America
17	SP562546	Rim	IY models with G, H, J or K in 13th position of the model number
	573188	Rim	J models with V in 7th position of the model number
	582297	Rim	FX and PY models with N, U or 8 in 10th position of the model number

## Door (Drawing 4 of 4)

All Models; Models AF, FX, IY, J, NY, PY with V in 7th position of the model number Starting 1 March 2021

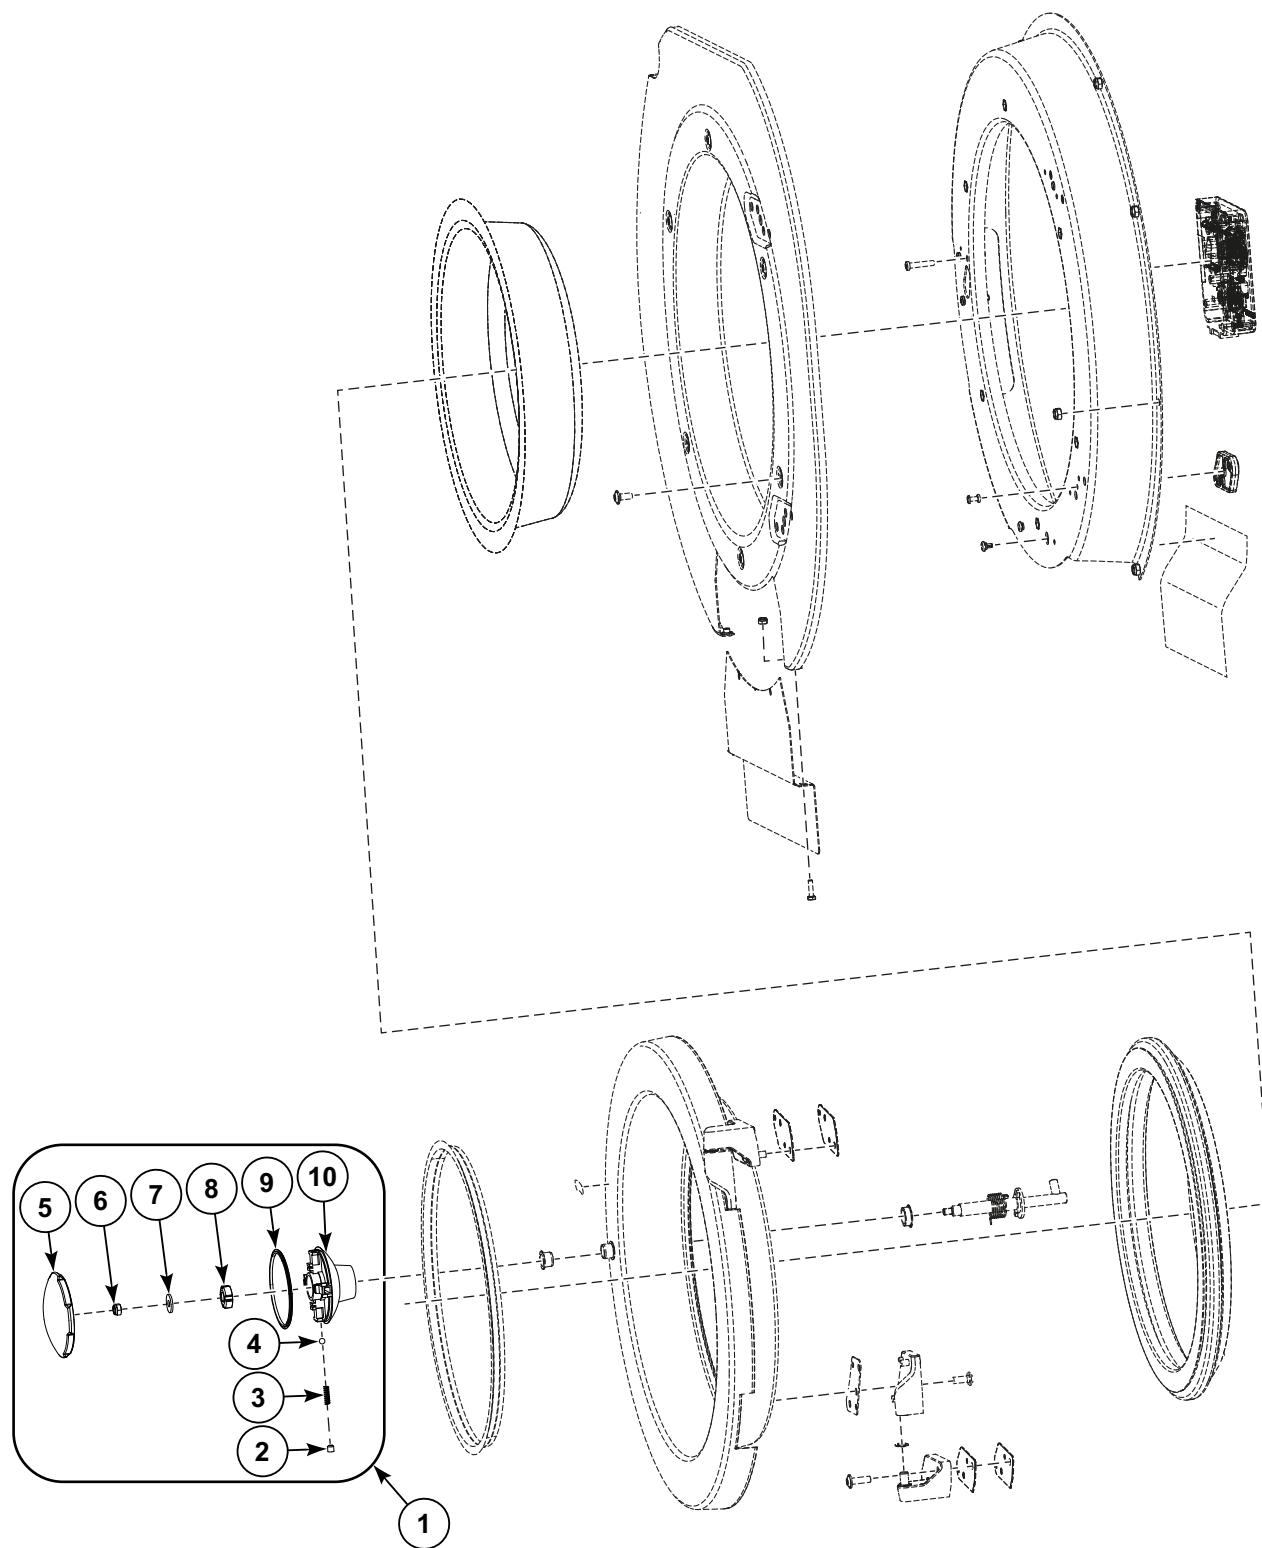


CZW372P\_D2409

## Door (Drawing 4 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
	F8301201	Double Check Valve	J models; CE; Used with SPPRI426001217 Pipe Nipple
<b>1</b>	SP556297	Handle	HY, SY and UY models with A, D, F or I in 7th position of the model number
	SP552909	Handle	AF, AF Non-Brand, H, IY, J, LP, LY and NY models with J, R, X or T in 7th position of the model number
	SP552908	Handle	FX, HX, MWF, PY, QW and SW models with V, T or X in 7th position of the model number
	582330	Handle	FX and PY models with N, U or 8 in 10th position of the model number
	552916	Handle	FX and PY models with G in 7th position of the model number
	562898	Handle	J models
	571788	Handle	AF, IY and NY models with G, H, J or K in 13th position of the model number
	576081	Handle	AF, IY, NY, SY and UY models with G in 7th position of the model number
<b>2</b>	SP553524	Bolt	M6x6
<b>3</b>	SP535406	Compression Spring	
<b>4</b>	SP535407	Handle Ball	
<b>5</b>	SP556278	Holder Cover	HY, SY and UY models with A, D, F or I in 7th position of the model number
	SP535438	Holder Cover	AF, AF Non-Brand, H, IY, J, LP, LY and NY models with J, R, T, V or X in 7th position of the model number
	SP535436	Holder Cover	AF, IY, NY, SY and UY models with G in 7th position of the model number
	SP535430	Holder Cover	FX, HX, MWF, PY, QW and SW models with V, T or X in 7th position of the model number
	SP535412	Holder Cover	FX and PY models with G in 7th position of the model number
<b>6</b>	SP310985000006	Nut	M6
<b>7</b>	SP311902100006	Washer	M6
<b>8</b>	SP529710	Locating Segment	
<b>9</b>	582329	Distinguishing Ring	FX, HX, JY, MWF, PY, QW and SW models; HY, SY and UY models with A, D, F or I in 7th position of the model number; Blue
	SP535437	Distinguishing Ring	AF, AF Non-Brand, H, IY, LP, LY and NY models with J, R, T or X in 7th position of the model number; Red
	571733	Distinguishing Ring	AF, IY and NY models with G, H, J or K in 13th position of the model number; AF, IY, NY, SY and UY models with G in 7th position of the model number; Red
<b>10</b>	SP535429	Handle Lower Part	

## Door - AF, IY, JY and NY Models

AF, IY, NY and J with V in 7th position of the model number Through 28 February 2021

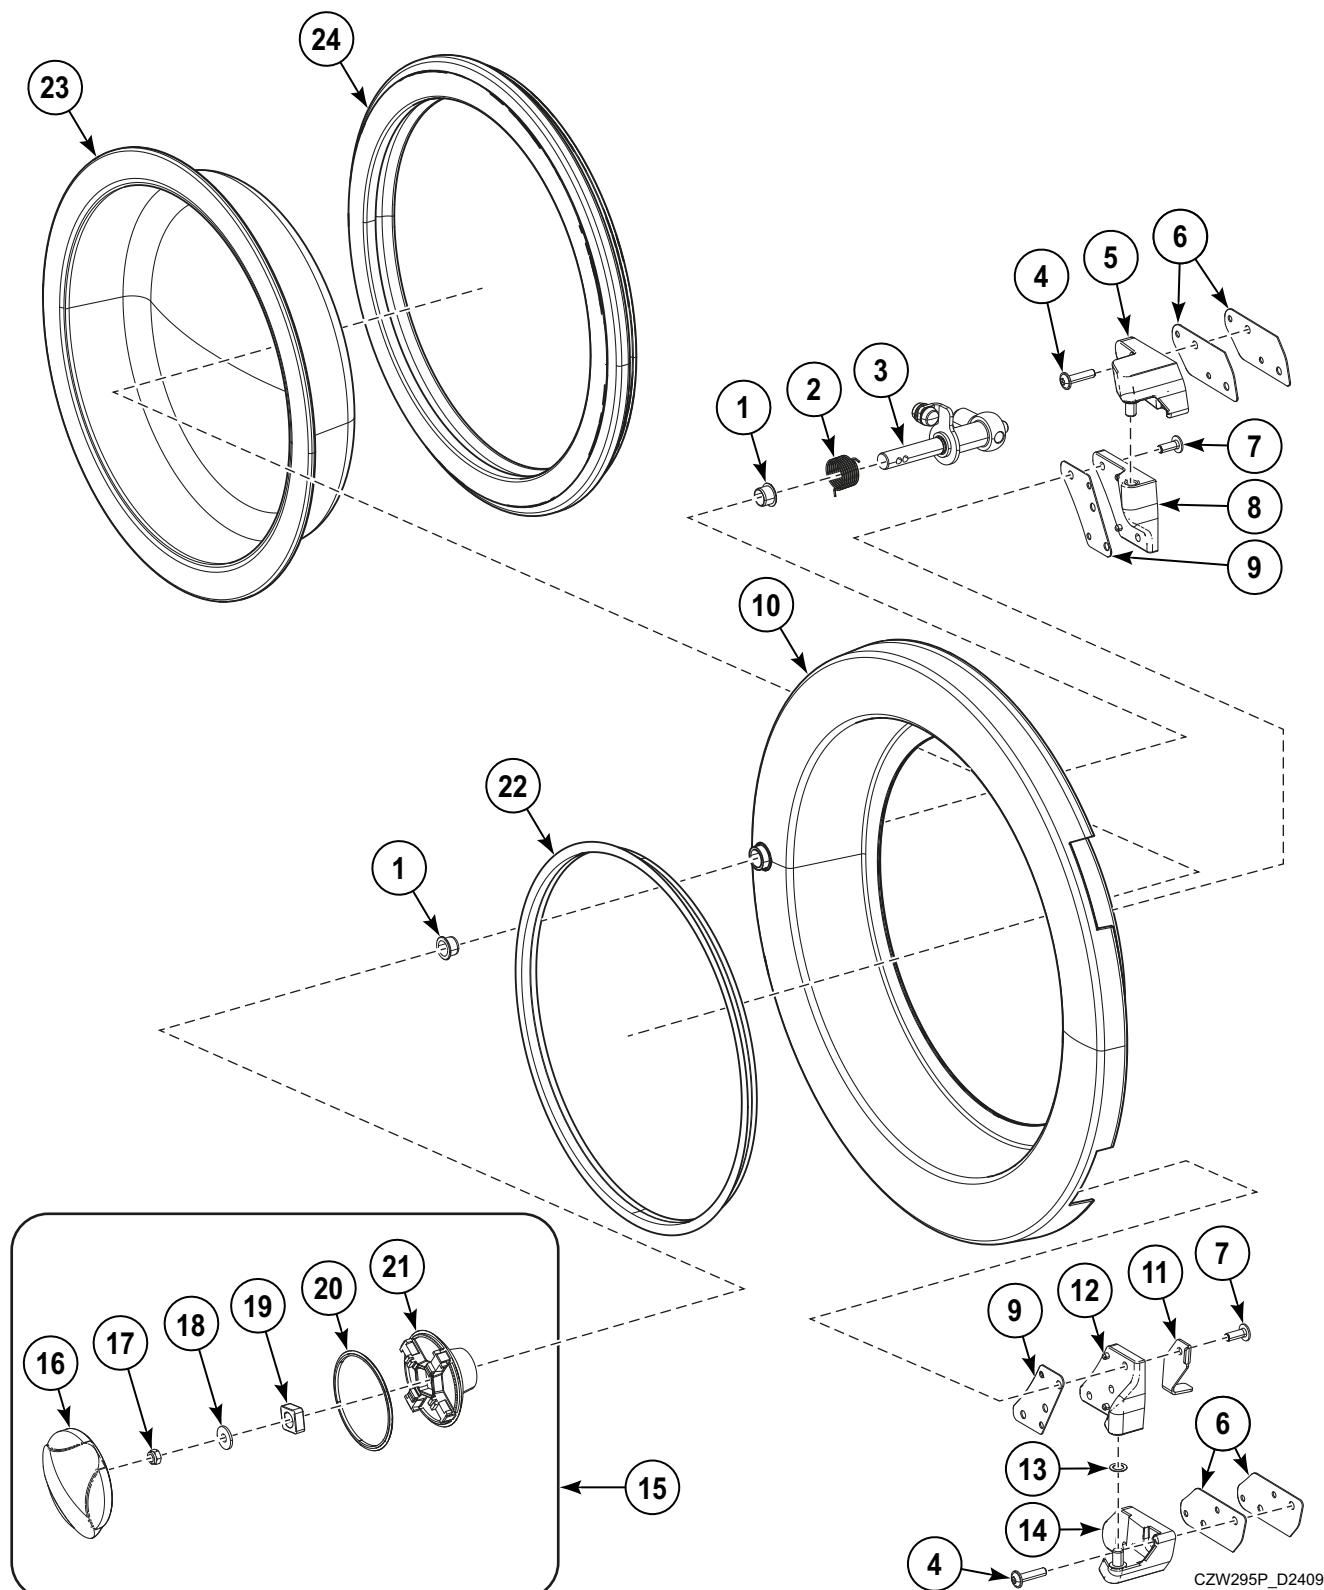


## Door - AF, IY, JY and NY Models

REF	PART NO.	DESCRIPTION	COMMENTS
	571767	Door Assembly	IY models; Black; Includes items 1-24; Through Serial No. 105FX013780SF
	570553	Kit of Hinges	Includes 568979, 568982, 575960, 57963 and 571642
1	SP529739	Casing	
2	SP535402	Handle Torsion Spring	
3	571762	Door Level	
4	SP535479	Bolt	M6x25
5	568979	Fixed Upper Hinge	
6	N/A	Shim	
7	SP537864	Bolt	M6x16
8	575960	Upper Hinge	with Case
9	SP535421	Hinge Spacer	
10	568837	Door	Black
11	571633	Door Frame Sheet	
12	575963	Lower Hinge	with Case
13	571642	Washer	
14	568982	Fixed Hinge	Lower
15	571781	Handle	
16	SP535438	Holder Cover	
17	SP310985000006	Nut	M6
18	SP311902100006	Washer	M6
19	571773	Locating Segment	
20	571733	Distinguishing Ring	
21	571779	Handle Lower Part	
22	SP562546	Rim	IY models
23	SP556227	Door Glass	IY models; With logo
24	568991	Service Door Kit	

N/A = Part no longer available

## Door - FX and PY Models

FX and PY Models with V in 7th position of the model number Through 28 February 2021

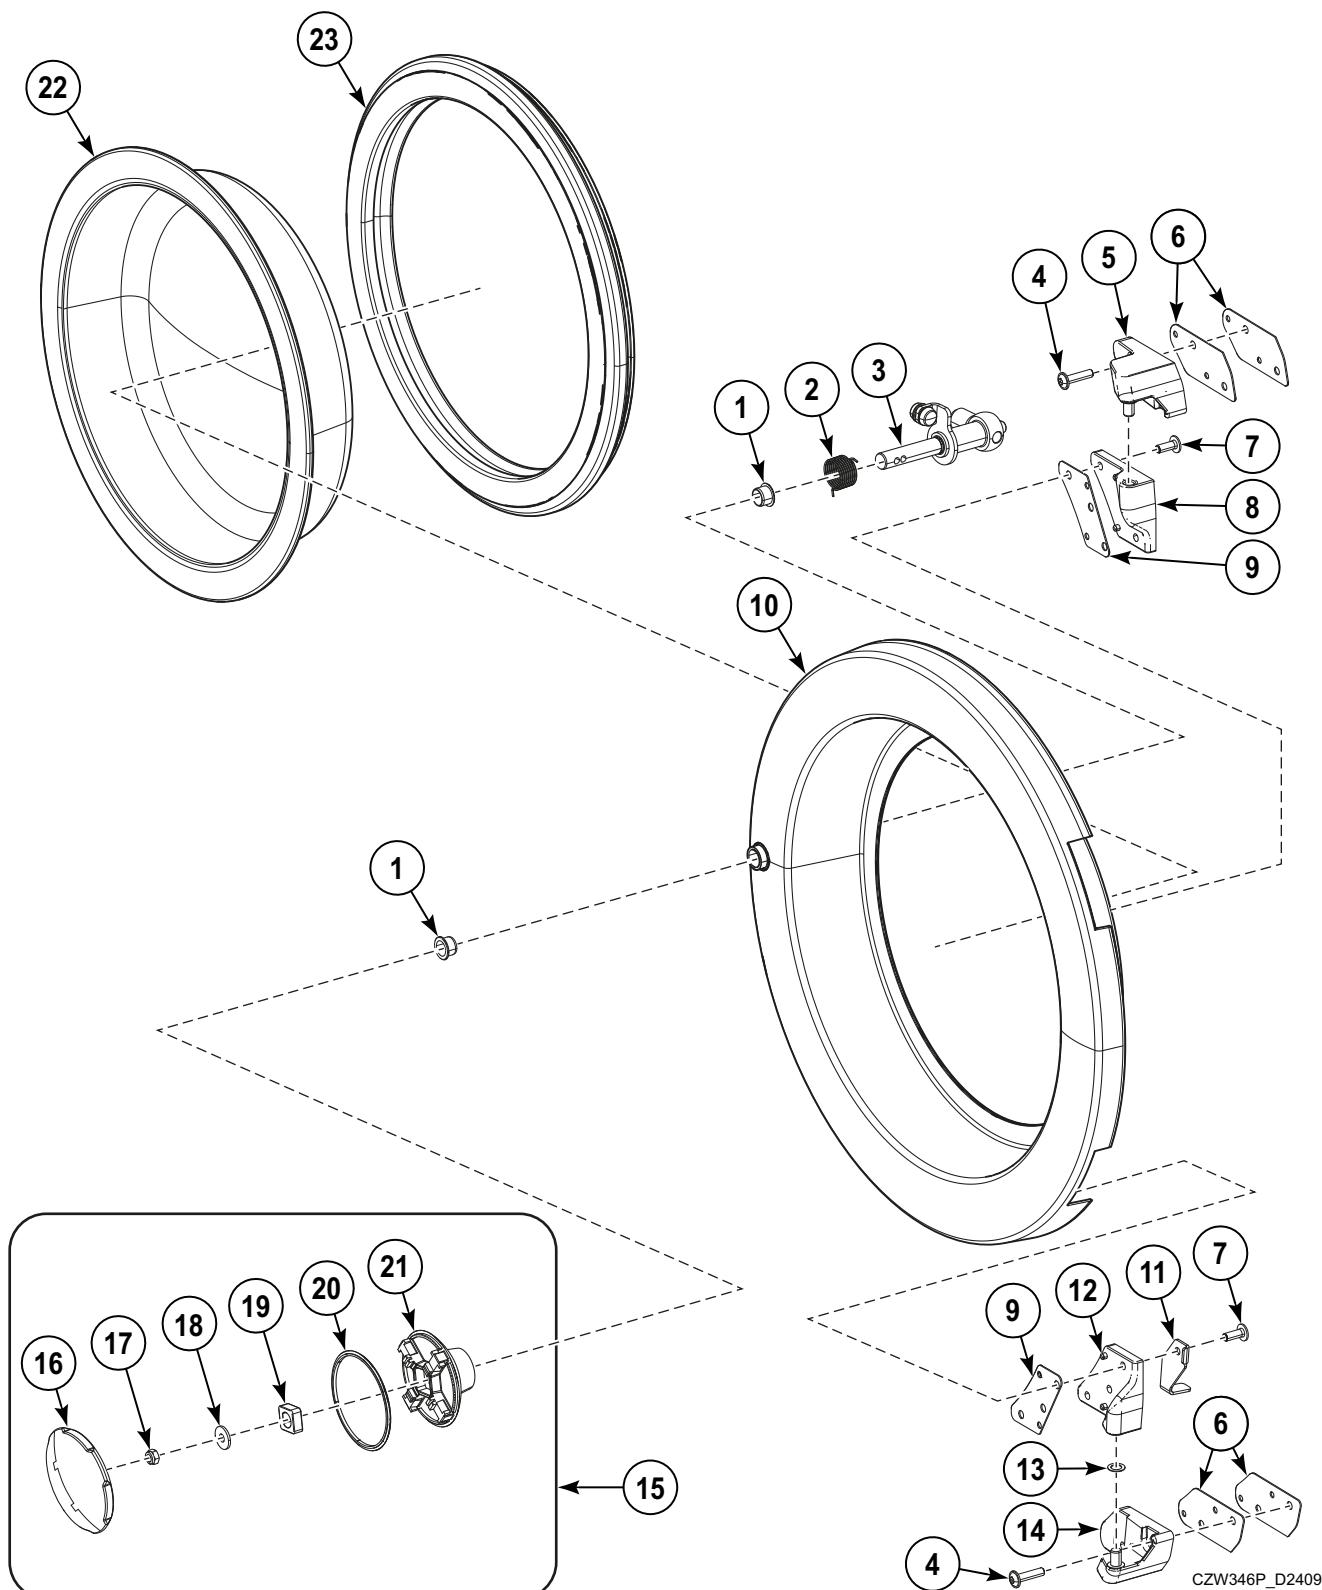


## Door - FX and PY Models

REF	PART NO.	DESCRIPTION	COMMENTS
	571764	Door Assembly	Gray; Includes items 1-23; Through Serial No. 105FX013780SF
1	SP529739	Casing	
2	SP535402	Handle Torsion Spring	
3	571762	Door Level	
4	SP535479	Bolt	M6x25
5	568979	Fixed Upper Hinge	
6	N/A	Shim	
7	SP537864	Bolt	M6x16
8	575960	Upper Hinge	with Case
9	SP535421	Hinge Spacer	
10	SP553526	Door	
11	571633	Door Frame Sheet	
12	575963	Lower Hinge	with Case
13	571642	Washer	
14	568982	Fixed Hinge	Lower
15	571780	Handle	
16	SP535430	Holder Cover	
17	SP310985000006	Nut	M6
18	SP311902100006	Washer	M6
19	571773	Locating Segment	
20	582329	Distinguishing Ring	
21	571779	Handle Lower Part	
22	SP535417	Door Glass	
23	568991	Service Door Kit	

N/A = Part no longer available

## Door Lock (Drawing 1 of 2)

Models with V in 7th position of the model number Through Serial No. 105FX013780SF

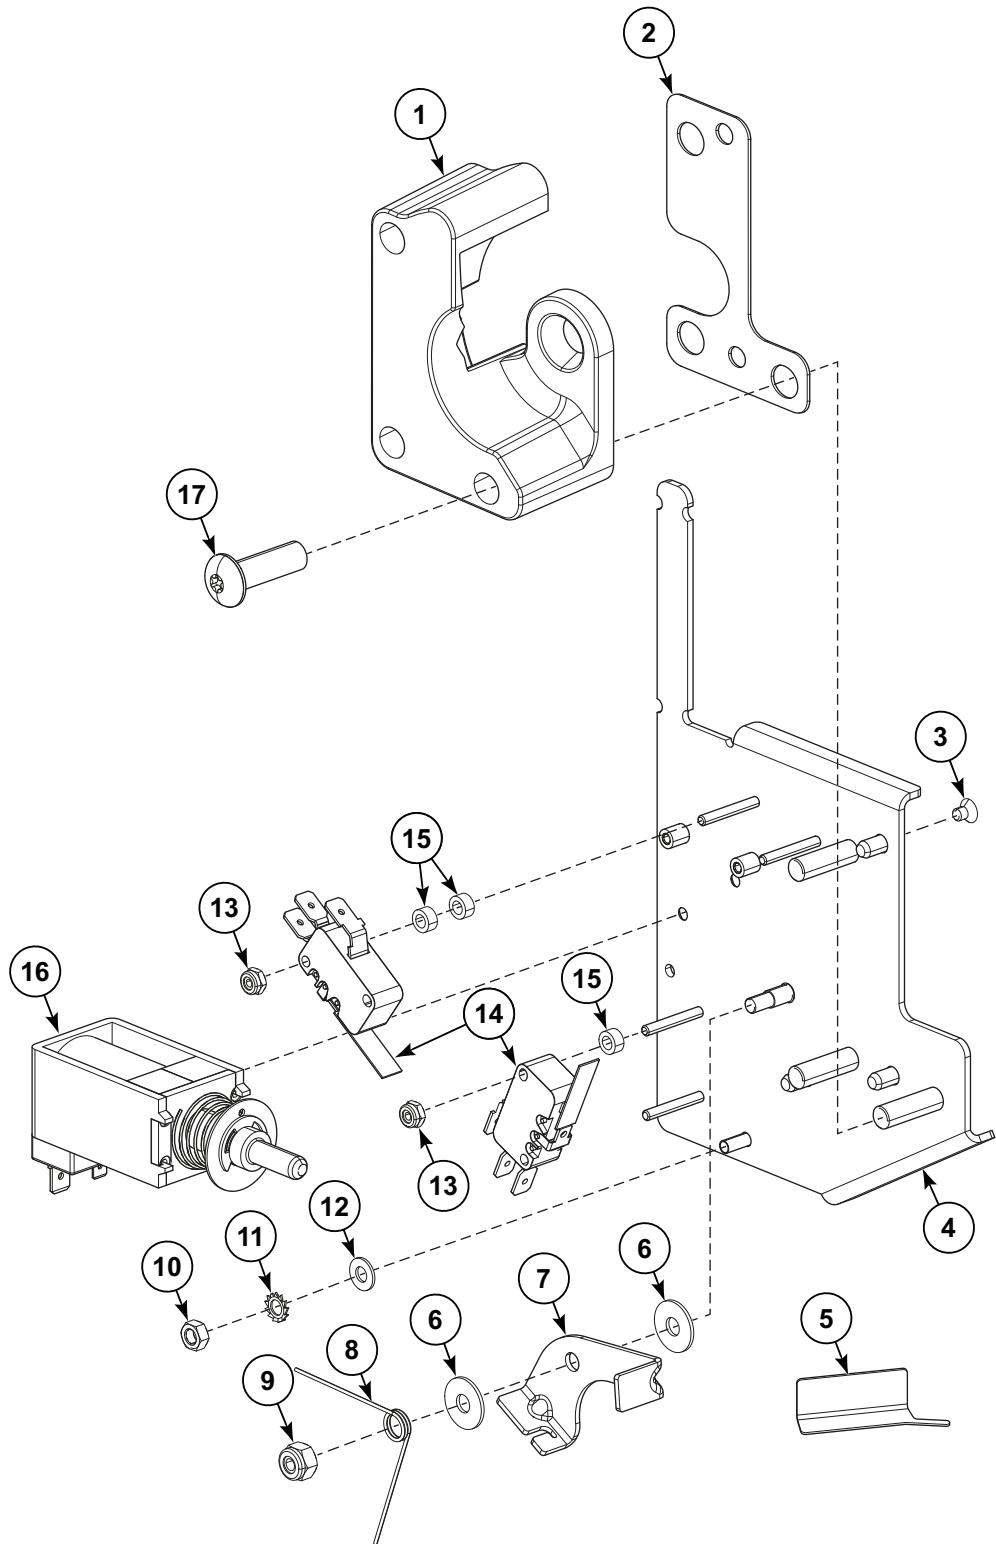


CZW588P\_D1714

## Door Lock (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	576085	Door Lock Assembly	Includes item 1-16, 569751 Door Lock Cable, SP345000160996 Binding Strip, 571466 Door Lock Switch Cable
1	576084	Door Lock Catch	
2	582327	Washer	
3	F430977	Screw	
4	568971	Door Lock Plate	
5	571615	Emergency Opener	For door lock
6	F8193101	Washer	
7	568941	Closing Plate	
8	571612	Torsion/Door Lock Spring	
9	F430232	Nut	
10	SP310934240004	Nut	M4
11	SP311679824004	Washer	4
12	SP311125240004	Washer	4
13	F430225	Nut	
14	568978	Microswitch	
15	F431901	Spacer	
16	568942	Coil	
17	F8270701	Bolt	Stainless
	568968	Bolt	Black

## Door Lock (Drawing 2 of 2)

Models with V in 7th position of the model number Starting Serial NO. 105FX013781SF

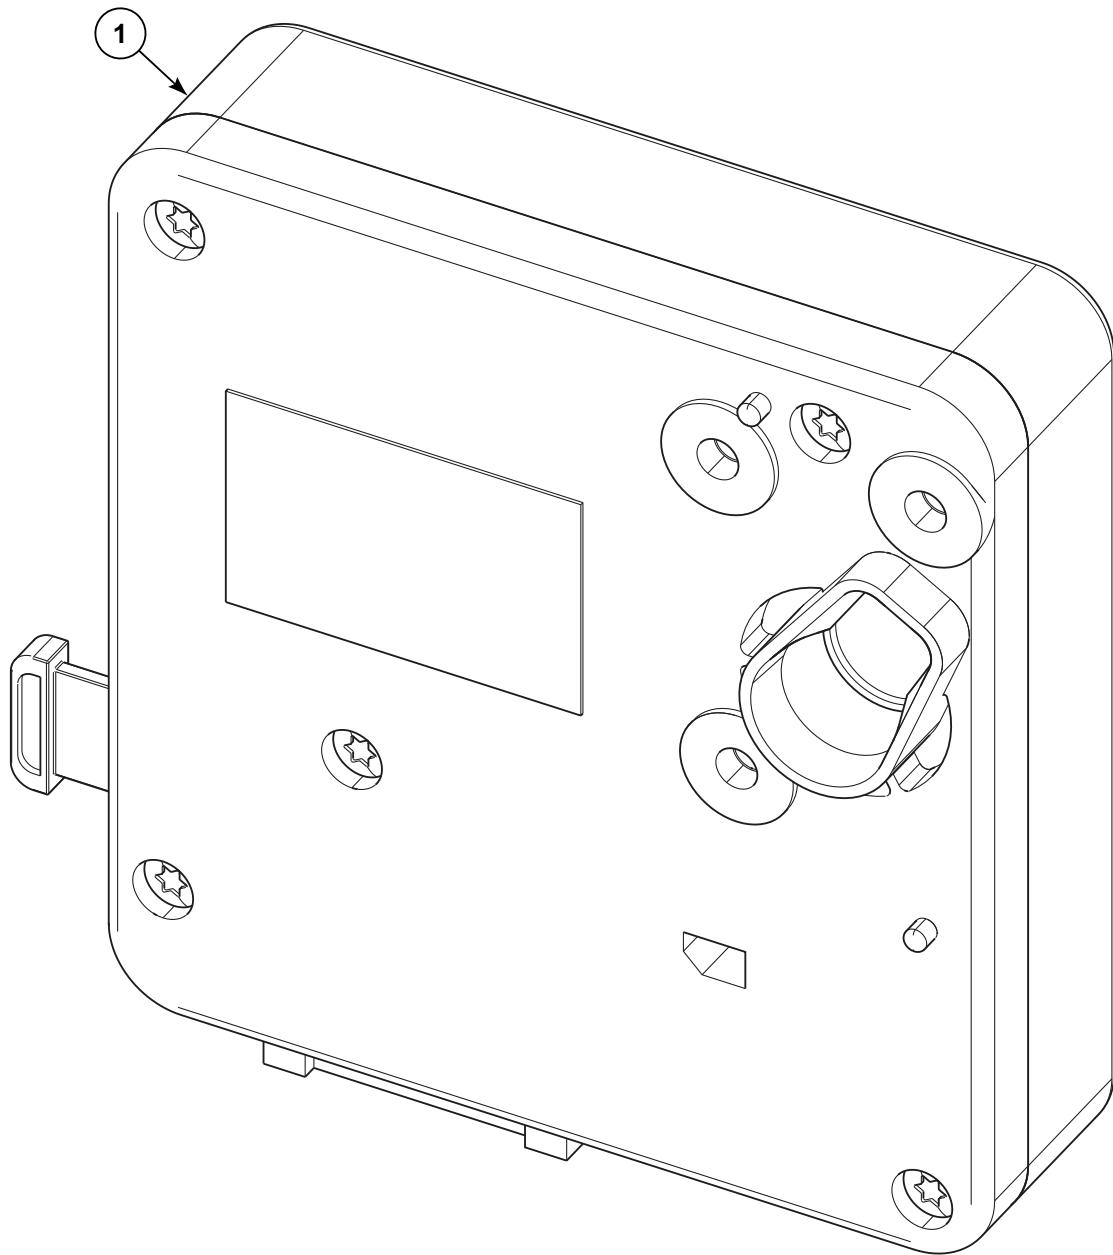


CZW360P\_D2409

## Door Lock (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP537760	Lock	

# Water Inlet System

Models with A, D, F, I, J, R, T or X in 7th position of the model number

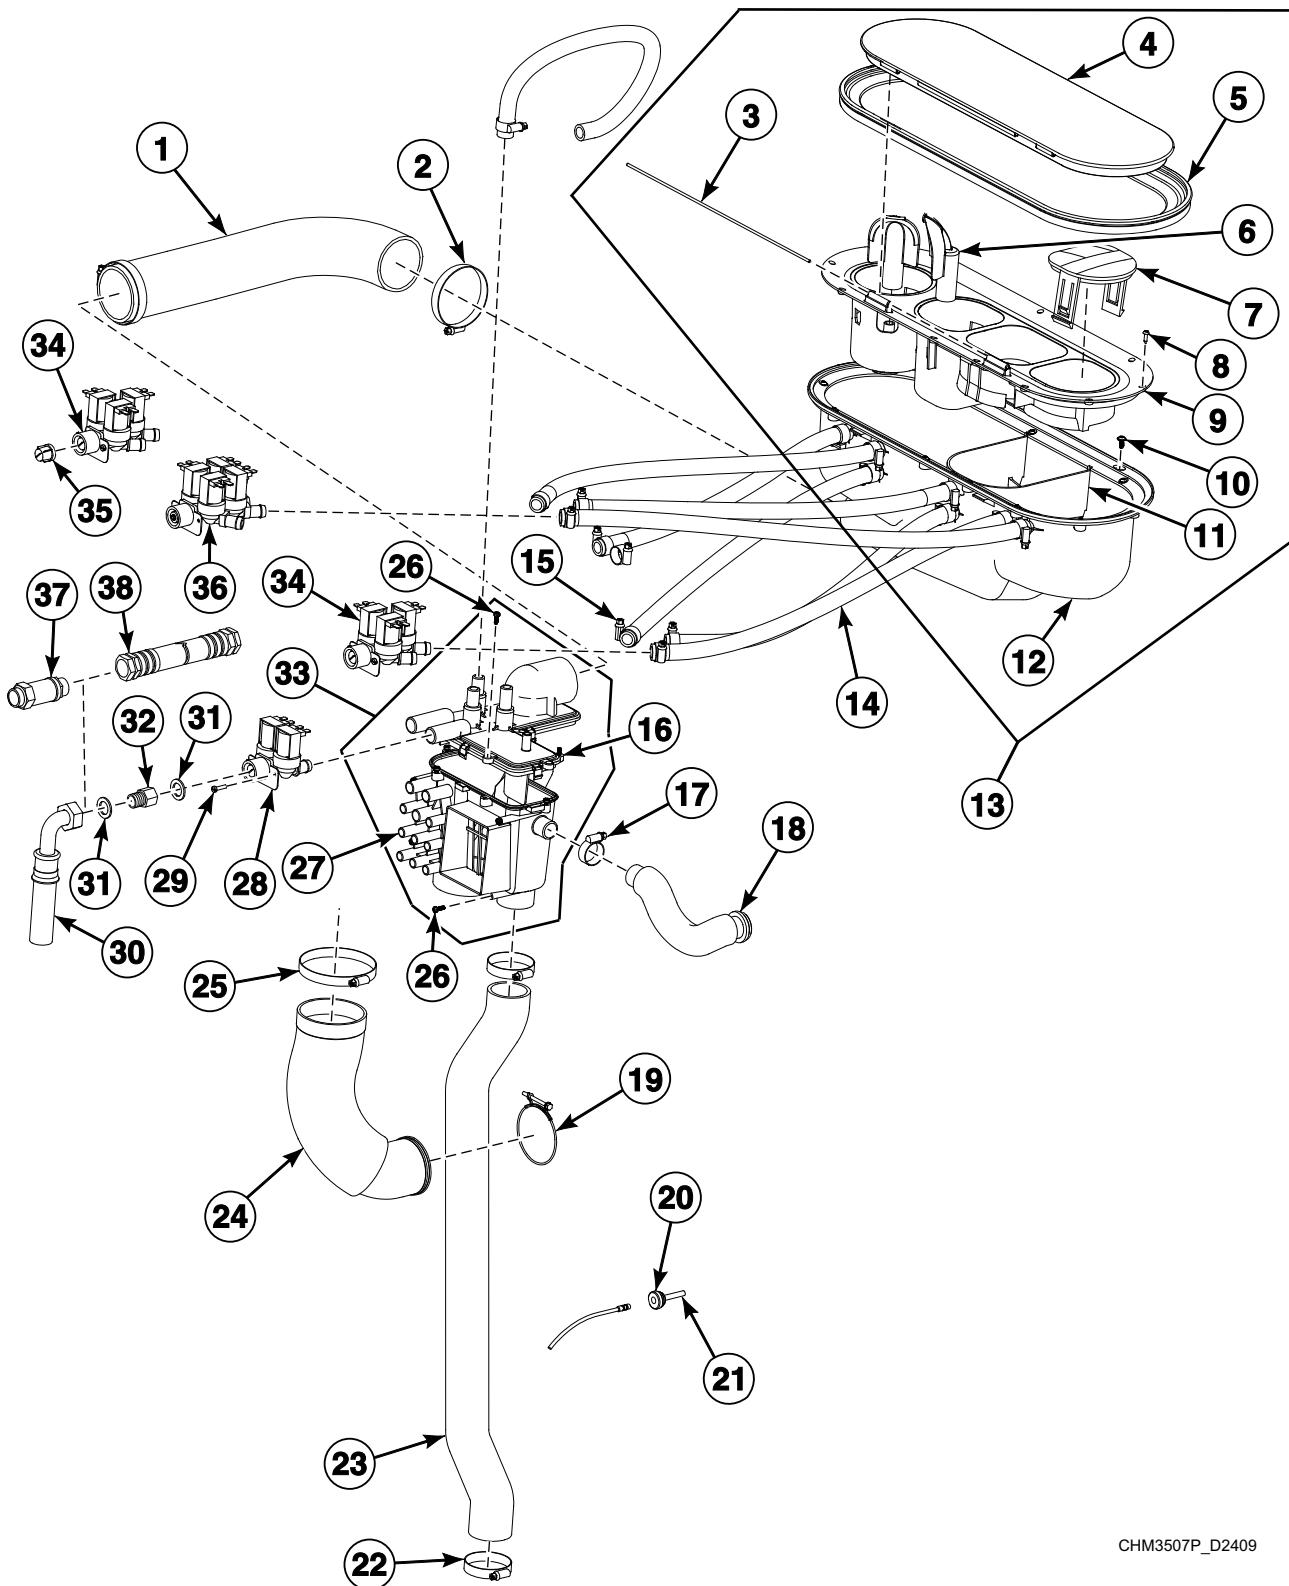


CHM3507P\_D2409

# Water Inlet System

REF	PART NO.	DESCRIPTION	COMMENTS
	F8301201	Double Check Valve	J models; Used with SPPRI462001217 Pipe Nipple 3/4 inch; CE
1	SP526487	Dispenser Pipe	
2	SPPRI240000021	Hose Clamp	60-80
3	SP540117	Pin	
4	SP551695	Dispenser Lid	HY, SY and UY models
	SP526461	Dispenser Lid	AF, FX, HX, IY, JY, LY, NY, PY and QW models
5	SP540158	Dispenser Seal	
6	SP540113	Flap	
7	SP526468	Soap Hopper Plug	
8	SP309798124313	Screw	ST3.5x13
9	SP540112	Soap Hopper Upper Cover	
10	SP529206	Screw	4x11
11	SP540122	Internal Vessel	
12	SP540115	Main Vessel	Requires SPPRI704000053 Silicon Sealant
13	SP554213	Soap Hopper	HY, SY and UY models
	SP540111	Soap Hopper	AF, FX, HX, IY, JY, LY, NY, PY and QW models
14	SPPRI540000014	Hose	13/19
	SP101745	Hose Pipe	water approval
15	SPPRI240000002	Hose Clamp	12-22
16	SP526557	Mixer Lid	
	582509	Mixer Lid	water approval
17	SPPRI240000003	Hose Clamp	20-32
18	SP526509	Vent Hose	
19	SP526491	Hose Clamp	62-70
20	SP526439	Temperature Sensor Seal	
21	503839	Temperature Sensor	
22	SPPRI240000017	Hose Clamp	40-60
23	SP526480	Overflow Tube	
24	SP526484	Filling Elbow Pipe	
25	SPPRI240000007	Hose Clamp	70-90
26	SP526497	Screw	4x12
27	SP526565	Mixer Body	
	582506	Mixer Body	water approval
28	SP547958	2-Way Valve	3/4 inch
29	SP309084000416	Bolt	4x16
30	SPPRI505000054	Filling Hose Pipe	Used with cold water
	SP547980	Filling Hose Pipe	Used with hot water
	SP101621	Filling Hose Pipe	water approval
	RSPF200166	Filling Hose Pipe	WaterMark water approval
	F200164	Water Hose	North America models
31	SPPRI520001009	Seal	
32	567174	Reduction	3/4 inch; BSP/GHT; North America models
33	SP526558	Mixer	
	582508	Mixer	water approval
34	SP547959	3-Way Valve	3/4 inch
35	SPPRI340004030	Filter	
36	SP548933	4-Way Valve	3/4 inch
37	RSPF200166	Filling Hose Pipe	IYY, LYY, NYY, PYY, SYY and UYY models; WaterMark water approval
38	B12543901	Check Valve	IYY, LYY, NYY, PYY, SYY and UYY models; WaterMark water approval

## Two Water Inlet System

Models with G or V in 7th position of the model number

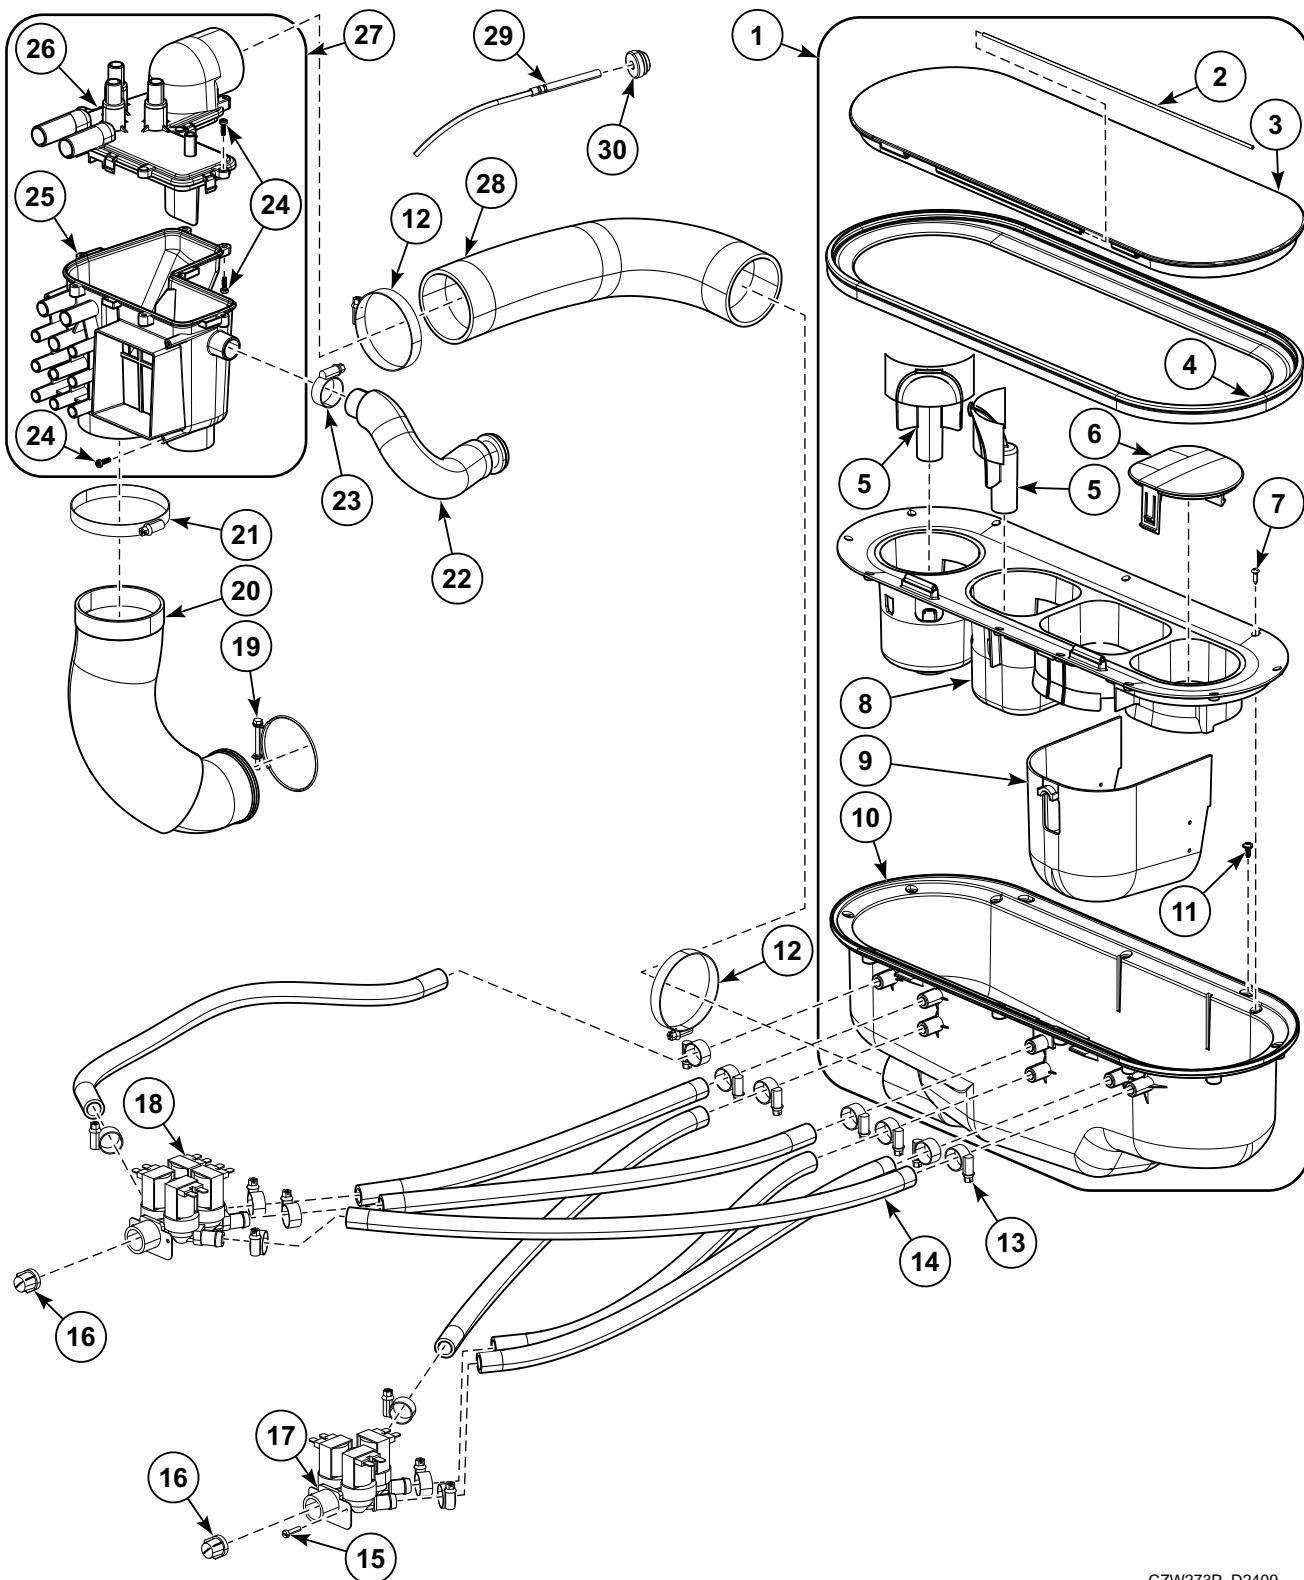


CZW273P\_D2409

## Two Water Inlet System

REF	PART NO.	DESCRIPTION	COMMENTS
	SPPRI505000054	Filling Hose Pipe	Used with cold water; used with SPPRI520001009 Seal
	SP547980	Filling Hose Pipe	Used with hot water; used with SPPRI520001009 Seal
	SP101621	Filling Hose Pipe	Used with water approval; used with SPPRI520001009 Seal
1	SP540111	Soap Hopper	
2	SP540117	Pin	
3	SP526461	Dispenser Lid	Models outside of North America
4	SP540158	Dispenser Seal	
5	SP540113	Flap	
6	SP526468	Soap Hopper Plug	
7	SP309798124313	Screw	ST3.5x13
8	SP540112	Soap Hopper Upper Cover	
9	SP540122	Internal Vessel	
10	SP540115	Main Vessel	
11	SP529206	Screw	
12	SPPRI240000021	Hose Clamp	60-80
13	SPPRI240000002	Hose Clamp	12-22
14	SPPRI540000014	Hose	13-19
	SP101745	Hose Pipe	water approval
15	SP309084000416	Bolt	M4x16
16	SPPRI340004030	Filter	
17	SP547959	3-Way Valve	3/4 inch
18	SP548933	4-Way Valve	3/4 inch
19	SP526491	Hose Clamp	62-70
20	SP526484	Filling Elbow Pipe	
21	SPPRI240000007	Hose Clamp	70-90
22	SP526509	Vent Hose	
23	SPPRI240000003	Hose Clamp	
24	SP526497	Screw	4x12
25	SP526565	Mixer Body	
	582506	Mixer Body	water approval
26	SP526557	Mixer Lid	
	582509	Mixer Lid	water approval
27	SP526558	Mixer	
	582508	Mixer	water approval
28	SP526487	Dispenser Pipe	
29	503839	Temperature Sensor	
30	SP526439	Temperature Sensor Seal	

# Three Water Inlet System

Models with G or V in 7th position of the model number

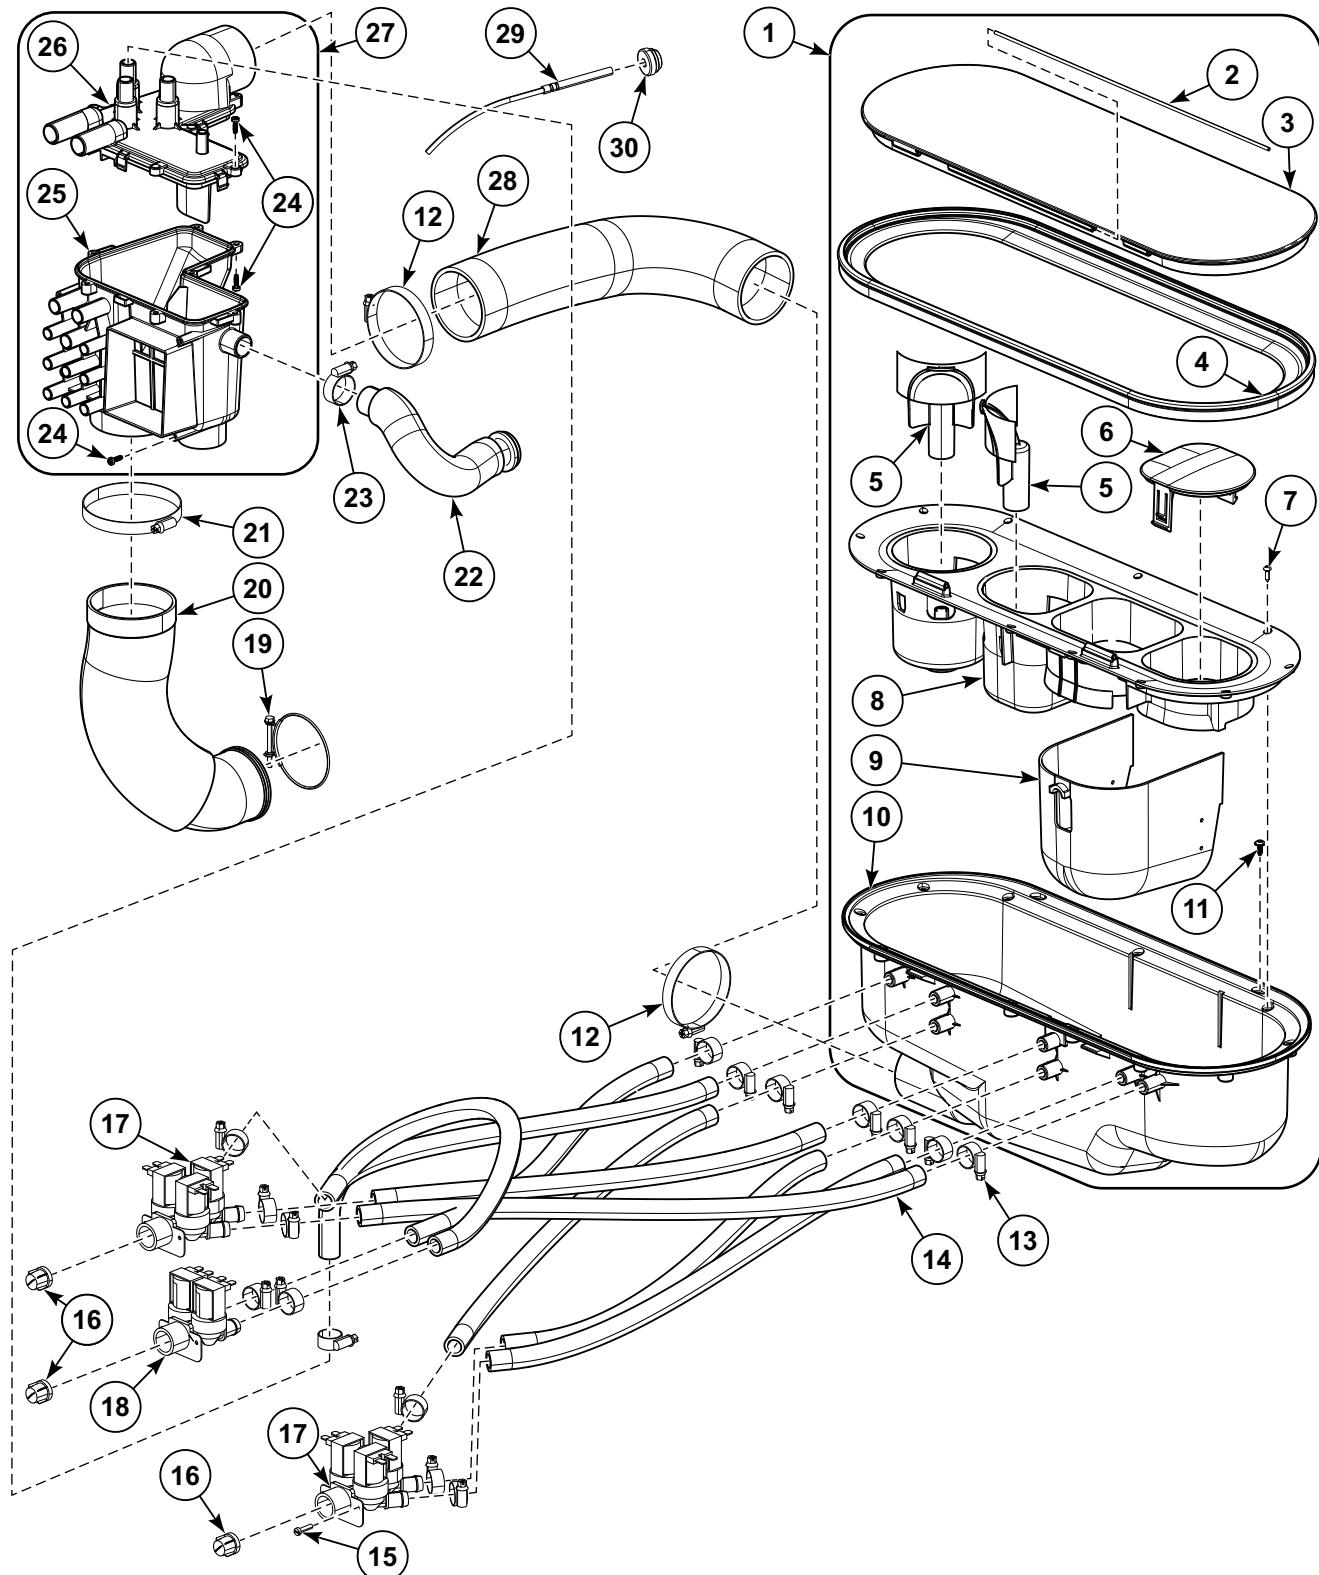


CZW274P\_D2409

## Three Water Inlet System

REF	PART NO.	DESCRIPTION	COMMENTS
	SPPRI505000054	Filling Hose Pipe	Used with cold water; used with SPPRI520001009 Seal
	SP547980	Filling Hose Pipe	Used with hot water; used with SPPRI520001009 Seal
	SP101621	Filling Hose Pipe	Used with water approval; used with SPPRI520001009 Seal
1	SP540111	Soap Hopper	
2	SP540117	Pin	
3	SP526461	Dispenser Lid	
4	SP540158	Dispenser Seal	
5	SP540113	Flap	
6	SP526468	Soap Hopper Plug	
7	SP309798124313	Screw	ST3.5x13
8	SP540112	Soap Hopper Upper Cover	
9	SP540122	Internal Vessel	
10	SP540115	Main Vessel	
11	SP529206	Screw	
12	SPPRI240000021	Hose Clamp	60-80
13	SPPRI240000002	Hose Clamp	12-22
14	SPPRI540000014	Hose	13-19
	SP101745	Hose Pipe	Used with water approval
15	SP309084000416	Bolt	M4x16
16	SPPRI340004030	Filter	
17	SP547959	3-Way Valve	3/4 inch
18	SP547958	2-Way Valve	3/4 inch
19	SP526491	Hose Clamp	62-70
20	SP526484	Filling Elbow Pipe	
21	SPPRI240000007	Hose Clamp	70-90
22	SP526509	Vent Hose	
23	SPPRI240000003	Hose Clamp	
24	SP526497	Screw	4x12
25	SP526565	Mixer Body	
	582506	Mixer Body	water approval
26	SP526557	Mixer Lid	
	582509	Mixer Lid	water approval
27	SP526558	Mixer	
	582508	Mixer	water approval
28	SP526487	Dispenser Pipe	
29	503839	Temperature Sensor	
30	SP526439	Temperature Sensor Seal	

## Two Water Inlet System Without Soap Hopper

Models with A, D, F, I, J, R, T or X in 7th position of the model number except models with G, H, J or K in 13th position of the model number

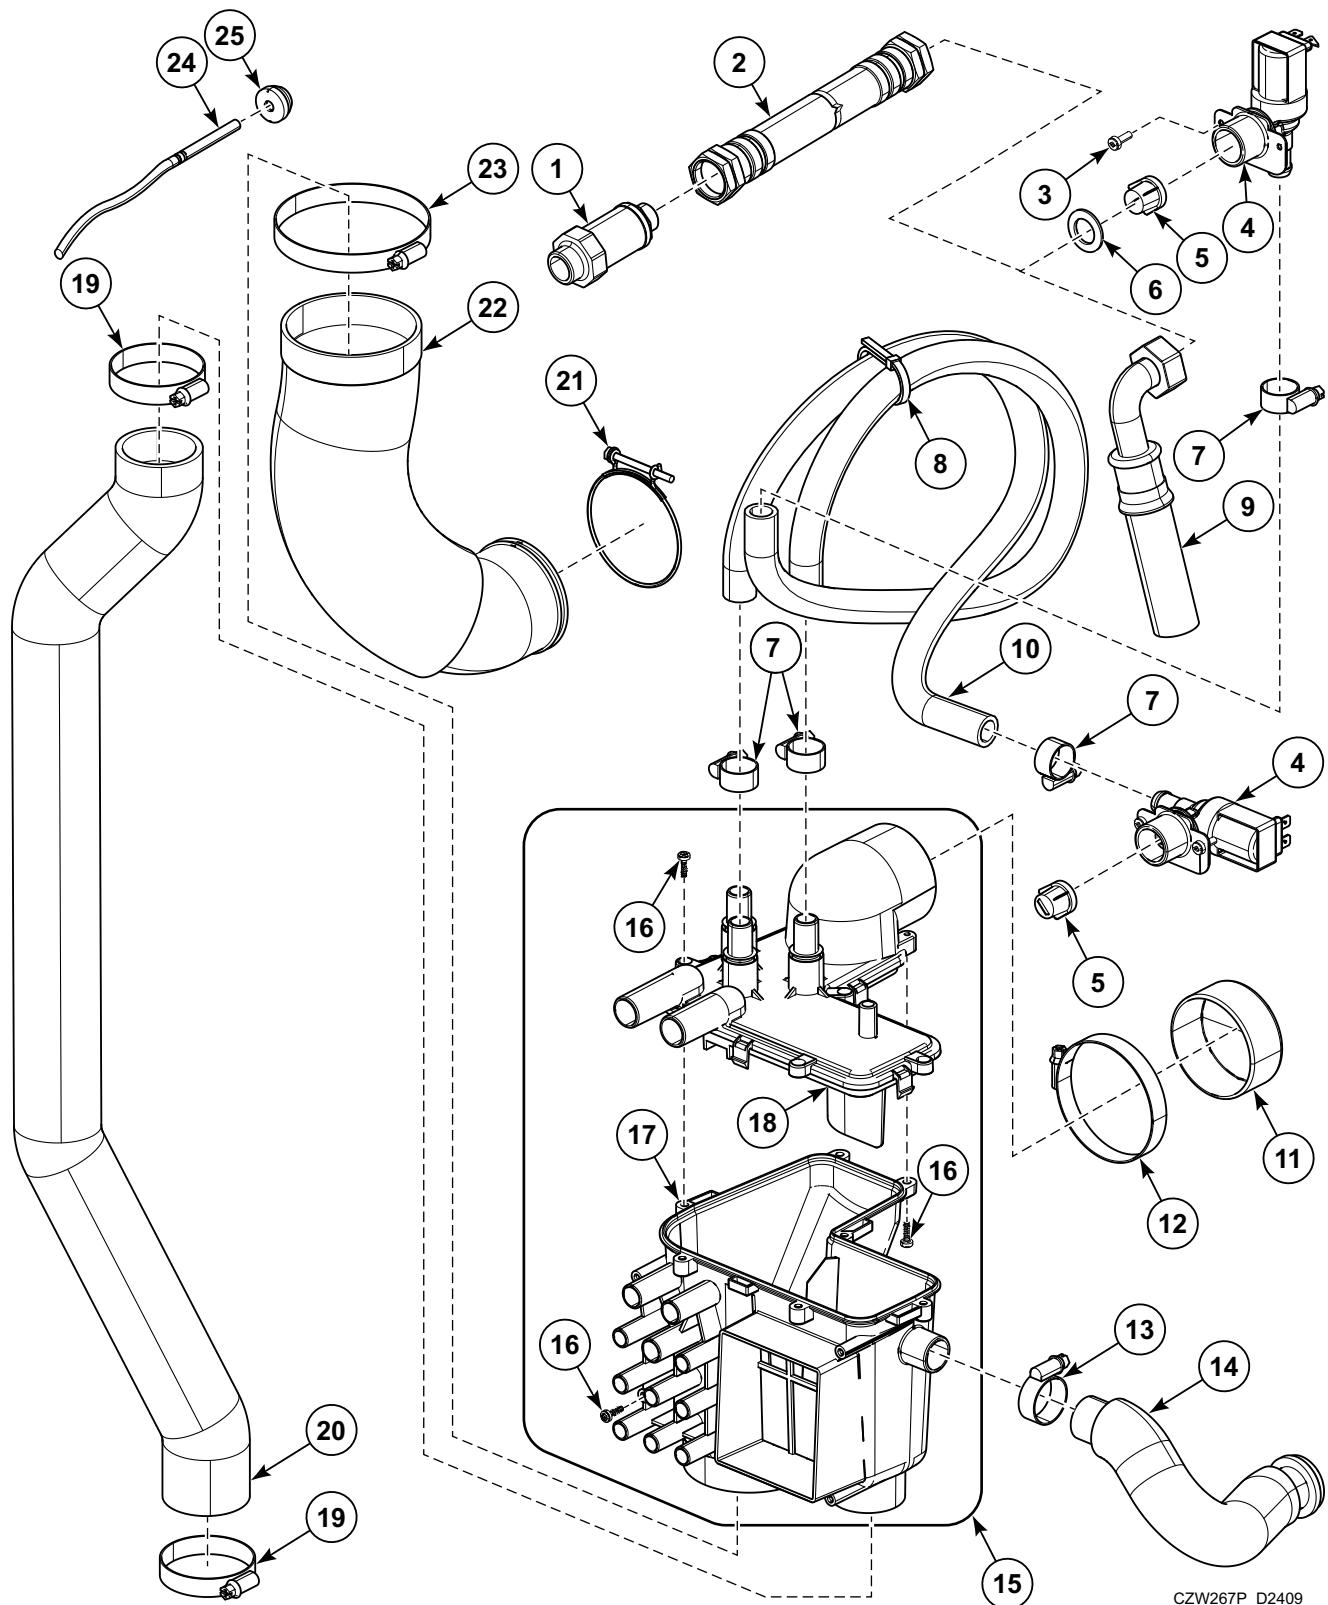


CZW267P\_D2409

## Two Water Inlet System Without Soap Hopper

REF	PART NO.	DESCRIPTION	COMMENTS
1	RSPB12543901	Double Reverse Valve	IYY, LYY, NY, PY and SY models
2	RSPF200166	Filling Hose Pipe	IYY, LYY, NY, PY and SY models
3	SP555504	Bolt	M4x12
4	570195	1-Way Valve	3/4 inch
5	SPPRI340004030	Filter	
6	SPPRI520001009	Seal	
7	SPPRI240000002	Hose Clamp	
8	SP503817	Binding Strip	
9	SPPRI505000054	Filling Hose Pipe	Used with cold water
	SP547980	Filling Hose Pipe	Used with hot water
	SP101621	Filling Hose Pipe	Valid for water approval
10	SPPRI540000014	Hose	
11	567053	Plug	
12	SPPRI240000021	Hose Clamp	60-80
13	SPPRI240000003	Hose Clamp	20-32
14	SP526509	Vent Hose	
15	SP526558	Mixer	
16	SP526497	Screw	4x12
17	SP526565	Mixer Body	
18	SP526557	Mixer Lid	
19	SPPRI240000017	Hose Clamp	40-60
20	SP526480	Overflow Tube	
21	SP526491	Hose Clamp	62-70
22	SP526484	Filling Elbow Pipe	
23	SPPRI240000007	Hose Clamp	70-90
24	503839	Temperature Sensor	
25	SP526439	Temperature Sensor Seal	

## Three Water Inlet System Without Soap Hopper

Models with A, D, F, I, J, R, T or X in 7th position of the model number except models with G, H, J or K in 13th position of the model number

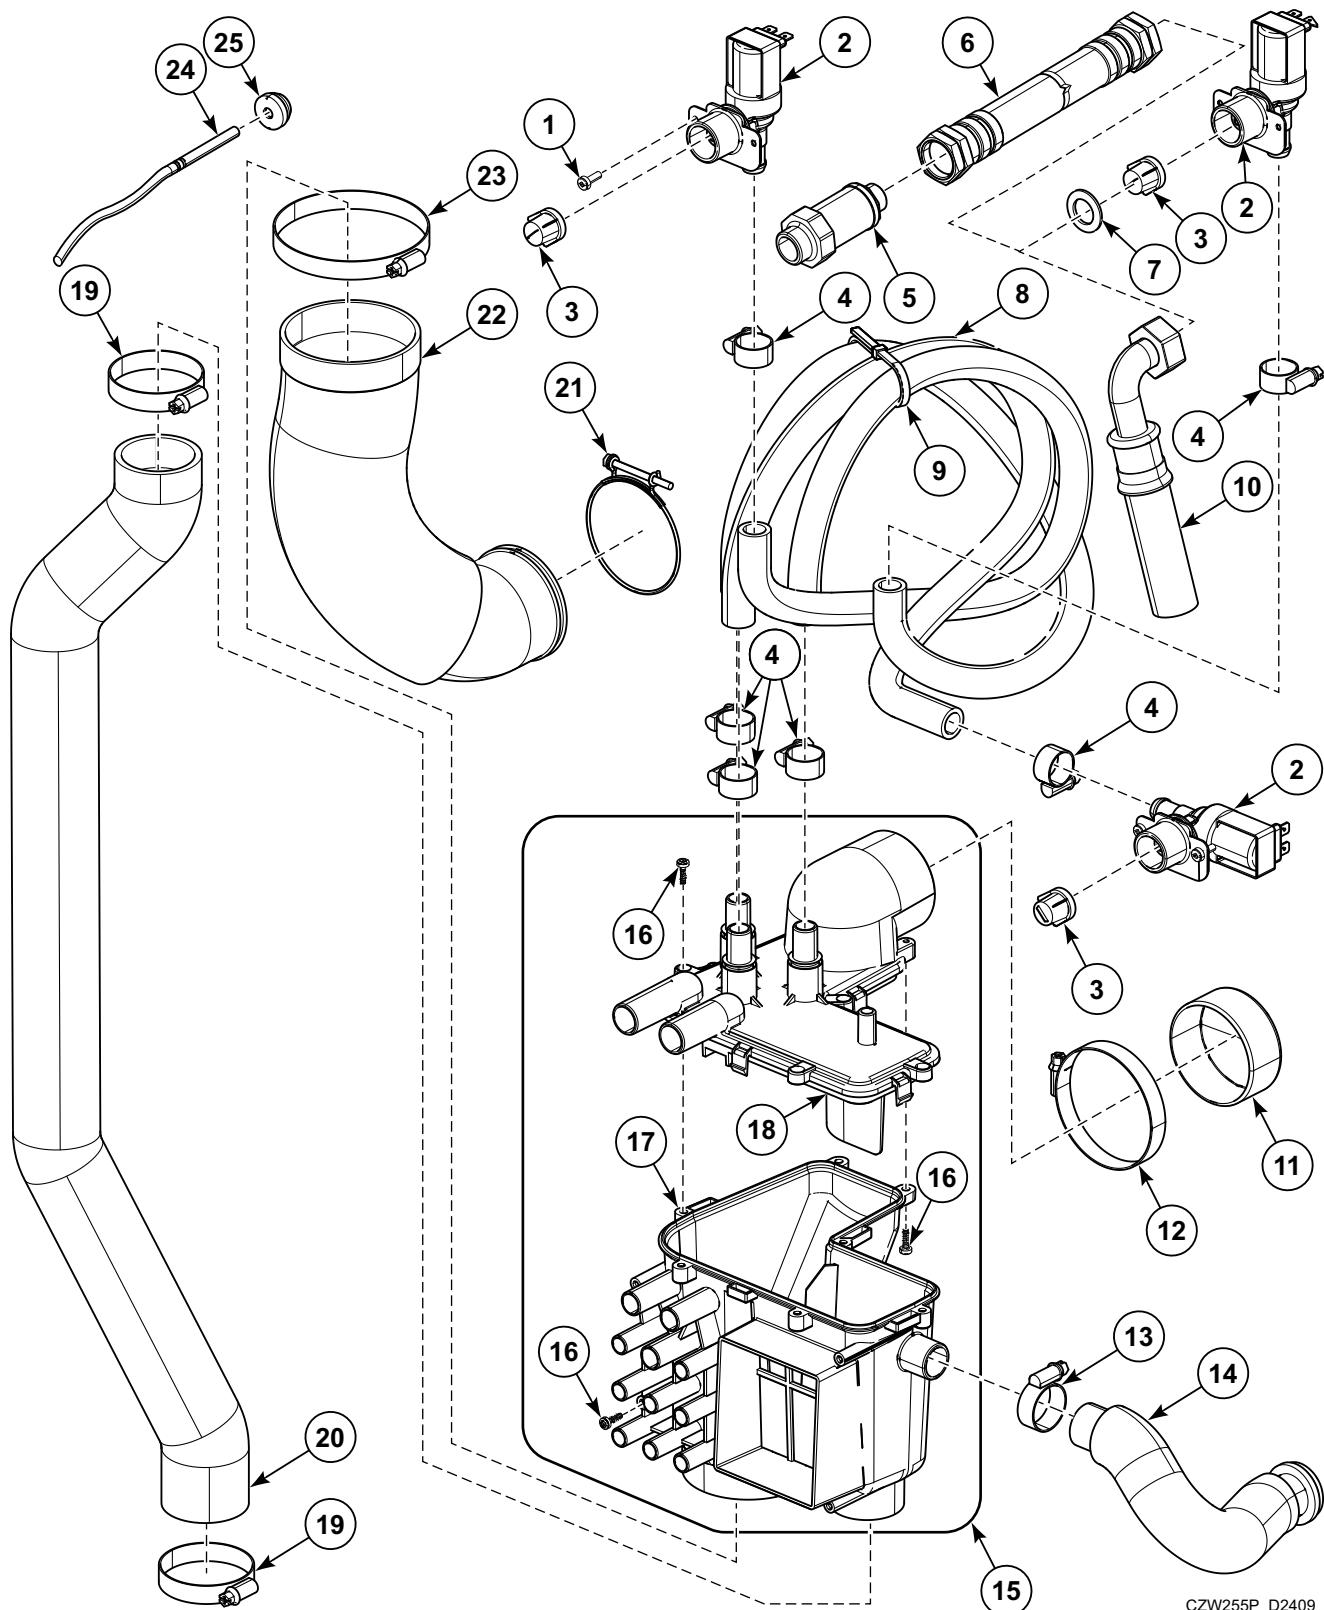


CZW255P\_D2409

## Three Water Inlet System Without Soap Hopper

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP555504	Bolt	M4x12
2	570195	1-Way Valve	3/4 inch
3	SPPRI340004030	Filter	
4	SPPRI240000002	Hose Clamp	
5	RSPB12543901	Double Reverse Valve	IYY, LYY, NYY, PYY and SYY models
6	RSPF200166	Filling Hose Pipe	IYY, LYY, NYY, PYY and SYY models
7	SPPRI520001009	Seal	
8	SPPRI540000014	Hose	
9	SP503817	Binding Strip	
10	SPPRI505000054	Filling Hose Pipe	Used with cold water
	SP547980	Filling Hose Pipe	Used with hot water
	SP101621	Filling Hose Pipe	Valid for water approval
11	567053	Plug	
12	SPPRI240000021	Hose Clamp	60-80
13	SPPRI240000003	Hose Clamp	20-32
14	SP526509	Vent Hose	
15	SP526558	Mixer	
16	SP526497	Screw	4x12
17	SP526565	Mixer Body	
18	SP526557	Mixer Lid	
19	SPPRI240000017	Hose Clamp	40-60
20	SP526480	Overflow Tube	
21	SP526491	Hose Clamp	62-70
22	SP526484	Filling Elbow Pipe	
23	SPPRI240000007	Hose Clamp	70-90
24	503839	Temperature Sensor	
25	SP526439	Temperature Sensor Seal	

## Cabinet Reinforcement Without Soap Hopper

Models with A, D, F, I, J, R, T or X in 7th position of the model number except models with G, H, J or K in 13th position of the model number

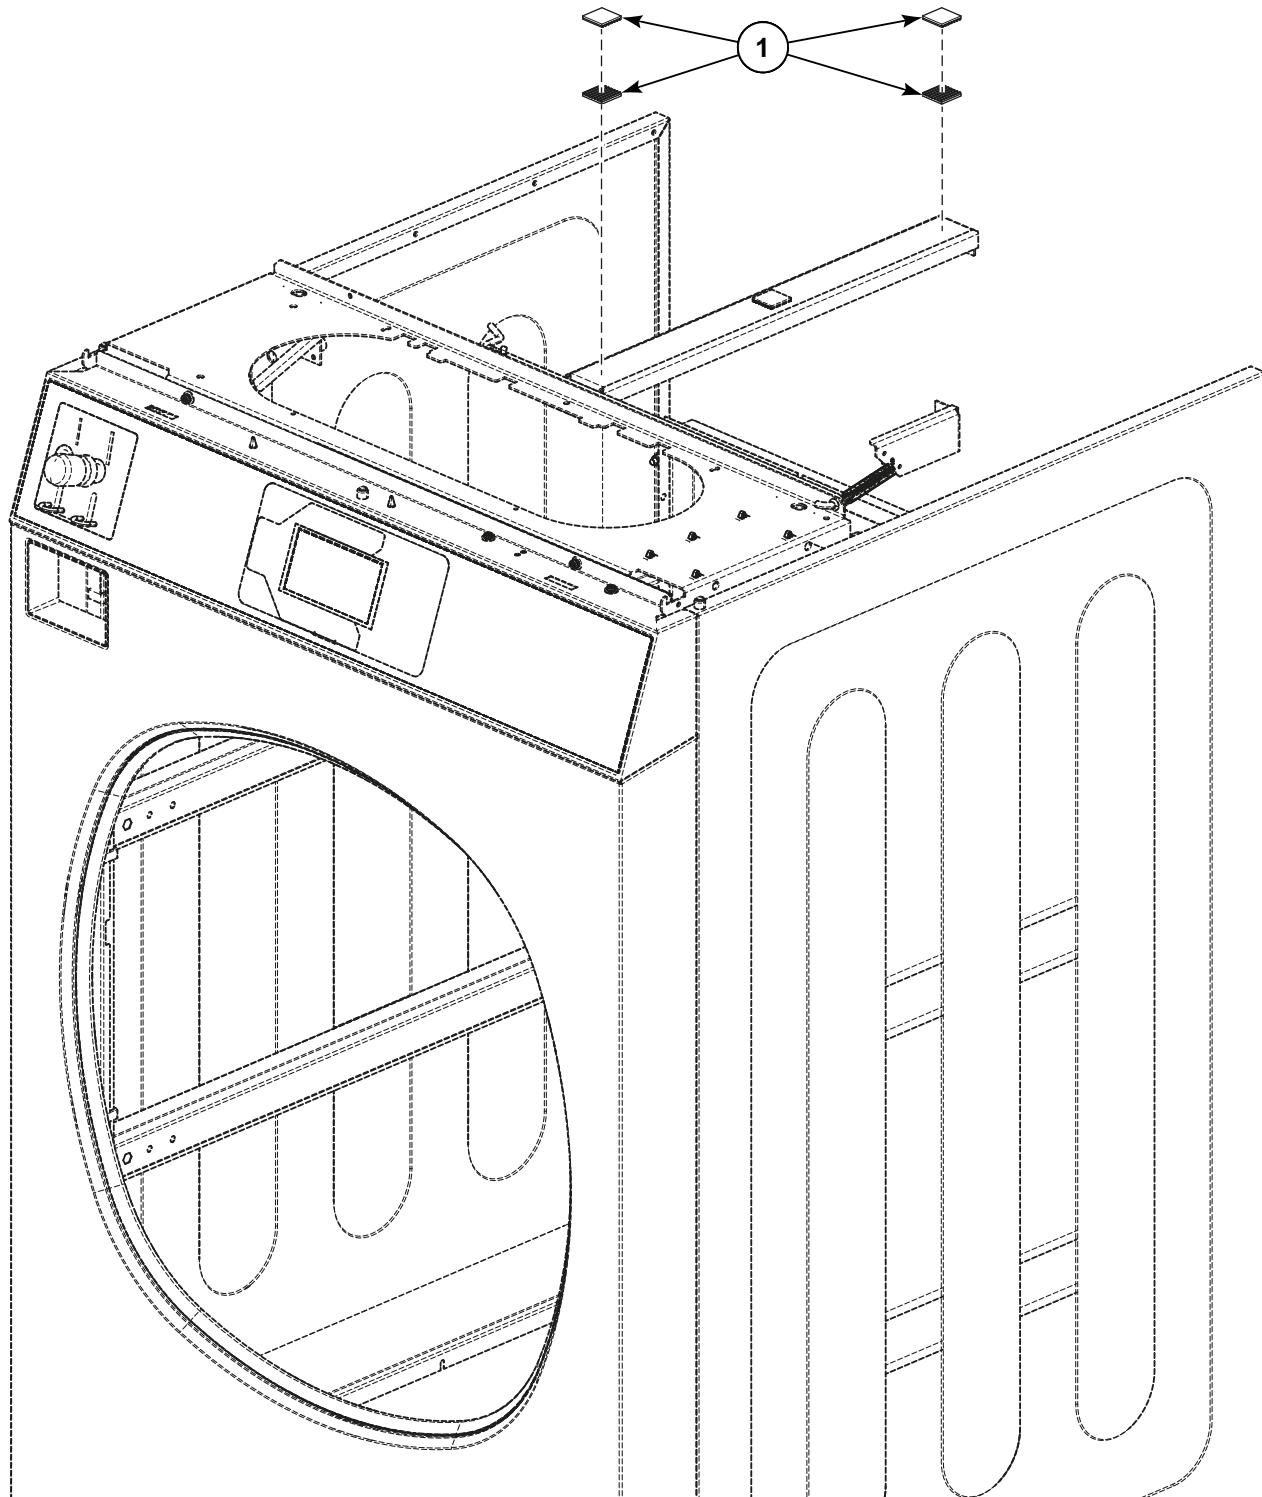


CZW348P\_D2409

## Cabinet Reinforcement Without Soap Hopper

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP550115	Fastener	

# Drain System

Models with A, D, F, I, J, R, T or X in 7th position of the model number

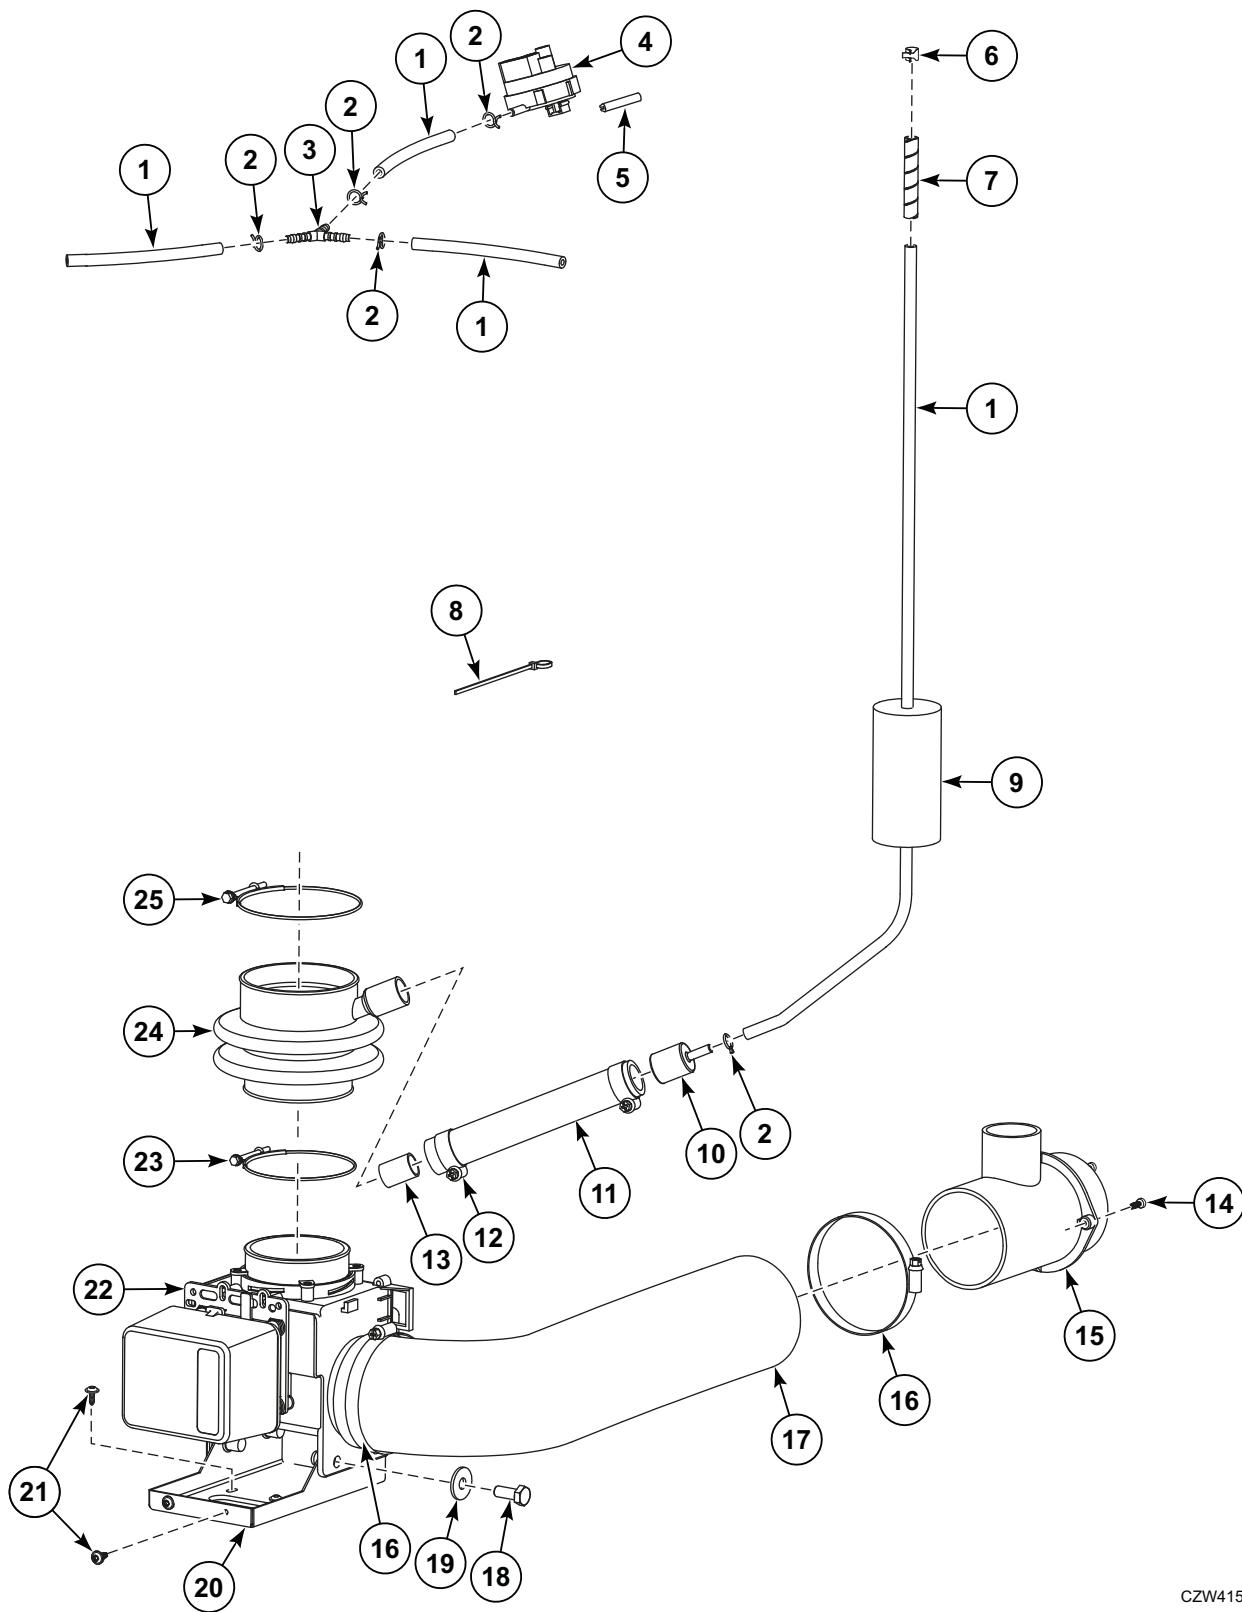


CZW415P\_D2409

# Drain System

REF	PART NO.	DESCRIPTION	COMMENTS
	567128	Reduction	J, FX105_BUPA_X_CONTROL and FX105_BUPA_X_CONTROL_PLUS models; CE from 3 inches to 2 inches
1	SPPRI540001003	Water Level Switch Hose	
2	SPPRI241000017	Hose Clamp	A5.5
3	SPPRI503000028	Y-Piece	J models
4	SP562709	Waters Level Sensor	J models
5	SPPRI505000058	Profiled Sealing	J models
6	SP540183	Spring Clamp	
7	SP283449080200	Spiral	
8	SP345000626088	Binding Strip	
9	SP100188	Foam Roller	
10	SPPRI503000027	Air Trap Reduction	
11	SPPRI503002049	Hose	Air trap
12	SPPRI240000003	Hose Clamp	20-32
13	SP500125	Reinforcement Tube	
14	SP526497	Screw	4x12
15	SP526454	Tee	
16	SPPRI240000007	Hose Clamp	70-90
17	SP526457	Drain Elbow	
18	SP309933000820	Bolt	M8x20
19	SP311902100008	Washer	8
20	SP526512	Drain Valve Holder	
21	SP529206	Screw	4x11
22	SP526460	Drain Valve	Black; Includes 553195 Drain Valve Chamber, SPPRI340002051 Drain Valve Motor and 554276 Drain Valve Seal
	553195	Drain Valve Chamber	Black
	SPPRI340002051	Drain Valve Motor	Includes gear box
	SP547821	Reverse Function Drain Valve	CE and Watermark; Black; Includes 553195 Drain Valve Chamber, SPPRI340002051 Drain Valve Motor and 554276 Drain Valve Seal
	554276	Drain Valve Seal	
23	576096	Hose Clamp	78-55
24	SP526492	Drain Hose Pipe	
25	SP526532	Hose Clamp	82-90

# Drain System

Models with G or V in 7th position of the model number

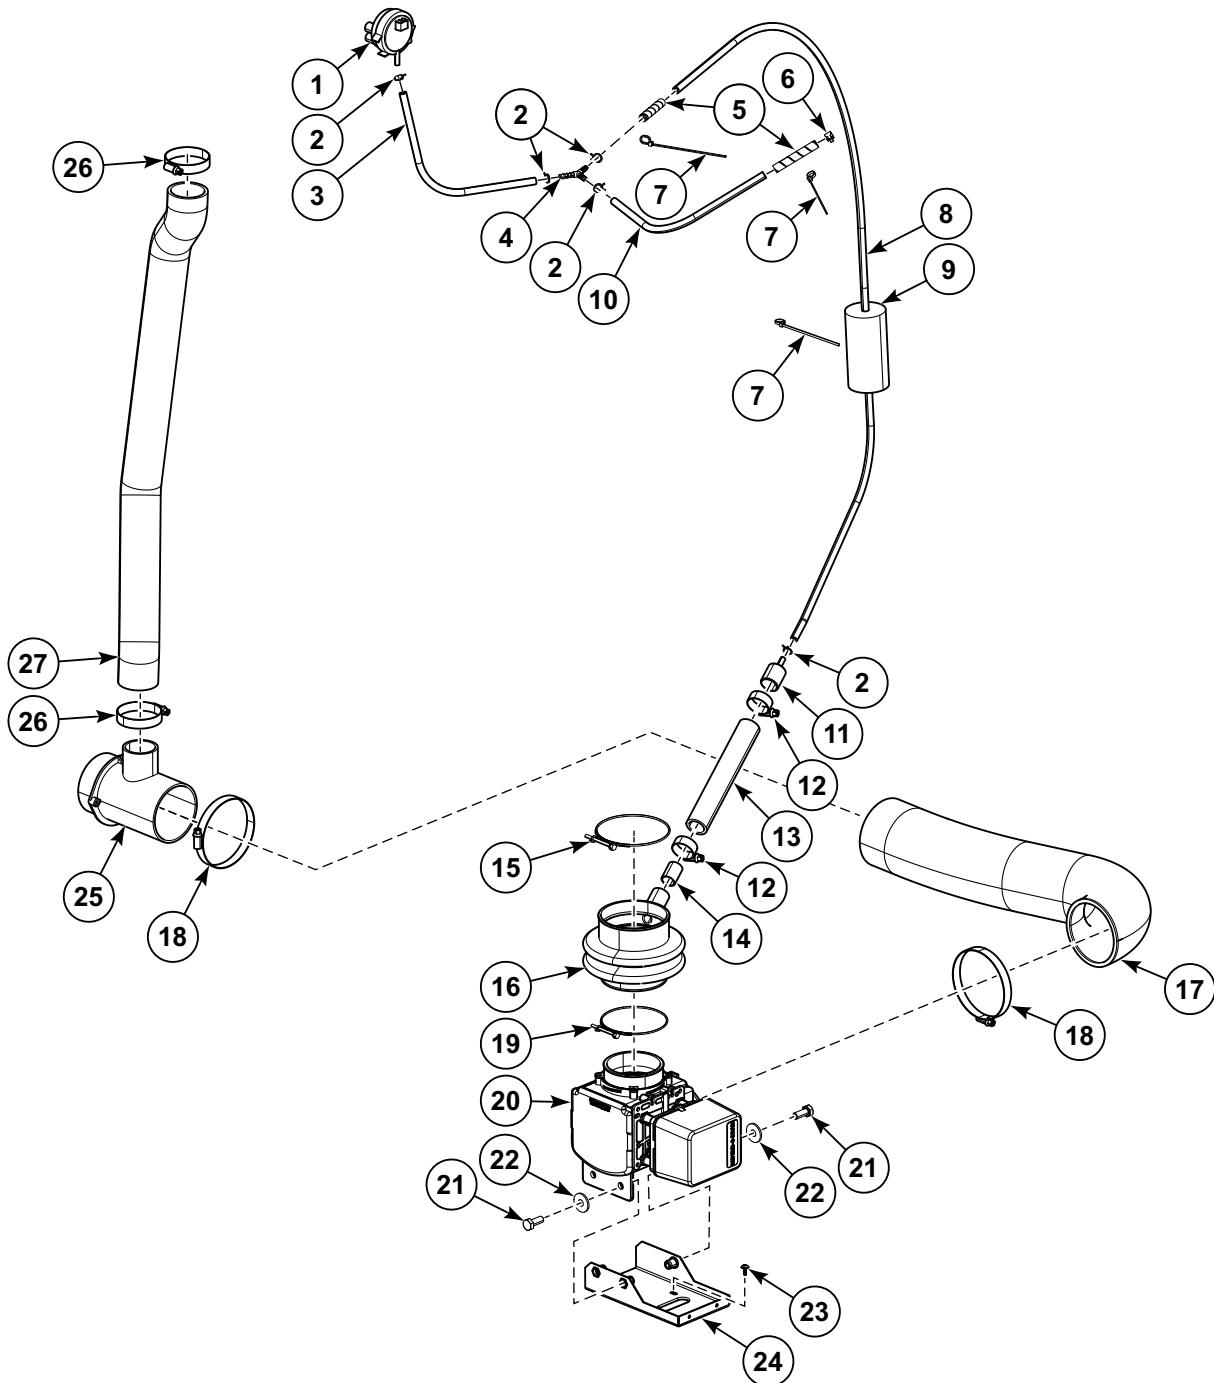


CZW416P\_D2409

# Drain System

REF	PART NO.	DESCRIPTION	COMMENTS
1	570315	Water Level Switch	
2	SPPRI241000017	Hose Clamp	A5.5
3	SPPRI540001003	Water Level Switch Hose	12.2 inch (0.31 m)
4	SPPRI503000028	Y-Piece	
5	SP283449080200	Spiral	
6	SP540183	Spring Clamp	
7	SP345000626088	Binding Strip	
8	SPPRI540001003	Water Level Switch Hose	31.5 inch (0.8 m)
9	SP100188	Foam Roller	
10	SPPRI540001003	Water Level Switch Hose	11.42 inch (0.29 m)
11	SPPRI503000027	Air Trap Reduction	
12	SPPRI240000003	Hose Clamp	20-32
13	SPPRI503002049	Hose	Air trap
14	SP500125	Reinforcement Tube	
15	SP526532	Hose Clamp	82-90
16	SP526492	Drain Hose Pipe	
17	SP526457	Drain Elbow	
18	SPPRI240000007	Hose Clamp	70-90
19	SPPRI240000021	Hose Clamp	60-80
20	SP526460	Drain Valve	Black; Includes SPPRI340002051 Drain Valve Motor and 554276 Drain Valve Seal
	SP547821	Reverse Function Drain Valve	Black; Includes SPPRI340002051 Drain Valve Motor and 554276 Drain Valve Seal
	SPPRI340002051	Drain Valve Motor	Includes gear box
	554276	Drain Valve Seal	
21	SP309933000820	Bolt	M8x20
22	SP311902100008	Washer	8
23	SP529206	Screw	4x11
24	SP526512	Drain Valve Holder	
25	SP526454	Tee	
26	SPPRI240000017	Hose Clamp	40-60
27	SP526480	Overflow Tube	

# Drain System

J models with V in 7th position of the model number

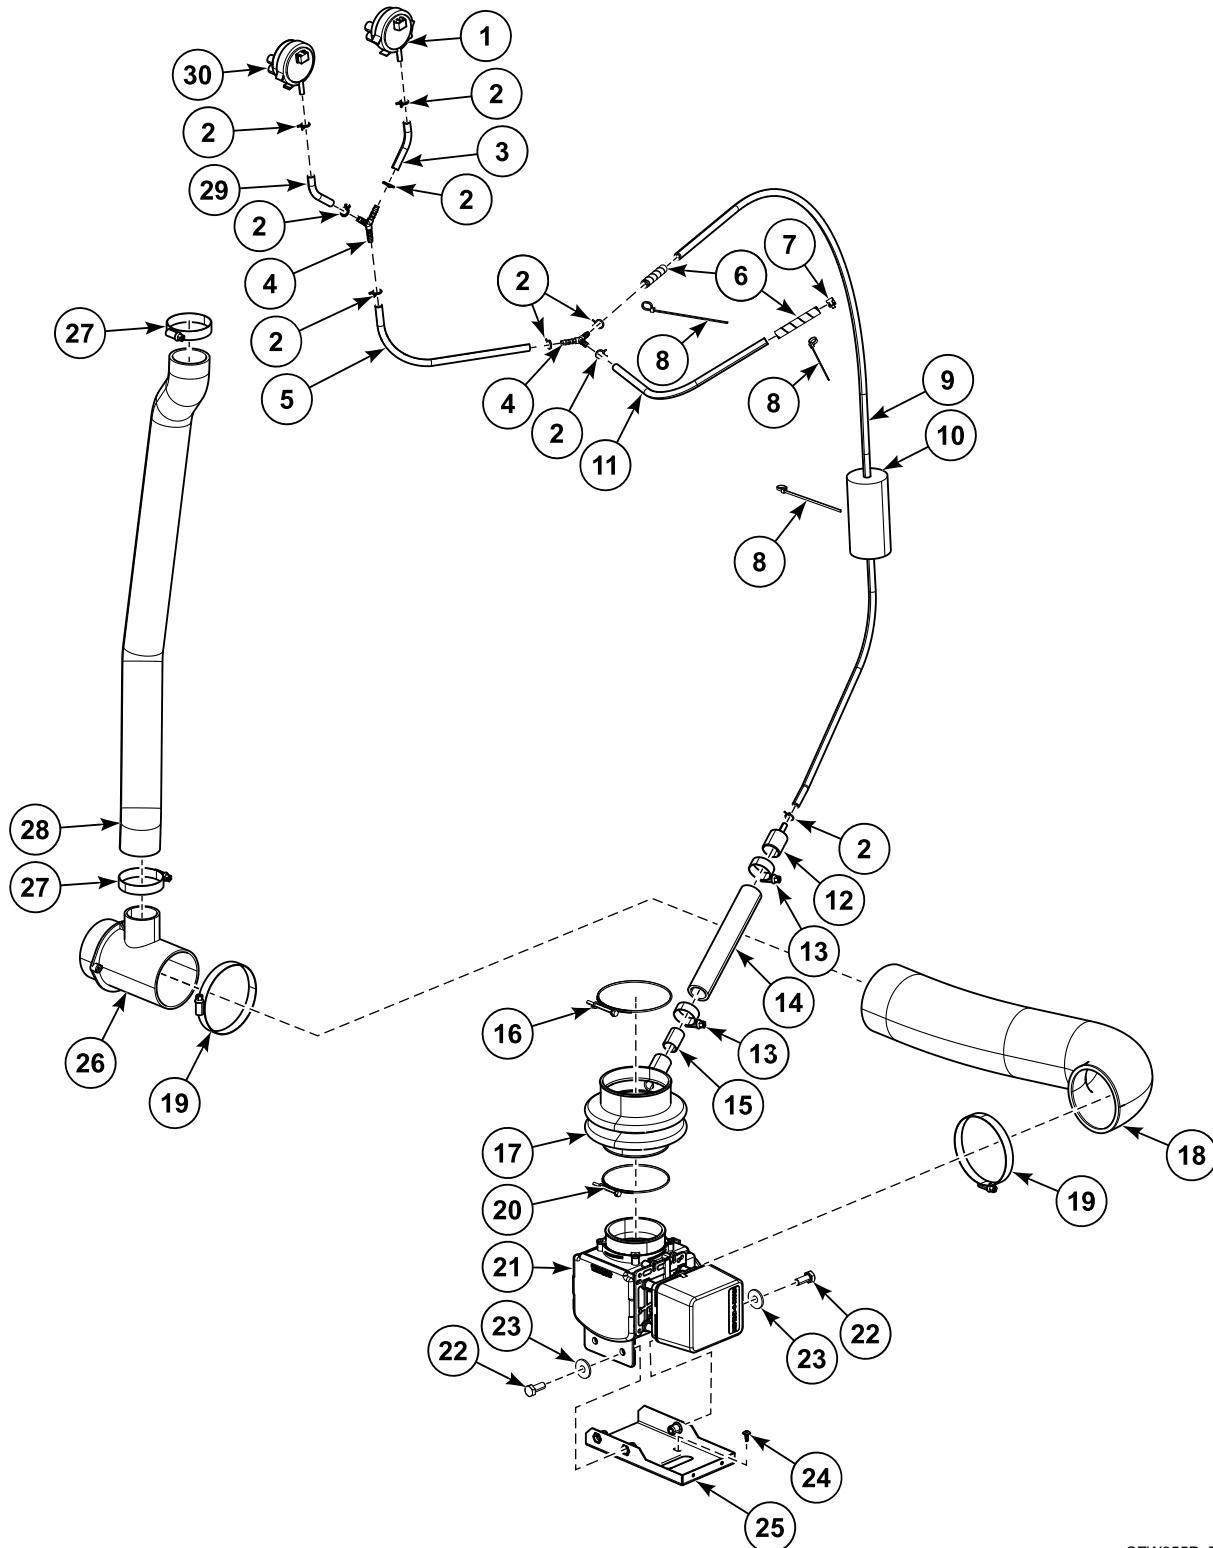


CZW355P\_D2409

# Drain System

REF	PART NO.	DESCRIPTION	COMMENTS
1	570315	Water Level Switch	
2	SPPRI241000017	Hose Clamp	A5.5
3	SPPRI540001003	Water Level Switch Hose	2.76 inch (0.07 m)
4	SPPRI503000028	Y-Piece	
5	SPPRI540001003	Water Level Switch Hose	7.87 inch (0.2 m)
6	SP283449080200	Spiral	
7	SP540183	Spring Clamp	
8	SP345000626088	Binding Strip	
9	SPPRI540001003	Water Level Switch Hose	37.4 inch (0.95 m)
10	SP100188	Foam Roller	
11	SPPRI540001003	Water Level Switch Hose	12.20 inch (0.31 m)
12	SPPRI503000027	Air Trap Reduction	
13	SPPRI240000003	Hose Clamp	20-32
14	SPPRI503002049	Hose	Air trap
15	SP500125	Reinforcement Tube	
16	SP526532	Hose Clamp	82-90
17	SP526492	Drain Hose Pipe	
18	SP526457	Drain Elbow	
19	SPPRI240000007	Hose Clamp	70-90
20	576096	Hose Clamp	78-85
21	SP526460	Drain Valve	Black; Includes SPPRI340002051 Drain Valve Motor and 554276 Drain Valve Seal
	SP547821	Reverse Function Drain Valve	Black; Includes SPPRI340002051 Drain Valve Motor and 554276 Drain Valve Seal
	SPPRI340002051	Drain Valve Motor	Includes gear box
	554276	Drain Valve Seal	
22	SP309933000820	Bolt	M8x20
23	SP311902100008	Washer	8
24	SP529206	Screw	4x11
25	SP526512	Drain Valve Holder	
26	SP526454	Tee	
27	SPPRI240000017	Hose Clamp	40-60
28	SP526480	Overflow Tube	
29	SPPRI540001003	Water Level Switch Hose	2.76 inch (0.07 m)
30	562709	Water Level Switch	

## Rear Panel (Drawing 1 of 3)

Models with A, D, F, I, J, R, T or X in 7th position of the model number except models with G, H, J or K in 13th position of the model number

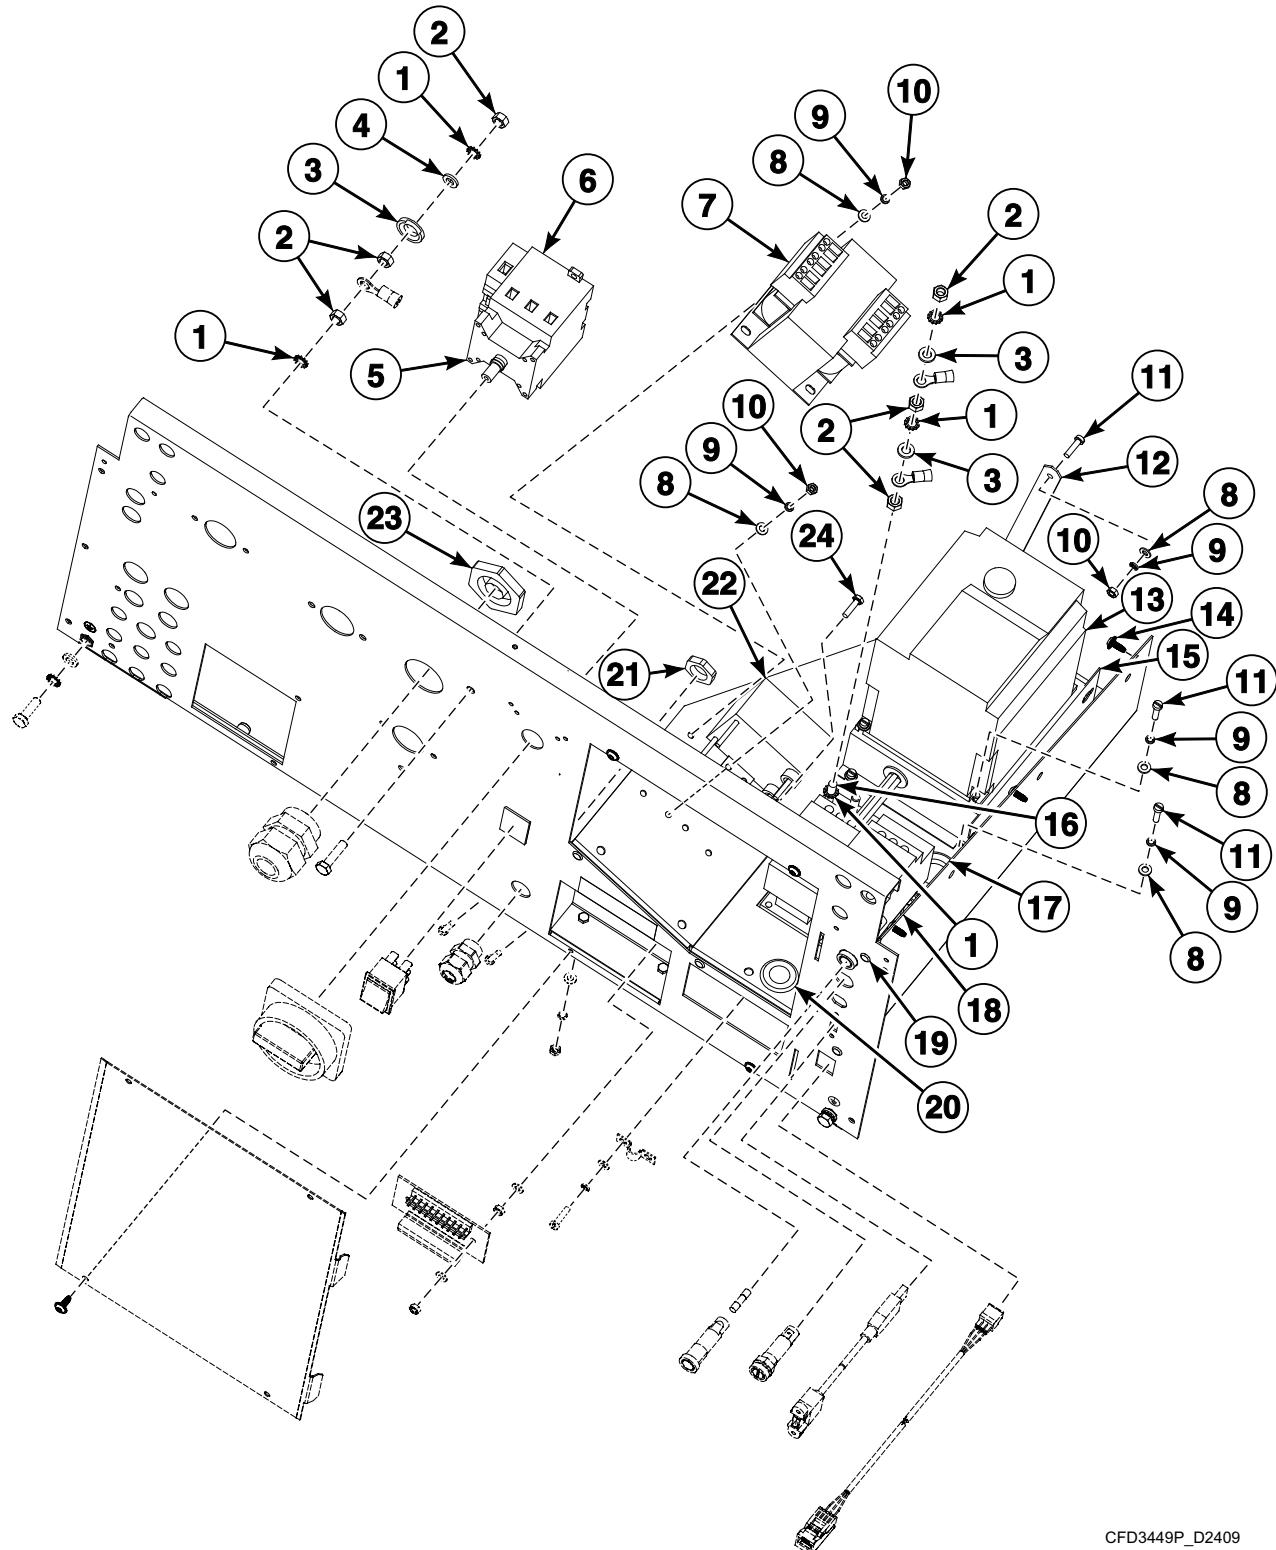


CFD3449P\_D2409

## Rear Panel (Drawing 1 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
	SP557768	Main Wiring	
	SP552475	Main Wiring	
	SP540180	Liquid Soap Supply Connection Kit	
	SPPRI350012007	Isolation Paper	
1	SP311679824006	Washer	M6
2	SP310934100006	Nut	M6
3	563361	Washer	North America
4	SP311125100006	Washer	6.4
5	SP506407	Main Switch	25A; Fourth Pole
	SPPRI404001098	Main Switch	32A; Fourth Pole
	SPPRI404001099	Main Switch	63A; Fourth Pole
6	SPPRI404000098	Main Switch	32A
	SPPRI404000097	Main Switch	25A
	SPPRI404000099	Main Switch	63A
7	SP516648	Transformer	
8	SP311125000004	Washer	4.3
9	SP311127000004	Washer	4
10	SP310934000004	Nut	M4
11	SP309084000416	Bolt	M4x16
12	SP526474	Holder Partition	
13	571472	Frequency Inverter	FR-D720S-070-SC-E8
	571474	Frequency Inverter	FR-D740S-036-SC-E8
	SP528323	Communication Cable	
14	SP529206	Screw	4x11
15	SP525935	Filter	FR-D740-xxx
16	SP309933100625	Bolt	M6x25
17	SP273121022002	Cable Passage	22x2; AF, FX, HX, LY, MWF, PY, QW and SW models through Serial No. 105FX010329MD; AF Non-Brand, H, HY, IY, J, LP, NY, SY and UY models through Serial No. 105FX010190KZ
18	SPPRI345002019	Contactor	LC1D32M7
	SP514043	Contactor	LC1D50M7
	SP514038	Contactor	LC1-D09M7
	SP514042	Contactor	LC1D18M7
19	SP313250004007	Rivet	4x7
20	SP273121015002	Cable Passage	15x2; AF, FX, HX, LY, MWF, PY, QW and SW models through Serial No. 105FX010329MD; AF Non-Brand, H, HY, IY, J, LP, NY, SY and UY models through Serial No. 105FX010190KZ
21	SP101416	Nut	M16
22	SP516012	Filter	FR-D720S-xxx
23	SP101419	Nut	M32
24	SP309933000416	Bolt	M4x16

## Rear Panel (Drawing 2 of 3)

Models with A, D, F, I, J, R, T or X in 7th position of the model number except models with G, H, J or K in 13th position of the model number

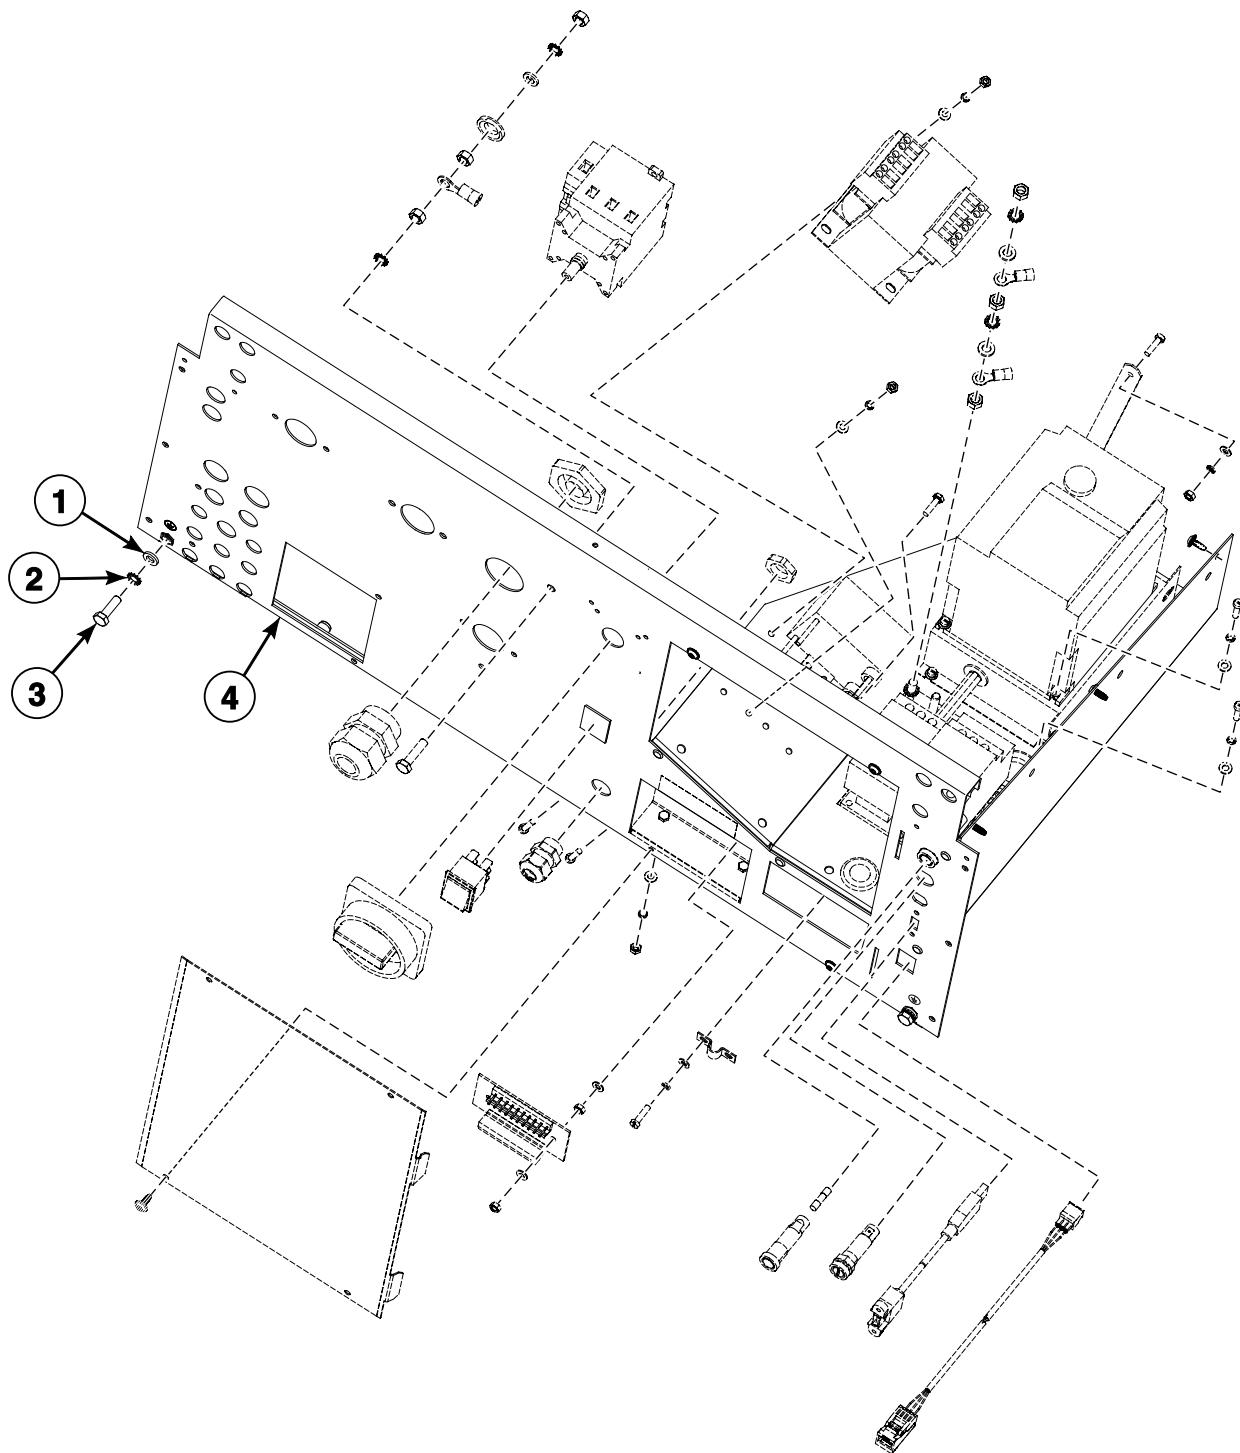


CFD3450P\_D2409

## Rear Panel (Dra wing 2 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
	557982	Cable	Extra price option
	SP506575	Terminal Board	Extra price option
	557981	Label	Extra price option
1	SP311125240006	Washer	6.4
2	SP311679824006	Washer	M6
3	SP309933000620	Bolt	M6x20
4	SP554378	Rear Panel	AF Non-Brand, H, HY, IY, J, LP, NY, SY and UY models
	SP526475	Rear Panel	AF, FX, HX, LY, MWF, PY, QW and SW models

## Rear Panel (Drawing 3 of 3)

Models with A, D, F, I, J, R, T or X in 7th position of the model number except models with G, H, J or K in 13th position of the model number

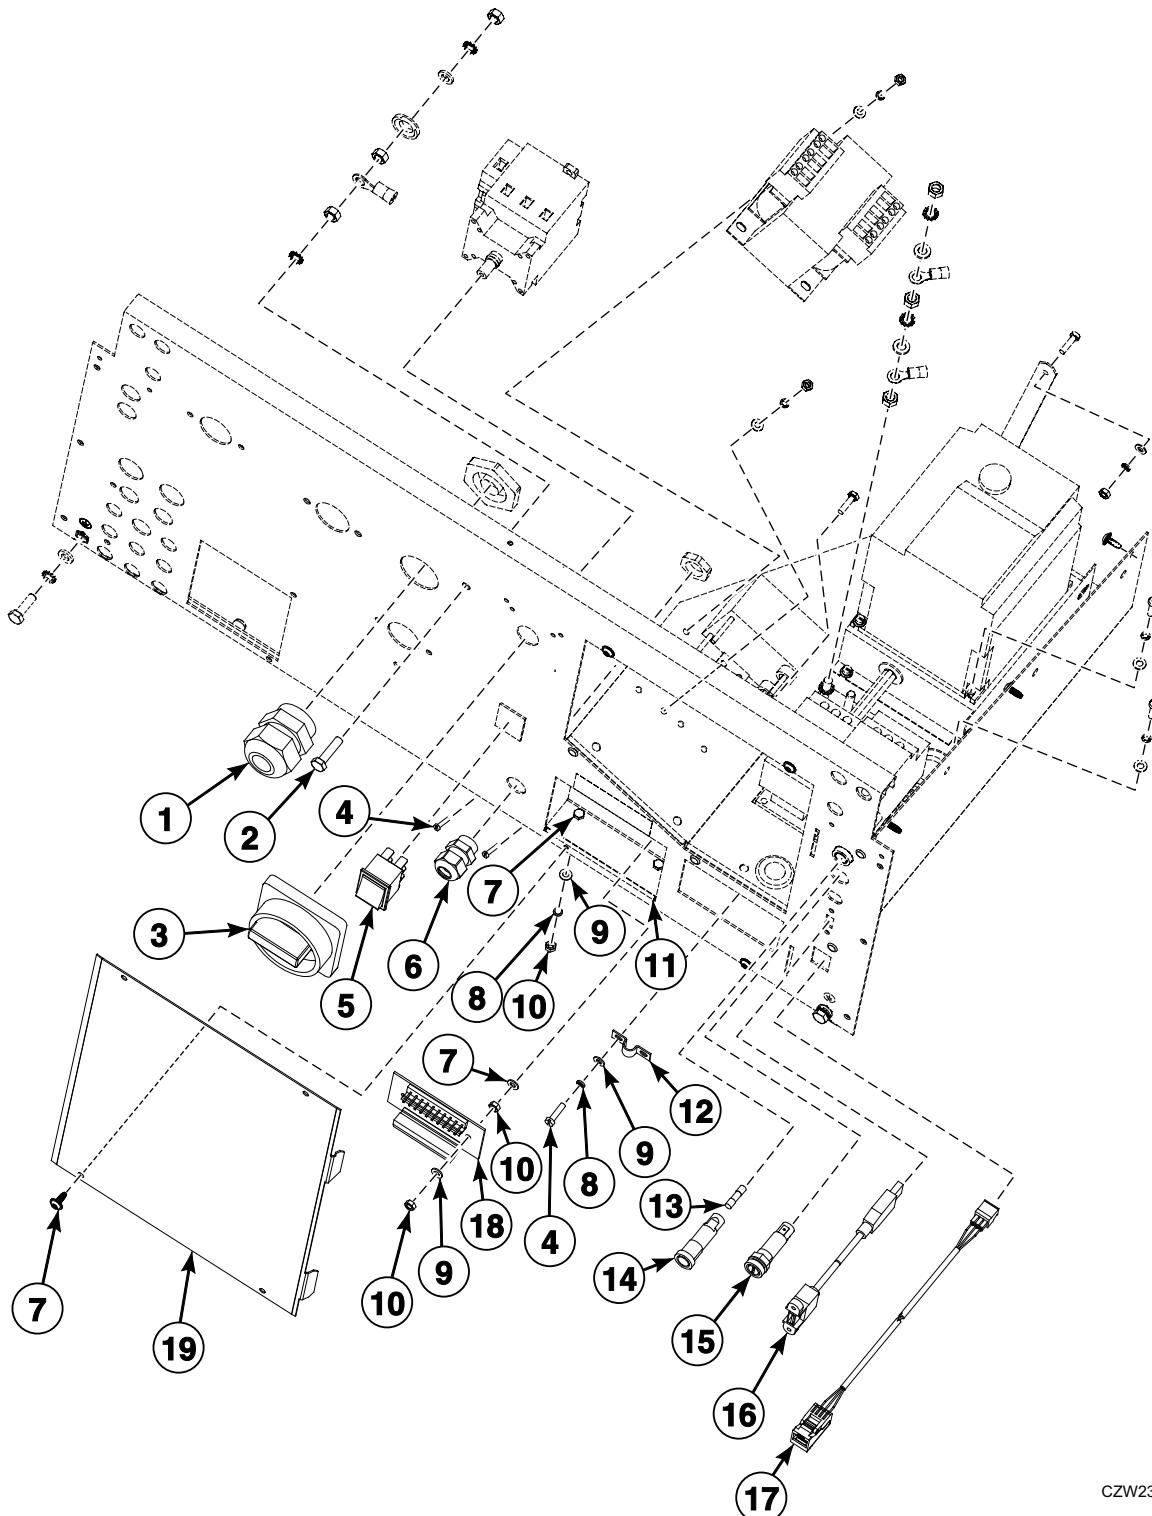


CZW23P\_D2409

## Rear Panel (Drawing 3 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP101409	Bushing	M32x1.5
	SP557952	Cable Bushing Insert	M32
2	SP309933100625	Bolt	M6x25
3	SPPRI404000095	Main Switch Knob	
4	SP309084000416	Bolt	M4x16
5	SP100388	Switch	
6	SP101406	Bushing	M16
7	SP529206	Screw	4x11
	SP309933240408	Bolt	M4x8
8	SP311127000004	Washer	4
9	SP311125000004	Washer	4.3
10	SP310934000004	Nut	M4
11	SP540123	Liquid Detergent Box	
12	SP528392	Cable Clamp	
13	SP345805005020	Fuse	5x20mm, T0.5A/250V
	SP345805163032	Fuse	6.3x32mm, T1A/500V
14	SPPRI401003020	Fuse Housing	6.3x32
15	SPPRI401001020	Fuse Holder	
16	SP547006	USB Cable	Rear panel connection
17	SP545234	Cable	RS485; With connectors
18	SP524714	Soap Relay Board	
	SP528149	Pump Relay Board to LED Terminal Cable	
	SP557944	Soap Link Kit	
	SP557947	External Block Signal Cable	2.8m
19	SP540121	Rear Panel Lid	

## Rear Panel - 230-400V with Neutral (Drawing 1 of 2)

AF, IY and NY models with J, R, T or X in 7th position of the model number and with G, H, J or K in the 13th position of the model number

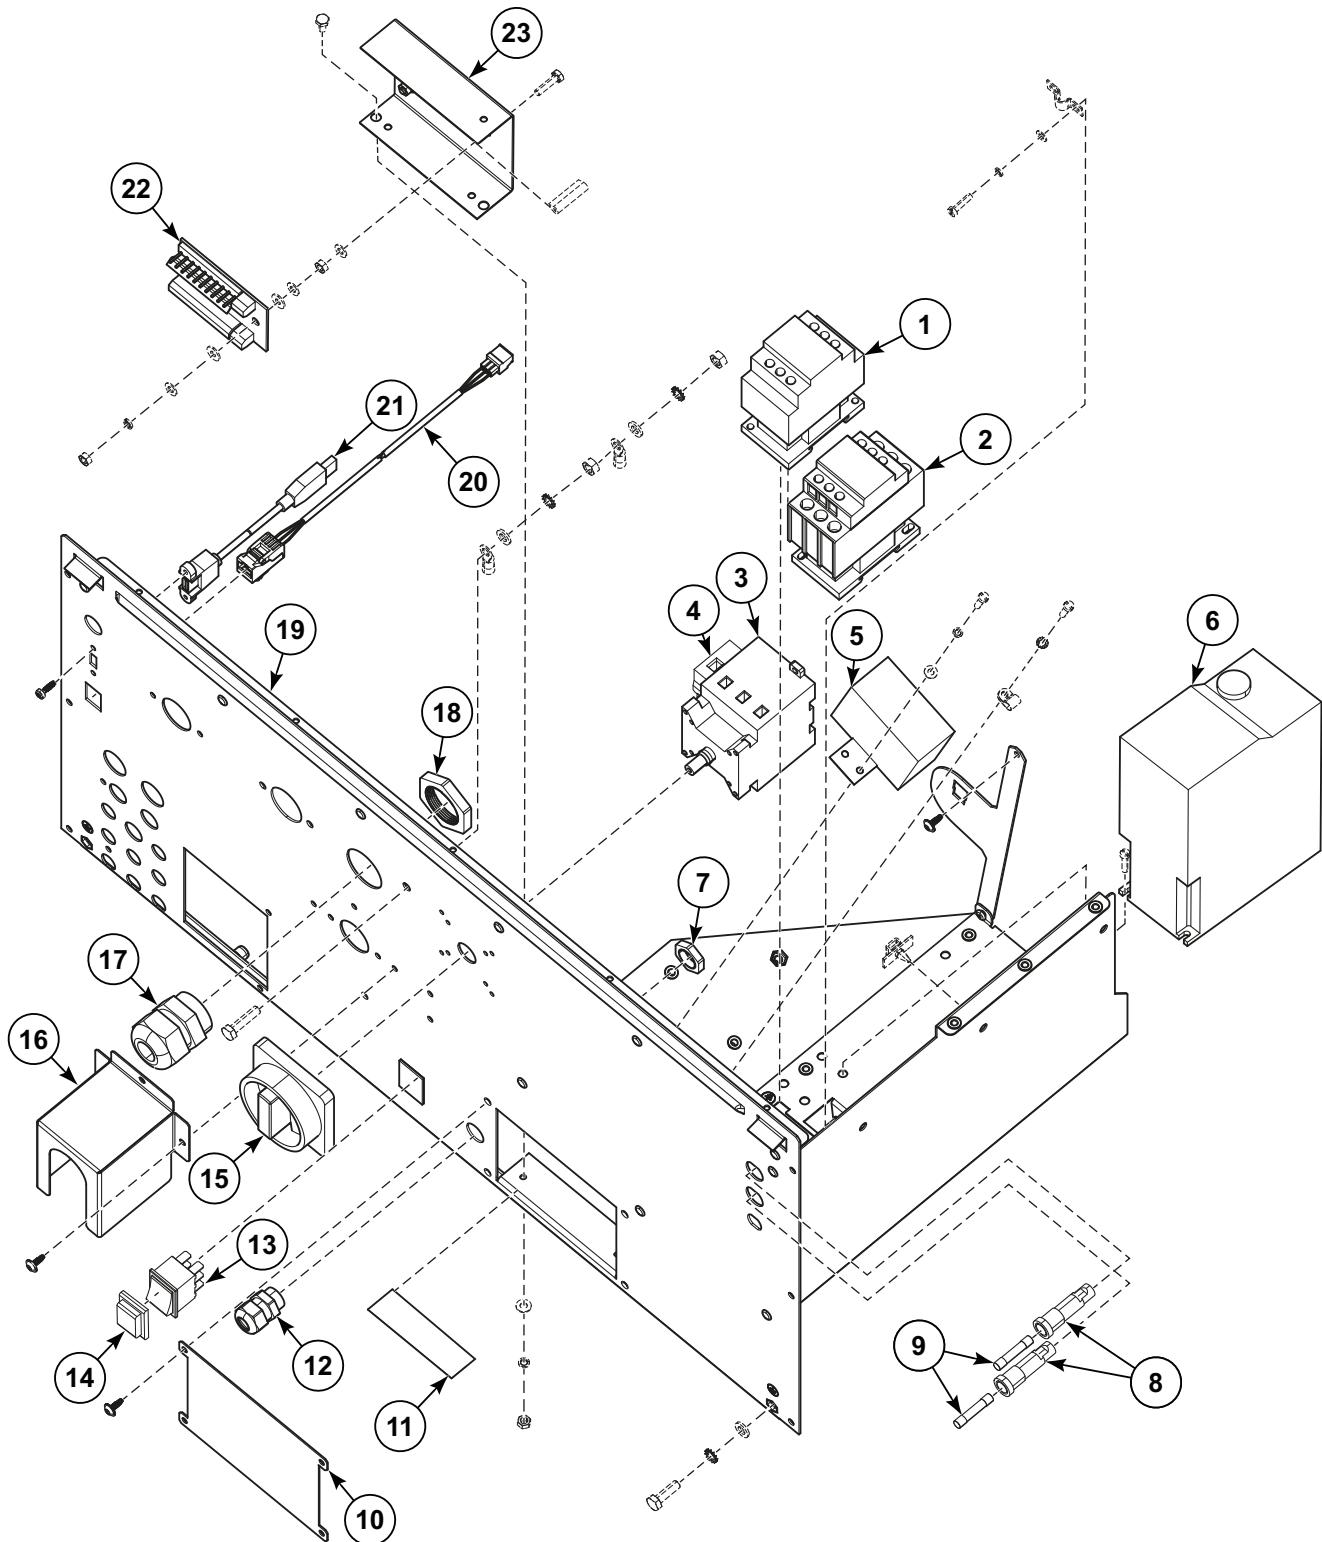


CZW604P\_D2410

## Rear Panel - 230-400V with Neutral (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP514038	Contactor	LC1-D09M7; Used with frequency inverter
2	SP514038	Contactor	LC1-D09M7; Electric heating; 6kW, 9kW, 12kW 400V / 440V
	SP514042	Contactor	LC1D18M7; Electric heating 9kW 230V
	SPPRI345002019	Contactor	LC1D3201; Electric heating 12kW, 13.8kW, 230V
3	SPPRI404000097	Main Switch	25A; used with SP506407 Main Switch Fourth Pole 25A
	SPPRI404000098	Main Switch	32A; used with SPPRI404001098 Main Switch Fourth Pole 32A
	SPPRI404000099	Main Switch	63A; used with SPPRI404001099 Main Switch Fourth Pole 63A
4	SP506407	Main Switch	25A; Fourth pole
	SPPRI404001098	Main Switch	32A; Fourth pole
	SPPRI404001099	Main Switch	63A; Fourth pole
5	SP516012	Filter	16A / 250V
6	571472	Frequency Inverter	1.5kW; 230V / 400V+N; FR-D720S-070-SC-E8
	571474	Frequency Inverter	1.5kW; 400V / 440V; FR-D740-036-SC-E8
	557961	Ferrite Core	Used with frequency inverter
7	SP101416	Nut	M16
8	SPPRI401003020	Fuse Housing	2 pieces
9	SP345805163032	Fuse	6.3x32mm, T1A/500V; 2 pieces
10	566549	Cover	
11	524740	Label	
12	SP101406	Bushing	M16
13	SP100388	Switch	
14	SPPRI543000003	Push Bottom Cover	
15	SPPRI404000095	Main Switch Knob	
16	582259	Cover	
17	SP101409	Bushing	M32x1.5
18	SP101419	Nut	M32
19	577193	Rear Panel	Assembly
20	SP545234	Cable	RS485; With connectors
21	SP547006	USB Cable	Rear panel connection; Optional
22	524714	Soap Relay Board	Used with SP528419 Pump Relay Board Flat Cable, 1=1.8m long
	SP557944	Soap Link Kit	
	SP557947	External Block Signal Cable	2.8m
23	540123	Holder	

## Rear Panel - 230-400V with Neutral (Drawing 2 of 2)

AF, IY and NY models with J, R, T or X in 7th position of the model number and with G, H, J or K in the 13th position of the model number

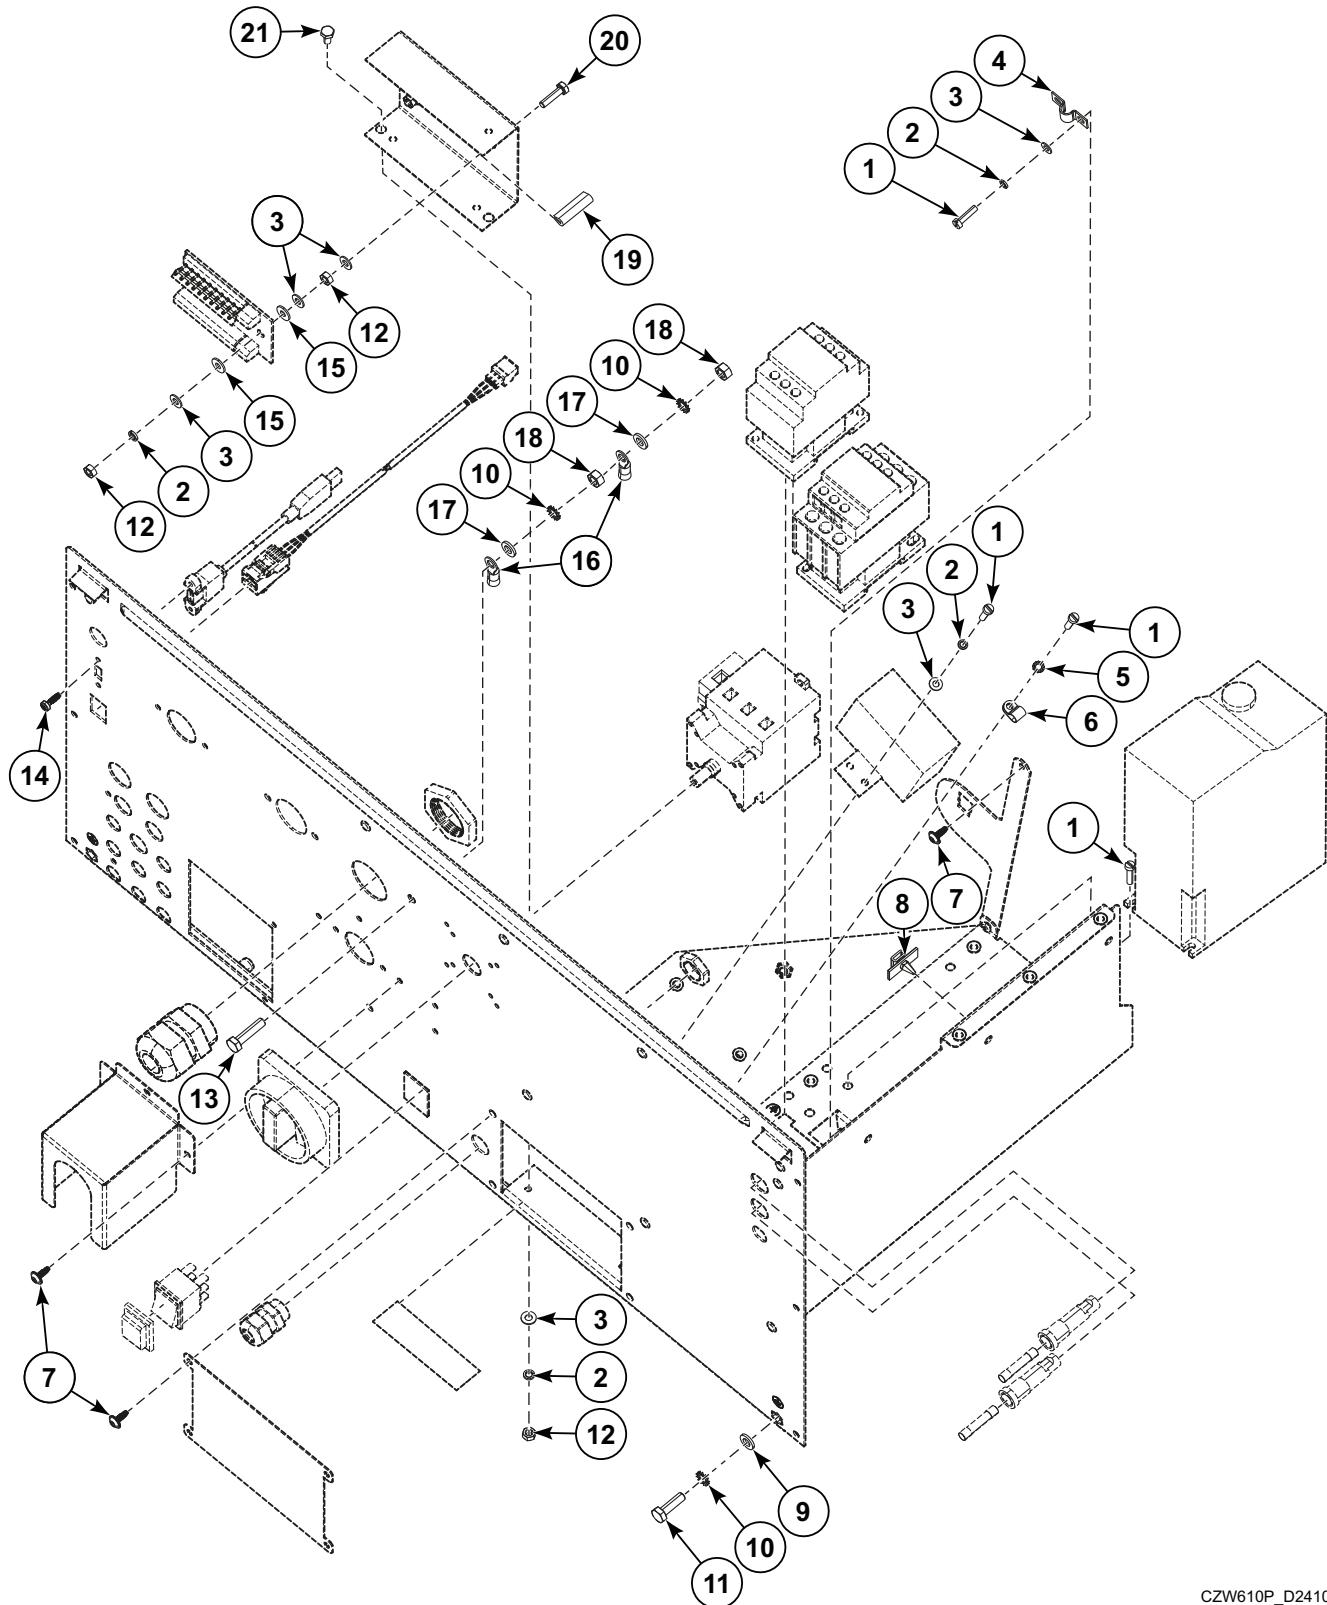


CZW610P\_D2410

## Rear Panel - 230-400V with Neutral (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP309084000416	Bolt	M4x16
2	SP311127000004	Washer	4
3	SP311125000004	Washer	4.3
4	SP528392	Cable Clamp	
5	SP311679800004	Washer	M4
6	SP502214	Clip	
7	SP529206	Screw	4x11
8	SP528313	Cable Holder	
9	SP311125240006	Washer	6
10	SP311679824006	Washer	6
11	SP309933000620	Bolt	M6x20
12	SP310934000004	Nut	M4
13	SP309933100625	Bolt	M6x25
14	SP526497	Screw	4x12
15	SPPRI52300007	Washer	M4
16	345000165034	Cable Eye	
17	SP311125100006	Washer	
18	SP310934100006	Nut	M6
19	SPPRI50500058	Profiled Sealing	
20	SP309933000416	Bolt	M4x16
21	SP309933240408	Bolt	M4x8

## Rear Panel - 400-440V (Drawing 1 of 2)

AF, IY and NY models with J, R, T or X in 7th position of the model number and with G, H, J or K in the 13th position of the model number

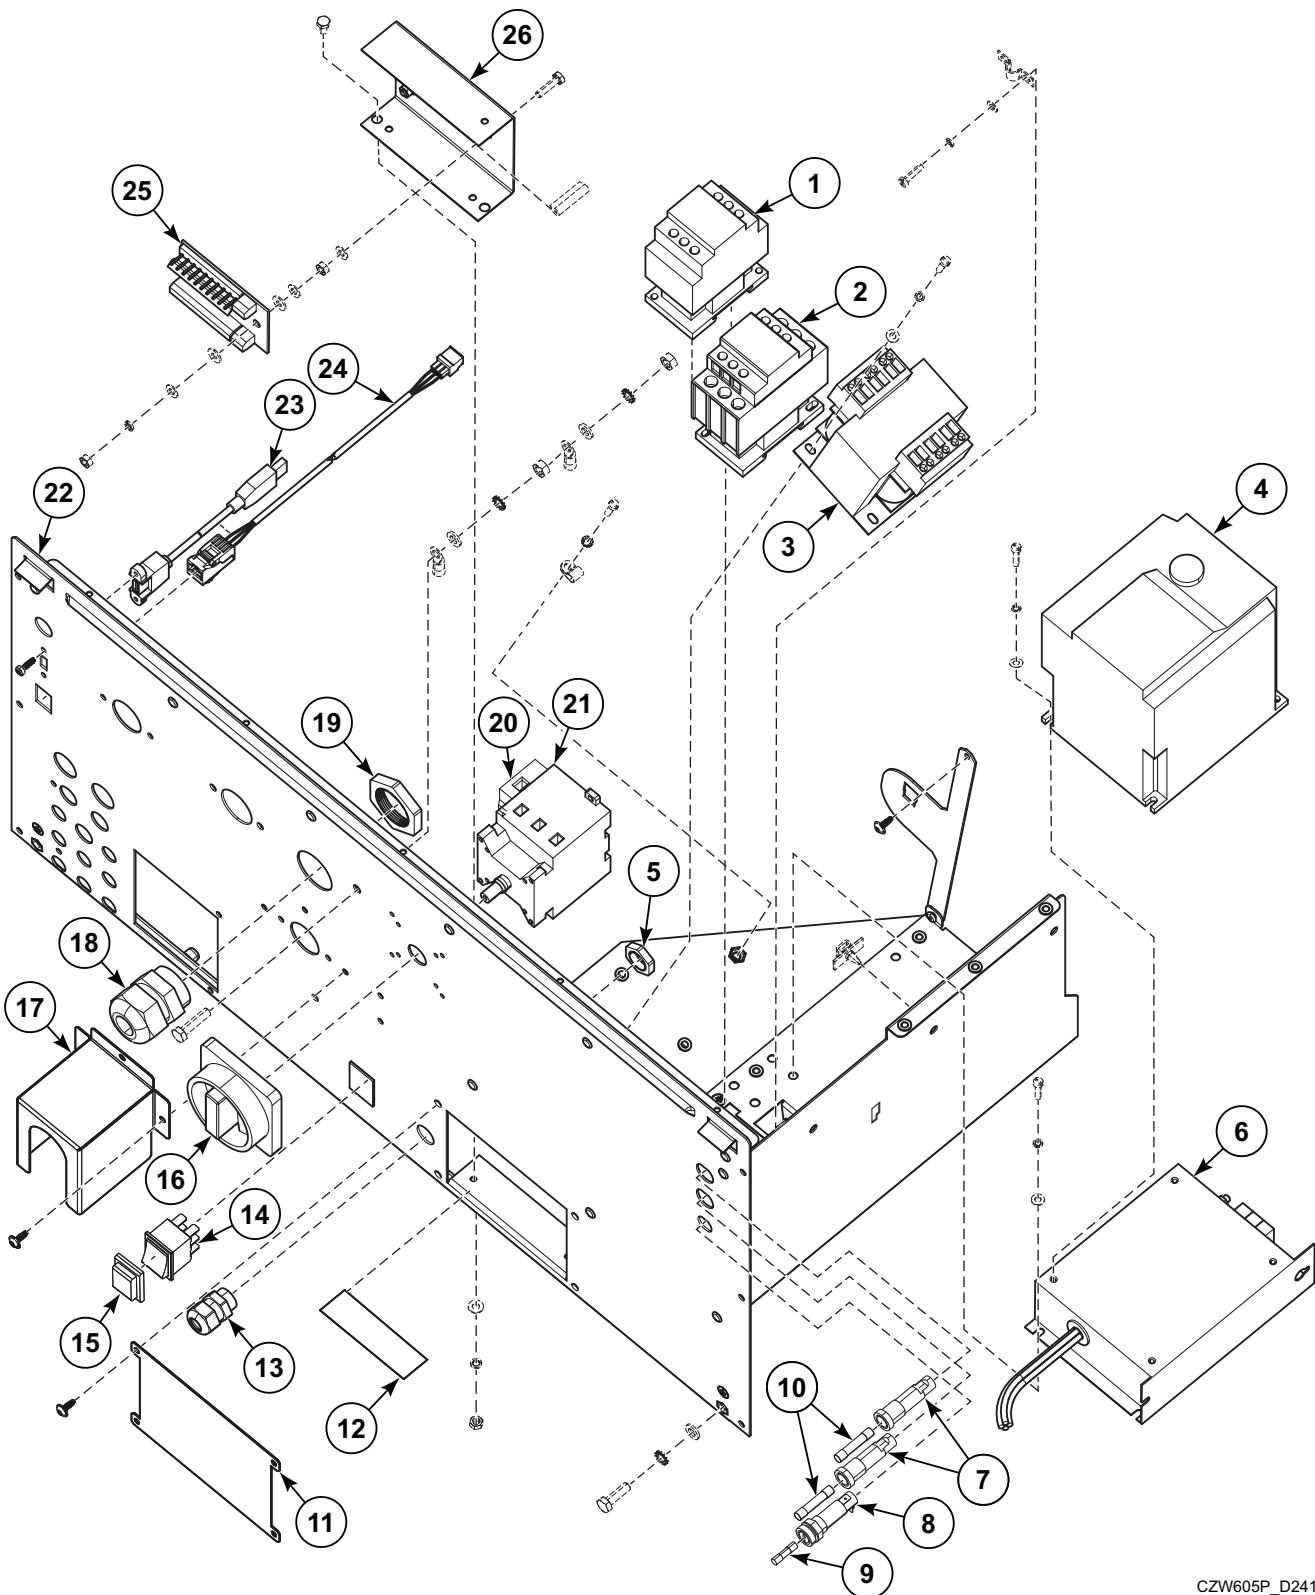


CZW605P\_D2410

## Rear Panel - 400-440V (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP514038	Contactor	LC1-D09M7; Used with frequency inverter
2	SP514038	Contactor	LC1-D09M7; Electric heating; 6kW, 9kW, 12kW 400V / 440V
	SP514042	Contactor	LC1D18M7; Electric heating 9kW 230V
	SPPRI345002019	Contactor	LC1D3201; Electric heating 12kW, 13.8kW, 230V
3	SP516648	Transformer	
4	571474	Frequency Inverter	1.5kW; 400V / 440V; FR-D740-036-SC-E8
	557961	Ferrite Core	Used with frequency inverter
5	SP101416	Nut	M16
6	525935	Filter	16A
7	SPPRI401003020	Fuse Housing	2 pieces
8	SPPR401001020	Fuse Holder	
9	SP345805005020	Fuse	5x20mm, T0.5A/250V; 1 piece
10	SP345805163032	Fuse	6.3x32mm, T1A/500V; 2 pieces
11	566549	Cover	
12	524740	Label	
13	SP101406	Bushing	M16
14	SP100388	Switch	
15	SPPRI543000003	Push Bottom Cover	
16	SPPRI404000095	Main Switch Knob	
17	582259	Cover	
18	SP101409	Bushing	M32x1.5
19	SP101419	Nut	M32
20	SP506407	Main Switch	25A; Fourth pole
	SPPRI404001098	Main Switch	32A; Fourth pole
	SPPRI404001099	Main Switch	63A; Fourth pole
21	SPPRI40400097	Main Switch	25A; used with SP506407 Main Switch Fourth Pole 25A
	SPPRI40400098	Main Switch	32A; used with SPPRI404001098 Main Switch Fourth Pole 32A
	SPPRI40400099	Main Switch	63A; used with SPPRI404001099 Main Switch Fourth Pole 63A
22	577193	Rear Panel	Assembly
23	SP547006	USB Cable	Rear panel connection; Optional
24	SP545234	Cable	RS485; With connectors
25	524714	Soap Relay Board	Used with SP528419 Pump Relay Board Flat Cable, l=1.8m long
	SP557944	Soap Link Kit	
	SP557947	External Block Signal Cable	2.8m
26	540123	Holder	

## Rear Panel - 400-440V (Drawing 2 of 2)

AF, IY and NY models with J, R, T or X in 7th position of the model number and with G, H, J or K in the 13th position of the model number

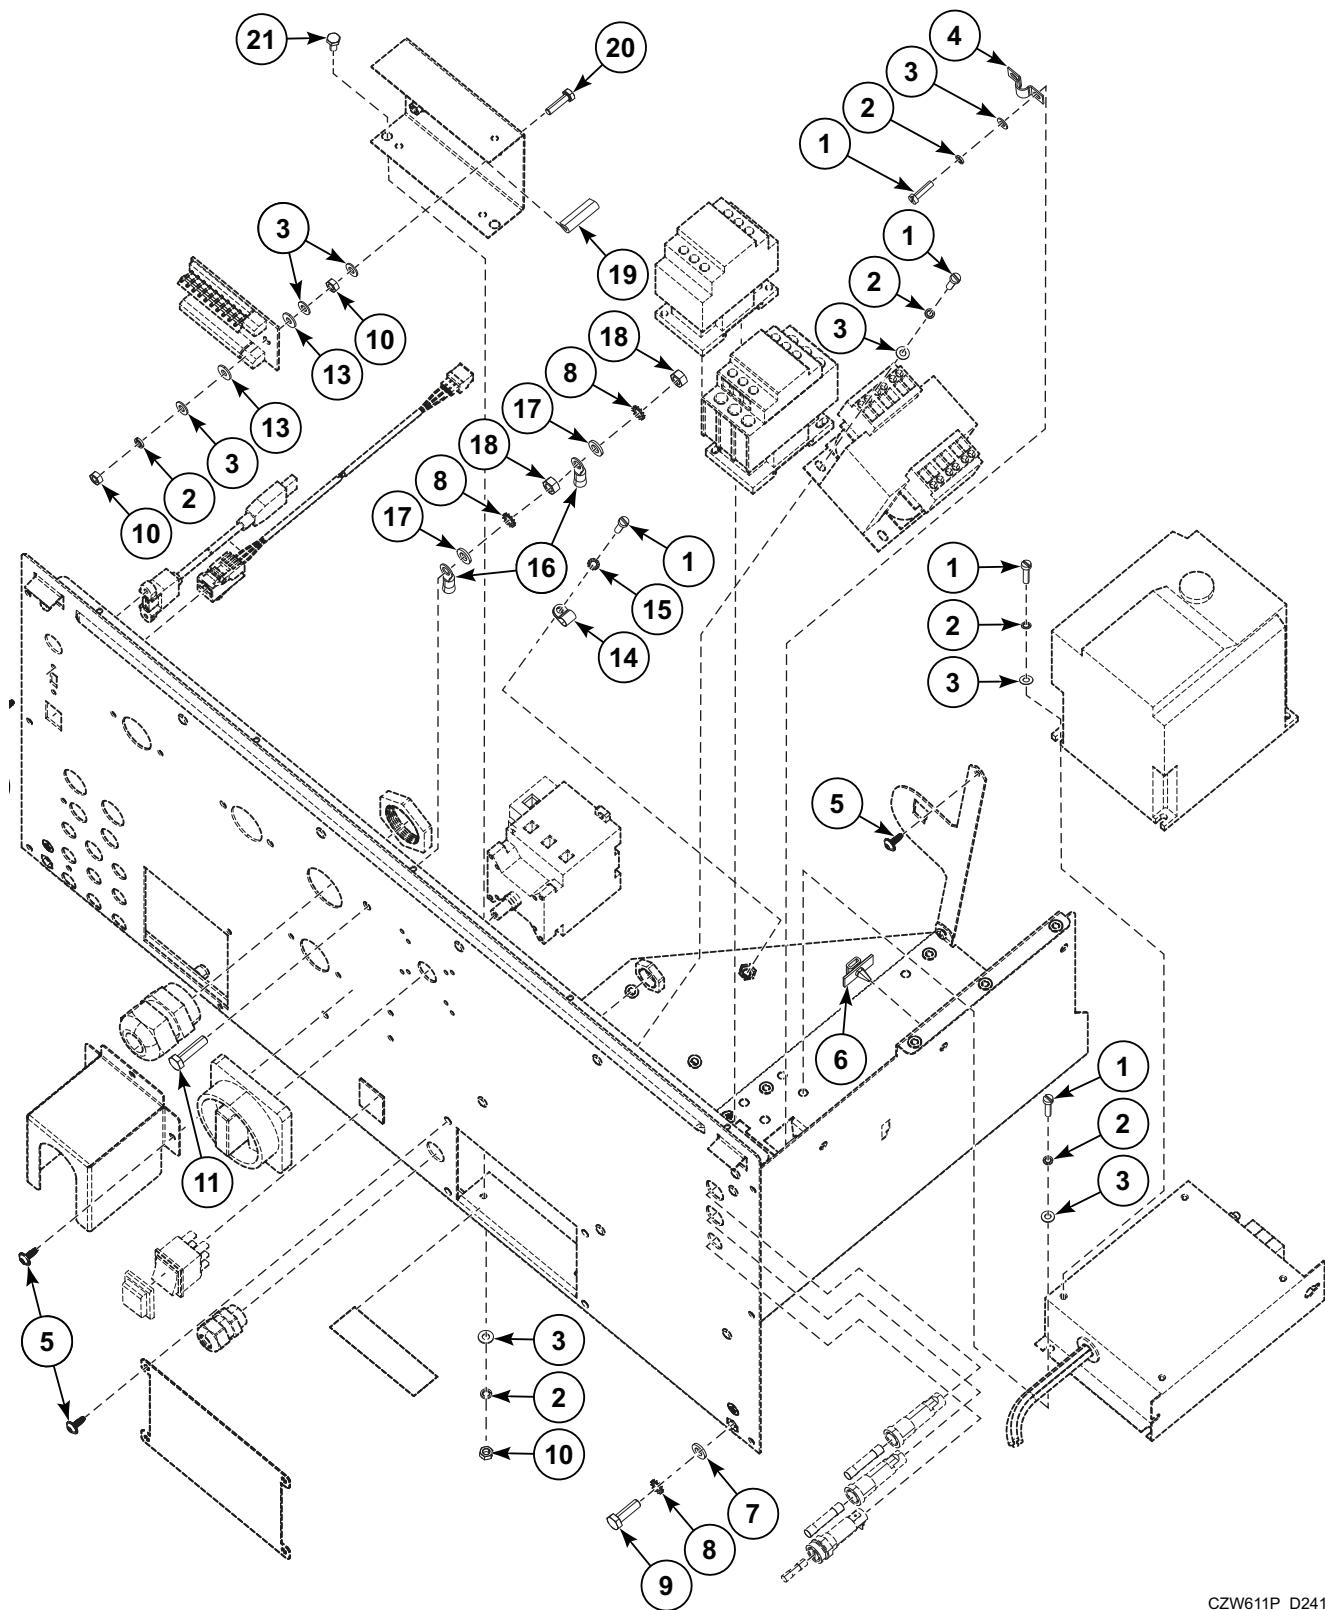

CZW611P\_D2410


## Rear Panel - 400-440V (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP309084000416	Bolt	M4x16
2	SP311127000004	Washer	4
3	SP311125000004	Washer	4.3
4	SP528392	Cable Clamp	
5	SP529206	Screw	4x11
6	SP528313	Cable Holder	
7	SP311125240006	Washer	6
8	SP311679824006	Washer	6
9	SP309933000620	Bolt	M6x20
10	SP310934000004	Nut	M4
11	SP309933100625	Bolt	M6x25
12	SP526497	Screw	4x12
13	SPPRI52300007	Washer	M4
14	SP502214	Clip	
15	SP311679800004	Washer	M4
16	345000165034	Cable Eye	
17	SP311125100006	Washer	
18	SP310934100006	Nut	M6
19	SPPRI505000058	Profiled Sealing	
20	SP309933000416	Bolt	M4x16
21	SP309933240408	Bolt	M4x8

# Rear Panel - 230-400V CE Models with Neutral (Drawing 1 of 2)

AF, IY, JY and NY models with V in the 7th position of the model number

Models with G in 7th position of the model number

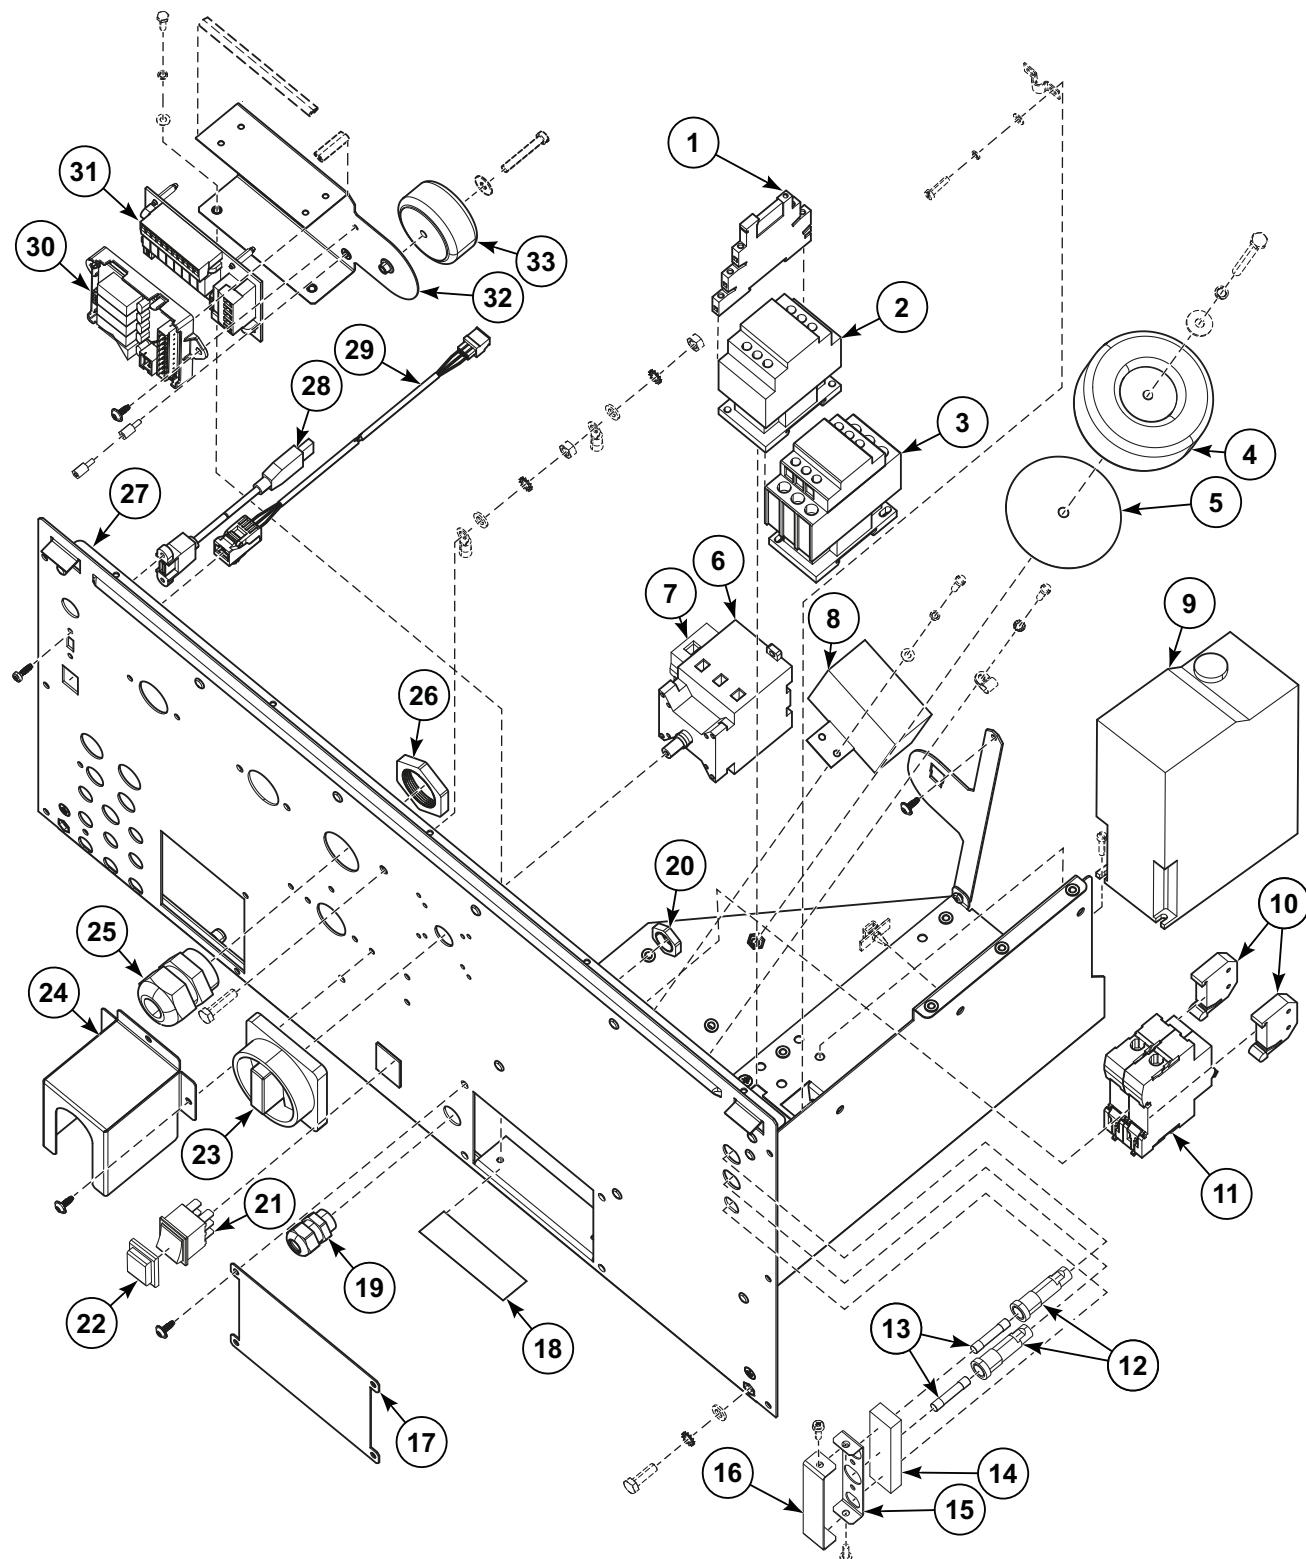

CZW627P\_D2409

## Rear Panel - 230-400V CE Models with Neutral (Drawing 1 of 2)


REF	PART NO.	DESCRIPTION	COMMENTS
1	N/A	Relay	2 poles; Used with drain pump
2	SP514038	Contactor	LC1-D09M7; Used with frequency inverter
3	SP514038	Contactor	LC1-D09M7; Electric heating; 6kW, 9kW, 12kW 400V / 440V
	SP514042	Contactor	LC1D18M7; Electric heating 9kW 230V
	SPPRI345002019	Contactor	LC1D3201; Electric heating 12kW, 13.8kW, 230V
4	571455	DC Choke	4mH; Supply 230V, 380-415V+N
5	571458	Insulation Washer	
6	SPPRI404000097	Main Switch	25A; used with SP506407 Main Switch Fourth Pole 25A
	SPPRI404000098	Main Switch	32A; used with SPPRI404001098 Main Switch Fourth Pole 32A
	SPPRI404000099	Main Switch	63A; used with SPPRI404001099 Main Switch Fourth Pole 63A
7	SP506407	Main Switch	25A; Fourth pole
	SPPRI404001098	Main Switch	32A; Fourth pole
	SPPRI404001099	Main Switch	63A; Fourth pole
8	568380	Filter	20A / 250V
9	571472	Frequency Inverter	1.5kW; 230V / 400V+N; FR-D720S-070-SC-E8
	571474	Frequency Inverter	1.5kW; 400V / 440V; FR-D740-036-SC-E8
	557961	Ferrite Core	Used with frequency inverter
10	SP346000209101	End Stop	
11	571462	Circuit Breaker	
12	SPPRI401003020	Fuse Housing	2 pieces
13	SP345805163032	Fuse	6.3x32mm, T1A/500V; 2 pieces
14	570387	Self-Adhesive Profile	
15	SP554310	Fuse Holder	
16	SP554311	Fuse Cover	
17	566549	Cover	
18	570731	Label	Models with Transformer
	579019	Label	Models without Transformer
19	SP101406	Bushing	M16
20	SP101416	Nut	M16
21	SP100388	Switch	
22	SPPRI543000003	Push Bottom Cover	
23	SPPRI404000095	Main Switch Knob	
24	582259	Cover	
25	SP101409	Bushing	M32x1.5
26	SP101419	Nut	M32
27	571017	Rear Panel	
28	SP547006	USB Cable	Rear panel connection; Optional
29	SP545234	Cable	RS485; With connectors
30	804528	Soap Relay Board	Models with G in 7th position of the model number; used with F8715501 Extension Board Connection, 2.08m long
31	553187	Soap Relay Board	AF, IY, JY and NY models with V in 7th position of the model number; used with 569737 Pump Relay Board Flat Cable, 2m long
32	570382	Holder	
33	564561	Transformer	Models with Transformer
	579014	Transformer	Models without Transformer

N/A = Part no longer available

## Rear Panel - 230-400V CE Models with Neutral (Drawing 2 of 2)

AF, IY, JY and NY models with V in the 7th position of the model number

Models with G in 7th position of the model number

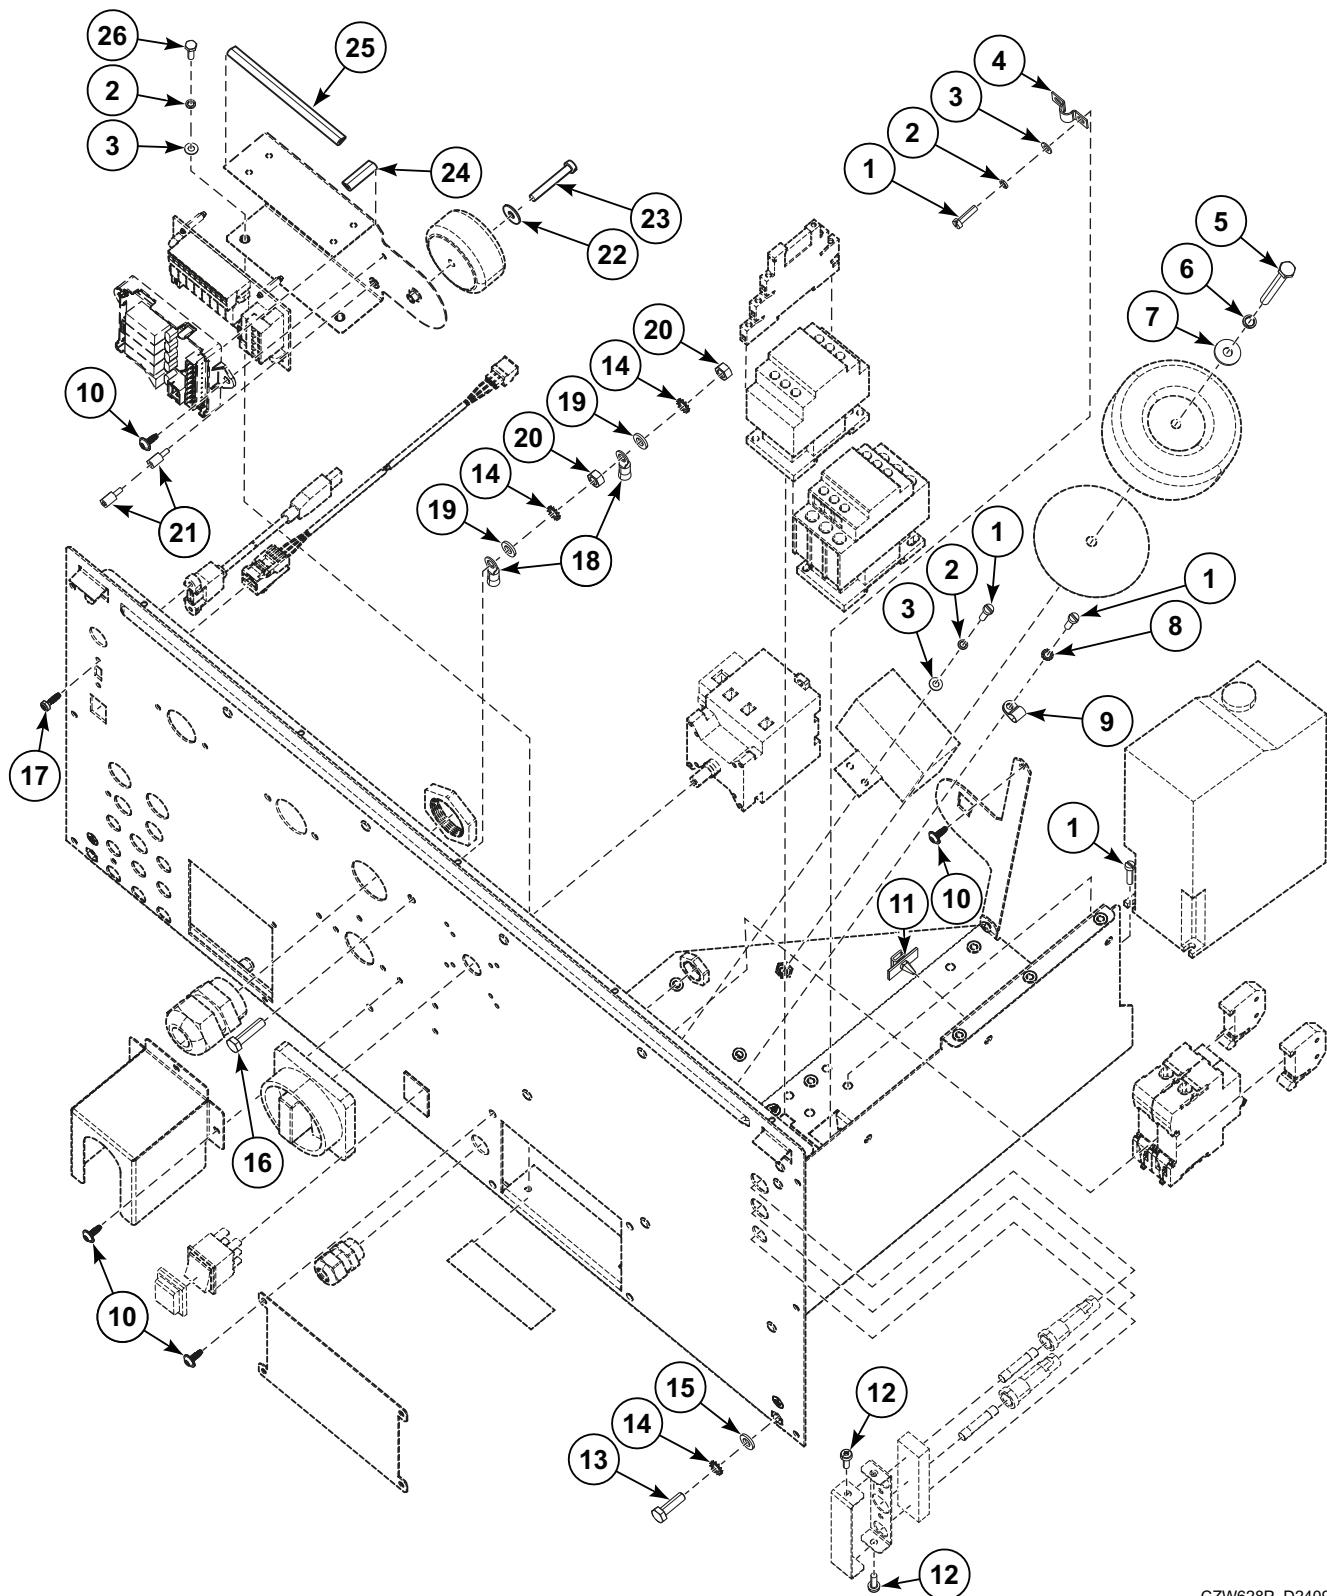

CZW628P\_D2409


## Rear Panel - 230-400V CE Models with Neutral (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP309084000416	Bolt	M4x16
2	SP311127000004	Washer	4
3	SP311125000004	Washer	4.3
4	SP528392	Cable Clamp	
5	SP309933000660	Bolt	M6x60
6	SP311127000006	Washer	6
7	SP311902100006	Washer	6
8	SP311679800004	Washer	M4
9	SP502214	Clip	
10	SP529206	Screw	4x11
11	SP528313	Cable Holder	
12	SP555504	Bolt	
13	SP309933000620	Bolt	M6x20
14	SP311679824006	Washer	6
15	SP311125240006	Washer	6
16	SP309933100625	Bolt	M6x25
17	SP526497	Screw	4x12
18	345000165034	Cable Eye	
19	SP311125100006	Washer	6
20	SP310934100006	Nut	M6
21	570381	Hex Pillar	M3; Models through 1 Sep 2021
22	SP505430	Washer	5
23	309084000535	Bolt	M5x35
24	SPPRI505000058	Profiled Sealing	0.025m; Models through 6 Feb 2023
25	SPPRI505000058	Profiled Sealing	0.105m; Models through 6 Feb 2023
26	SP309933240412	Bolt	M4x12

# Rear Panel - 400-440V Models (Drawing 1 of 2)

AF, IY, JY and NY models with V in the 7th position of the model number

Models with G in 7th position of the model number

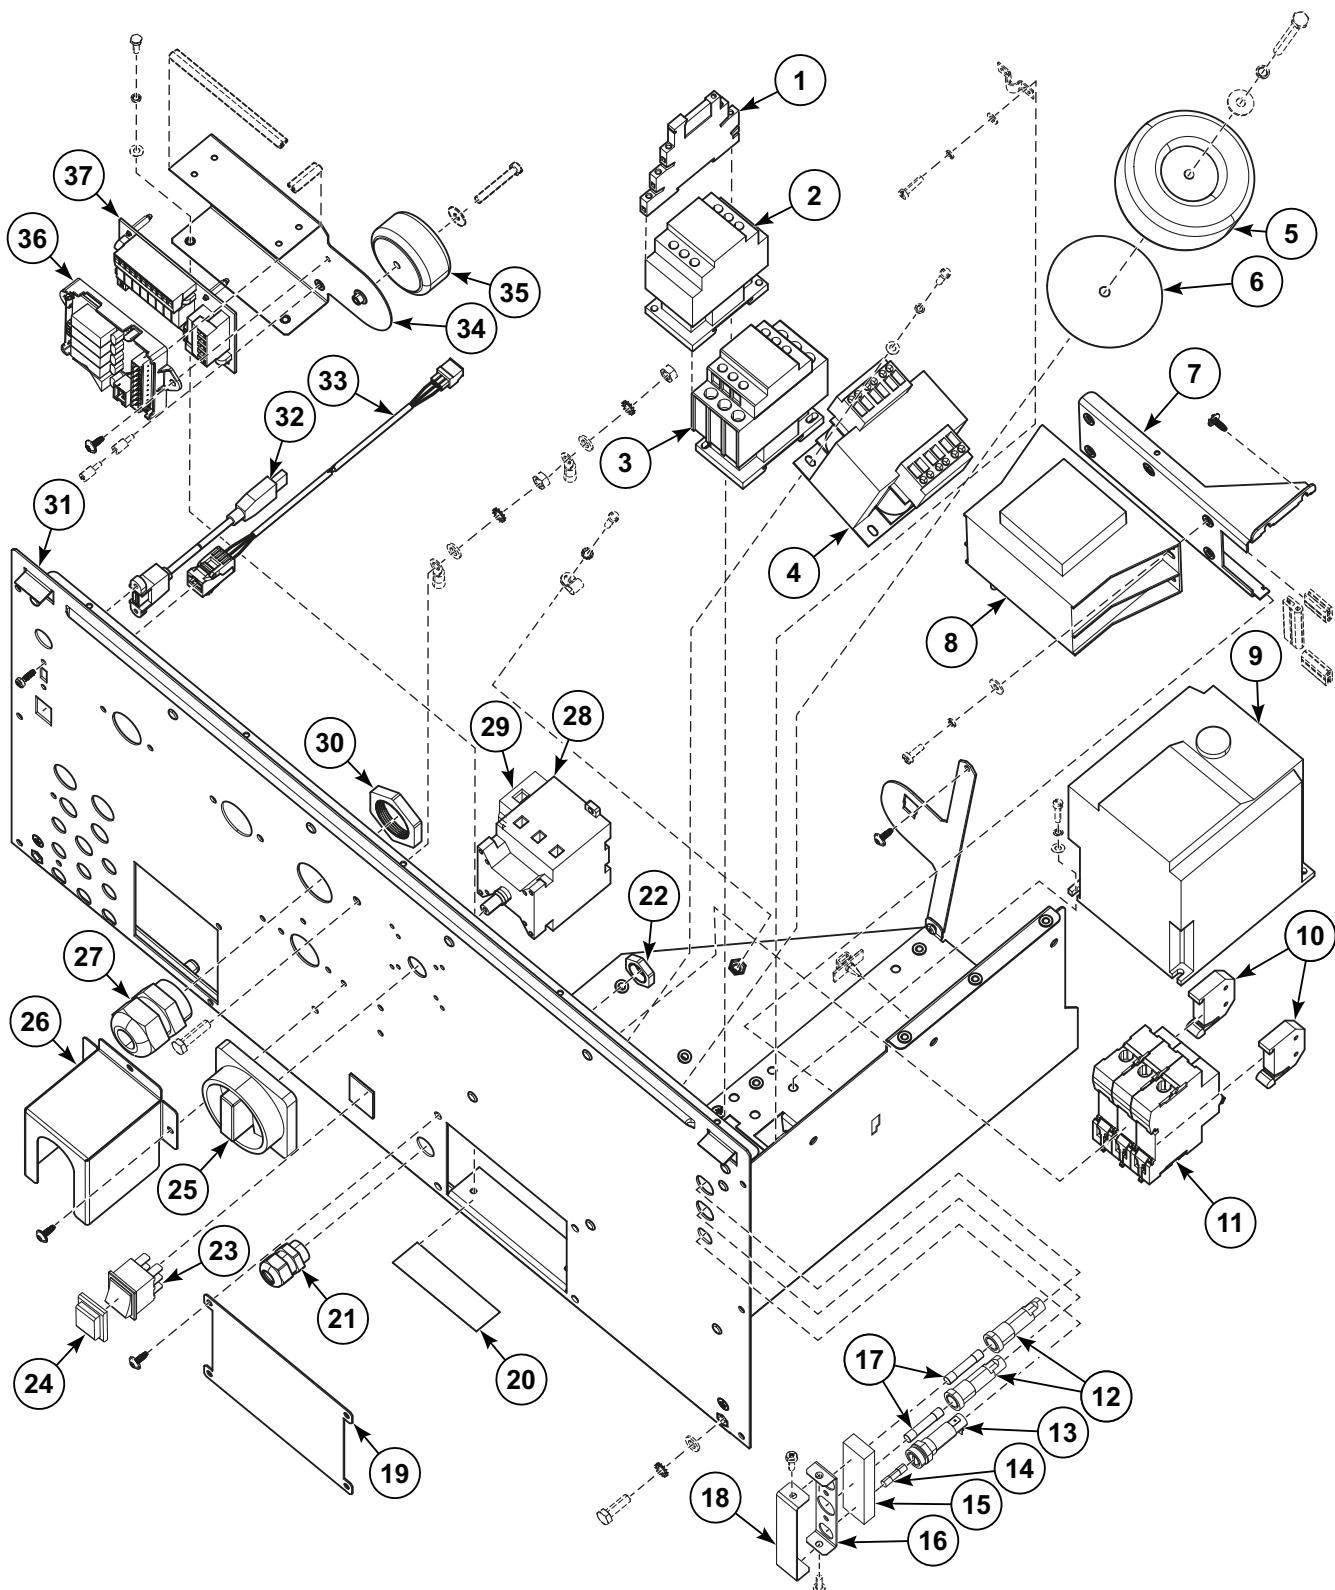

CZW629P\_D2409

## Rear Panel - 400-440V Models (Drawing 1 of 2)


REF	PART NO.	DESCRIPTION	COMMENTS
1	N/A	Relay	2 poles; Used with drain pump
2	SP514038	Contactor	LC1-D09M7; Used with frequency inverter
3	SP514038	Contactor	LC1-D09M7; Electric heating; 6kW, 9kW, 12kW 400V / 440V
	SP514042	Contactor	LC1D18M7; Electric heating 9kW 230V
	SPPRI345002019	Contactor	LC1D3201; Electric heating 12kW, 13.8kW, 230V
4	SP516648	Transformer	
5	571455	DC Choke	4mH; Supply 230V / 400V
6	571458	Insulation Washer	
7	572126	Filter Holder	Used with SP313251002104 Nut
8	SP557932	Frequency Inverter Filter	3x400V
9	571474	Frequency Inverter	1.5kW; 400V / 440V; FR-D740-036-SC-E8
	557961	Ferrite Core	Used with frequency inverter
10	SP346000209101	End Stop	
11	571464	Circuit Breaker	
12	SPPRI401003020	Fuse Housing	2 pieces
13	SPPRI401001020	Fuse Holder	
14	SP345805005020	Fuse	Without Neutral
15	570387	Self-Adhesive Profile	
16	SP554310	Fuse Holder	
17	SP345805163032	Fuse	6.3x32mm, T1A/500V; 2 pieces
18	SP554311	Fuse Cover	
19	566549	Cover	
20	570371	Label	Models with Transformer
	579019	Label	Models without Transformer
21	SP101406	Bushing	M16
22	SP101416	Nut	M16
23	SP100388	Switch	
24	SPPRI543000003	Push Bottom Cover	
25	SPPRI404000095	Main Switch Knob	
26	582259	Cover	
27	SP101409	Bushing	M32x1.5
28	SPPRI404000097	Main Switch	25A
	SPPRI404000098	Main Switch	32A
	SPPRI404000099	Main Switch	63A
29	SP506407	Main Switch	25A; Fourth pole
	SPPRI404001098	Main Switch	32A; Fourth pole
	SPPRI404001099	Main Switch	63A; Fourth pole
30	SP101419	Nut	M32
31	571017	Rear Panel	
32	SP547006	USB Cable	Rear panel connection; Optional
33	SP545234	Cable	RS485; With connectors
34	570382	Holder	
35	564561	Transformer	Models with Transformer
	579014	Transformer	Models without Transformer
36	804528	Soap Relay Board	Models with G in 7th position of the model number; used with F8715501 Extension Board Connection, 2.08m long
37	553187	Soap Relay Board	AF, IY, JY and NY models with V in 7th position of the model number; used with 569737 Pump Relay Board Flat Cable

N/A = Part no longer available

## Rear Panel - 400-440V Models (Drawing 2 of 2)

AF, IY, JY and NY models with V in the 7th position of the model number

Models with G in 7th position of the model number

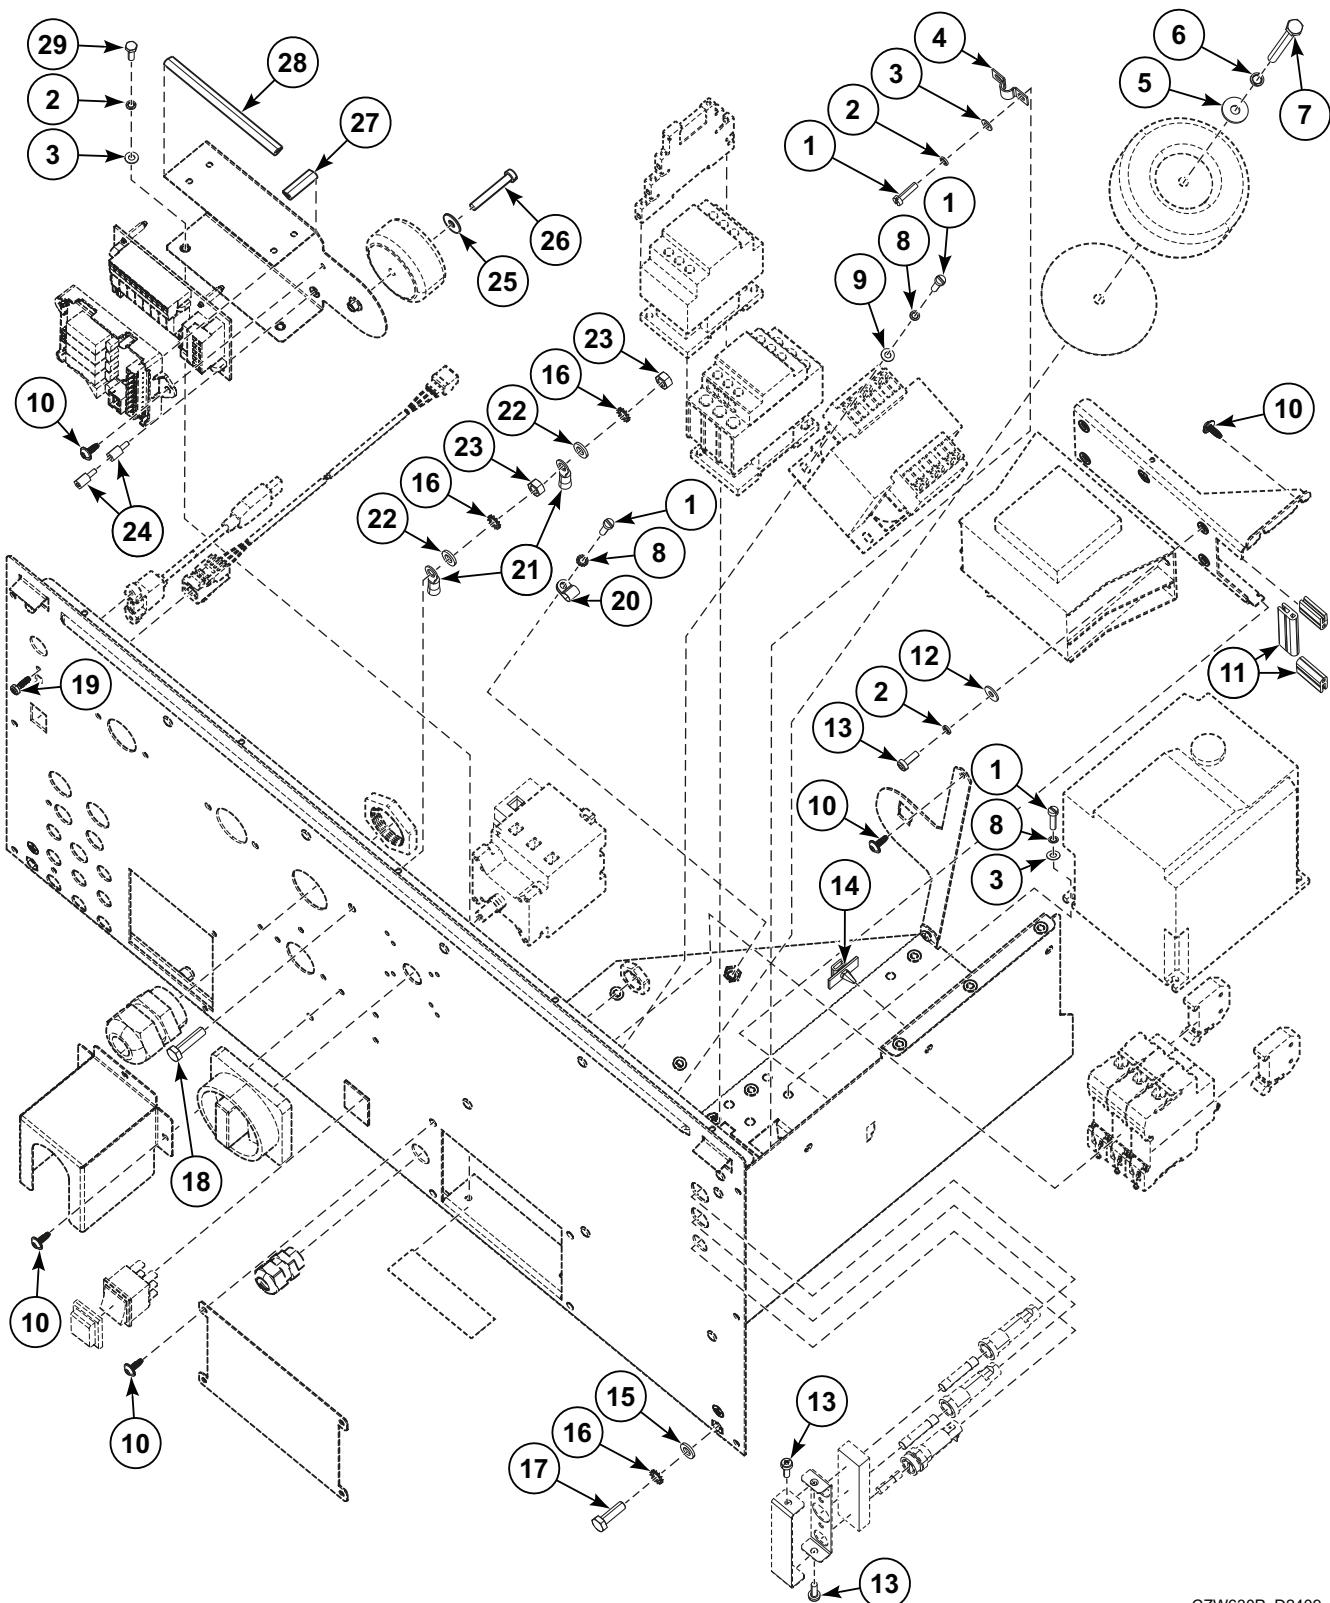


CZW630P\_D2409

## Rear Panel - 400-440V Models (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP309084000416	Bolt	M4x16
2	SP311127000004	Washer	4
3	SP311125000004	Washer	4.3
4	SP528392	Cable Clamp	
5	SP311902100006	Washer	6
6	SP311127000006	Washer	6
7	SP309933000660	Bolt	M6x60
8	SP311679800004	Washer	M4
9	SP311125000004	Washer	4.3
10	SP529206	Screw	4x11
11	SP529068	Edge Protection	
12	SP311902100004	Washer	4
13	SP555504	Bolt	M4x12
14	SP528313	Cable Holder	
15	SP311125240006	Washer	6
16	SP311679824006	Washer	6
17	SP309933000620	Bolt	M6x20
18	SP309933100625	Bolt	M6x25
19	SP526497	Screw	4x12
20	SP502214	Clip	
21	345000165034	Cable Eye	
22	SP311125100006	Washer	6
23	SP310934100006	Nut	M6
24	570381	Hex Pillar	M3; Models through 1 Sep 2021
25	SP505430	Washer	5
26	309084000535	Bolt	M5x35
27	SPPRI505000058	Profiled Sealing	0.025m; Models through 6 Feb 2023
28	SPPRI505000058	Profiled Sealing	0.105m; Models through 6 Feb 2023
29	SP309933240412	Bolt	M4x12

# Rear Panel - 230V/400V + Neutral (Drawing 1 of 2)

FX and PY models with V in the 7th position of the model number

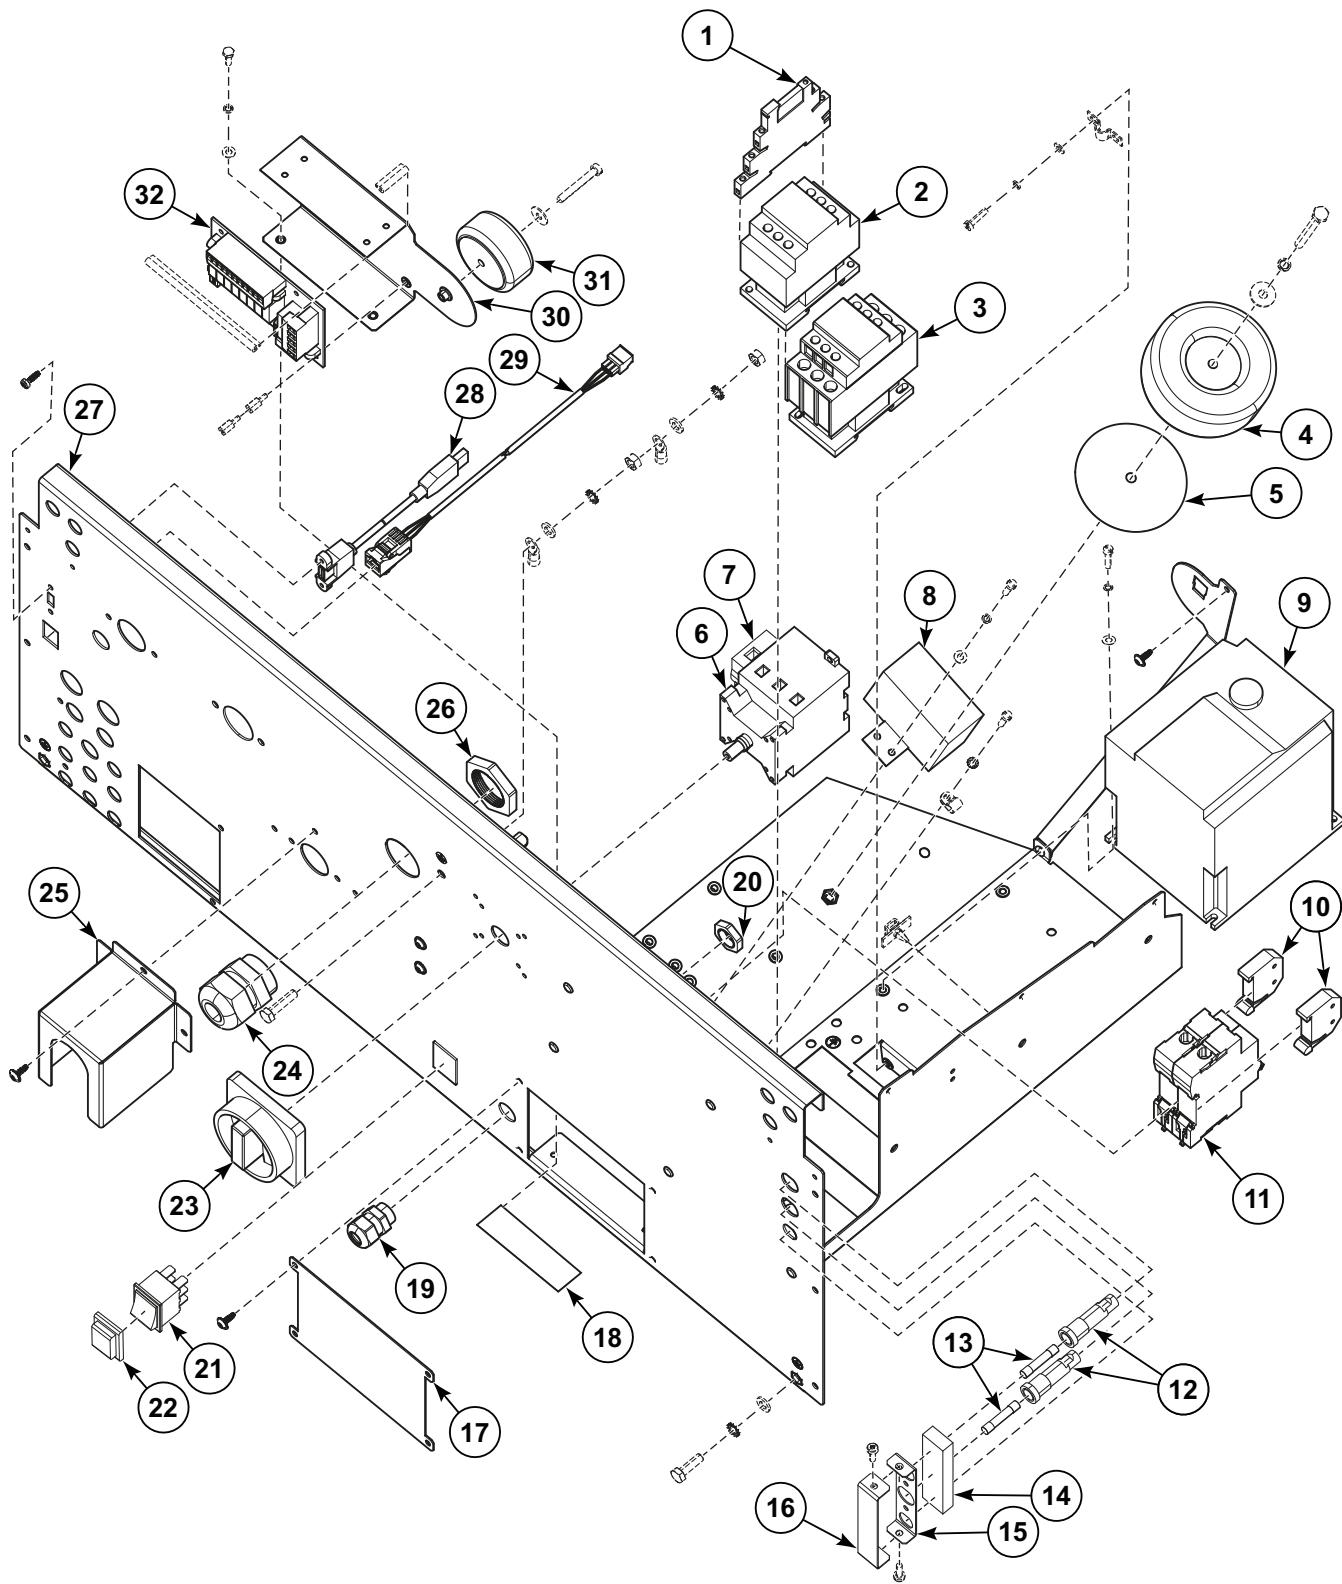

CZW608P\_D2410


## Rear Panel - 230V/400V + Neutral (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	570316	Liquid detergents	Assembly, includes items: (drawing 1 of 2): 18, 19, 23, 28-30, 569737 Pump Relay Board Flat Cable and items from (drawing 2 of 2): 2, 3 and 21-26
1	N/A	Relay	2 poles; Used with drain pump
2	SP514038	Contactor	LC1-D09M7; Used with frequency inverter
3	SP514038	Contactor	LC1-D09M7; Electric heating; 6kW, 9kW, 12kW 400V / 440V
	SP514042	Contactor	LC1D18M7; Electric heating 9kW 230V
	SPPRI345002019	Contactor	LC1D3201; Electric heating 12kW, 13.8kW, 230V
4	571454	DC Choke	9.7mH; Supply 230V, 400V / 400V+N / 440V
	571455	DC Choke	4mH; Supply 230V / 400V+N
5	571458	Insulation Washer	
6	SPPRI40400097	Main Switch	25A; Used with SP506407 Main Switch Fourth Pole 25A
	SPPRI40400098	Main Switch	32A; Used with SPPRI404001098 Main Switch Fourth Pole 32A
	SPPRI40400099	Main Switch	63A; Used with SPPRI404001099 Main Switch Fourth Pole 63A
7	SP506407	Main Switch	25A; Fourth pole; Applicable for 400V+N
	SPPRI404001098	Main Switch	32A; Fourth pole; Applicable for 400V+N
	SPPRI404001099	Main Switch	63A; Fourth pole; Applicable for 400V+N
8	568380	Filter	20A / 250V
9	571472	Frequency Inverter	FR-D720S-070-SC-E8; 1.5kW; 230V / 400V+N
	557961	Ferrite Core	Used with frequency inverter
10	SP346000209101	End Stop	
11	571462	Circuit Breaker	
12	SPPRI401003020	Fuse Housing	2 pieces
13	SP345805163032	Fuse	6.3x32mm, T1A/500V; 2 pieces
14	570387	Self-Adhesive Profile	
15	SP554310	Fuse Holder	
16	SP554311	Fuse Cover	
17	566549	Cover	
18	570371	Label	Models with Transformer
	579019	Label	Models without Transformer
19	SP101406	Bushing	M16
20	SP101416	Nut	M16
21	SP100388	Switch	
22	SPPRI54300003	Push Bottom Cover	
23	SPPRI40400095	Main Switch Knob	
24	SP101409	Bushing	M32x1.5
25	582259	Cover	
26	SP101419	Nut	M32
27	574113	Rear Panel	
28	SP547006	USB Cable	Rear panel connection; Optional
29	SP545234	Cable	RS485; With connectors
30	570382	Holder	
31	564561	Transformer	Models with Transformer
	579014	Transformer	Models without Transformer
32	553187	Soap Relay Board	Used with 569737 Pump Relay Board Flat Cable, 2m long

N/A = Part no longer available

## Rear Panel - 230V/400V + Neutral (Drawing 2 of 2)

FX and PY models with V in the 7th position of the model number

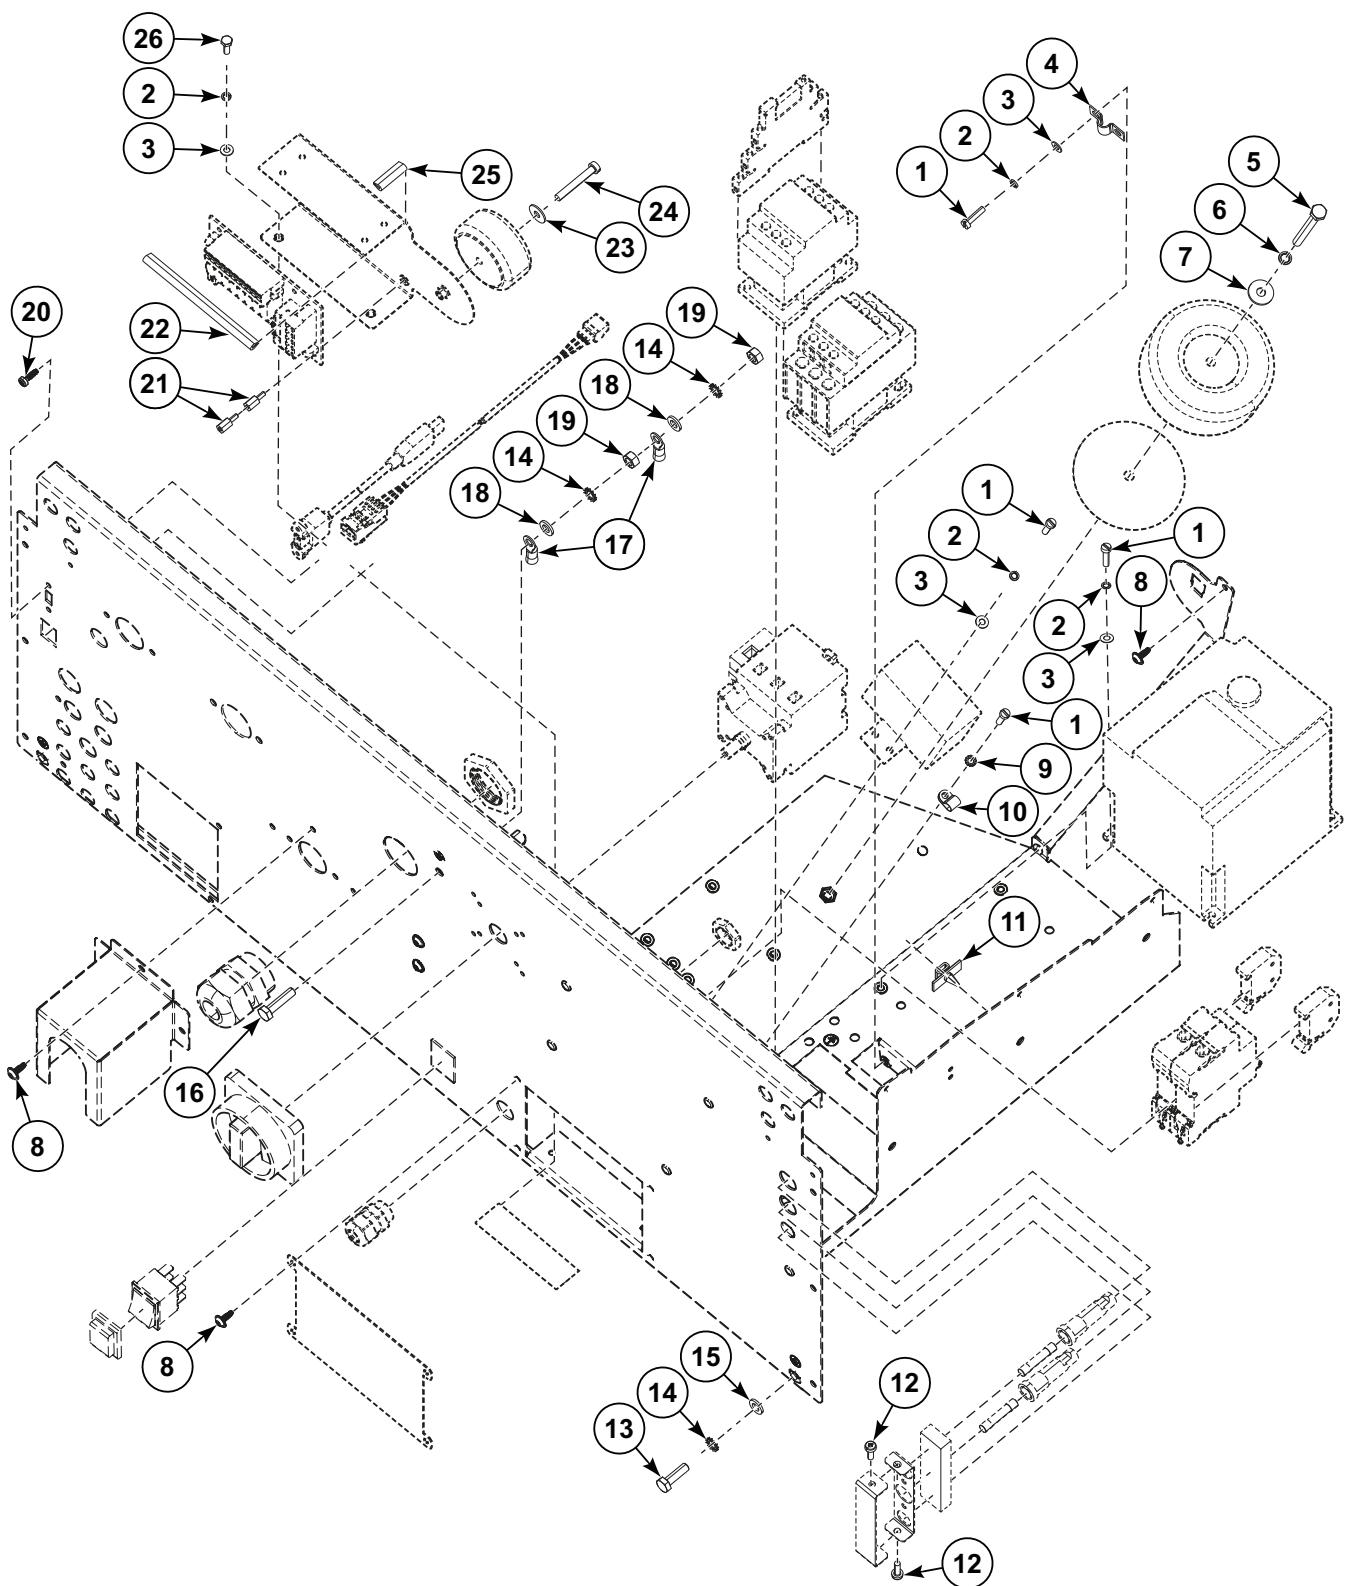


CZW614P\_D2410

## Rear Panel - 230V/400V + Neutral (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP309084000416	Bolt	M4x16
2	SP311127000004	Washer	4
3	SP311125000004	Washer	4.3
4	SP528392	Cable Clamp	
5	SP309933000660	Bolt	M6x60
6	SP311127000006	Washer	6
7	SP311902100006	Washer	6
8	SP529206	Screw	4x11
9	SP311679800004	Washer	M4
10	SP502214	Clip	
11	SP528313	Cable Holder	
12	SP555504	Bolt	
13	SP309933000620	Bolt	M6x20
14	SP311679824006	Washer	6
15	SP311125240006	Washer	6
16	SP309933100625	Bolt	M6x25
17	345000165034	Cable Eye	
18	SP311125100006	Washer	6
19	SP310934100006	Nut	M6
20	SP526497	Screw	4x12
21	570381	Hex Pillar	M3; Models through 1 Sep 2021
22	SPPRI505000058	Profiled Sealing	0.105m; Models through 6 Feb 2023
23	SP505430	Washer	5
24	309084000535	Bolt	M5x35
25	SPPRI505000058	Profiled Sealing	0.025m; Models through 6 Feb 2023
26	SP309933240412	Bolt	M4x12

## Rear Panel - 400V / 440-480V (Drawing 1 of 2)

FX and PY models with V in the 7th position of the model number

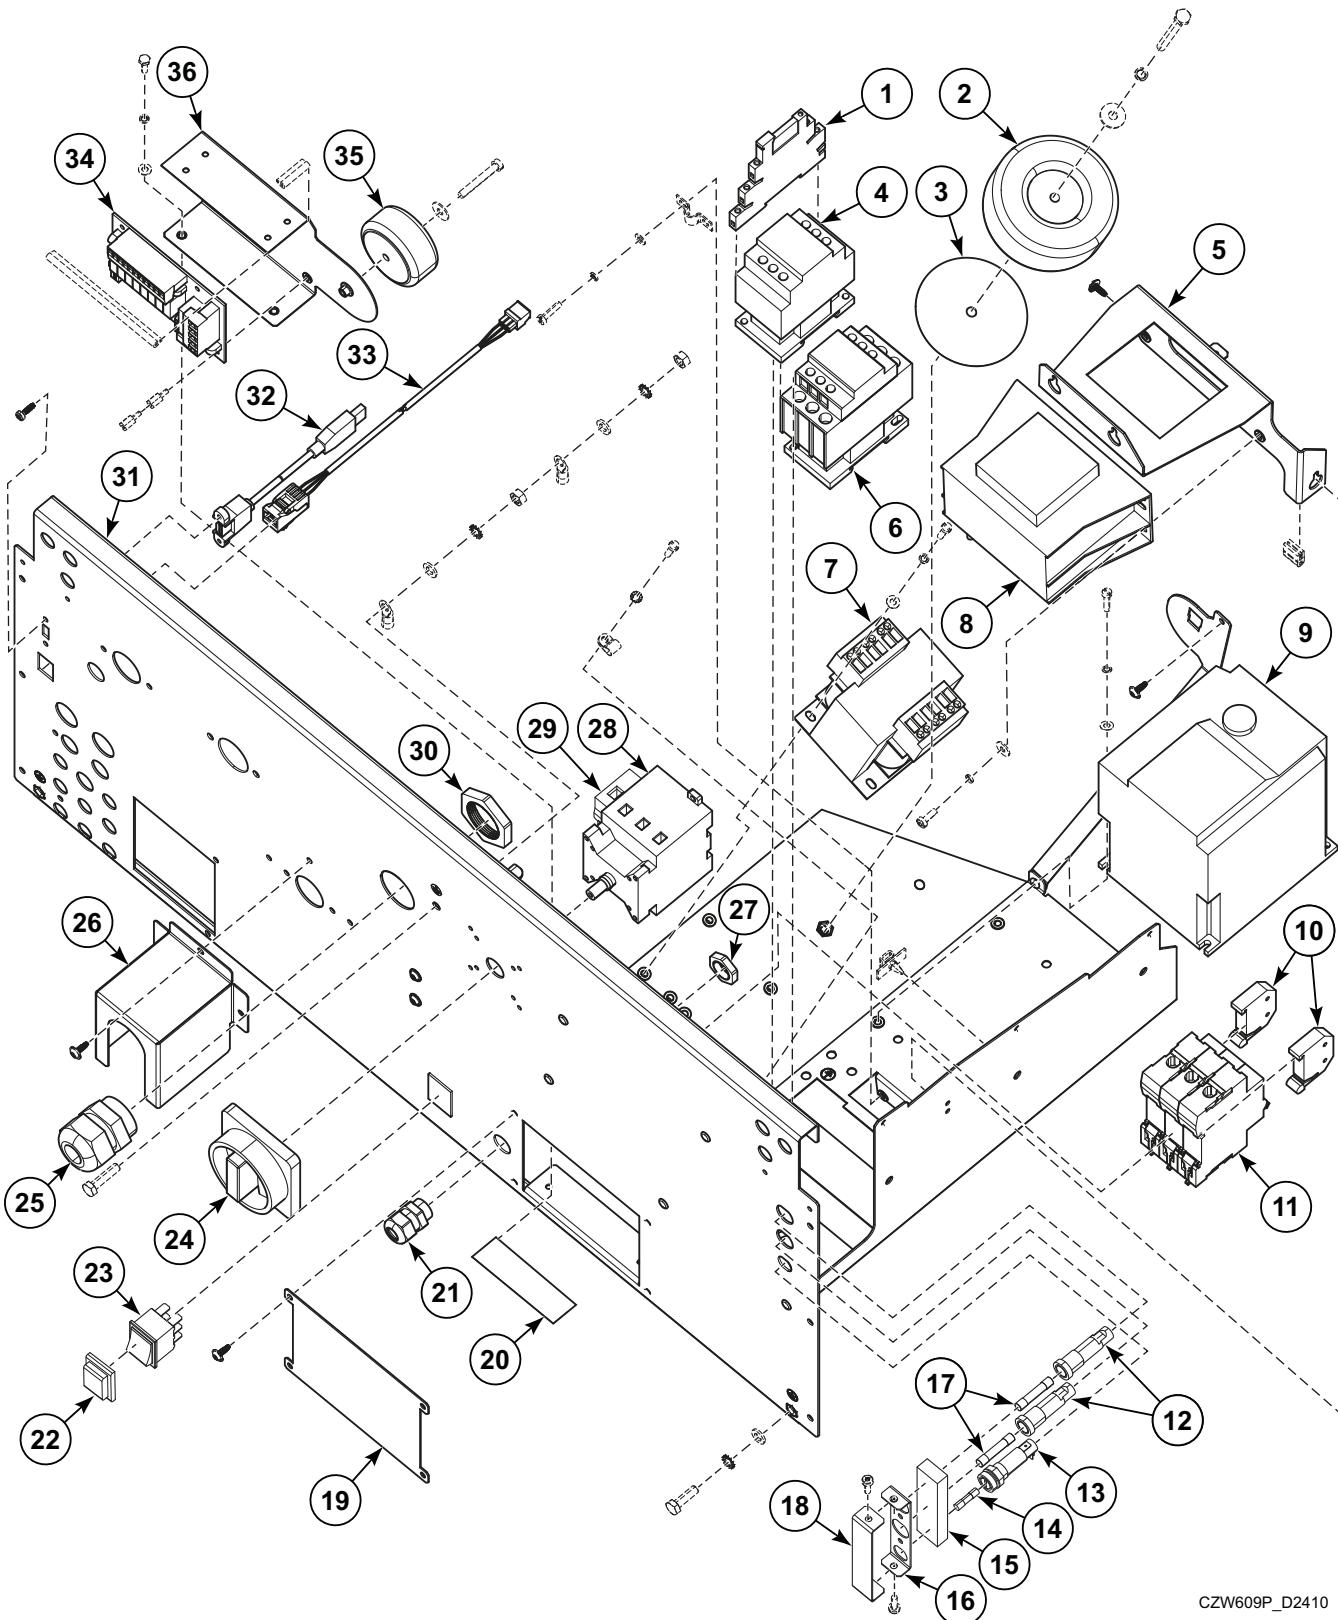

CZW609P\_D2410


## Rear Panel - 400V / 440-480V (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	570316	Liquid detergents	Assembly, includes items: (drawing 1 of 2): 20, 21, 25, 32-34, 569737 Pump Relay Board Flat Cable and items from (drawing 2 of 2): 2, 3, 22, 23 and 25-28
1	N/A	Relay	
2	571454	DC Choke	9.7mH; Supply 400V / 440V
3	571458	Insulation Washer	
4	SP514038	Contactor	LC1-D09M7; Used with frequency inverter
5	574850	Filter Holder	Used with SP313251002104 Nut
6	SP514038	Contactor	LC1-D09M7; Electric heating; 6kW, 9kW, 12kW 400V / 440V
	SP514042	Contactor	LC1D18M7; Electric heating 9kW 230V
	SPPRI345002019	Contactor	LC1D3201; Electric heating 12kW, 13.8kW, 230V
7	SP516648	Transformer	
8	SP557932	Frequency Inverter Filter	3x400V
9	571474	Frequency Inverter	1.5kW; 400V / 440V; FR-D740-036-SC-E8
	557961	Ferrite Core	Used with frequency inverter
10	SP346000209101	End Stop	
11	571464	Circuit Breaker	
12	SPPRI401003020	Fuse Housing	2 pieces
13	SPPRI401001020	Fuse Holder	
14	SP345805005020	Fuse	Without Neutral
15	570387	Self-Adhesive Profile	
16	SP554310	Fuse Holder	
17	SP345805163032	Fuse	6.3x32mm, T1A/500V; 2 pieces
18	SP554311	Fuse Cover	
19	566549	Cover	
20	570371	Label	Models with Transformer
	579019	Label	Models without Transformer
21	SP101406	Bushing	M16
22	SPPRI543000003	Push Bottom Cover	
23	SP100388	Switch	
24	SPPRI404000095	Main Switch Knob	
25	SP101409	Bushing	M32x1.5
26	582259	Cover	
27	SP101416	Nut	M16
28	SPPRI404000097	Main Switch	25A
	SPPRI404000098	Main Switch	32A
	SPPRI404000099	Main Switch	63A
29	N/A	Main Switch	25A; Fourth pole
	N/A	Main Switch	32A; Fourth pole
	N/A	Main Switch	63A; Fourth pole
30	SP101419	Nut	M32
31	574113	Rear Panel	
32	SP547006	USB Cable	Rear panel connection; Optional
33	SP545234	Cable	RS485; With connectors
34	553187	Soap Relay Board	Used with 569737 Pump Relay Board Flat Cable
35	564561	Transformer	Models with Transformer
	579014	Transformer	Models without Transformer
36	570382	Holder	

N/A = Part no longer available

## Rear Panel - 400V / 440-480V (Drawing 2 of 2)

FX and PY models with V in the 7th position of the model number

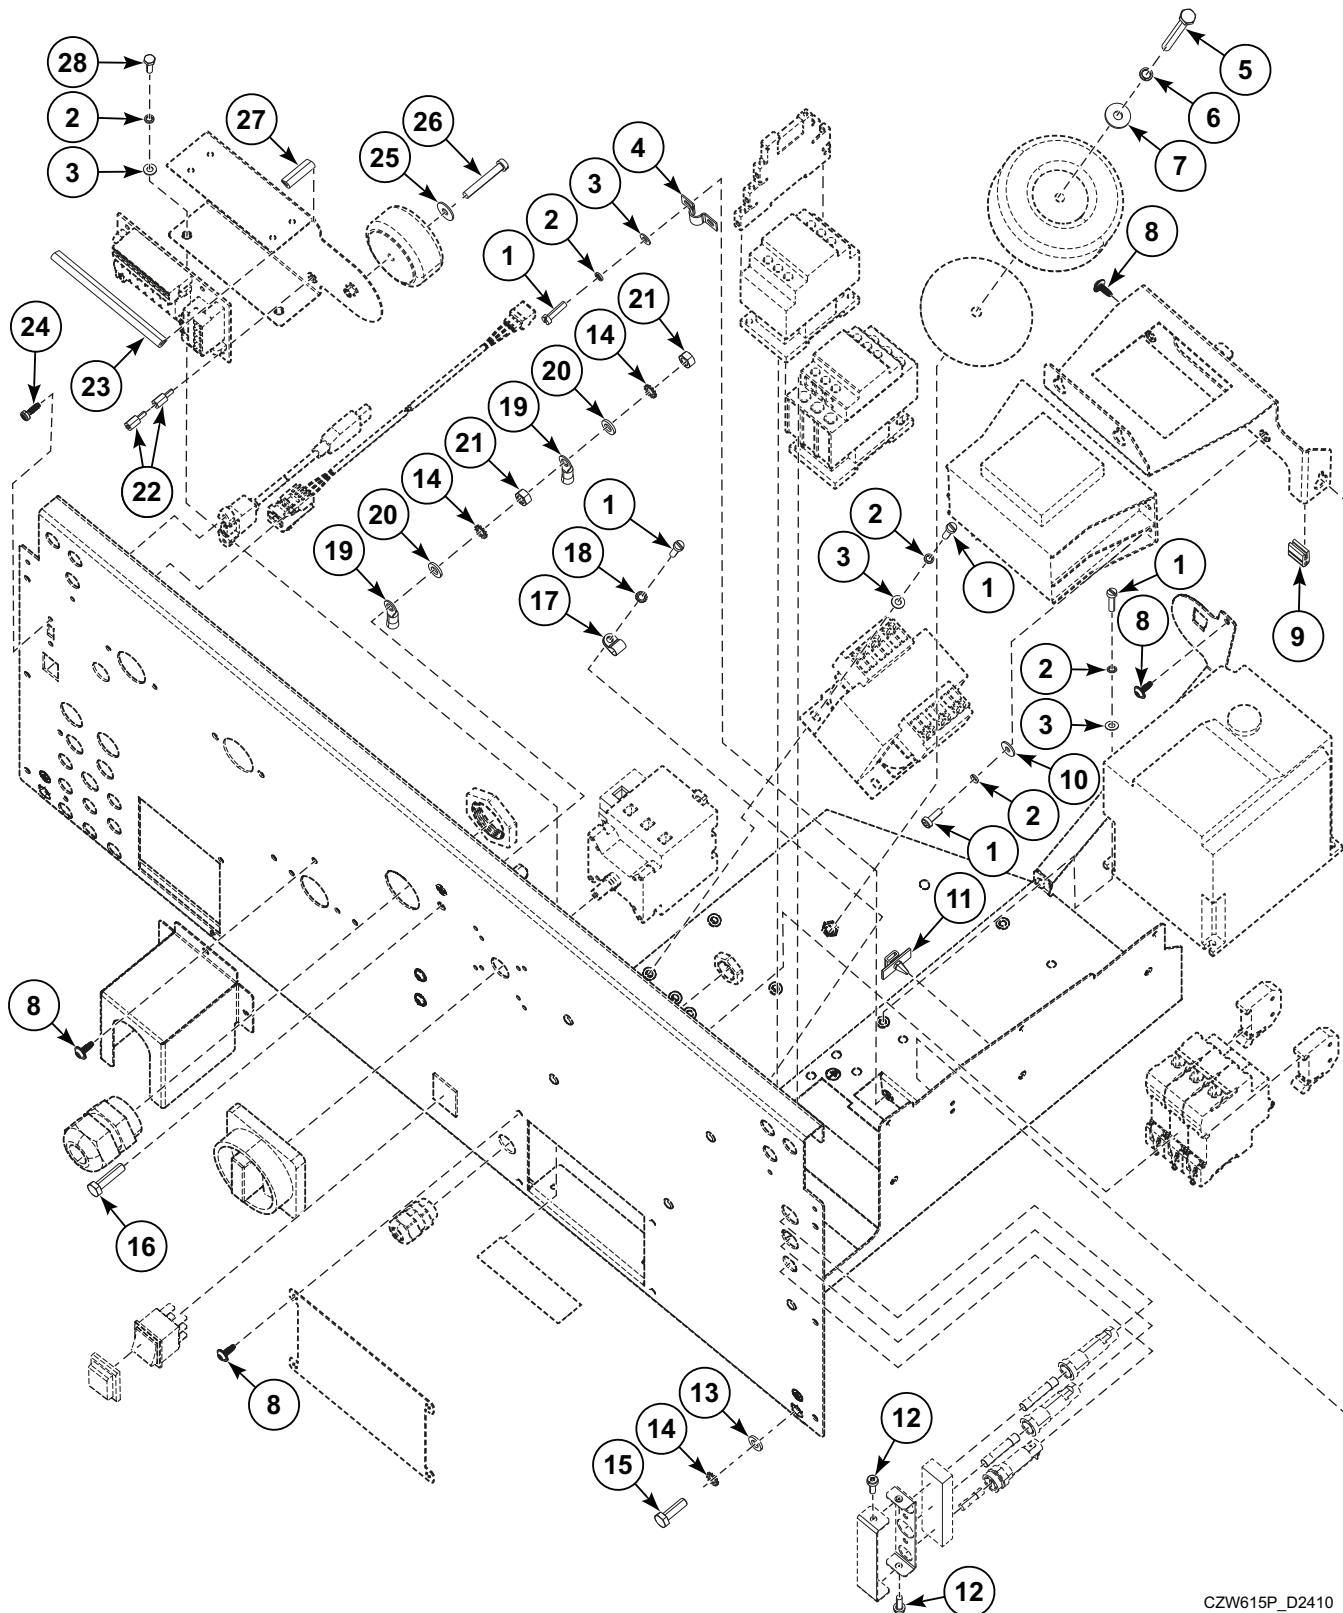


CZW615P\_D2410

## Rear Panel - 400V / 440-480V (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP309084000416	Bolt	M4x16
2	SP311127000004	Washer	4
3	SP311125000004	Washer	4.3
4	SP528392	Cable Clamp	
5	SP309933000660	Bolt	M6x60
6	SP311127000006	Washer	6
7	SP311902100006	Washer	6
8	SP529206	Screw	4x11
9	SP529068	Edge Protection	0.014m
10	SP311902100004	Washer	4
11	SP528313	Cable Holder	
12	SP555504	Bolt	M4x12
13	SP311125240006	Washer	6
14	SP311679824006	Washer	6
15	SP309933000620	Bolt	M6x20
16	SP309933100625	Bolt	M6x25
17	SP502214	Clip	
18	SP311679800004	Washer	M4
19	345000165034	Cable Eye	
20	SP311125100006	Washer	6
21	SP310934100006	Nut	M6
22	570381	Hex Pillar	M3; Models through 1 Sep 2021
23	SPPRI505000058	Profiled Sealing	0.105m; Models through 6 Feb 2023
24	SP526497	Screw	4x12
25	SP505430	Washer	5
26	309084000535	Bolt	M5x35
27	SPPRI505000058	Profiled Sealing	0.025m; Models through 6 Feb 2023
28	SP309933240412	Bolt	M4x12

# Steam Heating

Models with A, D, F, I, J, R, T or X in 7th position of the model number

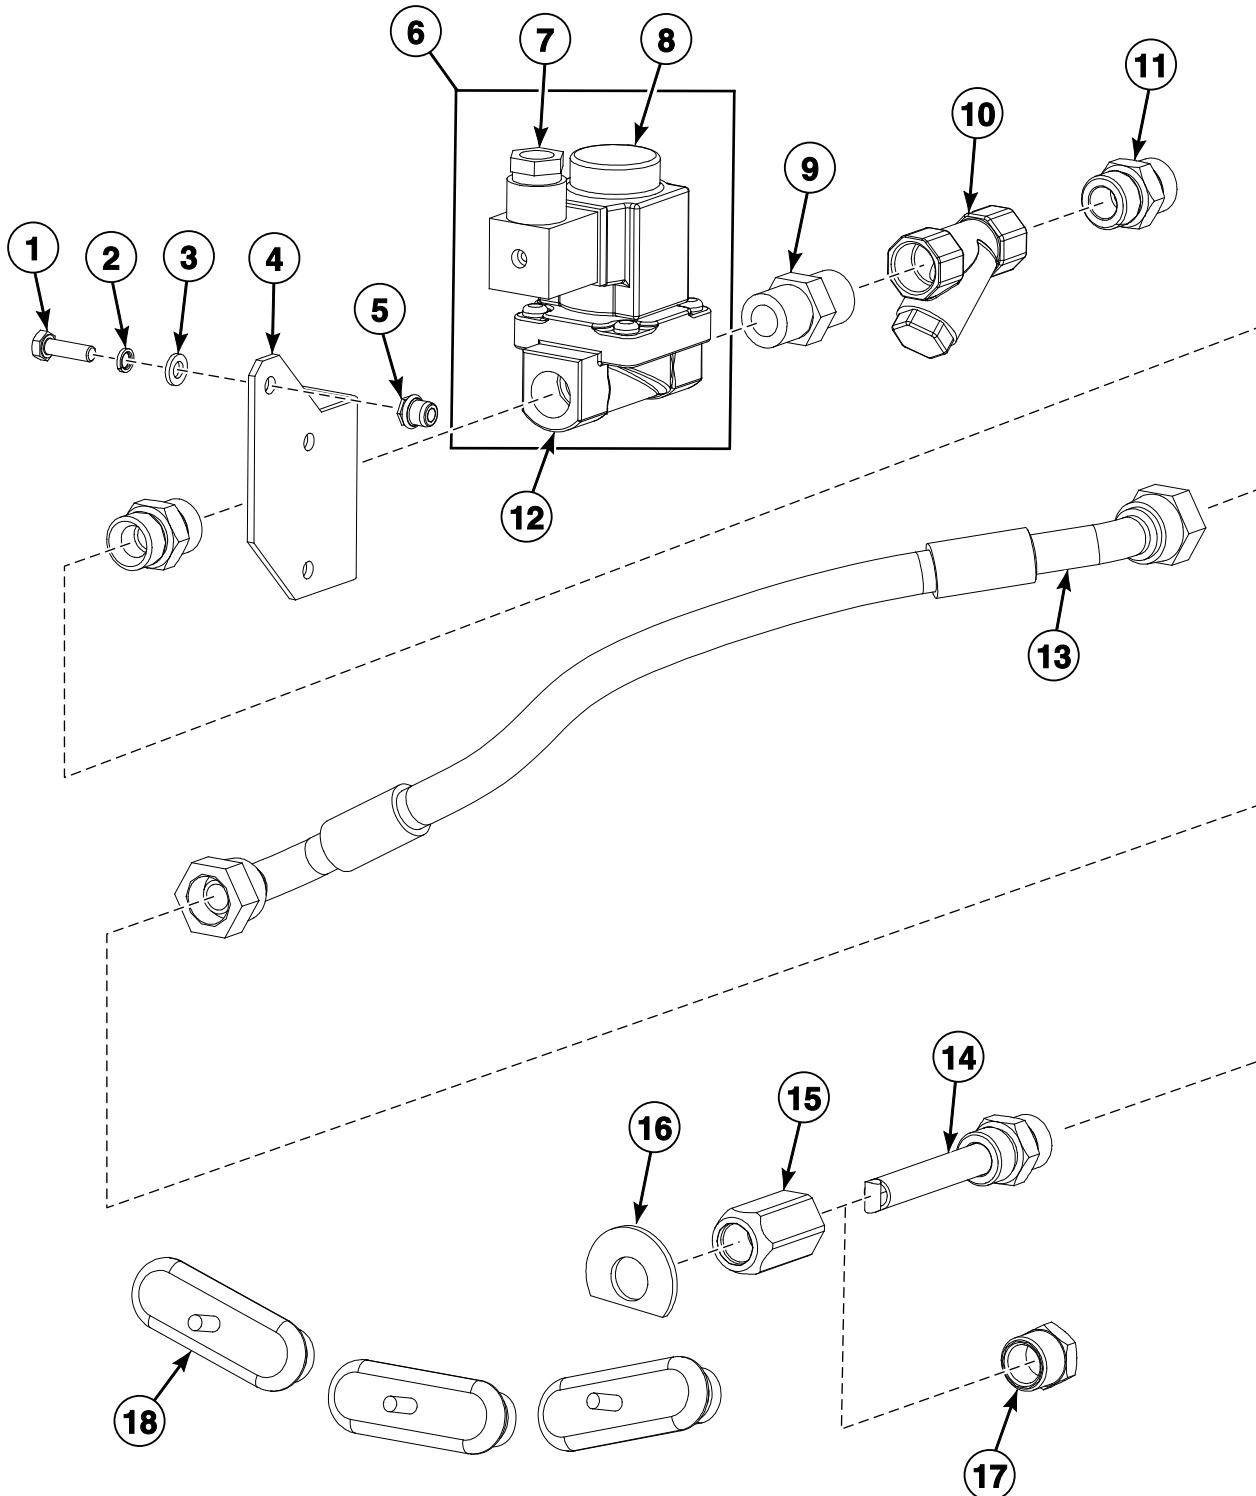


CFD2852P\_D2409

## Steam Heating

REF	PART NO.	DESCRIPTION	COMMENTS
	SP526564	Seal	
	SP101403	Adhesive	Loctite 5366
	SP245704000603	Adhesive	Loctite 603
	SP559313	Steam Kit	
1	SP309933000620	Bolt	M6x20
2	SP311127000006	Washer	6
3	SP311125000006	Washer	6.4
4	SP526529	Steam Valve Support	
5	SP313251000006	Nut	M6
6	SP514164	Steam Valve	1/2 inch
7	SP554156	Connector	
8	SP554110	Coil	50/60Hz
9	SP319428324012	Adapter	1/2 inch
10	SP405054120215	Steam Filter	1/2 inch
11	SPR22112000114	Pipe Nipple	1/2 inch
12	SP514165	Steam Valve Body	
13	SP526528	Steam Hose	1/2 inch, l=520mm
14	SP526525	Steam Injector	
15	SP547968	Adapter	G3/8 inch / G1/2 inch
16	SP547981	Washer	
17	SPPRI426001268	Plug	1/2 inch; Prep for electric and steam heat
18	SPPRI342001016	Heating Element Hole Plug	

# Steam Heating

Models with G or V in 7th position of the model number

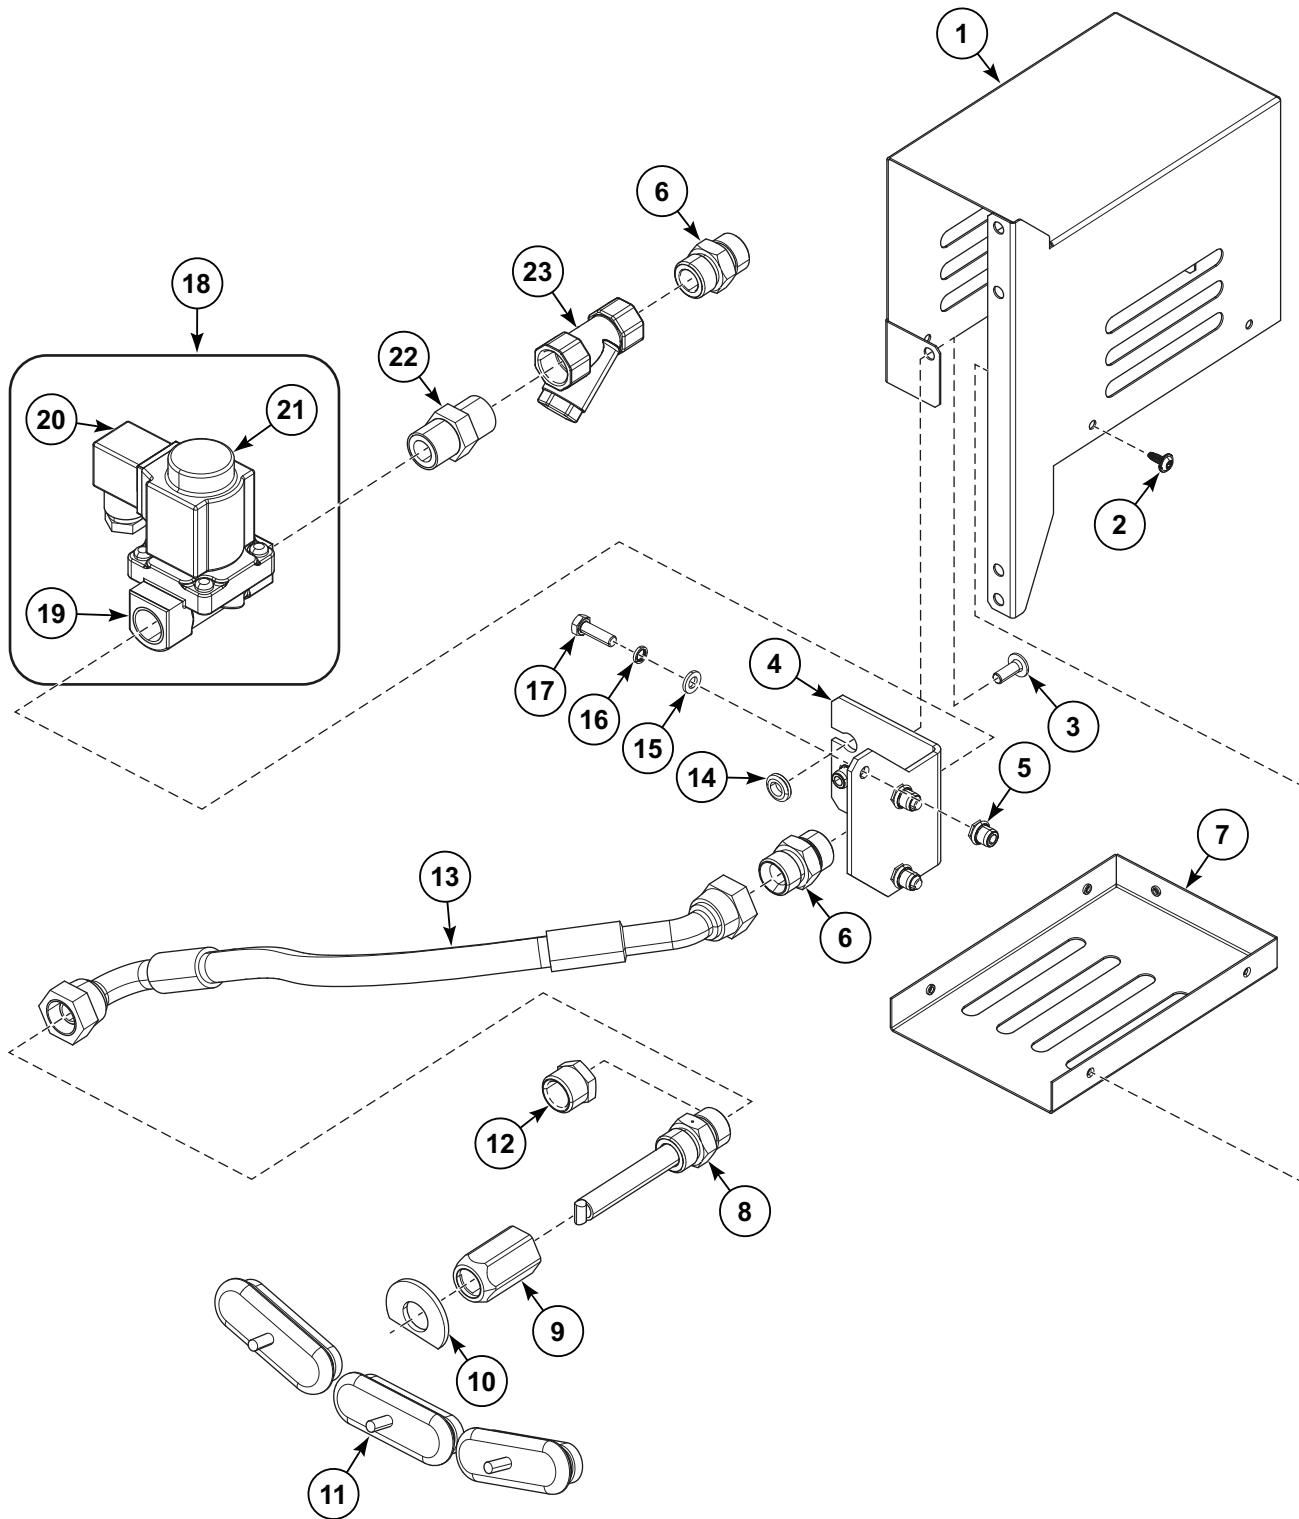


CZW598P\_D2409

## Steam Heating

REF	PART NO.	DESCRIPTION	COMMENTS
	555353	Steam Kit	
	SP101403	Adhesive	Loctite 5366
	SP245704000603	Adhesive	Loctite 603
1	582255	Steam Valve Cover	
2	SP529206	Screw	4x11
3	SP555658	Bolt	M6x16
4	SP526529	Steam Valve Support	
5	SP313251000006	Nut	M6
6	SPR22112000114	Pipe Nipple	1/2 inch
7	582256	Steam Valve Cover	
8	SP526525	Steam Injector	
9	SP547968	Adapter	G3/8 inch / G1/2 inch
10	SP547981	Washer	
11	SPPRI342001016	Heating Element Hole Plug	
12	SPPRI426001268	Plug	1/2 inch; Prep for electric and steam heat
13	SP526528	Steam Hose	1/2 inch, l=520mm
14	SP273121008002	Cable Bushing	
15	SP311125000006	Washer	6
16	SP311127000006	Washer	6
17	SP309933000620	Bolt	M6x20
18	SP514164	Steam Valve	1/2 inch
19	SP514165	Steam Valve Body	
20	SP554156	Connector	
21	SP554110	Coil	50/60Hz
22	SP319428324012	Adapter	1/2 inch
23	SP405054120215	Steam Filter	1/2 inch

# Washing Drum and Tub (Drawing 1 of 2)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

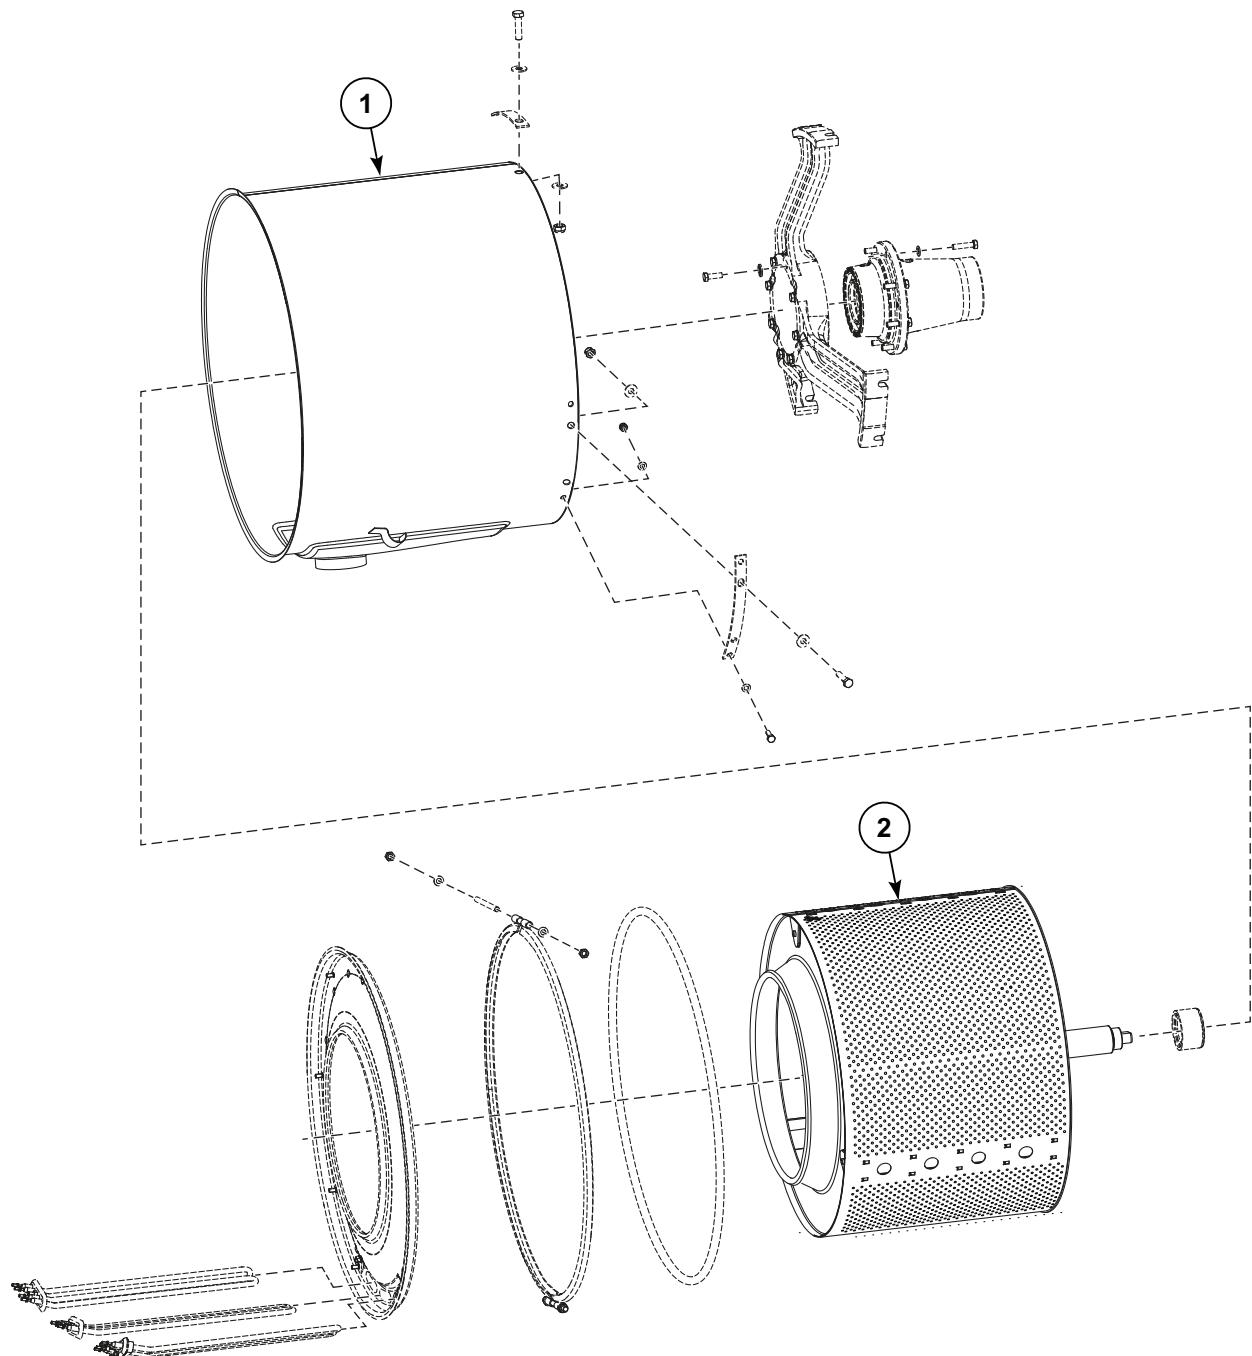


CZW600P\_D2410

## Washing Drum and Tub (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP537736	External Tub	Models Through Serial No 105FX016466UZ; Steam heating
	582308	External Tub	Models Starting Serial No 105FX016467UZ; Steam heating
	SP537917	External Tub	Models Through Serial No 105FX016466UZ; Electric heating
	582309	External Tub	Models Starting Serial No 105FX016467UZ; Electric heating
	567177	External Tub	Models Through Serial No 105FX016466UZ; Used with SoftWash and built-in recirculation pump; Steam heating
	582310	External Tub	Models Starting Serial No 105FX016467UZ; Used with SoftWash and built-in recirculation pump; Steam heating
	570390	External Tub	Models Through Serial No 105FX016466UZ; Used with SoftWash and built-in recirculation pump; Electric heating
	582311	External Tub	Models Starting Serial No 105FX016467UZ; Used with SoftWash and built-in recirculation pump; Electric heating
2	537732P	Washing Drum	Cascade; Includes SP537843 Shaft Ring
	563265P	Washing Drum	AF, IY and NY models with G, H, J or K in 13th position of the model number; Flat; Includes SP537843 Shaft Ring
	563245P	Washing Drum	Normal spin; 7mm perforation; Includes SP537843 Shaft Ring

## Washing Drum and Tub (Drawing 2 of 2)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

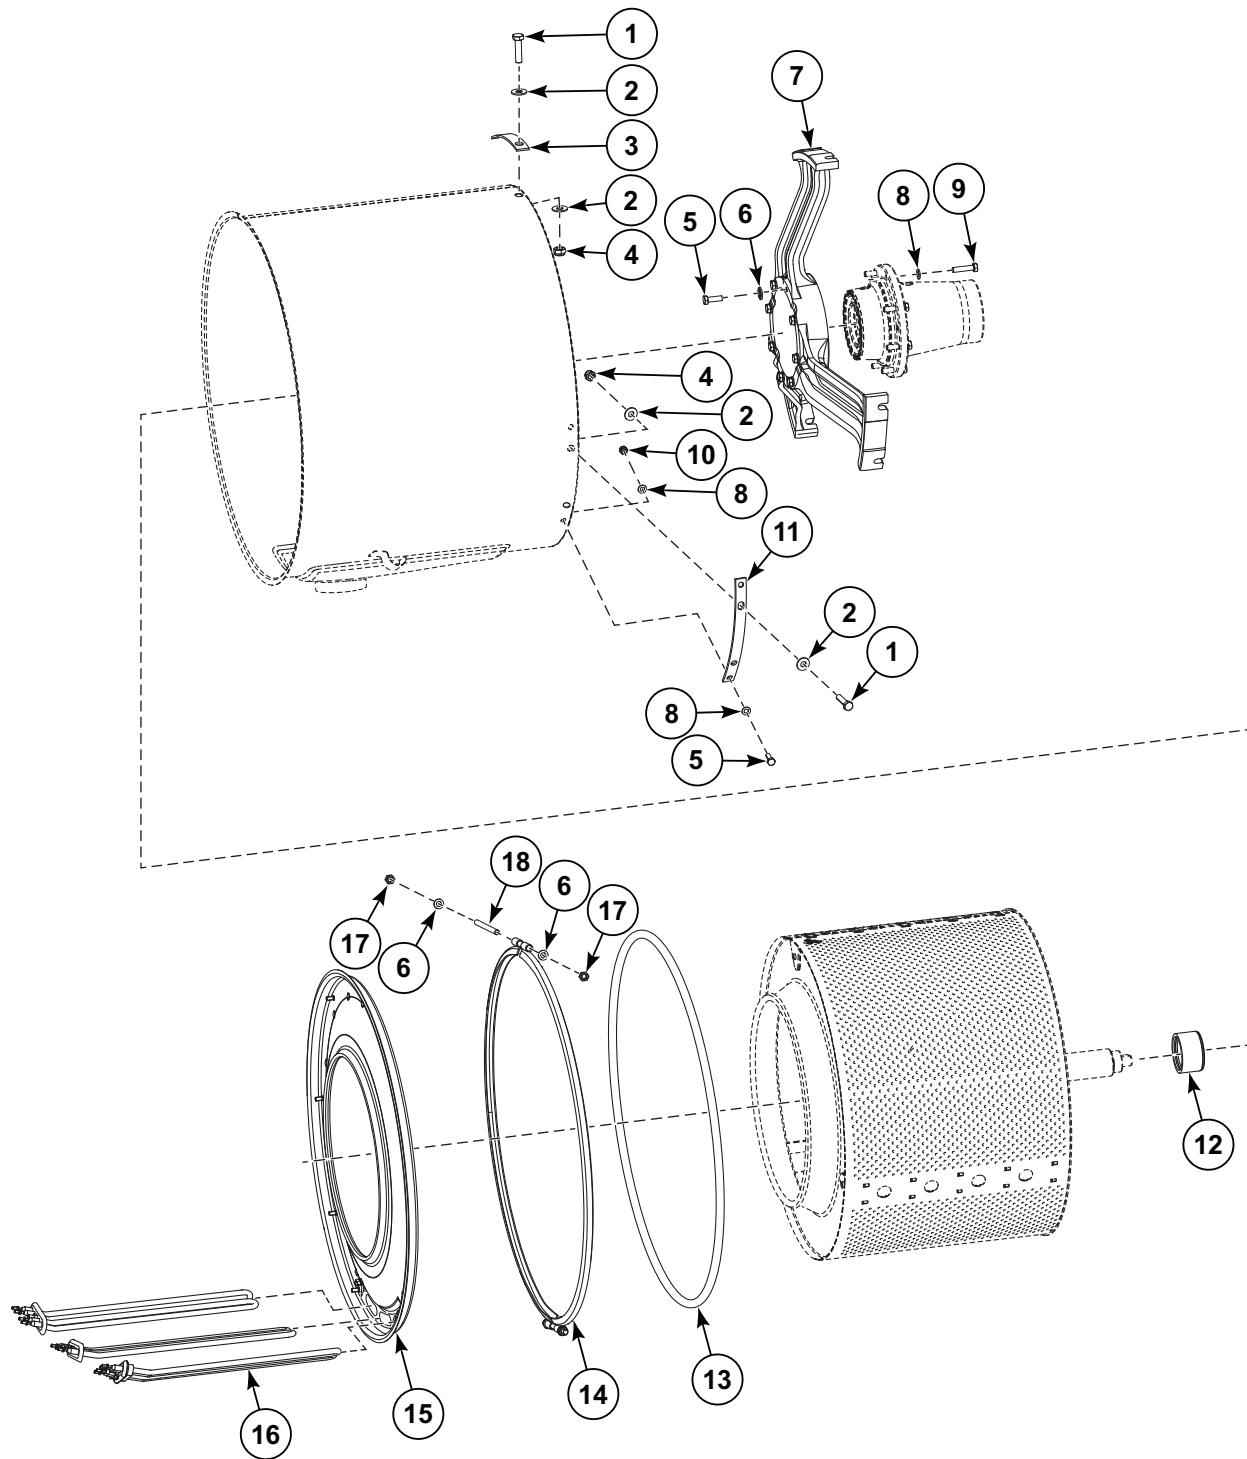


CZW584P\_D2410

## Washing Drum and Tub (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	SP245704003021	Adhesive	Loctite 243; Used with bolt
	SPPRI704000053	Sealant	
	SP245704000050	Adhesive	
	SP510889	Anticorrosive Agent	
1	SP527420	Bolt	M10x40
2	SP311737000010	Washer	M10
3	SP537885	Washer	Models Through Serial No 105FX016466UZ; 3pcs
4	SP310985000010	Nut	M10
5	SP309933240825	Bolt	M8x25
6	SP311125240008	Washer	8; (Used with SPF02119000415 Bolt); (Used with SP537730 Cross Piece models Through Serial No 105FX016466UZ)
7	SP537730	Cross Piece	
8	SP311125000008	Washer	M8
9	SP309933000835	Bolt	M8x35
10	SP310985000008	Nut	M8; Models Starting Serial number 105FX016467UZ
11	582275	Washer	Models Starting Serial No 105FX016467UZ; 3pcs
12	SP537843	Shaft Ring	
13	SP537739	Seal	d10-2100mm
14	SP537737	Clamp	
15	SP537742	External Tub Front Plate	
16	SP540143	Heating Element	2000W, l=325mm
	SP540144	Heating Element	3000W, l=325mm
	SP540145	Heating Element	2x1500kW, l=325mm
	SP540146	Heating Element	2x2000W, l=335mm
17	SP310934240008	Nut	M8
18	SPF02119000415	Bolt	M8

# Washing Drum and Tub (Drawing 1 of 3)

Models with G or V in 7th position of the model number

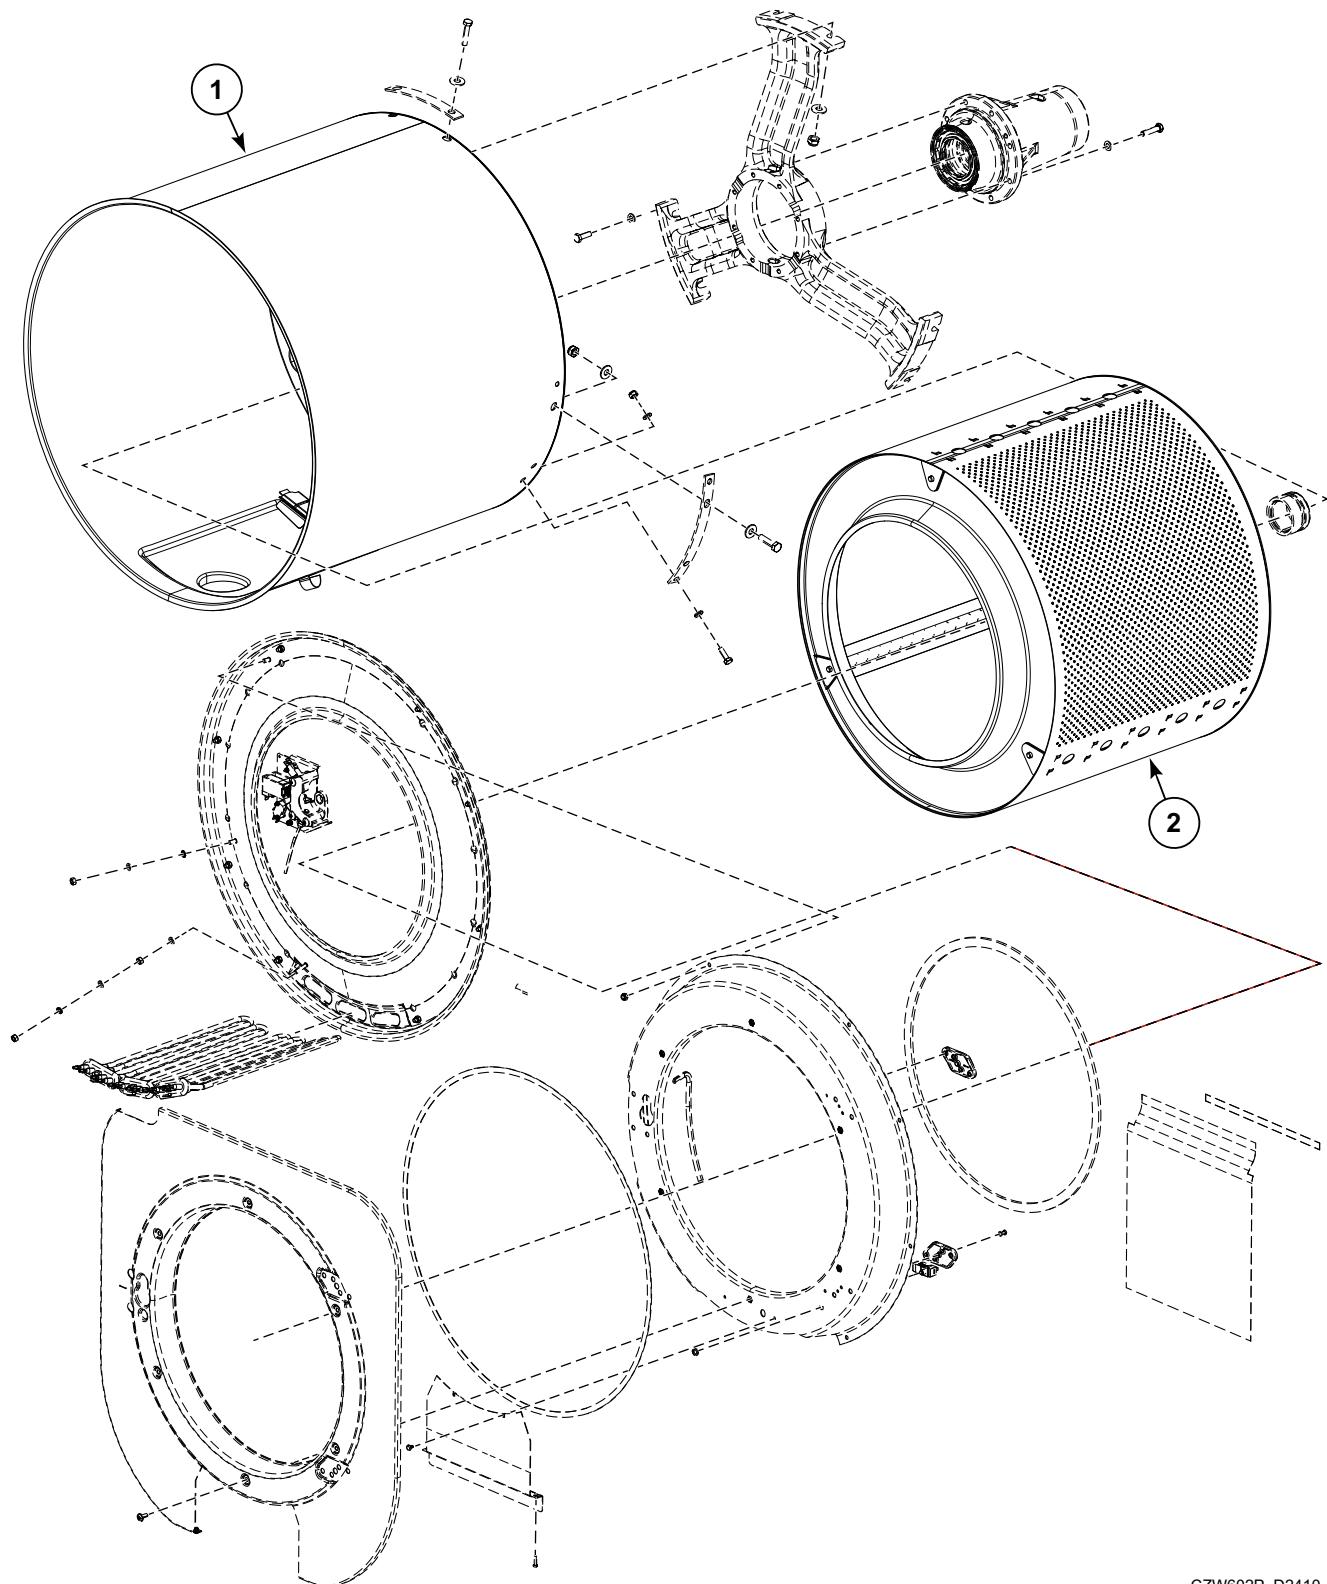


CZW602P\_D2410

## Washing Drum and Tub (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP537736	External Tub	Models Through Serial No 105FX016466UZ; Steam heating
	582308	External Tub	Models Starting Serial No 105FX016467UZ; Steam heating
	SP537917	External Tub	Models Through Serial No 105FX016466UZ; Electric heating
	582309	External Tub	Models Starting Serial No 105FX016467UZ; Electric heating
	567177	External Tub	Models Through Serial No 105FX016466UZ; Used with SoftWash and built-in recirculation pump; Steam heating
	582310	External Tub	Models Starting Serial No 105FX016467UZ; Used with SoftWash and built-in recirculation pump; Steam heating
	570390	External Tub	Models Through Serial No 105FX016466UZ; Used with SoftWash and built-in recirculation pump; Electric heating
	582311	External Tub	Models Starting Serial No 105FX016467UZ; Used with SoftWash and built-in recirculation pump; Electric heating
2	537732P	Washing Drum	Cascade; Includes SP537843 Shaft Ring
	563265P	Washing Drum	AF, IY and NY models with G, H, J or K in 13th position of the model number; Flat; Includes SP537843 Shaft Ring
	563245P	Washing Drum	Normal spin; 7mm perforation; Includes SP537843 Shaft Ring

## Washing Drum and Tub (Drawing 2 of 3)

Models with G or V in 7th position of the model number

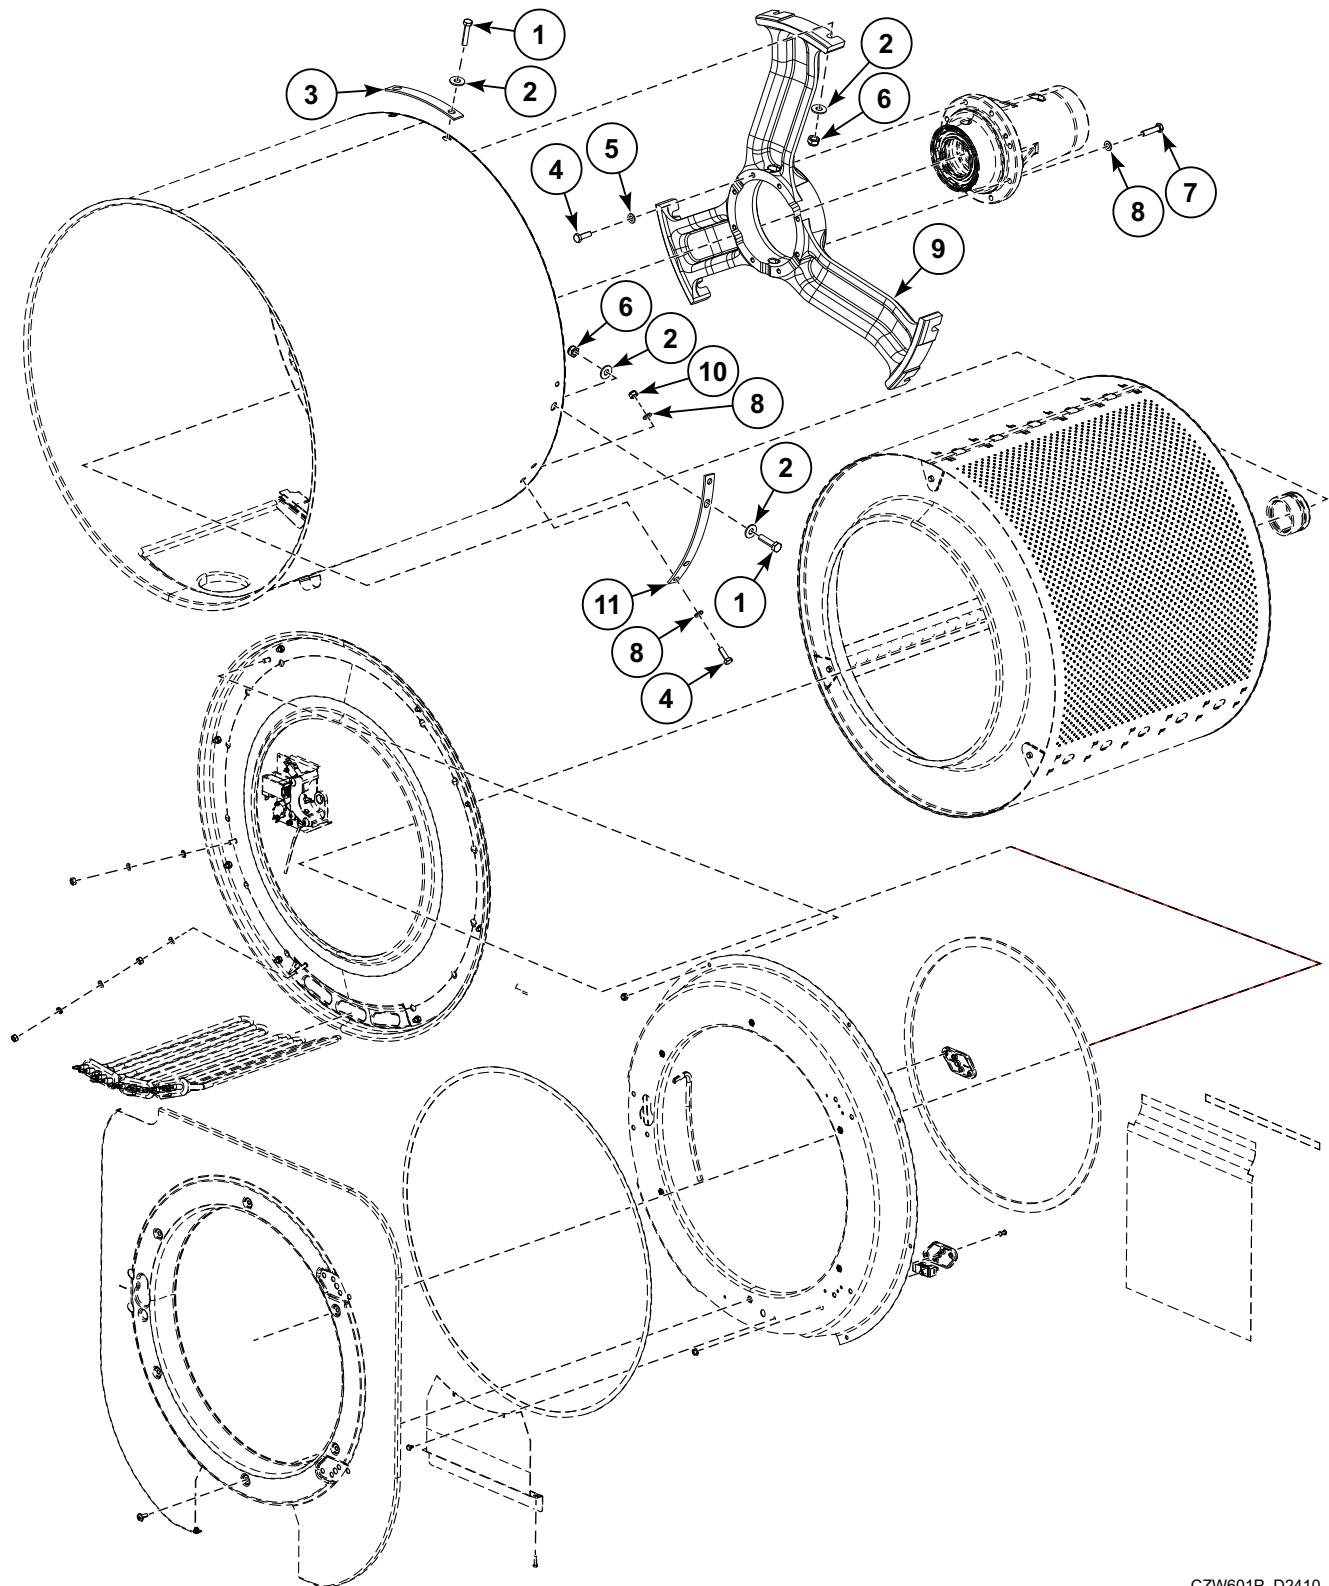


CZW601P\_D2410

## **Washing Drum and Tub (Drawing 2 of 3)**

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP527420	Bolt	M10x40
2	SP311737000010	Washer	M10
3	SP537885	Washer	Models Through Serial No 105FX016466UZ; 3pcs
4	SP309933240825	Bolt	M8x25
5	SP311125240008	Washer	8; Models Through Serial No 105FX016466UZ
6	SP310985000010	Nut	M10
7	SP309933000835	Bolt	M8x35
8	SP311125000008	Washer	8
9	SP537730	Cross Piece	
10	SP310985000008	Nut	M8; Models Starting Serial No 105FX016467UZ
11	582275	Washer	Models Starting Serial No 105FX016467UZ; 3pcs

# Washing Drum and Tub (Drawing 3 of 3)

Models with G or V in 7th position of the model number

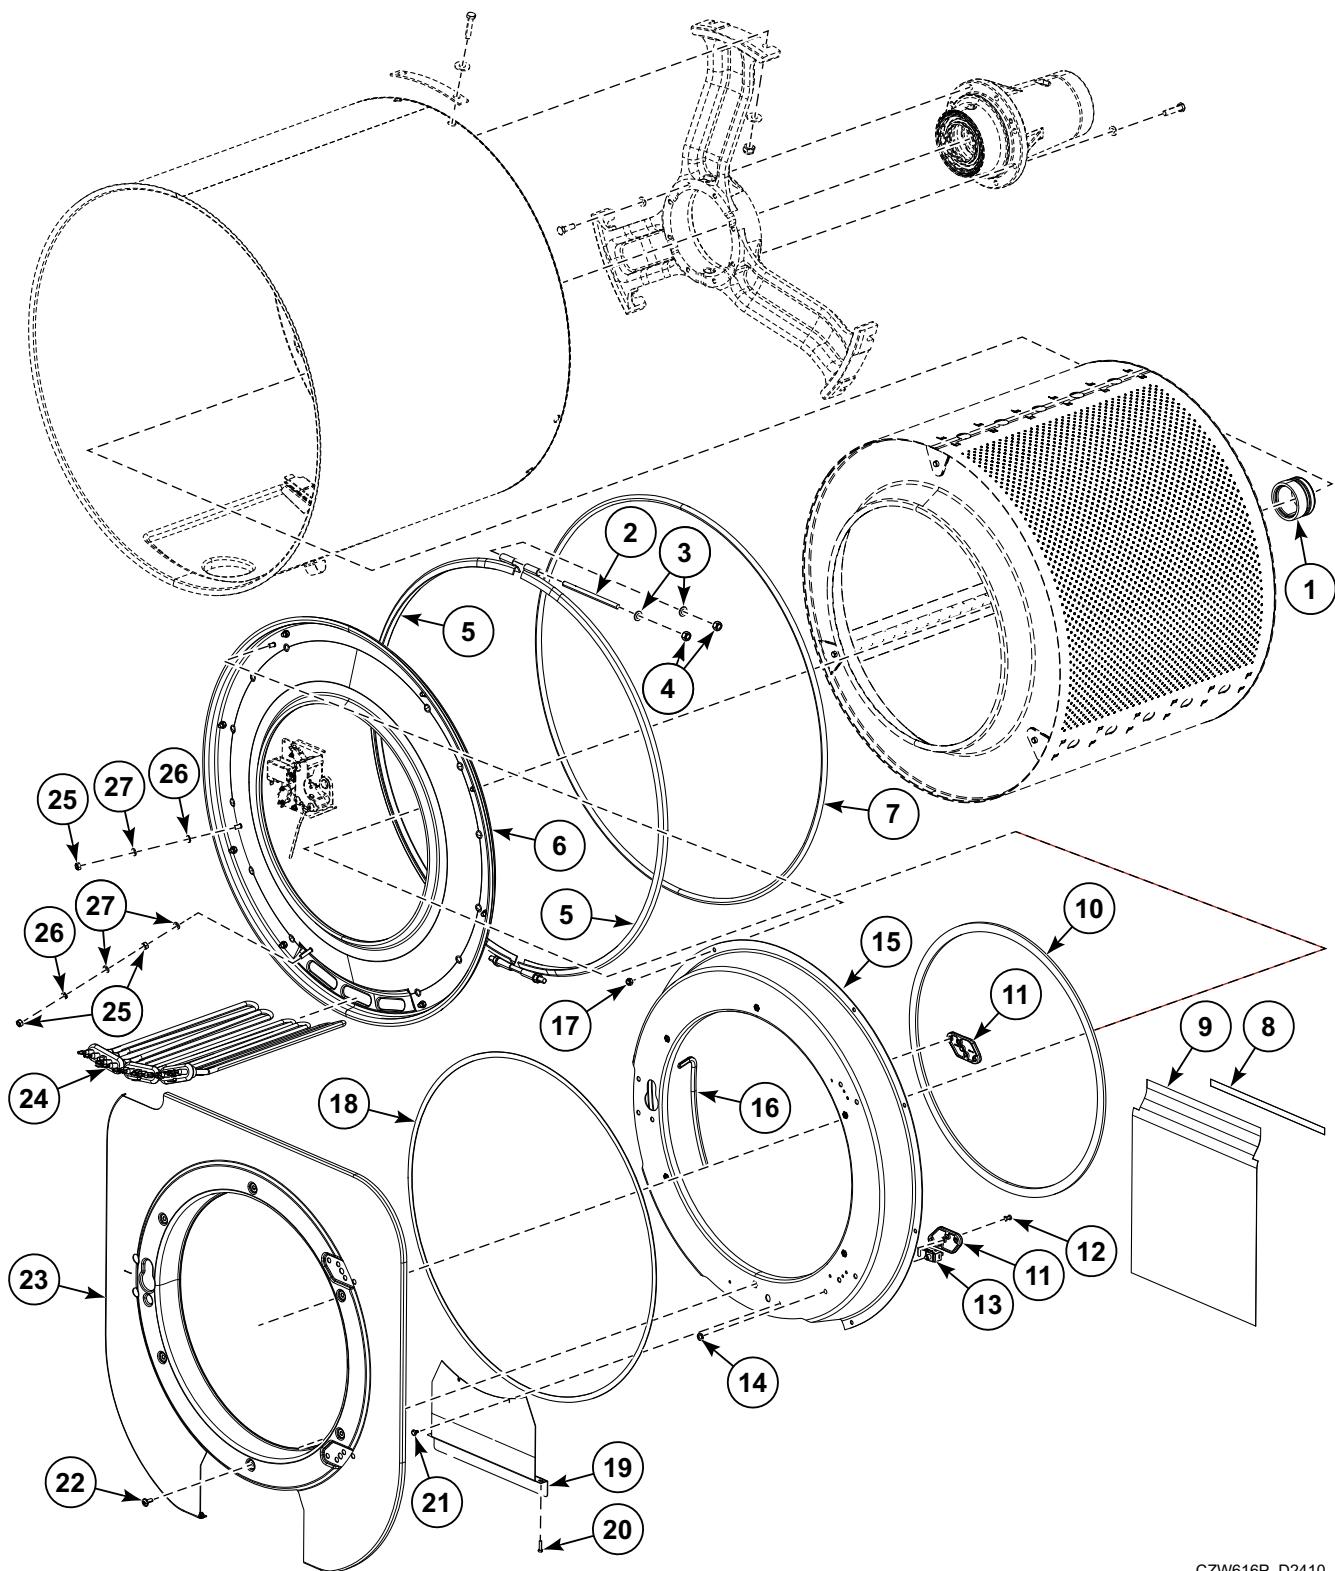


CZW616P\_D2410

## Washing Drum and Tub (Drawing 3 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP537843	Shaft Ring	
2	SPF02119000415	Bolt	M8
3	SP311125240008	Washer	M8
4	SP310934240008	Nut	M8
5	SP537737	Clamp	
6	SP571607	External Tub Front Plate	
6	SP537742	External Tub Front Plate	Models through 28 February 2021
7	SP537739	Seal	d10-2100mm
8	SP537896	Adhesive	
9	568938	Heating Element Cover	
10	SP522450	Profile	l=1.45m
11	SP537849	Hinge Spacer	
12	SP547779	Rivet	4x16.7
13	571634	Microswitch	Models through 28 February 2021
14	571635	Nut	M10; Models through 28 February 2021
15	568906	Door Lock Holder	Models through 28 February 2021
	SP537853	Door Lock Holder	Models starting 1 March 2021
16	SPPRI505000058	Profiled Sealing	l=0.28m
17	SP310985000006	Nut	M8
18	SP284000012003	Tape	l=1.84m
19	568986	Heating Element Front Cover	Stainless
	SP563274	Heating Element Front Cover	Black
20	SP309084000416	Bolt	M4x16
21	SP537856	Connector	
22	SP537854	Bolt	M6x14
23	571725	Front Panel	Stainless; Models starting 1 March 2021
	571722	Front Panel	Black; Models starting 1 March 2021
	568999	Front Panel	Stainless; Models through 28 February 2021
	568976	Front Panel	Black; Models through 28 February 2021
24	SP540144	Heating Element	3000W, l=325mm
	SP540143	Heating Element	2000W, l=325mm
	SP540145	Heating Element	2x1500W, l=325mm
	SP540146	Heating Element	2x2000W, l=335mm
25	SP310934240006	Nut	M6
26	SP311679800006	Washer	6
27	SP311125240006	Washer	6

## SoftWash - With Built-In Recirculation Pump

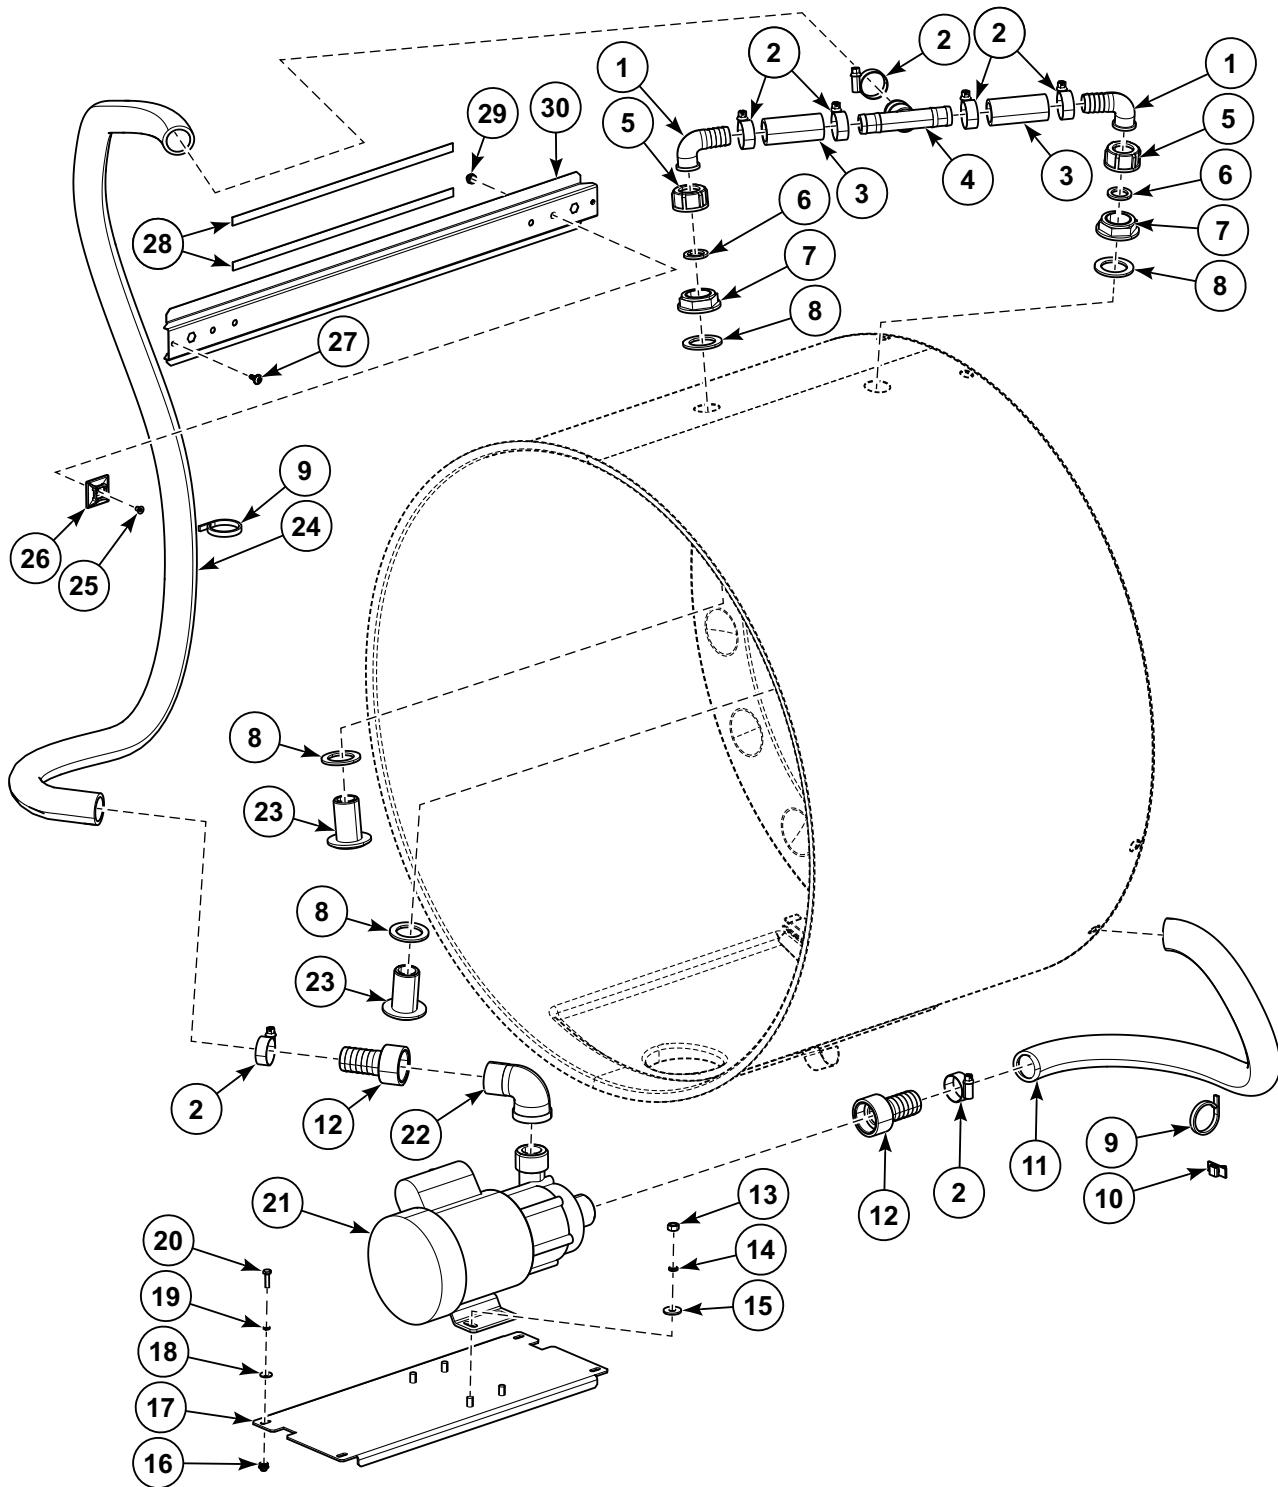


CZW210P\_D2409

## SoftWash - With Built-In Recirculation Pump

REF	PART NO.	DESCRIPTION	COMMENTS
1	567171	Hose End	
2	SPPRI240000003	Hose Clamp	
3	SPPRI540001019	Hose	
4	567173	Hose Coupling	
5	567169	O-Ring	
6	567170	Nut	
7	567166	Nut	
8	567168	O-Ring	
9	SP503817	Binding Strip	
10	SP528313	Cable Holder	
11	567180	Hose Pharmasteel	I=0.64m
12	567152	Thorn	
13	SP310934000006	Nut	
14	SP311127000006	Washer	
15	SP311902100006	Washer	
16	510929	Nut	
17	567149	Pump Board	
18	SP311902100004	Washer	
19	SP311127000004	Washer	
20	SP309933000416	Bolt	
21	567151	Pump	
22	567181	Elbow	
23	567167	Drain Jet	
24	567180	Hose Pharmasteel	I=1.18m
25	SP309965240408	Bolt	M4x8; Models through 11 March 2021
26	SPPRI350003050	Adhesive Fixing Index Plate	Models through 11 March 2021
27	SP529206	Screw	4x11
28	SP284000012003	Tape	
29	510929	Nut	M4
30	569600	Holder	

## Drive

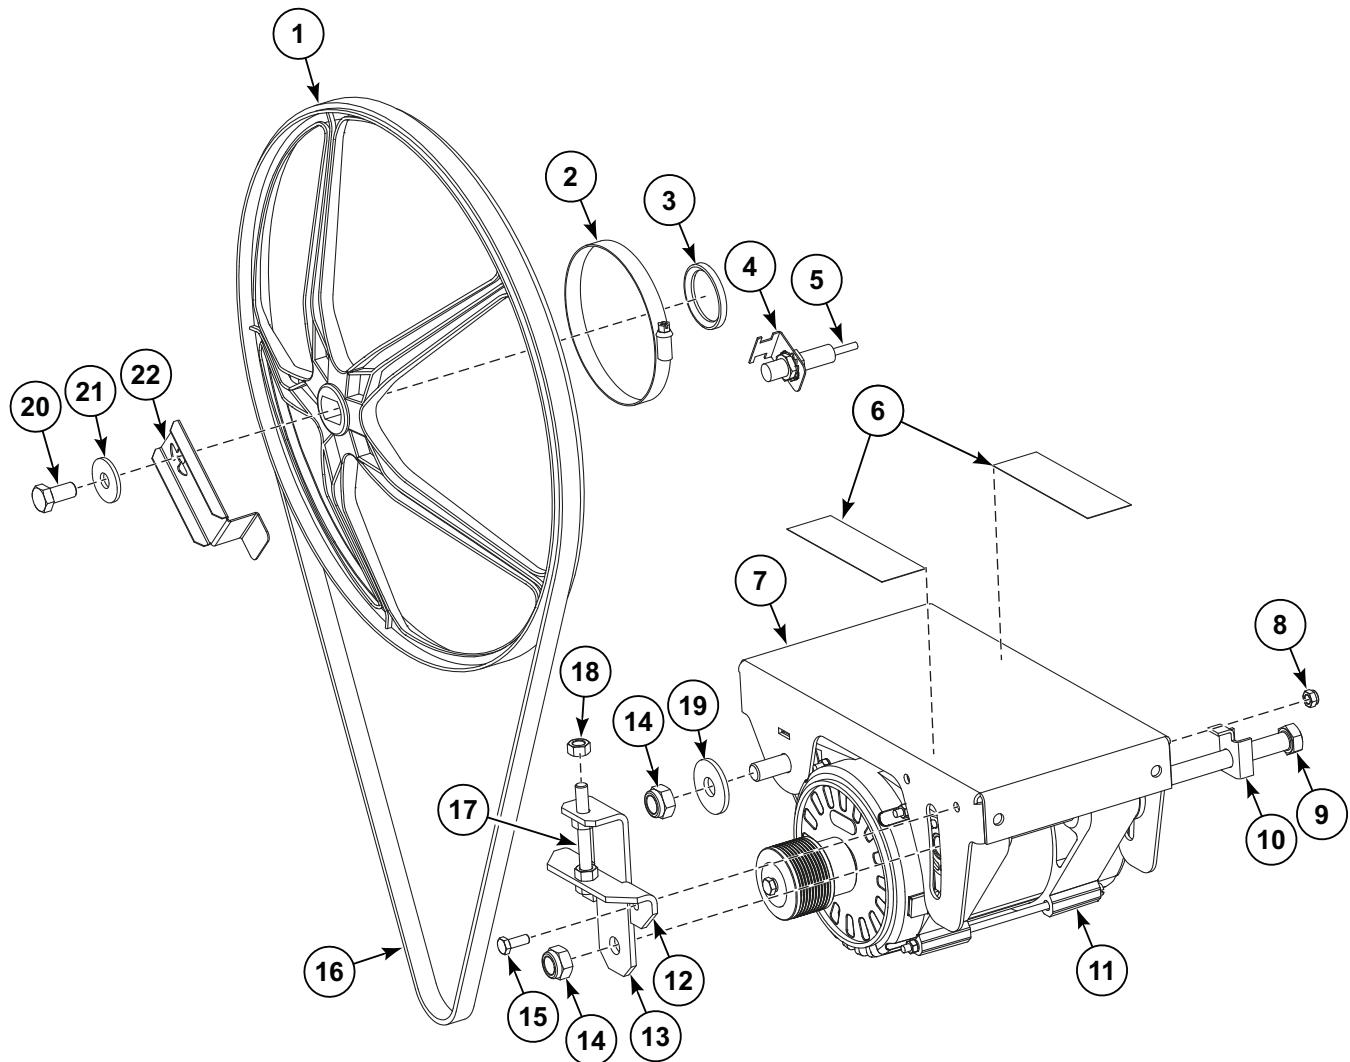


CZW626P\_D2409

# Drive

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP556166	Drum V-Pulley	
2	SPPRI240000005	Hose Clamp	
3	N/A	Pulley Ring	
4	SP555547	Speed Sensor Holder	
5	SP557701	Speed Sensor	
6	581688	Motor Cover	Models with V in 7th position of the model number; 2 pcs required
7	SP533761	Motor Holder	
8	SP310985000006	Nut	M6
9	SP533393	Bolt	M12x200
10	SP533742	Cage	1
11	SP555581	Motor and Pulley	Models with A, D, F, I, J, R, T or X in 7th position of the model number; 1.1kW, 230V/75Hz; CE; Includes 528422 Motor; Applicable for power supply 200V-240V, 50/60Hz, 1/3ph and 380-415V+N, 50/60Hz, 3ph
	SP555584	Motor and Pulley	Models with A, D, F, I, J, R, T or X in 7th position of the model number; 1.1kW, 400V/76Hz; CE; Includes 552412 Motor; Applicable for power supply 400V, 50/60Hz, 3ph without Neutral and 440-480V, 50/60Hz, 3ph
	SP557450	Motor and Pulley	Models with D, F, I, R, T or X in 7th position of the model number; 1.1kW, 230V/75Hz; North America; Includes 528422 Motor; Applicable for power supply 200V-240V, 50/60Hz, 1/3ph and 380-415V+N, 50/60Hz, 3ph
	SP557453	Motor and Pulley	Models with D, F, I, R, T or X in 7th position of the model number; 1.1kW, 400V/76Hz; North America; Includes 552412 Motor; Applicable for power supply 400V, 50/60Hz, 3ph without Neutral and 440-480V, 50/60Hz, 3ph
	571445	Motor and Pulley	Models with G or V in 7th position of the model number; 1.1kW, 230V/75Hz; CE; Includes 568372 Motor; Applicable for power supply 200V-240V, 50/60Hz, 1/3ph and 380-415V+N, 50/60Hz, 3ph
	571446	Motor and Pulley	Models with G or V in 7th position of the model number; 1.1kW, 400V/76Hz; CE; Includes 568382 Motor; Applicable for power supply 400V, 50/60Hz, 3ph without Neutral and 440-480V, 50/60Hz, 3ph
12	SP533326	Tensioning Angle Piece	Fixed
13	SP533327	Tensioning Angle Piece	Movable
14	SP310985000012	Nut	M12
15	SP309933000616	Bolt	M6x16
16	SP533157	Belt	
17	SP309933000870	Bolt	M8x70
18	SP310934000008	Nut	M8
19	SP311902100012	Washer	12
20	SP309933001020	Bolt	M10x20
21	SP311902100010	Washer	
22	581680	Speed Sensor Plate	

N/A = Part no longer available

## Bearing Housing

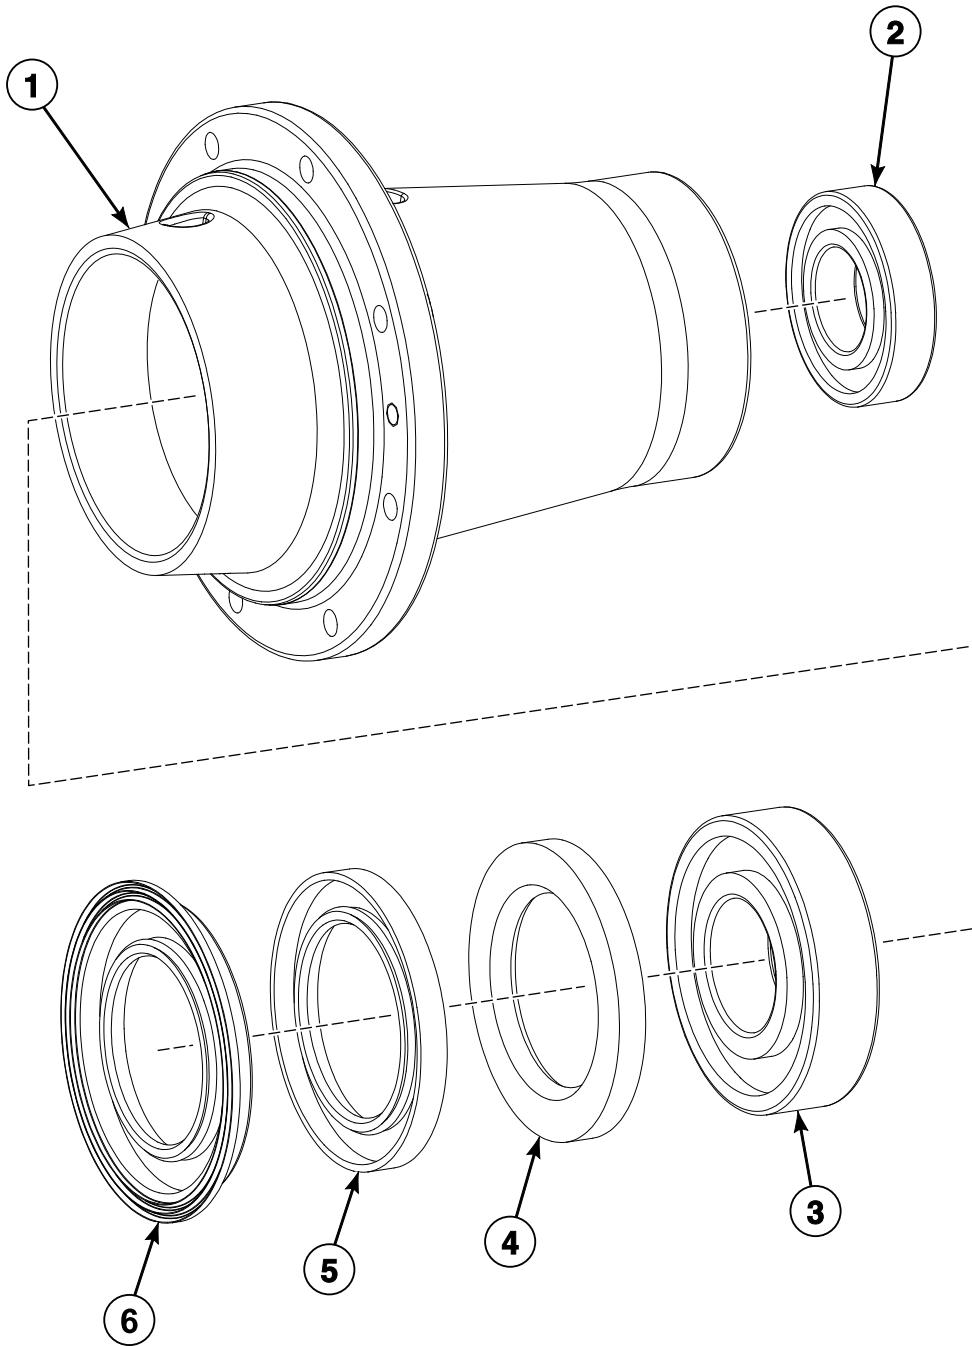


CZW564P\_D2410

## Bearing Housing

REF	PART NO.	DESCRIPTION	COMMENTS
	SP245704000603	Adhesive	Loctite 603
	SP111313000002	Lubrication Grease	
	SP537750	Bearing Housing	Includes items 1-6, SP245704000603 Adhesive and SP11131300002 Lubrication Grease
	SP538787	Bearing Replacement Tool Kit	
1	SP537752	Bearing Housing	
2	SPPRI608001048	Bearing	6307-2RSR /C3
3	582252	Bearing	6309-2RS1 / C3wt
4	582325	Sealing Ring	65x100x10; without spring
5	SP525813	Sealing Ring	65x100x10; with spring
6	SP537848	Sealing Ring	65x100/114x9/12

## Elevated Base Frame

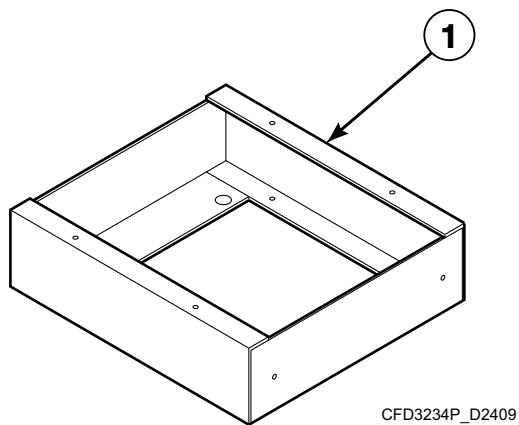


## Elevated Base Frame

REF	PART NO.	DESCRIPTION	COMMENTS
1	551907	Elevated Base Frame	For mounting one machine; 135mm; Refer to NOTE*
	551908	Elevated Base Frame	For mounting two machines; 135mm; Refer to NOTE*
	551909	Elevated Base Frame	For mounting three machines; 135mm; Refer to NOTE*
	551910	Elevated Base Frame	For mounting four machines; 135mm; Refer to NOTE*
	551911	Elevated Base Frame	For mounting five machines; 135mm; Refer to NOTE*
	547725	Elevated Base Frame	For mounting one machine; 200mm; Refer to NOTE*
	527723	Elevated Base Frame	For mounting two machines; 200mm; Refer to NOTE*
	547720	Elevated Base Frame	For mounting three machines; 200mm; Refer to NOTE*
	547727	Elevated Base Frame	For mounting four machines; 200mm; Refer to NOTE*
	547728	Elevated Base Frame	For mounting five machines; 200mm; Refer to NOTE*

\* NOTE: Part can only be ordered through the Equipment Order Desk.

## Base Frame with Built-In Filter

Models with A, D, F, I, J, R, T, V or X in 7th position of the model number

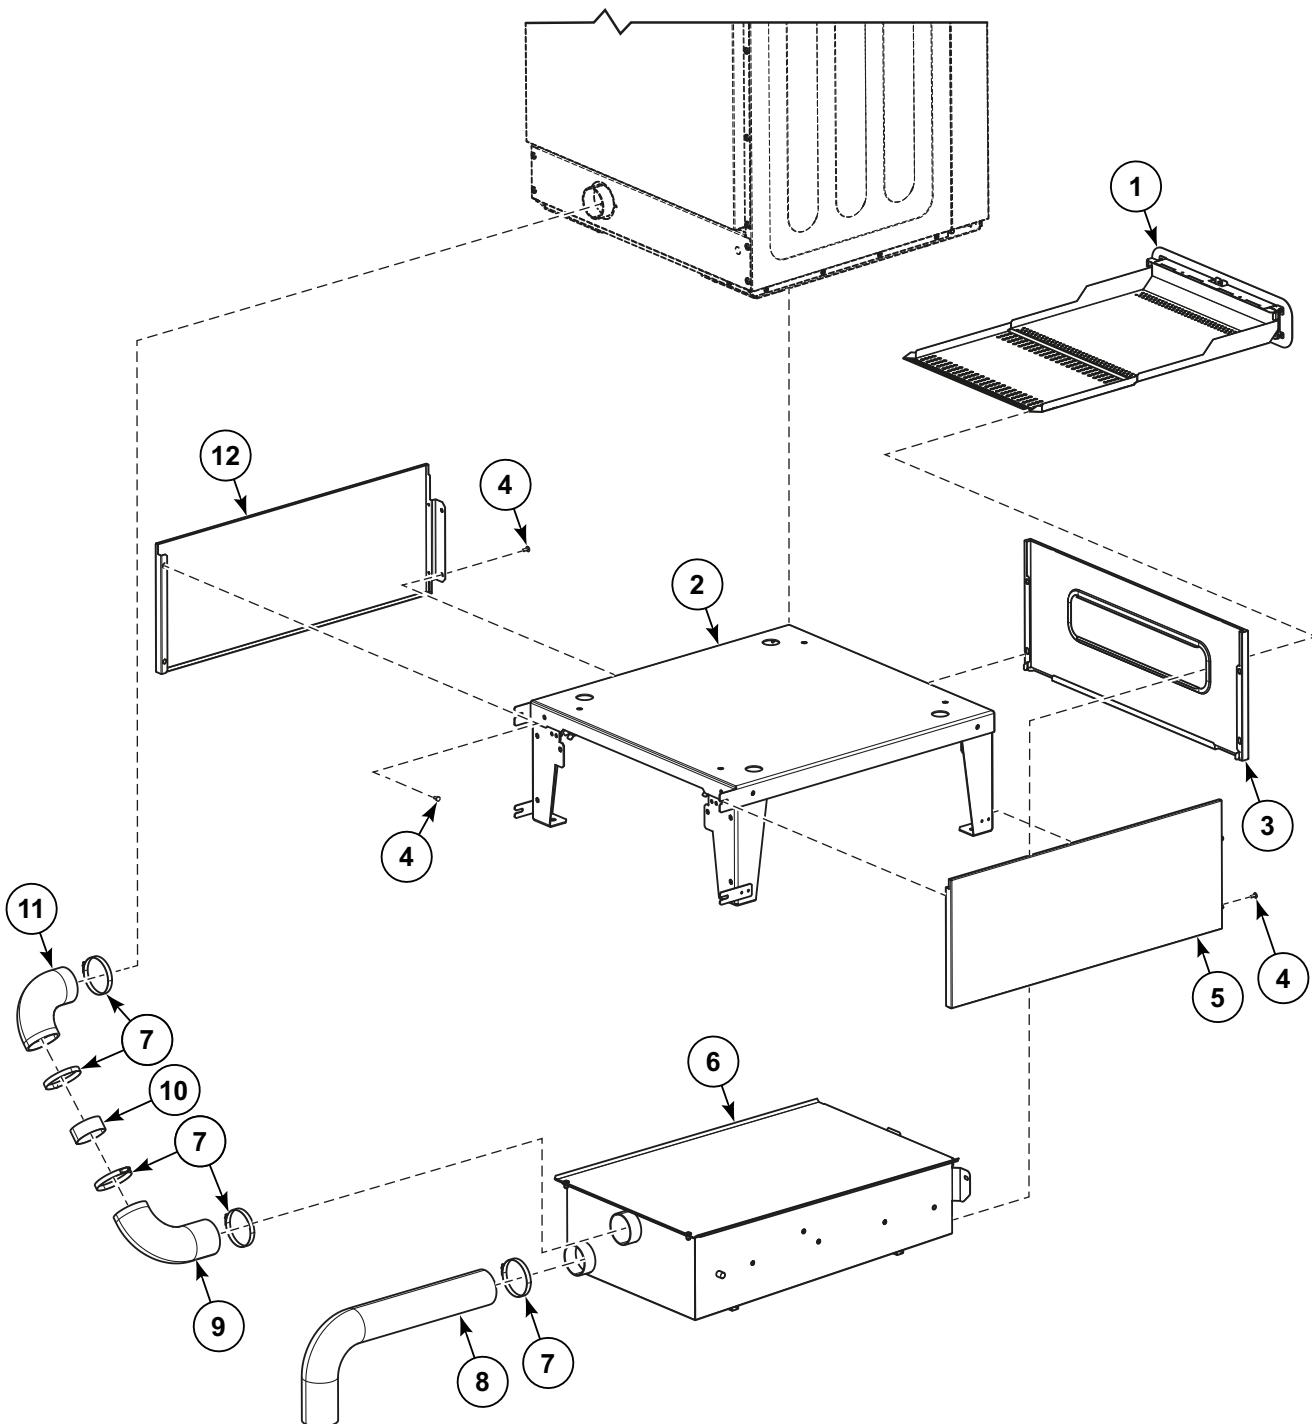


CZW320P\_D2409

## Base Frame with Built-In Filter

REF	PART NO.	DESCRIPTION	COMMENTS
1	574721	Filter	Assembly
2	573817	Base Frame	
3	574768	Front Panel	
4	SP537854	Bolt	M6x14
5	574783	Left Cover	Assembly
6	574702	Box	Assembly
7	SPPRI24000007	Hose Clamp	
8	SP519463	Drain Elbow	
9	574840	Elbow	
10	570807	Pipe	
11	574842	Elbow	
12	574789	Right Cover	Assembly

## Soft Wash - Without Built-In Recirculation Pump

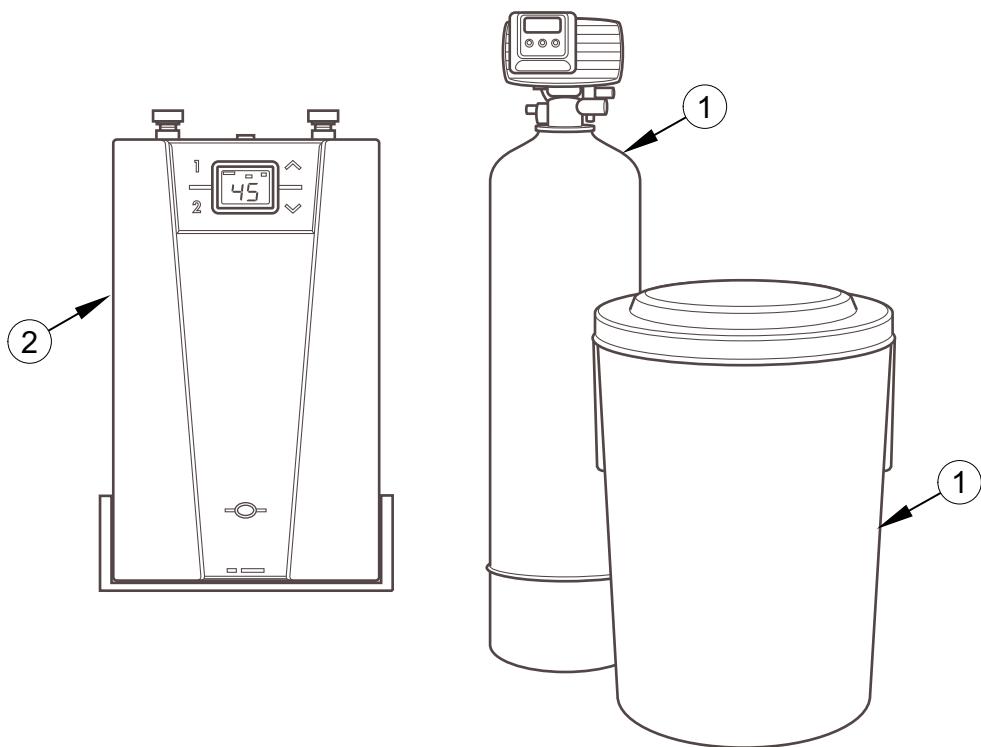


C-CZW57P\_D2409

## Soft Wash - Without Built-In Recirculation Pump

REF	PART NO.	DESCRIPTION	COMMENTS
	SP567105	Soap Pump Kit	Four pumps; Includes suction hoses and tubes; CE and Watermark
	SP567106	Soap Pump Kit	Six pumps; Includes suction hoses and tubes; CE and Watermark
1	SP562737	Water Softener	AMVE 305; Optional; CE and Watermark
	SP562750	Water Softener	AMVE 505; Optional; CE and Watermark
2	SP562749	Water Heater	6kW; 50/60Hz; 230V; Optional; CE and Watermark
	SP562736	Water Heater	8.8kW; 50/60Hz; 230V; Optional; CE and Watermark

## Liquid Soap Supply System - Pumps

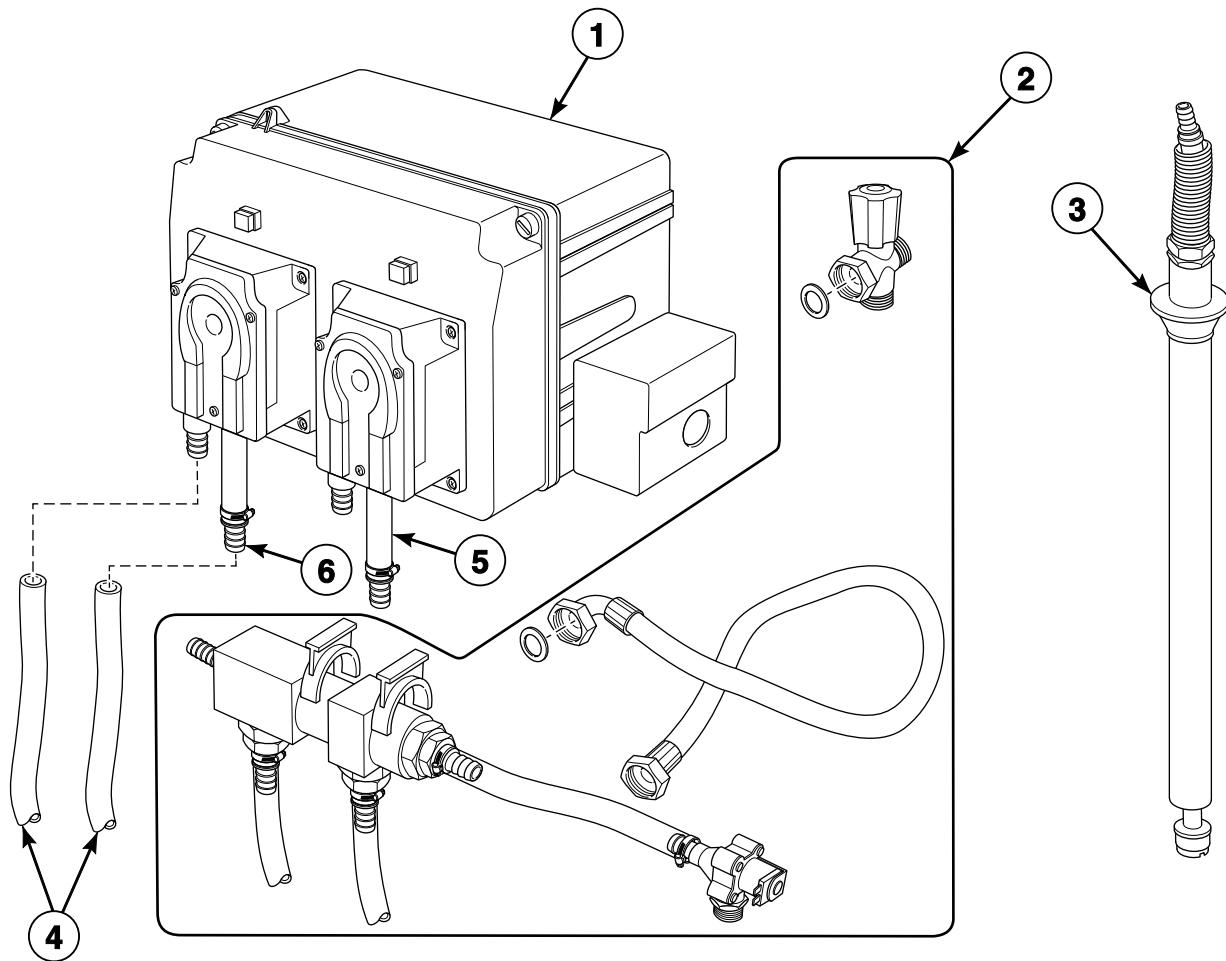


CZW45P\_D2409

## Liquid Soap Supply System - Pumps

REF	PART NO.	DESCRIPTION	COMMENTS
	MB90-Z40	Supply Pump Kit	For two pumps
	MB90-Z41	Supply Pump Kit	For three pumps
	MB90-Z42	Supply Pump Kit	For four pumps
	MB90-Z43	Supply Pump Kit	For five pumps
	MB90-Z44	Supply Pump Kit	For six pumps
1	529742	Pump	Two
	529743	Pump	Three
	529744	Pump	Four
	529745	Pump	Five
	529746	Pump	Six
2	529789	Manifold Flush Kit	For two pumps
	529797	Manifold Flush Kit	For three pumps
	529798	Manifold Flush Kit	For four pumps
	529799	Manifold Flush Kit	For five pumps
	529800	Manifold Flush Kit	For six pumps
3	529787	Suction Tube	
4	SPPRI540020005	Hose	d10/14
5	529747	Hose	Spare hose for pump
6	547808	Connection	

## Filter Tank

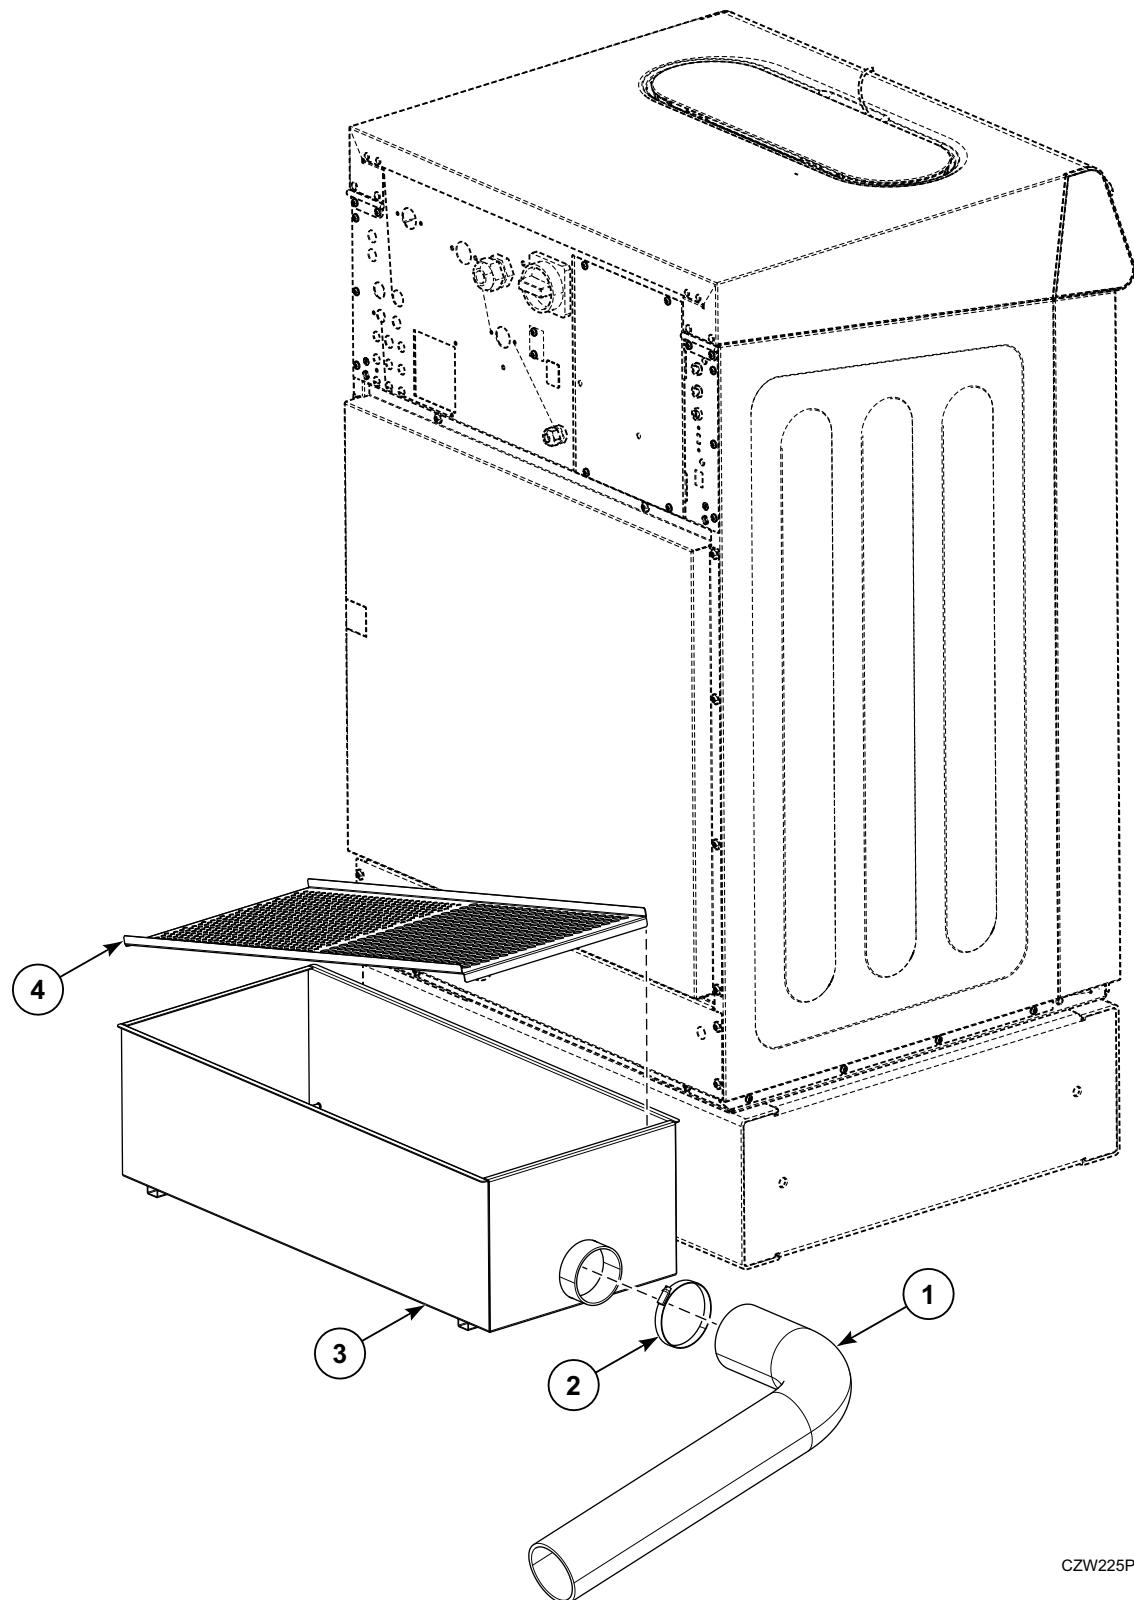

CZW225P\_D2409

## Filter Tank

REF	PART NO.	DESCRIPTION	COMMENTS
	570846	Filter Tank	Used with elevated base frame 200mm tall
1	SP519463	Drain Elbow	
2	SPPRI240000007	Hose Clamp	
3	570840	Collector Weldment	
4	570835	Filter	

## Wire Harnesses

PART NO.	DESCRIPTION	COMMENTS
552495	Transformer Connection	North America
528064	Steam Heat Wiring	North America; Steam heat
SPPRI351000161	Steam Valve Cable	CE and Watermark; Steam heat
552466	Wireless Reader Wiring	Vend; North America
PRI351107209	Heating Contactor Wiring	CE and Watermark; 2.5mm <sup>2</sup> ; l=440mm; For 4.6kW, 6kW, 9kW
PRI351108209	Heating Contactor Wiring	CE and Watermark; 4mm <sup>2</sup> ; l=440mm; For 9kW; 12kW / 400V / 440V
SP547075	RS485 External Interconnection	For RS485 external interconnection to PC
528393	Wiring Steam - Electrical Heating	Steam heating - electrical heating modification
528328	Heating Wiring	CE and Watermark; 2.5mm <sup>2</sup>
528335	Heating GND Wiring	CE and Watermark
528205	Frame GND Interconnection	
528350	Transformer Connection	400-480V, 3AC -N; CE and Watermark
568392	Main Wiring	Models with V in 7th position of the model number
569749	Door Lock Wiring	l=1.7m; Models with V in 7th position of the model number
569751	Door Lock Cable	l=0.24m; Models with V in 7th position of the model number
SP528323	Communication Cable	
568396	Motor Temperatuer Protect Cable	Models with G or V in 7th position of the model number
528330	Heating Wiring	6kW / 230V / 400V; 9kW / 440V; 12kW / 400V/ 440V
528331	Heating Wiring	7kW / 440V; 9kW / 230V; 9kW / 440V; 12kW / 230V
528335	Heating GND Wiring	Models with V in 7th position of the model number
528080	Frame GND Interconnection	Models with V in 7th position of the modle number
552477	Inlet Valve Extension Wiring	
528064	Steam Heat Wiring	Steamboat
SP557947	External Block Signal Cable	Length = 110.24 inches (2.8 m)
557948	External Block Signal Cable	Length = 169.29 inches (4.3m)
569701	Cable	CPU - I/O board interconnection
PRI351105209	Heating Contactor Wiring	6mm <sup>2</sup> ; l=540mm; For 12kW / 230V

# Parts Index

---

## A

Adapter	
SP319428324012	191, 193
SP547968	191, 193
Adhesive	
SP101403	191, 193
SP245704000050	197
SP245704000603	127, 191, 193, 209
SP245704003021	11, 127, 197
SP537896	35, 127, 203
Adhesive Fixing Index Plate	
SPPRI350003050	205
Adjustable Foot	
SPPRI504000001	13
Air Trap Reduction	
SPPRI503000027	155, 157, 159
Anticorrosive Agent	
SP510889	197
Automatic Door Opening Module Wiring	
SP552455	33
Automatic Unlocking Module Assembly	
SP552489	23, 27, 31, 35
545238	23, 27, 31

---

## B

Base Frame	
573817	213
Bearing	
SPPRI608001048	209
582252	209
Bearing Housing	
SP537750	209
SP537752	209
Bearing Replacement Tool Kit	
SP538787	209
Belt	
SP533157	207
Binding Strip	
SP345000626088	155, 157, 159
SP503817	149, 151, 205
Board Interconnection Cable	
SP537995	69
SP547005	51, 61, 69
575865	103, 105, 107
Bolt	
F8270701	139
SPF02119000415	197, 203
SP309084000320	85, 91, 97
SP309084000408	25, 27, 31, 43, 47, 85, 87, 89, 91, 93, 95, 97, 99, 101
SP309084000416	11, 13, 129, 143, 145, 147, 161, 165, 169, 173, 177, 181, 185, 189, 203
SP309084240325	13
SP309798500306	35, 43, 51, 61, 69, 73, 75, 77
SP30993300041685	91, 97, 109, 111, 161, 169, 173, 205
SP309933000616	23, 27, 47, 207
SP309933000620	163, 169, 173, 177, 181, 185, 189,

---

191, .....	193
SP309933000660.....	177, 181, 185, 189
SP309933000820.....	11, 13, 155, 157, 159
SP309933000835.....	197, 201
SP309933000845.....	11
SP309933000870.....	11, 207
SP309933000880.....	11
SP309933001020.....	207
SP309933100625..161, 165, 169, 173, 177, 181, 185, 189	
SP309933240408.....	165, 169, 173
SP309933240412...87, 89, 93, 95, 99, 101, 177, 181, 185, .....	189
SP309933240825.....	197, 201
SP309965240408.....	79, 81, 83, 205
SP506012.....	103, 105, 107
SP506013.....	43, 45
SP506431.....	31, 43
SP506432.....	13
SP521895.....	11
SP527420.....	13, 197, 201
SP533393.....	207
SP533726.....	13
SP535479.....	131, 135, 137
SP537854.....	129, 203, 213
SP537864.....	131, 135, 137
SP550482.....	33, 43
SP553524.....	133
SP555504..35, 51, 61, 69, 79, 81, 83, 149, 151, 177, 181, .....	185, 189
SP555658.....	25, 29, 31, 33, 35, 43, 49, 193
SP556137.....	129
309084000535.....	177, 181, 185, 189
309500240408.....	79, 81, 83
555658 .....	45, 103, 105, 107
563123 .....	45
568968 .....	139
569655 .....	79, 81, 83
577761 .....	69
577762 .....	69
577763 .....	69
582307 .....	89, 95, 101
Box	
574702 .....	213
Bushing	
SP101406.....	165, 167, 171, 175, 179, 183, 187
SP101409.....	165, 167, 171, 175, 179, 183, 187
582259 .....	167, 171, 175, 179, 183, 187

---

## C

Cable	
SP545234.....109, 165, 167, 171, 175, 179, 183, 187	
557982 .....	163
569701 .....	220
Cable Bushing Insert	
SP557952.....	165
Cable Clamp	
SP528392.....	165, 169, 173, 177, 181, 185, 189
Cable Eye	
345000165034 .....	169, 173, 177, 181, 185, 189
Cable Holder	
SP528313....35, 49, 51, 61, 169, 173, 177, 181, 185,	

N/A items do not appear in index.

189, .....	205
Cable Passage	
SP273121005052 .....	23, 27, 31, 43
SP273121015002 .....	161
SP273121022002 .....	161
Cage	
SP533742 .....	207
Casing	
SP529739 .....	131, 135, 137
Check Valve	
B12543901.....	143
Circuit Breaker	
571462 .....	175, 183
571464 .....	179, 187
Clamp	
SP537737 .....	197, 203
Clip	
SP502214 .....	169, 173, 177, 181, 185, 189
Coil	
SP554110.....	191, 193
568942 .....	139
Coin Meter	
SP537996 .....	55, 121
SP547600 .....	53, 119
SP547601 .....	53, 119
SP547602 .....	53, 119
SP547603 .....	53, 119
SP547604 .....	53, 119
SP547605 .....	53, 119
SP547606 .....	53, 119
SP547607 .....	53, 119
SP547608 .....	53, 119
SP547609 .....	53, 119
SP547610 .....	53, 119
SP547611 .....	53, 119
SP547612 .....	53, 119
SP547613 .....	53, 119
SP547614 .....	53, 119
SP547615 .....	53, 119
SP547616 .....	53, 119
SP547617 .....	53, 119
SP547618 .....	53, 119
SP547619 .....	53, 119
SP547620 .....	53, 119
SP547621 .....	53, 119
SP547622 .....	53, 119
SP547623 .....	53, 119
SP547624 .....	53, 119
SP547625 .....	53, 119
SP547626 .....	53, 119
SP547627 .....	53, 119
SP547628 .....	53, 119
SP547629 .....	53, 119
SP547630 .....	53, 119
SP547631 .....	53, 119
SP547634 .....	53, 119
SP547635 .....	53, 119
SP547636 .....	53, 119
SP547637 .....	53, 123
SP547638 .....	53, 119
SP547639 .....	53, 119
SP547640 .....	53, 119
SP547641 .....	55, 121
SP547642 .....	55, 121
SP547643 .....	55, 121
SP547644 .....	55, 121
SP547645 .....	55, 121
SP547646.....	55, 121
SP547647.....	53, 119
SP547648.....	53, 119
SP547649.....	55, 121
SP547651.....	55, 121
SP547652.....	53, 119
SP547653.....	55, 121
SP547654.....	55, 121
SP547656.....	53, 119
SP547657.....	55, 121
SP547658.....	55, 121
SP547659.....	55, 121
SP547660.....	55, 121
SP547661.....	55, 121
SP547662.....	55, 121
SP547663.....	55, 121
SP547664.....	55, 121
SP547665.....	53, 119
SP547666.....	53, 119
SP547667.....	55, 121
SP547668.....	55, 121
SP547669.....	55, 121
SP547670.....	55, 121
SP547671.....	55, 121
SP547672.....	55, 121
SP547673.....	55, 121
SP547674.....	55, 121
SP547675.....	55, 121
SP555502.....	55, 121
SP555543.....	55, 121
SP555546.....	55, 121
SP555549.....	55, 121
SP555550.....	55, 121
SP555558.....	55, 121
SP555559.....	55, 121
SP555578.....	55, 121
SP555579.....	55, 121
SP555666.....	55, 121
SP558958.....	63
SP558959.....	63
SP559933.....	63
SP559934.....	63
SP559938.....	63
SP559949.....	63
SP559969.....	63
SP560071.....	65
SP560075.....	65
SP560082.....	57, 123
SP560083.....	57, 123
SP560084.....	57, 123
SP560085.....	57, 123
SP560086.....	57, 123
SP560087.....	65
SP560089.....	55, 121
SP560090.....	63
SP560091.....	65
SP560092.....	65
SP560093.....	65
SP560094.....	65
SP560100.....	65
SP560309.....	63
SP560310.....	63
SP560311.....	63
SP560312.....	63
SP560405.....	63
SP560406.....	63
SP560407.....	63
SP560408.....	63
SP560409.....	63

N/A items do not appear in index.

SP560410 .....	63
SP560411 .....	63
SP560412 .....	63
SP560413 .....	63
SP560414 .....	63
SP560415 .....	63
SP560416 .....	63
SP560417 .....	63
SP560418 .....	63
SP560419 .....	63
SP560420 .....	63
SP560421 .....	63
SP560422 .....	63
SP560423 .....	63
SP560424 .....	63
SP560425 .....	63
SP560426 .....	63
SP560427 .....	63
SP560428 .....	63
SP560429 .....	63
SP560432 .....	63
SP560744 .....	55, 121
SP560745 .....	63
SP560751 .....	63
SP568002 .....	113
SP568003 .....	113
SP568004 .....	113
SP568005 .....	113
SP568006 .....	113
SP568007 .....	113
SP568008 .....	113
SP568009 .....	113
SP568010 .....	113
SP568011 .....	113
SP568012 .....	113
SP568013 .....	113
SP568014 .....	113
SP568015 .....	113
SP568016 .....	113
SP568017 .....	113
553150 .....	57, 123
553151 .....	57, 123
553156 .....	65
560073 .....	57, 123
561378 .....	57, 123
561496 .....	57, 123
561497 .....	65
563405 .....	65
564484 .....	57, 123
564485 .....	65
564486 .....	57, 123
564487 .....	65
564489 .....	57, 123
568002 .....	115
569901 .....	57, 123
569905 .....	65
569911 .....	65
569912 .....	57, 123
569918 .....	57, 123
569919 .....	65
569921 .....	53, 119
569922 .....	63
569924 .....	57, 123
569925 .....	65
569927 .....	57, 123
569928 .....	65
569930 .....	57, 123
569931 .....	65
569933 .....	55, 121
569934 .....	63
569936 .....	57, 123
569937 .....	65
569939 .....	55, 121
569940 .....	63
569942 .....	57, 123
569943 .....	65
569945 .....	57, 123
569946 .....	65
569948 .....	55, 121
569949 .....	65
569951 .....	55, 121
569952 .....	65
569954 .....	57, 123
569955 .....	65
569961 .....	57, 123
569962 .....	65
569964 .....	55, 121
569965 .....	63
569967 .....	57, 123
569968 .....	65
569970 .....	57, 123
569971 .....	65
569973 .....	57, 123
569974 .....	65
569979 .....	57, 123
569980 .....	65
569987 .....	57, 123
569988 .....	65
569993 .....	65
569995 .....	65
569998 .....	57, 123
569999 .....	65
570000 .....	65
572301 .....	57, 123
572302 .....	65
572304 .....	57, 123
572305 .....	65
572307 .....	57, 123
572308 .....	65
572310 .....	57, 123
572311 .....	65
572313 .....	57, 123
572314 .....	65
572317 .....	57, 123
572318 .....	65
572320 .....	57, 123
572321 .....	67
572323 .....	57, 123
572324 .....	67
572339 .....	59, 125
572342 .....	57, 125
572343 .....	67
572355 .....	67
572358 .....	59, 125
572359 .....	67
572383 .....	59, 125
572384 .....	67
572386 .....	115
572389 .....	67
572391 .....	59, 125
575201 .....	117
575202 .....	117
575203 .....	117
575204 .....	117
575205 .....	117
575206 .....	117
575207 .....	117
575208 .....	117

N/A items do not appear in index.

575209 .....	117
575210 .....	117
575211 .....	117
575212 .....	117
575213 .....	117
575214 .....	117
575215 .....	117
575216 .....	117
575217 .....	117
575218 .....	113
575219 .....	113
575220 .....	113
575221 .....	113
575222 .....	113
575223 .....	113
575224 .....	113
575225 .....	113
575226 .....	113
575227 .....	113
575228 .....	113
575229 .....	113
575230 .....	113
575231 .....	113
575232 .....	113
575233 .....	113
575234 .....	113
575235 .....	113
575236 .....	113
575237 .....	113
575238 .....	113
575239 .....	113
575240 .....	113
575241 .....	113
575242 .....	113
575243 .....	113
575244 .....	113
575245 .....	113
575246 .....	113
575247 .....	117
575248 .....	113
575249 .....	115
575250 .....	115
575251 .....	115
575252 .....	115
575253 .....	115
575254 .....	115
575255 .....	115
575256 .....	115
575257 .....	115
575258 .....	115
575259 .....	115
575260 .....	115
575261 .....	115
575262 .....	115
575263 .....	115
575264 .....	115
575265 .....	115
575266 .....	115
575267 .....	115
575268 .....	115
575269 .....	115
575270 .....	115
575271 .....	115
575272 .....	115
575273 .....	115
575275 .....	115
575276 .....	67
575277 .....	67
575278 .....	115
575279 .....	115
579808 .....	57, 125
579811 .....	117
579812 .....	57, 59, 123, 125
579813 .....	67
579815 .....	117
Coin Meter Box	
SP102532.....	109
100498 .....	109
568036 .....	111
Coin Meter Case	
571049 .....	109
571055 .....	109
572120 .....	109
573009 .....	111
Coin Meter Cover	
SP547565.....	103
567924 .....	73, 79
Coin Meter Cover Plate	
SP558929.....	51, 61
Coin Meter Covering Plate	
SP547565.....	69
Coin Vault Plate	
SP533103.....	25, 27, 31
566737 .....	41, 47
Collector Weldment	
570840 .....	219
Communication Cable	
SP528323.....	161, 220
Compression Spring	
SP535406.....	133
Connection	
547808 .....	217
Connector	
SP537856.....	129, 203
SP554156.....	191, 193
Contactor	
SPPRI345002019..	161, 167, 171, 175, 179, 183, 187
SP514038.....	161, 167, 171, 175, 179, 183, 187
SP514042.....	161, 167, 171, 175, 179, 183, 187
SP514043.....	161
Control	
575632 .....	79, 81, 83, 85, 87, 91, 93, 97, 99
582285 .....	89, 95, 101
Control Board	
SP547001.....	69
SP553411.....	51, 61, 69
SP553412.....	51
SP553419.....	61, 73, 75, 77
553411.....	73, 75, 77
553446 .....	103, 105, 107
Control Board Holder	
573394 .....	45
Control Board I/O	
SP553405.....	35, 51, 61, 69
553444 .....	35, 41, 45
Control Board Power	
SP547002.....	69
Control Holder	
571041 .....	79, 81, 83
581020 .....	103, 105, 107
581021 .....	103, 105, 107
Control Panel	
SP557614.....	51
SP558894.....	61

N/A items do not appear in index.

573062 .....	75
573064 .....	73
573074 .....	77
573115 .....	81
573117 .....	79
573119 .....	83
580648 .....	103, 105, 107
Control Panel Frame	
573025 .....	37, 79, 81, 83
Control Support	
581009 .....	103, 105, 107
Conversion Board	
553439 .....	45
Cover	
SPPRI543000004 .....	51, 61, 69
552972 .....	129
566549 .....	167, 171, 175, 179, 183, 187
568938 .....	129
569656 .....	35
Cover Plate	
SP550149 .....	69, 107
Cover Strip Pin	
SP533738 .....	11
CPS Cover Plate	
SP558930 .....	51, 61
Cross Piece	
SP537730 .....	197, 201
<b>D</b>	
Damper	
SP533716 .....	13
DC Choke	
571454 .....	183, 187
571455 .....	175, 179, 183
Dispenser Lid	
SP526461 .....	143, 145, 147
SP551695 .....	143
Dispenser Pipe	
SP526487 .....	143, 145, 147
Dispenser Seal	
SP540158 .....	143, 145, 147
Distance Case	
SP515274 .....	11
SP557472 .....	11
Distinguishing Ring	
SP535437 .....	133
571733 .....	133, 135
582329 .....	133, 137
Door	
SP535426 .....	131
SP535428 .....	131
SP553526 .....	131, 137
568837 .....	131, 135
Door and Lock Holder	
SP537853 .....	129
568906 .....	129
Door Assembly	
535415 .....	127
535434 .....	127
553531 .....	127
556253 .....	127
556271 .....	127
562705 .....	127
563371 .....	127
571764 .....	137
571767 .....	135
573185 .....	127
574098 .....	127
576075 .....	127
582300 .....	127
Door Frame Sheet	
571633 .....	135, 137
Door Glass	
SP535417 .....	129, 137
SP556227 .....	129, 135
SP562702 .....	129
Door Level	
573009 .....	135, 137
Door Lock Assembly	
576085 .....	139
Door Lock Cable	
569751 .....	220
Door Lock Catch	
576084 .....	139
Door Lock Holder	
SP537853 .....	203
568906 .....	203
Door Lock Plate	
568971 .....	139
Door Lock Wiring	
SP528270 .....	127
SP552453 .....	127
SP552454 .....	127
569723 .....	127
569749 .....	220
Door glass Insulation	
582319 .....	127
Double Check Valve	
F8301201 .....	131, 133, 143
Double Reverse Valve	
RSPB12543901 .....	149, 151
Drain Elbow	
SP519463 .....	213, 219
SP526457 .....	155, 157, 159
Drain Hose Pipe	
SP526492 .....	155, 157, 159
Drain Jet	
567167 .....	205
Drain Valve	
SP526460 .....	155, 157, 159
Drain Valve Chamber	
553195 .....	155
Drain Valve Holder	
SP526512 .....	155, 157, 159
Drain Valve Motor	
SPPRI340002051 .....	155, 157, 159
Drain Valve Seal	
554276 .....	155, 157, 159
Drum V-Pulley	
SP556166 .....	207
<b>E</b>	
Edge Protection	
SP529068 .....	25, 29, 33, 35, 41, 49, 181, 189

N/A items do not appear in index.

Elbow		213
567181 .....	205	
574840 .....	213	
574842 .....	213	
Elevated Base Frame		
527723 .....	211	
547720 .....	211	
547725 .....	211	
547727 .....	211	
547728 .....	211	
551907 .....	211	
551908 .....	211	
551909 .....	211	
551910 .....	211	
551911 .....	211	
Emergency Stop Connector		
SP528311.....	51, 61, 69, 73, 79, 85, 87, 89, 103	
Emergency Stop Interconnection		
SP520033 .....	51, 61, 69, 91, 93, 105, 107	
571485 .....	97, 99	
Emergency Stop Knob		
SP528310 .....	51, 61, 69, 73, 79, 85, 87, 89, 103	
Emergency Stop Label		
SPPRI551005248 .....	73, 79, 103	
Emergency Stop Wiring		
SP520032 .....	51, 61, 69	
End Stop		
SP346000209101 .....	175, 179, 183, 187	
External Block Signal Cable		
SP557947 .....	165, 167, 171, 220	
557948 .....	220	
External Tub		
SP537736 .....	195, 199	
SP537917 .....	195, 199	
567177 .....	195, 199	
570390 .....	195, 199	
582308 .....	195, 199	
582309 .....	195, 199	
582310 .....	195, 199	
582311 .....	195, 199	
External Tub Front Plate		
SP537742 .....	197, 203	
SP571607 .....	203	
<b>F</b>		
Fastener		
SP550115... 23, 27, 31, 35, 43, 73, 75, 77, 79, 81, 83,		
153		
Ferrite Core		
557961 .....	167, 171, 175, 179, 183, 187	
Filling Elbow Pipe		
SP526484 .....	143, 145, 147, 149, 151	
Filling Hose Pipe		
RSPF200166 .....	143	
SPPRI505000054 .....	143, 145, 147, 149, 151	
SP101621 .....	143, 145, 147, 149, 151	
SP547980 .....	143, 145, 147, 149, 151	
Filter		
SPPRI340004030 .....	143, 145, 147, 149, 151	
SP516012 .....	161, 167	
SP525935 .....	161	
525935 .....	171	
568380 .....	175, 183	
570835 .....	219	
Filter Holder		
572126 .....	179	
574850 .....	187	
Filter Tank		
570846 .....	219	
Fixed Hinge		
568982 .....	135, 137	
Fixed Lower Hinge		
568982 .....	131	
568984 .....	131	
Fixed Upper Hinge		
568979 .....	131, 135, 137	
568981 .....	131	
Flap		
SP540113.....	143, 145, 147	
Foam Roller		
SP100188.....	155, 157, 159	
Frame GND Interconnection		
528080 .....	220	
528205 .....	220	
Frastener		
SP550115.....	45	
Frequency Inverter		
571472 .....	161, 167, 175, 183	
571474 .....	161, 167, 171, 175, 179, 187	
Frequency Inverter Filter		
SP557932.....	179, 187	
Front Cover		
573014 .....	37	
Front Panel		
SP547744.....	33	
SP547746.....	33	
SP547752.....	25, 33	
SP547754.....	25, 33	
SP557056.....	29	
SP557057.....	29	
SP562724.....	29	
SP562725.....	29	
563458 .....	25, 33	
563460 .....	25, 33	
568976 .....	129, 203	
568999 .....	129, 203	
571722 .....	129, 203	
571725 .....	129, 203	
572535 .....	41, 49	
572536 .....	41, 49	
572537 .....	41, 49	
572538 .....	41, 49	
574091 .....	37	
574768 .....	213	
Front Spring Holder		
SP550447.....	17	
Fuse		
SP345805005020.....	165, 171, 179, 187	
SP345805163032..	165, 167, 171, 175, 179, 183, 187	
Fuse Cover		
SP554311 .....	175, 179, 183, 187	
Fuse Holder		
SPPRI1401001020.....	179	
SPPRI401001020.....	165, 187	
SPPR401001020.....	171	
SP554310.....	175, 179, 183, 187	
Fuse Housing		
SPPRI401003020..	165, 167, 171, 175, 179, 183, 187	

N/A items do not appear in index.

## H

Handle	SP552908 .....	133
	SP552909 .....	133
	SP556297 .....	133
	552916 .....	133
	562898 .....	133
	571780 .....	137
	571781 .....	135
	571788 .....	133
	576081 .....	133
	582330 .....	133
Handle Ball	SP535407 .....	133
Handle Lower Part	SP535429 .....	133
	571779 .....	135, 137
Handle Torsion Spring	SP535402 .....	131, 135, 137
Heating Contactor Wiring	PRI351105209 .....	220
	PRI351107209 .....	220
	PRI351108209 .....	220
Heating Element	SP540143 .....	197, 203
	SP540144 .....	197, 203
	SP540145 .....	197, 203
	SP540146 .....	197, 203
Heating Element Cover	568938 .....	203
Heating Element Front Cover	SP563274 .....	129, 203
	568986 .....	129, 203
Heating Element Hole Plug	SPPRI342001016 .....	191, 193
Heating GND Wiring	528335 .....	220
Heating Wiring	528328 .....	220
	528330 .....	220
	528331 .....	220
Hex Pillar	570381 .....	177, 181, 185, 189
Hinge	SP516832 .....	23, 27, 31, 43
Hinge Spacer	SP535421 .....	131, 135, 137
	SP537849 .....	129, 203
Hinges	570553 .....	131
	570554 .....	131
Holder	SPPRI326002004 .....	23, 27, 31, 35
	540123 .....	167, 171
	569600 .....	205
	570382 .....	175, 179, 183, 187
	582260 .....	89, 95, 101
Holder Cover	SP535430 .....	133, 137
	SP535436 .....	133
	SP535438 .....	133, 135
	SP556278 .....	133

Holder Partition	SP526474.....	161
Hook	SPPRI551016250.....	23, 27, 31, 43
Hook Lock	SPPRI610002007.....	23, 27, 35, 69, 91, 93, 95
Hose	SPPRI503002049.....	155, 157, 159
	SPPRI540000014.....	143, 145, 147, 149, 151
	SPPRI540001019.....	205
	SPPRI540020005.....	217
	529747 .....	217
Hose Clamp	SPPRI240000002.....	143, 145, 147, 149, 151
	SPPRI240000003.143, 145, 147, 149, 151, 155, 157, 159, .....	205
	SPPRI240000005.....	207
	SPPRI240000007.143, 145, 147, 149, 151, 155, 157, 159, .....	213, 219
	SPPRI240000017.....	143, 149, 151, 157, 159
	SPPRI240000021.....	143, 145, 147, 149, 151, 157
	SPPRI241000017.....	155, 157, 159
	SP526491.....	143, 145, 147, 149, 151
	SP526532.....	155, 157, 159
	576096 .....	155, 159
Hose Coupling	567173 .....	205
Hose End	567171 .....	205
Hose Pharmasteel	567180 .....	205
Hose Pipe	SP101745.....	143, 145, 147

## I

Inlet Valve Extension Wiring	552477 .....	220
Insulation Washer	571458 .....	175, 179, 183, 187
Internal Vessel	SP540122.....	143, 145, 147
Isolation Paper	SPPRI350012007.....	109, 111, 161

## K

Key	SP550616.....	23, 27, 69, 91, 93, 95
Keyboard	SP537994.....	71
	SP547011.....	71
	SP547012.....	71
	SP547013.....	71
	SP547014.....	71
	SP547023.....	51, 71
	SP547024.....	51, 71
	SP547025.....	51, 71
	SP547026.....	51, 71
	SP547035.....	71
	SP547036.....	71
	SP547037.....	71
	SP547038 .....	71

N/A items do not appear in index.

SP552911.....	71
SP556112.....	71
SP557566.....	73, 75, 77
SP557569.....	61
SP557570.....	61
SP557575.....	51
SP557576.....	51
SP557580.....	51
SP557583.....	51
SP559392.....	61
SP559395.....	61
SP560755.....	71
SP560761.....	61
SP560762.....	61
547087.....	73
547088.....	73
560747.....	73
560748.....	73
577656.....	103, 105, 107
Kit of Hinges	
570553.....	135
<hr/>	
<b>L</b>	
Label9	
SP563290.....	71
SP564831.....	131
524740.....	167, 171
557981.....	163
560786.....	31
570371.....	179, 183, 187
570731.....	175
572486.....	9
576337.....	9
579019.....	175, 179, 183, 187
Label Covering	
567925.....	79
Leading Pin	
SP550113.....	51, 61, 79, 81, 83, 103, 105, 107
Left Cover	
574783.....	213
Liquid Detergent Box	
SP540123.....	165
Liquid detergents	
570316.....	183, 187
Liquid Soap Supply Connection Kit	
SP540180.....	161
Locating Segment	
SP529710.....	133
571773.....	135, 137
Lock	
SP537760.....	131, 141
SP547527.....	23, 27, 35, 45, 69, 91, 93, 95
Lock Hook	
581001.....	45
Lock Pin	
SP537933.....	131
Logo	
567887.....	89, 95, 101
Lower Frame	
SP533749.....	13
Lower Hinge	
575963.....	131, 135, 137
575965.....	131
<hr/>	
Lower Lath	
SP547515.....	69
Lower Rear Cover	
SP533382.....	25, 29, 33, 37, 41
Lower Weight	
SP533737.....	11
SP533753.....	11
SP533784.....	11
Lubrication Grease	
SP111313000002.....	209
<hr/>	
<b>M</b>	
Main Switch	
SPPRI404000097..161, 167, 171, 175, 179, 183, 187	
SPPRI404000098..161, 167, 171, 175, 179, 183, 187	
SPPRI404000099..161, 167, 171, 175, 179, 183, 187	
SPPRI404001098.....161, 167, 171, 175, 179, 183	
SPPRI404001099.....161, 167, 171, 175, 179, 183	
SP506407.....161, 167, 171, 175, 179, 183	
Main Switch Knob	
SPPRI404000095..165, 167, 171, 175, 179, 183, 187	
Main Vessel	
SP540115.....	143, 145, 147
Main Wiring	
SP552475.....	161
SP557768.....	161
568392 .....	220
Manifold Flush Kit	
529789 .....	217
529797 .....	217
529798 .....	217
529799 .....	217
529800 .....	217
Microswitch	
SP528309.....	13
568978 .....	139
571634 .....	203
Mixer	
SP526558.....	143, 145, 147, 149, 151
582508 .....	143, 145, 147
Mixer Body	
SP526565.....	143, 145, 147, 149, 151
582506 .....	143, 145, 147
Mixer Lid	
SP526557.....	143, 145, 147, 149, 151
582509 .....	143, 145, 147
Module	
553189 .....	41, 45
Motor and Pulley	
SP555581.....	207
SP555584.....	207
SP557450.....	207
SP557453.....	207
571445 .....	207
571446 .....	207
Motor Cover	
581688 .....	207
Motor Holder	
SP533761.....	207
Motor Temperatuer Protect Cable	
568396 .....	220

N/A items do not appear in index.

---

**N**

Network Installation Kit	
569593 .....	51, 61, 69
Nose Assembly	
572582 .....	85
573954 .....	97
574126 .....	91
574235 .....	85
574238 .....	91
574241 .....	97
576034 .....	87
576037 .....	93
576040 .....	99
576043 .....	87
576046 .....	93
576049 .....	99
579187 .....	89
581632 .....	95
581638 .....	101
Nut	
F430225 .....	139
F430232 .....	139
SP101416 .....	161, 167, 171, 175, 179, 183, 187
SP101419 .....	161, 167, 171, 175, 179, 183, 187
SP309084000308 .....	85, 87, 91, 93, 97, 99
SP310934000003 .....	13
SP310934000004 ..	51, 61, 69, 73, 75, 77, 79, 81, 83,
85, .... 87, 89, 91, 93, 95, 97, 99, 101, 103, 105, 107,	
109, .....	111, 161, 165, 169, 173
SP310934000006 .....	205
SP310934000008 .....	207
SP310934000010 .....	13
SP310934000020 .....	13
SP310934100006 ..	161, 169, 173, 177, 181, 185, 189
SP310934240004 .....	139
SP310934240006 .....	203
SP310934240008 .....	197, 203
SP310985000006 .....	31, 43, 129, 133, 135, 137, 203,
207	
SP310985000008 .....	11, 13, 197, 201
SP310985000010 .....	13, 197, 201
SP310985000012 .....	207
SP313251000006 .....	23, 27, 31, 35, 43, 191, 193
SP313251002104 .....	129
SP510923 .....	13
SP514193 .....	29, 35, 103, 105, 107
510929 .....	205
567166 .....	205
567170 .....	205
571635 .....	203

---

**O**

O-Ring	
567168 .....	205
567169 .....	205
Oscillation Limiter	
SP533388 .....	11
Overflow Tube	
SP526480 .....	143, 149, 151, 157, 159
Overlay	
573927 .....	85, 87
573936 .....	91, 93
573951 .....	97, 99

---

574217 .....	85, 87
574220 .....	91, 93
574223 .....	97, 99

---

**P**

Panel Holder	
SP533293.....	31
SP557621.....	23
SP560302.....	27
567960 .....	35
573938 .....	41
580773 .....	45
Pin	
SP540117 .....	143, 145, 147
Pin Insertion	
SP520408.....	13, 23, 25, 27, 31, 35, 43, 47, 51, 61
Pipe	
570807 .....	213
Pipe Nipple	
SPR22112000114.....	191, 193
Plastic Post	
577689 .....	45
577693 .....	45
Plastic Window	
582274 .....	89, 95, 101
Plate of Closing	
568941 .....	139
Plug	
SPPRI426001268.....	191, 193
567053 .....	149, 151
Profile	
SP522450.....	203
Profiled Sealing	
SPPRI505000058....	13, 27, 155, 169, 173, 177, 181,
185, .....	189, 203
Programmer Holder	
SP547510.....	69
SP547513.....	69
SP557618.....	51
SP558896.....	61
569578 .....	35
573934 .....	41
Programming Cable	
F8600501 .....	51, 61, 69
Pump	
529742 .....	217
529743 .....	217
529744 .....	217
529745 .....	217
529746 .....	217
567151 .....	205
Pump Board	
567149 .....	205
Pump Relay Board to LED Terminal Cable	
SP528149.....	165
Push Bottom Cover	
SP543000003.....	167, 171, 175, 179, 183, 187

---

**R**

Rear Cover	
SP533143.....	25, 27, 31

N/A items do not appear in index.

533382 .....	45
570468 .....	37, 41, 45
Rear Panel	
SP526475 .....	163
SP554378 .....	163
571017 .....	175, 179
574113 .....	183, 187
577193 .....	167, 171
Rear Panel Lid	
SP540121 .....	165
Rear Spring Holder	
SP550448 .....	17, 19, 21
SP555517 .....	15
Reduction	
567128 .....	155
567174 .....	143
Reinforcement	
SP558880 .....	23, 47
SP558944 .....	27
Reinforcement Tube	
SP500125 .....	155, 157, 159
Reverse Function Drain Valve	
SP547821 .....	155, 157, 159
Right Cover	
574789 .....	213
Rim	
SP562546 .....	131, 135
573188 .....	131
582297 .....	131
Rivet	
SP313250004007 .....	161
SP313250048008 .....	23, 27, 31
SP313250048103 .....	43
SP547779 13, 23, 25, 27, 31, 35, 43, 47, 51, 61, 103, 105, .....	107, 129, 203
505479 .....	15, 17, 19, 21
Roller	
SP533727 .....	13
RS485 External Interconnection	
SP547075 .....	220
<hr/>	
<b>S</b>	
Screw	
F430977 .....	139
SP100218 .....	103, 105, 107
SP309798124313 .....	143, 145, 147
SP520407 .....	87, 89, 93, 95, 99, 101
SP526497 ... 143, 145, 147, 149, 151, 155, 169, 173, 177, .....	181, 185, 189
SP529206 .. 13, 23, 25, 27, 29, 31, 33, 35, 43, 45, 89, 95, 101, 109, 111, 143, 145, 147, 155, 157, 159, 161, 165, .....	169, 173, 177, 181, 185, 189, 193, 205
582361 .....	89, 95, 101
Seal	
SPPRI520001009 .....	143, 149, 151
SP517232 .....	11, 23, 27, 33, 43, 47
SP526564 .....	191
SP537739 .....	197, 203
564202 .....	35, 45
Sealant	
SPPRI704000053 .....	197
Sealing Ring	
SP525813 .....	209
SP537848 .....	209
N/A items do not appear in index.	
582325 .....	209
Self-Adhesive Pad	
SPMEC001410.....	51, 61
Self-Adhesive Profile	
570387 .....	175, 179, 183, 187
Service Door Kit	
568989 .....	137
568991 .....	127, 131, 135
Shaft Ring	
SP537843.....	197, 203
Side Board	
570391 .....	69
570392 .....	69
Side Panel	
SP550318.....	33
SP550320.....	31
SP550342.....	31
SP550344.....	33
SP557629.....	23, 27
SP557631.....	25, 29
SP558976.....	27
SP558978.....	29
563472 .....	31
563474 .....	33
563500 .....	23
563502 .....	25
572007 .....	39
572008 .....	39
573042 .....	39
573044 .....	39
574061 .....	39
574062 .....	39
580696 .....	49
580697 .....	47
580724 .....	49
580725 .....	47
581605 .....	49
581606 .....	47
Side Panel Assembly	
574131 .....	41
574132 .....	41
574135 .....	41
574136 .....	41
Side Sheet Metal	
SP547506.....	69
SP547507.....	69
Sidewall	
572571 .....	85, 91, 97
572572 .....	85, 91, 97
572586 .....	85, 91, 97
572588 .....	85, 91, 97
573929 .....	85, 87, 91, 93, 97, 99
576069 .....	87, 89, 93, 95, 99, 101
576070 .....	87, 89, 93, 95, 99, 101
Soap Hopper	
SP540111 .....	143, 145, 147
SP554213.....	143
Soap Hopper Plug	
SP526468.....	143, 145, 147
Soap Hopper Upper Cover	
SP540112 .....	143, 145, 147
Soap Link Kit	
SP557944.....	165, 167, 171
Soap Pump Kit	
SP567105.....	215
SP567106.....	215

Soap Relay Board	
SP524714 .....	165
524714 .....	167, 171
553187 .....	175, 179, 183, 187
804528 .....	175, 179
Spacer	
F431901.....	139
Speed Sensor	
SP557701 .....	207
Speed Sensor Holder	
SP555547 .....	207
Speed Sensor Plate	
581680 .....	207
Spiral	
SP283449080200 .....	155, 157, 159
Spring	
SP505372 .....	15, 17, 19, 21
SP533764 .....	13
SP533765 .....	13
Spring Clamp	
SP540183 .....	155, 157, 159
Spring Holder	
SP534977 .....	13
SP534978 .....	13
Steam Filter	
SP405054120215 .....	191, 193
Steam Heat Wiring	
528064 .....	220
Steam Hose	
SP526528 .....	191, 193
Steam Injector	
SP526525 .....	191, 193
Steam Kit	
SP559313 .....	191
555353 .....	193
Steam Valve	
SP514164 .....	191, 193
Steam Valve Body	
SP514165 .....	191, 193
Steam Valve Cable	
SPPRI351000161 .....	220
Steam Valve Cover	
582255 .....	193
582256 .....	193
Steam Valve Support	
SP526529 .....	191, 193
Suction Tube	
529787 .....	217
Supply Pump Kit	
MB90-Z40 .....	217
MB90-Z41 .....	217
MB90-Z42 .....	217
MB90-Z43 .....	217
MB90-Z44 .....	217
Switch	
SP100388 .....	165, 167, 171, 175, 179, 183, 187
Switching Unit	
SP528312 .....	51, 61, 69, 73, 79, 85, 87, 89, 103

83, .....	89, 95, 101, 203, 205
SP510846.....	51, 61, 69
Tee	
SP526454.....	155, 157, 159
Temperature Sensor	
503839 .....	143, 145, 147, 149, 151
Temperature Sensor Seal	
SP526439.....	143, 145, 147, 149, 151
Tensioning Angle Piece	
SP53326.....	207
SP53327.....	207
Terminal Board	
SPPRI350000007.....	109, 111
SP506575.....	163
Thorn	
567152 .....	205
Top Cover	
SP550303.....	31
SP551994.....	31
SP557645.....	23
SP558898.....	27
567873 .....	23
567965 .....	39
569645 .....	39
574197 .....	41
574252 .....	41
580674 .....	45
580780 .....	45
Top Cover Reinforcement	
SP547707 .....	23, 27, 31, 41
Torsion/Door Lock Spring	
571612 .....	139
Transformer	
SP516648.....	161
579014 .....	175, 179, 183, 187
Transformer Connection	
528350 .....	220
552495 .....	220
Transformet	
SP516648.....	171, 179, 187
564561 .....	175, 179, 183, 187

## U

U Shape	
SP556983.....	29
SP556984.....	29
Upper Frame	
SP533756.....	11
Upper Hinge	
575960 .....	135, 137
575962 .....	131
Upper Lid Prop	
SP533341.....	23, 27, 31, 41
USB Cable	
SP547006.....	165, 167, 171, 175, 179, 183, 187
569668 .....	109
USB Connection	
SP557744.....	61

## T

Tape	
SP284000012003 ..	31, 51, 61, 69, 73, 75, 77, 79, 81,

N/A items do not appear in index.

---

**V**

Valve, 2-Way	
SP547958	143, 147
Valve, 3-Way	
SP547959	143, 145, 147
570195	149, 151
Valve, 4-Way	
SP548933	143, 145
Vent Hose	
SP526509	143, 145, 147, 149, 151
Vibration Switch Assembly	
SP533391	13
Vibration Switch Holder	
SP533387	13

---

**W**

Washer	
F8193101	139
SPPRI522000012	23, 27
SPPRI523000007	169, 173
SP311125000003	13, 85, 87, 91, 93, 97, 99
SP311125000004	69, 79, 81, 83, 103, 105, 107, 161, 165, 169, 173, 177, 181, 185, 189
SP311125000006	23, 47, 191, 193
SP311125000008	11, 197, 201
SP311125100006	161, 169, 173, 177, 181, 185, 189
SP311125240004	139
SP311125240006	163, 169, 173, 177, 181, 185, 189, 203
SP311125240008	197, 201, 203
SP311127000003	85, 87, 91, 93, 97, 99
SP311127000004	35, 79, 81, 83, 161, 165, 169, 173, 177, 181, 185, 189, 205
SP31112700000623	27, 47, 177, 181, 185, 189, 191, 193, 205
SP311679800003	13, 35, 43, 51, 61, 69, 73, 75, 77
SP311679800004	11, 13, 33, 43, 45, 51, 61, 69, 73, 75, 77, 79, 81, 83, 85, 87, 89, 91, 93, 95, 97, 99, 101, 103, 105, 107, 169, 173, 177, 181, 185, 189
SP311679800006	203
SP311679824004	139
SP311679824006	161, 163, 169, 173, 177, 181, 185, 189
SP311737000010	197, 201
SP311902100004	13, 29, 35, 51, 61, 69, 73, 79, 81, 83, 85, 87, 89, 91, 93, 95, 97, 99, 101, 103, 105, 107, 181, 189, 205
SP311902100006	31, 43, 133, 135, 137, 177, 181, 185, 189, 205
SP311902100008	155, 157, 159
SP311902100010	13, 207
SP311902100012	207
SP505430	177, 181, 185, 189
SP525284	11
SP537885	197, 201
SP547981	191, 193
563361	161
571642	131, 135, 137
576338	43
582275	197, 201
582327	139
Washing Drum	
537732P	195, 199

N/A items do not appear in index.

563245P	195, 199
563265P	195, 199
Water Heater	
SP562736	215
SP562749	215
Water Hose	
F200164	143
Water Level Switch	
562709	159
570315	157, 159
Water Level Switch Hose	
SPPRI540001003	155, 157, 159
Water Softener	
SP562737	215
SP562750	215
Waters Level Sensor	
SP562709	155
Wireless Reader Wiring	
552466	220
Wiring Steam - Electrical Heating	
528393	220

---

**Y**

Y-Piece	
SPPRI503000028	155, 157, 159

---

**Numerics**

5724879	
---------	--

---