

# Washer-Extractor

15, 30 and 135 Models

Refer to Page 5 for Model Numbers



[www.alliancelaundry.com](http://www.alliancelaundry.com)

Part No. D2410R4  
February 2024



# Table of Contents

Title	Page
Parts Ordering Information.....	4
Serial Plate Location .....	4
Model Identification .....	5
Serial Label .....	6
Logo Label .....	8
Upper Frame .....	10
Lower Frame.....	12
Stabilizing Spring - AF Non-Brand, H, HY, IY, J, LP, SY and UY Models.....	14
Stabilizing Spring - AF, FX, HX, LY, MWF, PY, QW and SW Models.....	16
Stabilizing Spring - AF, IY, and NY Models .....	18
Stabilizing Springs - FX and PY Models .....	20
Cabinet - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 1 of 2) .....	22
Cabinet - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 2 of 2) .....	24
Cabinet - H, IY and J Models (Drawing 1 of 2) .....	26
Cabinet - H, IY and J Models (Drawing 2 of 2) .....	28
Cabinet - AF, FX, HX, LY, MWF, PY, QW and SW Models (Drawing 1 of 2) .....	30
Cabinet - AF, FX, HX, LY, MWF, PY, QW and SW Models (Drawing 2 of 2) .....	32
Cabinet - AF, IY and NY Models (Drawing 1 of 3) .....	34
Cabinet - AF, IY and NY Models (Drawing 2 of 3) .....	36
Cabinet - AF, IY and NY Models (Drawing 3 of 3) .....	38
Cabinet - PY Models (Drawing 1 of 2) .....	40
Cabinet - PY Models (Drawing 2 of 2) .....	42
Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 1 of 5).....	44
Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 2 of 5).....	46
Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 3 of 5).....	48
Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 4 of 5).....	50
Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 5 of 5).....	52
Control Panel - H, IY and J Models (Drawing 1 of 4) .....	54
Control Panel - H, IY and J Models (Drawing 2 of 4) .....	56
Control Panel - H, IY and J Models (Drawing 3 of 4) .....	58
Control Panel - H, IY and J Models (Drawing 4 of 4) .....	60
Control Panel - AF, FX, HX, LY, MWF, PY, QW and SW Models (Drawing 1 of 2).....	62
Control Panel - AF, FX, HX, LY, MWF, PY, QW and SW Models (Drawing 2 of 2) .....	64
Control Panel OPL - AF, IY and NY Models .....	66
Control Panel Vended - AF, IY and NY Models .....	68
Control Panel for Central Payment System - AF, IY and NY Models.....	70
Control Panel OPL - AF, IY and NY Models .....	72
Control Panel Vended - AF, IY and NY Models .....	74
Control Panel for Central Payment System - AF, IY and NY Models.....	76
Control Panel OPL - FX and PY Models .....	78
Control Panel OPL - FX and PY Models .....	80

© Copyright 2024, Alliance Laundry Systems LLC

All rights reserved. No part of the contents of this book may be reproduced or transmitted in any form or by any means without the expressed written consent of the publisher.

Control Panel OPL - FX and PY Models .....	82
Control Panel Vended - FX and PY Models.....	84
Control Panel Vended - FX and PY Models.....	86
Control Panel Vended - FX and PY Models.....	88
Control Panel for Central Payment System - FX and PY models .....	90
Control Panel for Central Payment System - FX and PY Models .....	92
Control Panel for Central Payment System - FX and PY Models .....	94
Coin Meter Box .....	96
Coin Meter Box .....	98
Coin Meter - AF, IY and NY Models (Drawing 1 of 3) .....	100
Coin Meter - AF, IY and NY Models (Drawing 2 of 3) .....	102
Coin Meter - AF, IY and NY Models (Drawing 3 of 3) .....	104
Coin Meter - FX, LY and PY Models (Drawing 1 of 4) .....	106
Coin Meter - FX, LY and PY Models (Drawing 2 of 4) .....	108
Coin Meter - FX, LY and PY Models (Drawing 3 of 4) .....	110
Coin Meter - FX, LY and PY Models (Drawing 4 of 4) .....	112
Door (Drawing 1 of 4).....	114
Door (Drawing 2 of 4).....	116
Door (Drawing 3 of 4).....	118
Door (Drawing 4 of 4).....	120
Door .....	122
Door .....	124
Door Lock (Drawing 1 of 2) .....	126
Door Lock (Drawing 2 of 2) .....	128
Water Inlet System.....	130
Two Water Inlet System.....	132
Three Water Inlet System .....	134
Drain System (Drawing 1 of 2).....	136
Drain System (Drawing 2 of 2) .....	138
Drain System - J Models with V in 7th Position.....	140
Rear Panel (Drawing 1 of 3) .....	142
Rear Panel (Drawing 2 of 3) .....	144
Rear Panel (Drawing 3 of 3) .....	146
Rear Panel - 230-400V with Neutral (Drawing 1 of 2).....	148
Rear Panel - 230-400V with Neutral (Drawing 2 of 2).....	150
Rear Panel - 400-440V (Drawing 1 of 2).....	152
Rear Panel - 400-440V (Drawing 2 of 2).....	154
Rear Panel - CE Models 230-400V with Neutral (Drawing 1 of 2) .....	156
Rear Panel - CE Models 230-400V with Neutral (Drawing 2 of 2) .....	158
Rear Panel - CE Models 400-440V (Drawing 1 of 2) .....	160
Rear Panel - CE Models 400-440V (Drawing 2 of 2) .....	162
Rear Panel - 230V/400V + N (Drawing 1 of 2).....	164
Rear Panel - 230V/400V + N (Drawing 2 of 2).....	166
Rear Panel - 400/440V-480V (Drawing 1 of 2) .....	168
Rear Panel - 400/440V-480V (Drawing 2 of 2) .....	170
Steam Heating .....	172
Steam Heating .....	174
Washing Drum and Tub (Drawing 1 of 2) .....	176
Washing Drum and Tub (Drawing 2 of 2) .....	178
Washing Drum and Tub (Drawing 1 of 3) .....	180

Washing Drum and Tub (Drawing 2 of 3) .....	182
Washing Drum and Tub (Drawing 3 of 3) .....	184
Drive.....	186
Bearing Housing .....	188
Elevated Base Frame .....	190
Soft Wash With Built-In Recirculation Pump.....	192
Soft Wash - Without Built-In Recirculation Pump.....	194
Liquid Soap Supply System - Pumps.....	196
Base Frame with Built-In Filter .....	198
Filter Tank .....	200
Cabinet Reinforcement without Soap Hopper.....	202
Two Water Inlet System without Soap Hopper .....	204
Three Water Inlet System without Soap Hopper.....	206
Wire Harnesses .....	208
Parts Index.....	209

## Parts Ordering Information

If literature or replacement parts are required, contact the source from whom the machine was purchased or contact Alliance Laundry Systems at (920) 748-3950 for the name and address of the nearest authorized parts distributor.


For technical assistance, call the number listed below:

(920) 748-3121   Ripon, Wisconsin

## Serial Plate Location

When calling or writing about your product, be sure to mention model and serial numbers. Model and serial numbers are located on serial plate(s) as shown.

Serial Plate; Models Through May 15, 2019

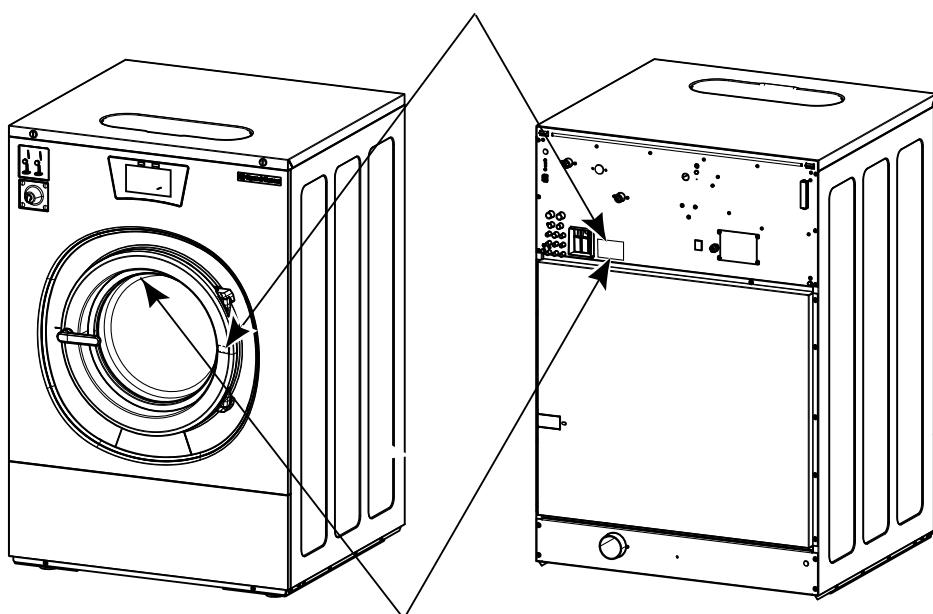

Serial Plate; Models Starting May 16, 2019


CFD3564P\_D2410

## Model Identification

Information in this manual is applicable to these washer-extractor models:

AF135_BASIC	IYA135V	NYA135V	SW135
AF135_PROFESSIONAL	IYC135J	NYC135T	SW15
AF135_X_CONTROL	IYC135R	NYC135V	SYC135A
AF135_X_CONTROL_PLUS	IYC135V	NYC135X	SYC135D
FX135_BUPA_X_CONTROL	IYE135J	NYE135T	SYE135A
FX135_BUPA_X_CONTROL_PLUS	IYE135R	NYE135X	SYE135D
FX135_X_CONTROL	IYE135V	NYH135T	SYG135A
FX135_X_CONTROL_PLUS	IYG135J	NYH135X	SYG135D
HX135_X_CONTROL	IYG135R	NYM135T	SYH135A
HX135_X_CONTROL_PLUS	IYH135J	NYM135X	SYH135D
HY135_HC-200	IYH135R	NYR135T	SYM135A
HY30_HC-200	IYM135J	NYR135X	SYM135D
IY135_ARIES	IYM135R	NYU135T	SYN030D
IY135_ARIES-ELITE	IYN030R	NYU135X	SYQ135A
IY135_EVOLIS	IYQ135J	NYX135T	SYQ135D
IY30_ARIES	IYQ135R	NYX135X	SYR135A
IY30_ARIES-ELITE	IYR135J	NYY135T	SYR135D
JLA30_ARIES	IYR135R	NYY135X	SYU135A
JLA30_ARIES-ELITE	IYR135V	PYA135V	SYU135D
JLA30C_ARIES	IYU135J	PYC135T	SYW135A
JLA30C_ARIES-ELITE	IYU135R	PYC135V	SYW135D
LPRFRAF135E	IYU135V	PYC135X	SYX135A
MWFX30_X_CONTROL	IYW135J	PYE135T	SYX135D
MWFX30_X_CONTROL_PLUS	IYX135J	PYE135V	SYY135A
PY135_X_CONTROL_FLEX	IYX135R	PYE135X	SYY135D
PY30_X_CONTROL	IYX135V	PYH135T	UYC135I
PY30_X_CONTROL_PLUS	IYY135J	PYH135X	UYE135I
QW15_X_CONTROL_PLUS	IYY135R	PYM135T	UYG135I
SY135_KIS_PHOTO-ME	JYC135J	PYM135X	UYH135I
SY135_QED	JYC135R	PYN030T	UYM135I
SY135_QED-SELECT	JYE135J	PYN030X	UYN030I
SY30_QED-SELECT	JYE135R	PYR135T	UYQ135I
UY135_PROFORM	JYE135V	PYR135V	UYR135I
UY30_PROFORM	LYC135T	PYR135X	UYU135I
H135	LYC135X	PYU135T	UYW135I
HYC135F	LYE135T	PYU135V	UYX135I
HYE135F	LYE135X	PYU135X	UYY135I
HYG135F	LYH135T	PYX135T	
HYH135F	LYH135X	PYX135V	
HYM135F	LYU135T	PYX135X	
HYN030F	LYU135X	PYY135T	
HYQ135F	LYX135T	PYY135X	
HYR135F	LYX135X		
HYU135F	LYY135T		
HYW135F	LYY135X		
HYX135F			

# Serial Label

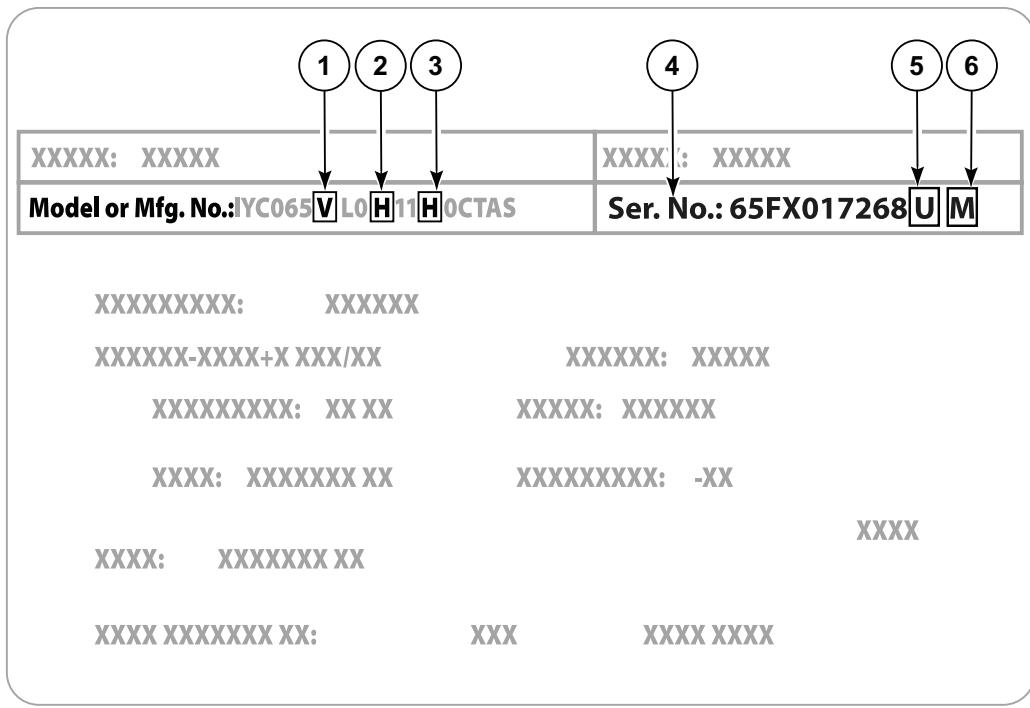


CZW587P

## Serial Label

REF	PART NO.	DESCRIPTION	COMMENTS
1	-	Control	A, D, F, I, J, R, T, V or X letter in 7th position of the model number
2	-	Speed	2, 3, 4, 6, H, N or U character in 10th position of the model number
3	-	Design	1, 2, 3, 4, 5, 6, 7, 8, A, B, C, D, G, H, J, K, L, M, N or P digits or characters in 13th Position
4	-	Serial Number	
5	-	Manufacturing Date - Year	2009: P 2010: R 2011: T 2012: V 2013: X 2014: B 2015: D 2016: F 2017: H 2018: K 2019: M 2020: Q 2021: S 2022: U 2023: W 2024: Y 2025: Z
6	-	Manufacturing Date - Month	January: A or B February: C or D March: E or F April: G or H May: J or K June: L or M July: N or Q August: P or S September: R or U October: T or W November: V or Y December: X or Z

## Logo Label

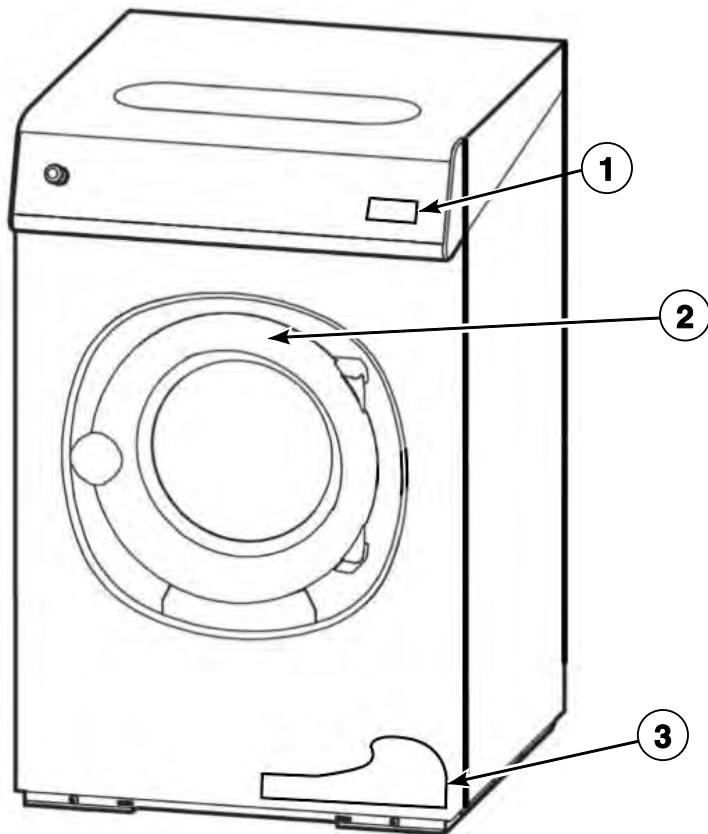


CFD3558P\_D2410

## **Logo Label**

<b>REF</b>	<b>PART NO.</b>	<b>DESCRIPTION</b>	<b>COMMENTS</b>
1	572486	Label	Lion Logo
2	576337	Label	ALSGEN
3	572487	Label	Softwash

## Upper Frame

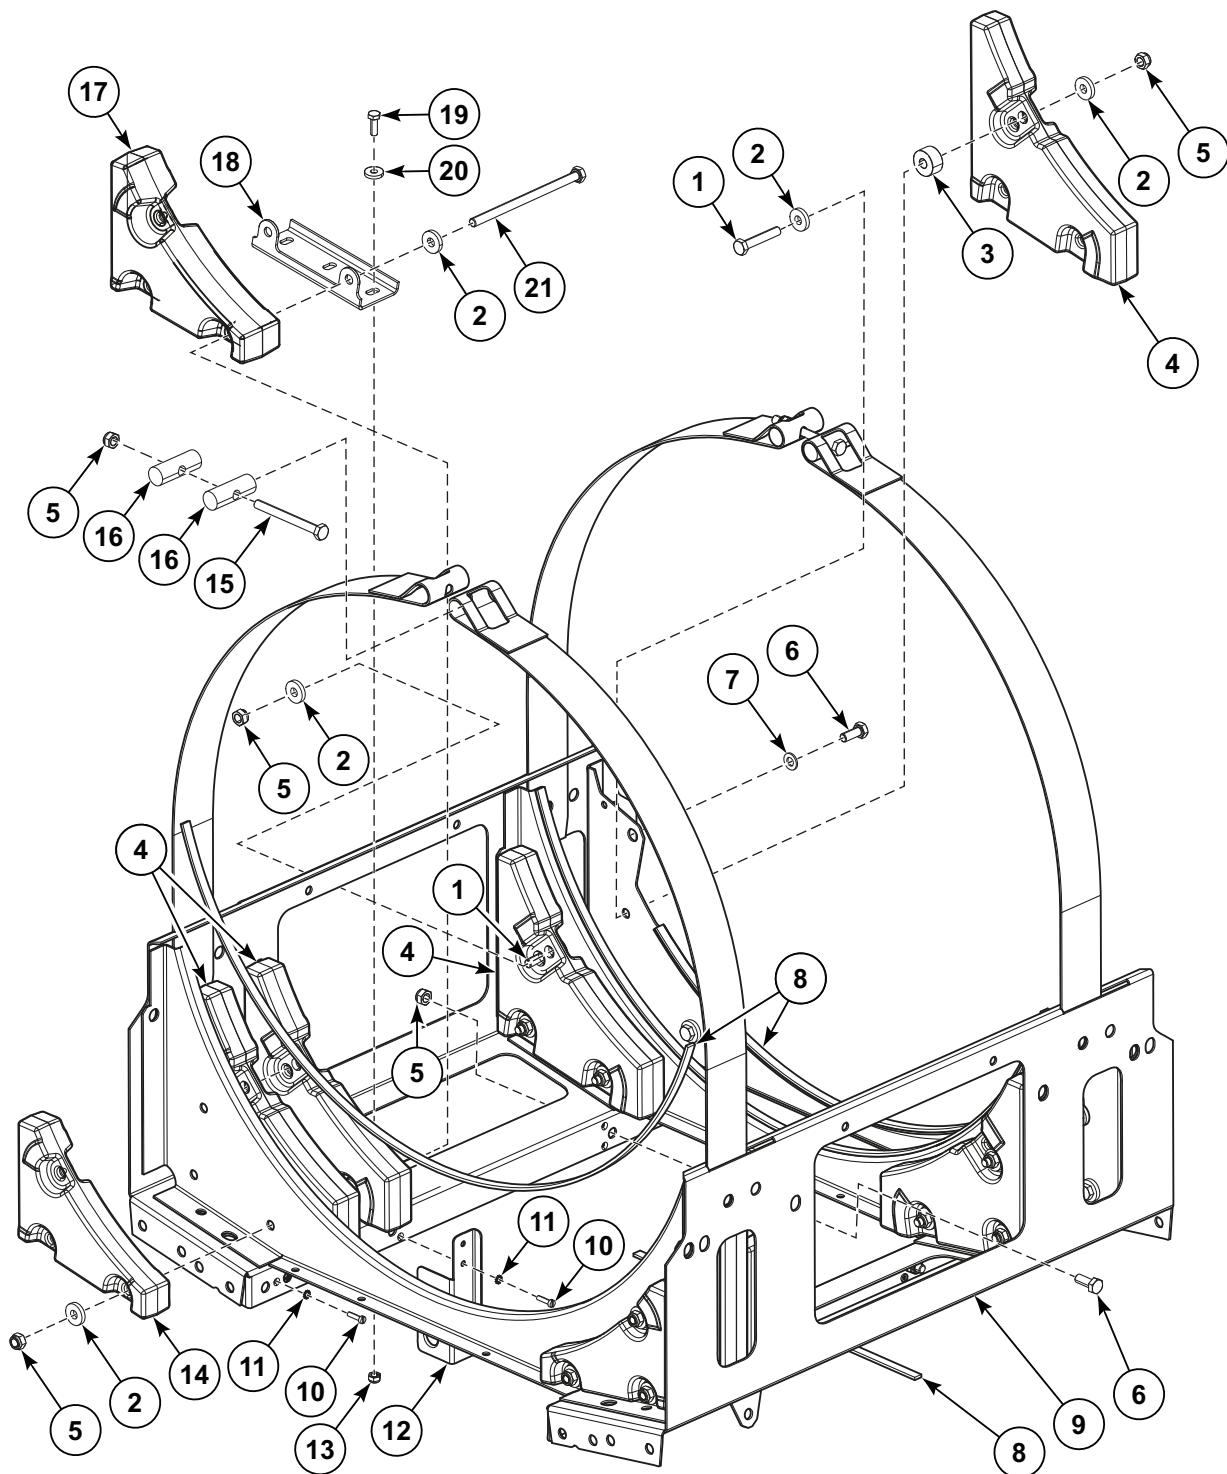


CZW603P\_D2410

## Upper Frame

REF	PART NO.	DESCRIPTION	COMMENTS
	SP245704003021	Adhesive	Used with external tub for fastening into frame
1	SP309933000845	Bolt	M8x45
2	SP525284	Washer	M8
3	SP515274	Distance Case	
4	SP533784	Lower Weight	
5	SP310985000008	Nut	M8
6	SP309933000820	Bolt	M8x20
7	SP311125000008	Washer	8.4
8	SP517232	Seal	
9	SP533776	Upper Frame	
10	SP309084000416	Bolt	M4x16; Models Through Serial No 135FX021290WU
	SP529206	Screw	4x11; Models Starting Serial No 135FX021291WU
11	SP311679800004	Washer	M4; Models Through Serial No 135FX021290WU
12	SP533388	Oscillation Limiter	
13	SP310985000006	Nut	M6
14	SP533737	Lower Weight	
15	SP309933000880	Bolt	M8x80
16	SP533738	Cover Strip Pin	
17	SP533753	Lower Weight	
18	580797	Support	
19	SP309933000618	Bolt	M6x18
20	SP311734900006	Washer	M6
21	SP533717	Bolt	M8x150

## Lower Frame

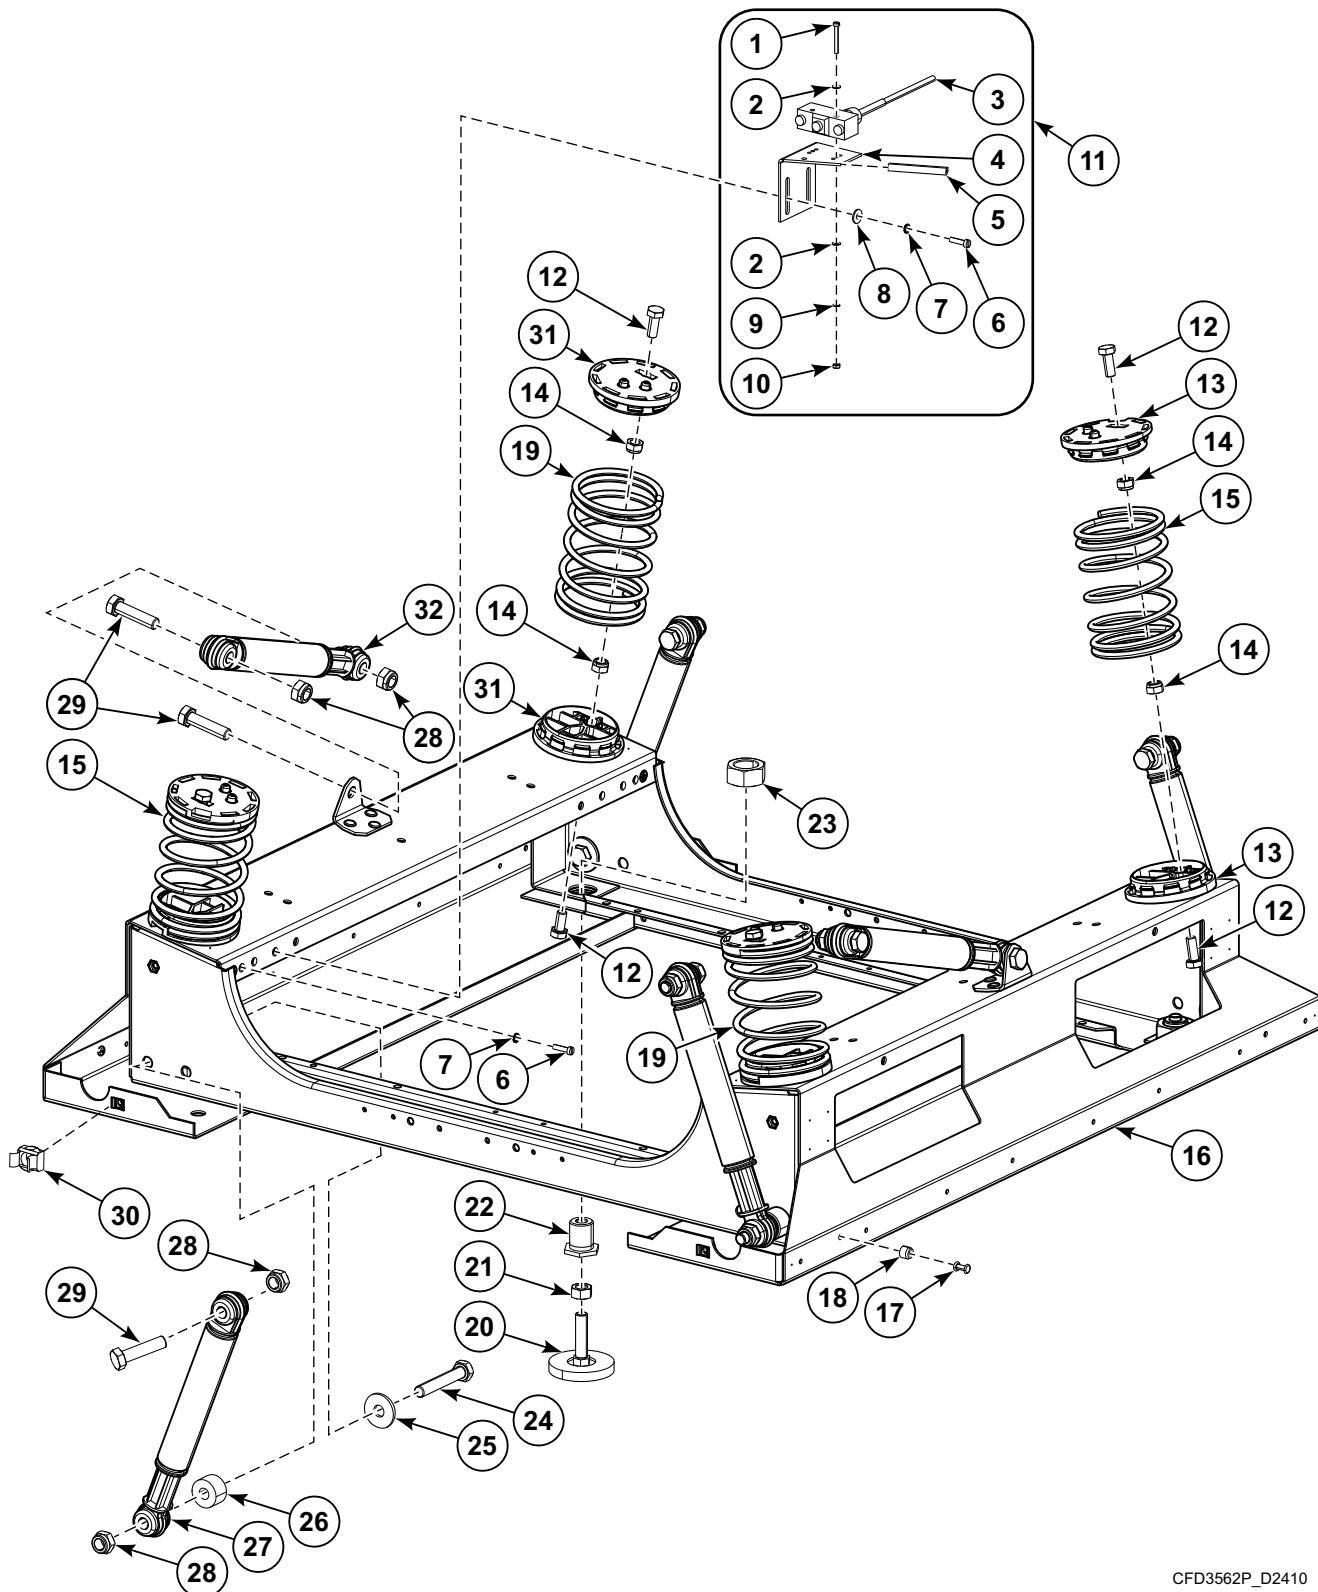


CFD3562P\_D2410

## Lower Frame

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP309084240325	Bolt	M3x25
2	SP311125000003	Washer	3.2
3	SP528309	Microswitch	Includes spring
4	SP533387	Vibration Switch Holder	
5	SPPRI505000058	Profiled Sealing	Models Through Serial No. 135FX017469SW
6	SP309084000416	Bolt	M4x16; Models Through Serial No 135FX019936WB
	SP529206	Screw	4x11; Models Starting Serial No 135FX019937WB
7	SP311679800004	Washer	M4; Models Through Serial No 135FX019936WB
8	SP311902100004	Washer	M4 - 4.3/12/1; Models Through Serial No 135FX019936WB
9	SP311679800003	Washer	M3
10	SP310934000003	Nut	M3
11	SP533391	Vibration Switch Assembly	Includes items 1-10
12	SP309933000820	Bolt	M8x20
13	SP534977	Spring Holder	Right
14	SP310985000008	Nut	M8
15	SP533768	Spring	Right
16	SP533771	Lower Frame	
17	SP547779	Rivet	4x16.7
18	SP520408	Pin Insertion	
19	SP533769	Spring	Left
20	SPPRI504000001	Adjustable Foot	
21	SP310934000010	Nut	M10
22	SP533726	Bolt	
23	SP310934000020	Nut	M20
24	SP506432	Bolt	M10x60
25	SP311902100010	Washer	10
26	SP533727	Roller	
27	SP533716	Damper	4 required
28	SP310985000010	Nut	M10
29	SP527420	Bolt	M10x40
31	SP534978	Spring Holder	Left
30	SP510923	Nut	M6
32	SP533715	Damper	2 required

## **Stabilizing Spring - AF Non-Brand, H, HY, IY, J, LP, SY and UY Models**

Models with A, D, F, I, J, R, T or X in 7th position of the model number

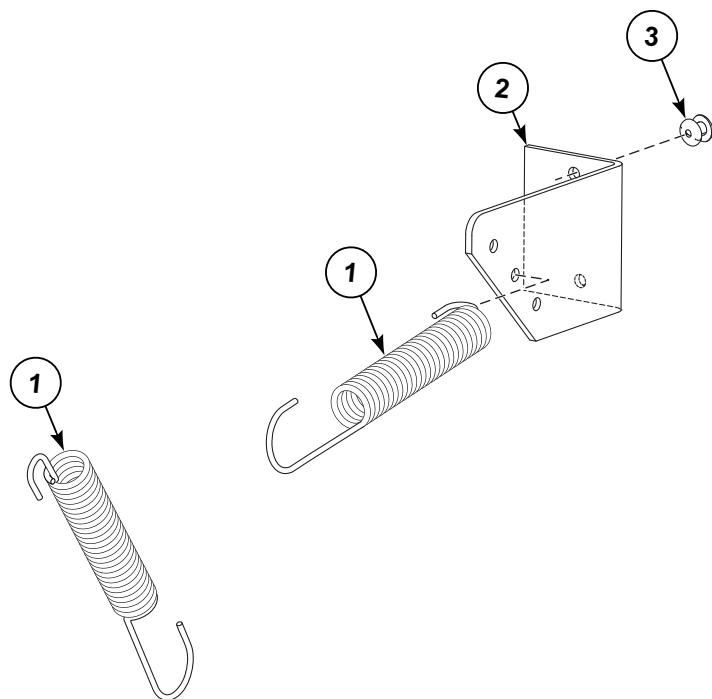


CZW431P\_D2410

## **Stabilizing Spring - AF Non-Brand, H, HY, IY, J, LP, SY and UY Models**

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP505372	Spring	
2	SP550449	Rear Spring Holder	
3	505479	Rivet	

# Stabilizing Spring - AF, FX, HX, LY, MWF, PY, QW and SW Models

Models with A, D, F, I, J, R, T or X in 7th position of the model number

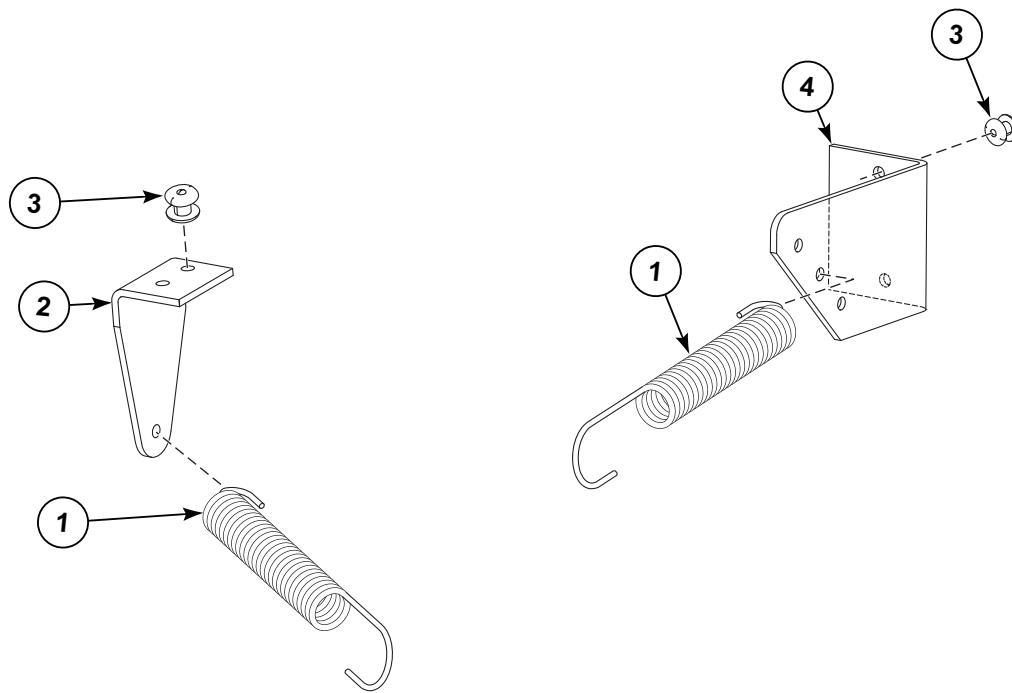


CZW432P\_D2410

## **Stabilizing Spring - AF, FX, HX, LY, MWF, PY, QW and SW Models**

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP505372	Spring	
2	SP550447	Front Spring Holder	
3	505479	Rivet	
4	SP550449	Rear Spring Holder	

## Stabilizing Spring - AF, IY, and NY Models

Models with V in 7th position of the model number or models with G, H, J or K in 13th position of the model number

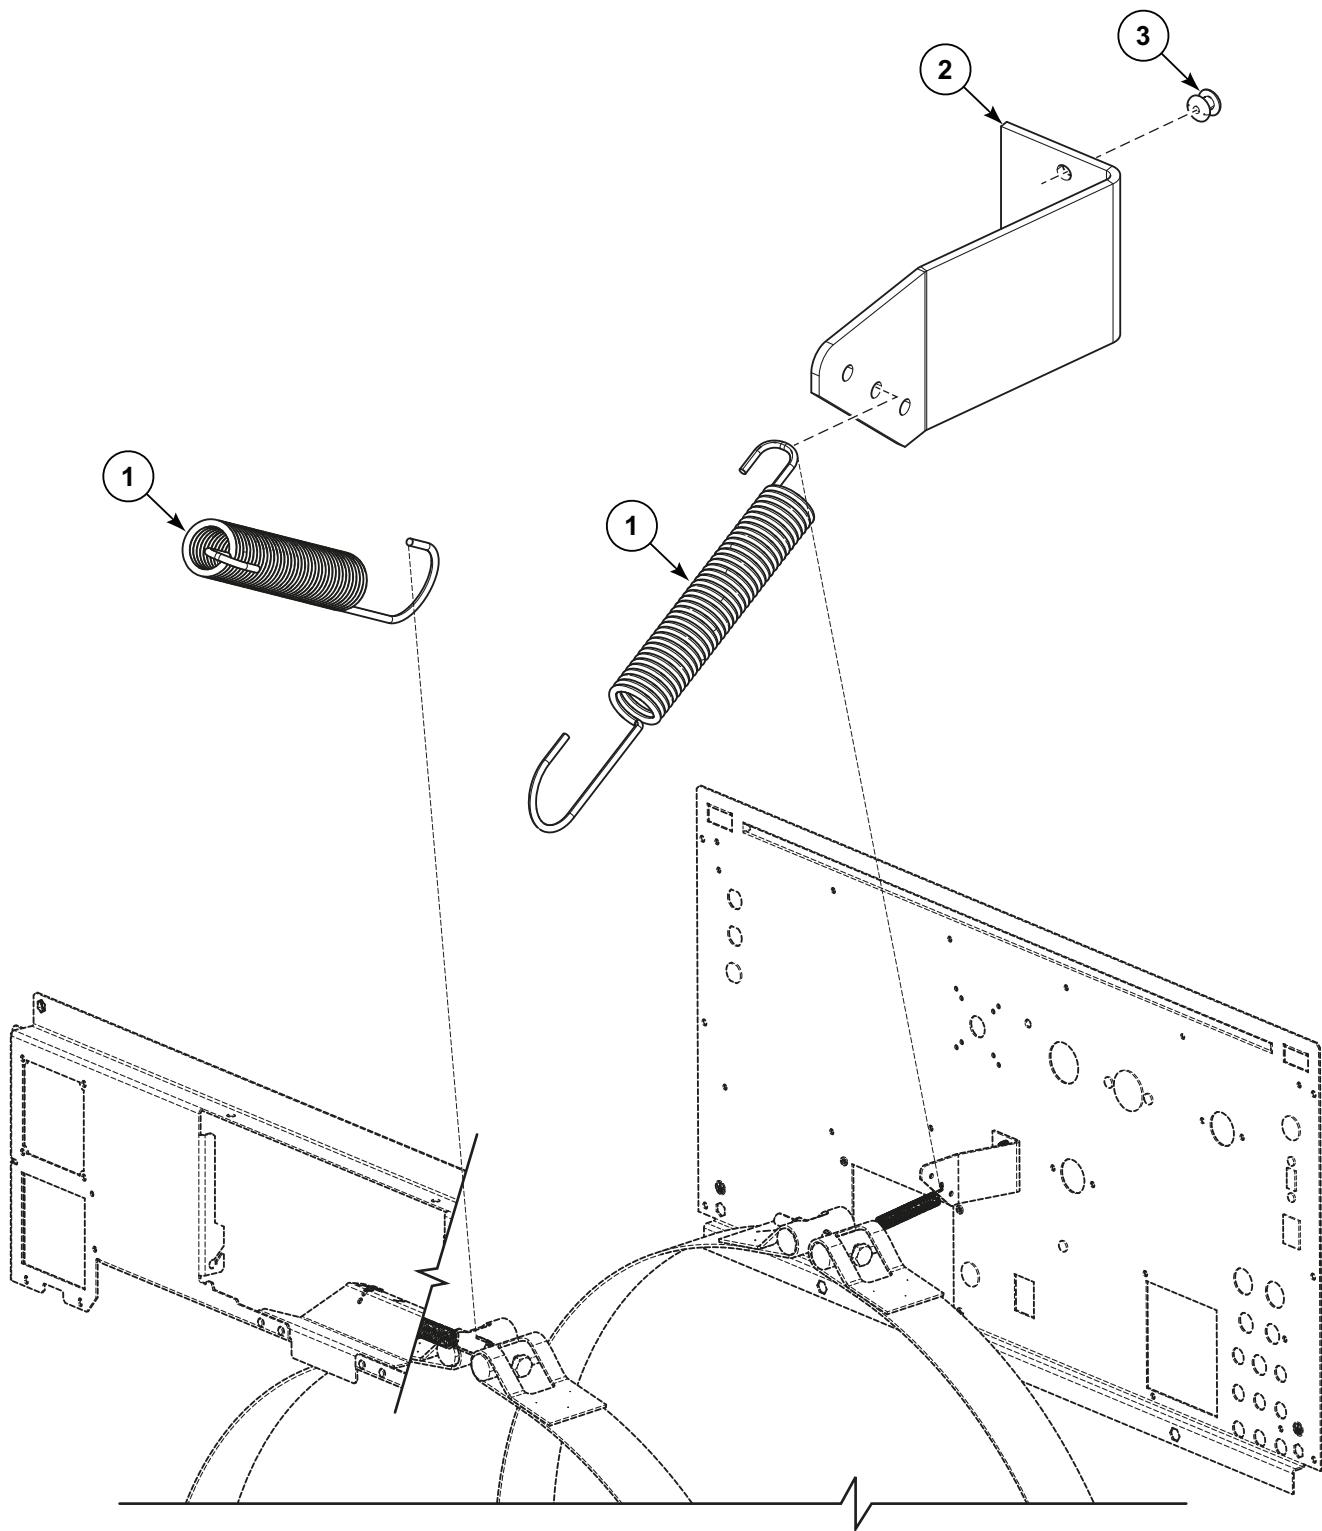


CZW419P\_D2410

## **Stabilizing Spring - AF, IY, and NY Models**

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP505372	Spring	
2	SP550449	Rear Spring Holder	
3	505479	Rivet	

## Stabilizing Springs - FX and PY Models

Models with T or X in 7th position of the model number

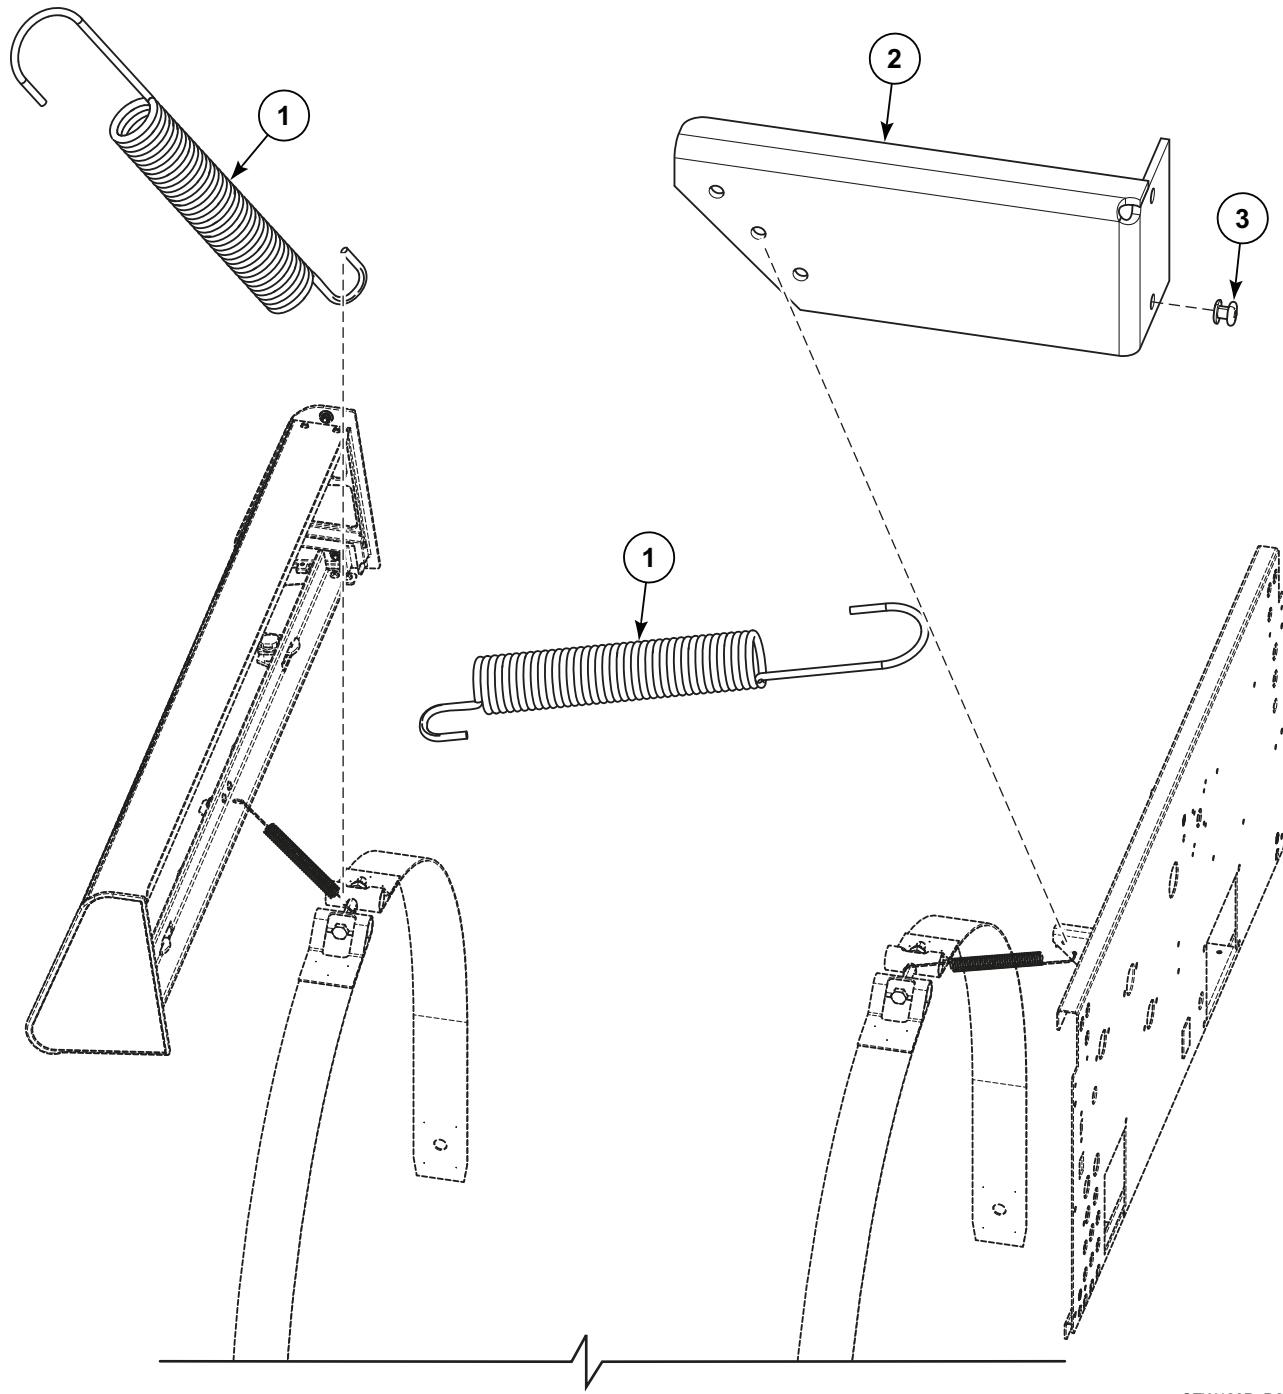


CZW420P\_D2410

## **Stabilizing Springs - FX and PY Models**

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP505372	Spring	
2	SP550449	Rear Spring Holder	
3	505479	Rivet	

# Cabinet - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 1 of 2)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

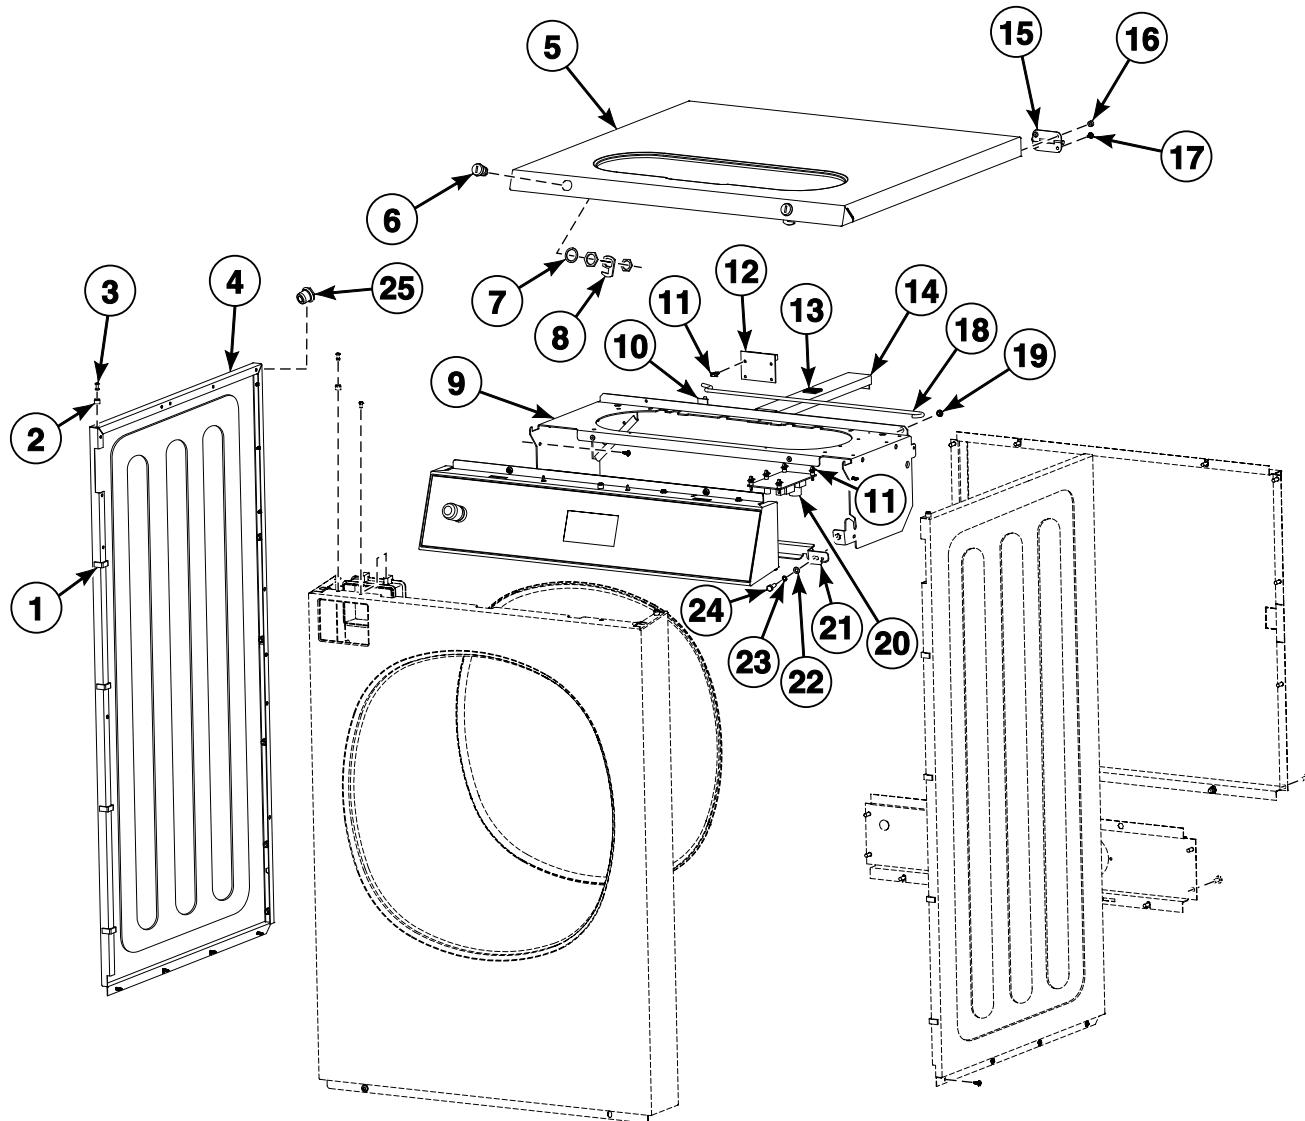


Cfd3566P\_D2410

# Cabinet - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP517232	Seal	
2	SP520408	Pin Insertion	
3	SP547779	Rivet	4x16.7
4	SP557651	Side Panel	Left; Stainless
	563504	Side Panel	AF Non-Brand, LP and NY models; Left; Painted
5	SP557637	Top Cover	
	567875	Top Cover	Without soap hopper opening
	572482	Top Cover	Model SY135_KIS_PHOTO-ME
	573313	Top Cover	Model SY135_KIS_PHOTO-ME; without soap hopper opening
6	SP547527	Lock	
	SP550616	Key	Used with SP547527 Lock
	SP559362	Lock	Model SY135_KIS_PHOTO-ME
7	SPPRI522000012	Washer	21x27x1
8	SPPRI610002007	Hook Lock	Small
9	SP557621	Panel Holder	
10	SPPRI551016250	Hook	Stick-on
11	SPPRI326002004	Holder	
12	545238	Automatic Unlocking Module Assembly	MC6; Includes item 11, SP547004 Automatic Door Opening Module, SP345000160971 Binding Strip and SP545235 Door Timer Wiring
13	SP550115	Fastener	
14	SP547704	Top Cover Reinforcement	
15	SP516832	Hinge	
16	SP313250048008	Rivet	4.8x8
17	SP529206	Screw	4x11
18	SP533341	Upper Lid Prop	
19	SP273121005052	Cable Passage	5x2
20	SP552489	Automatic Unlocking Module Assembly	MC7; Includes item 11, SP553406 Automatic Door Opening Module, SP345000160971 Binding Strip, SP552455 Automatic Door Opening Module Wiring and SP552381 Power Terminal Protection
21	SP558880	Reinforcement	
22	SP311125000006	Washer	6.4
23	SP311127000006	Washer	6
24	SP309933000616	Bolt	M6x16
25	SP313251000006	Nut	M6

# Cabinet - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 2 of 2)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

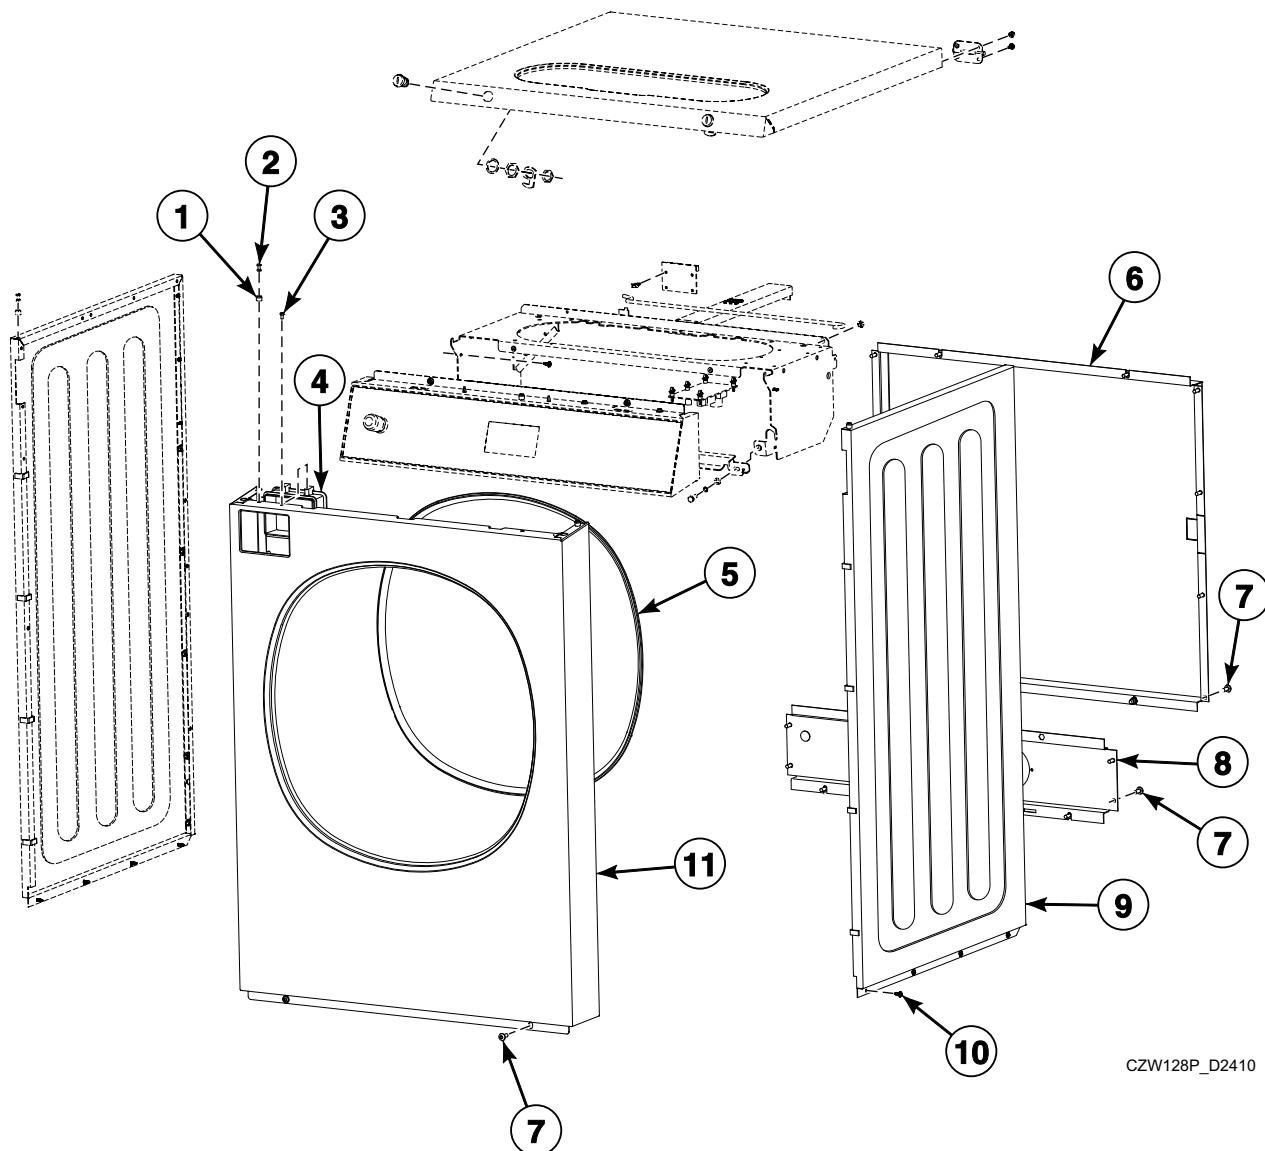


CZW128P\_D2410

## Cabinet - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP520408	Pin Insertion	
2	SP547779	Rivet	4x16.7
3	SP309084000408	Bolt	M4x8
4	SP533103	Coin Vault Plate	
5	SP529068	Edge Protection	
6	SP533143	Rear Cover	
7	SP555658	Bolt	M6x16
8	SP533383	Lower Rear Cover	
9	SP557653	Side Panel	Right; Stainless
	563506	Side Panel	AF Non-Brand, LP and NY models; Right; Painted
10	SP529206	Screw	4x11
11	SP547752	Front Panel	OPL; Stainless
	SP547754	Front Panel	Vended; Stainless
	563458	Front Panel	AF Non-Brand, LP and NY models; OPL; Painted
	563460	Front Panel	AF Non-Brand, LP and NY models; Vended; Painted
	572472	Front Panel	Model SY135_KIS_PHOTO-ME; Stainless steel
	572474	Front Panel	Model SY135_KIS_PHOTO-ME; Stainless steel 316L
	550446	Washer	Not sliding accessories

# Cabinet - H, IY and J Models (Drawing 1 of 2)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

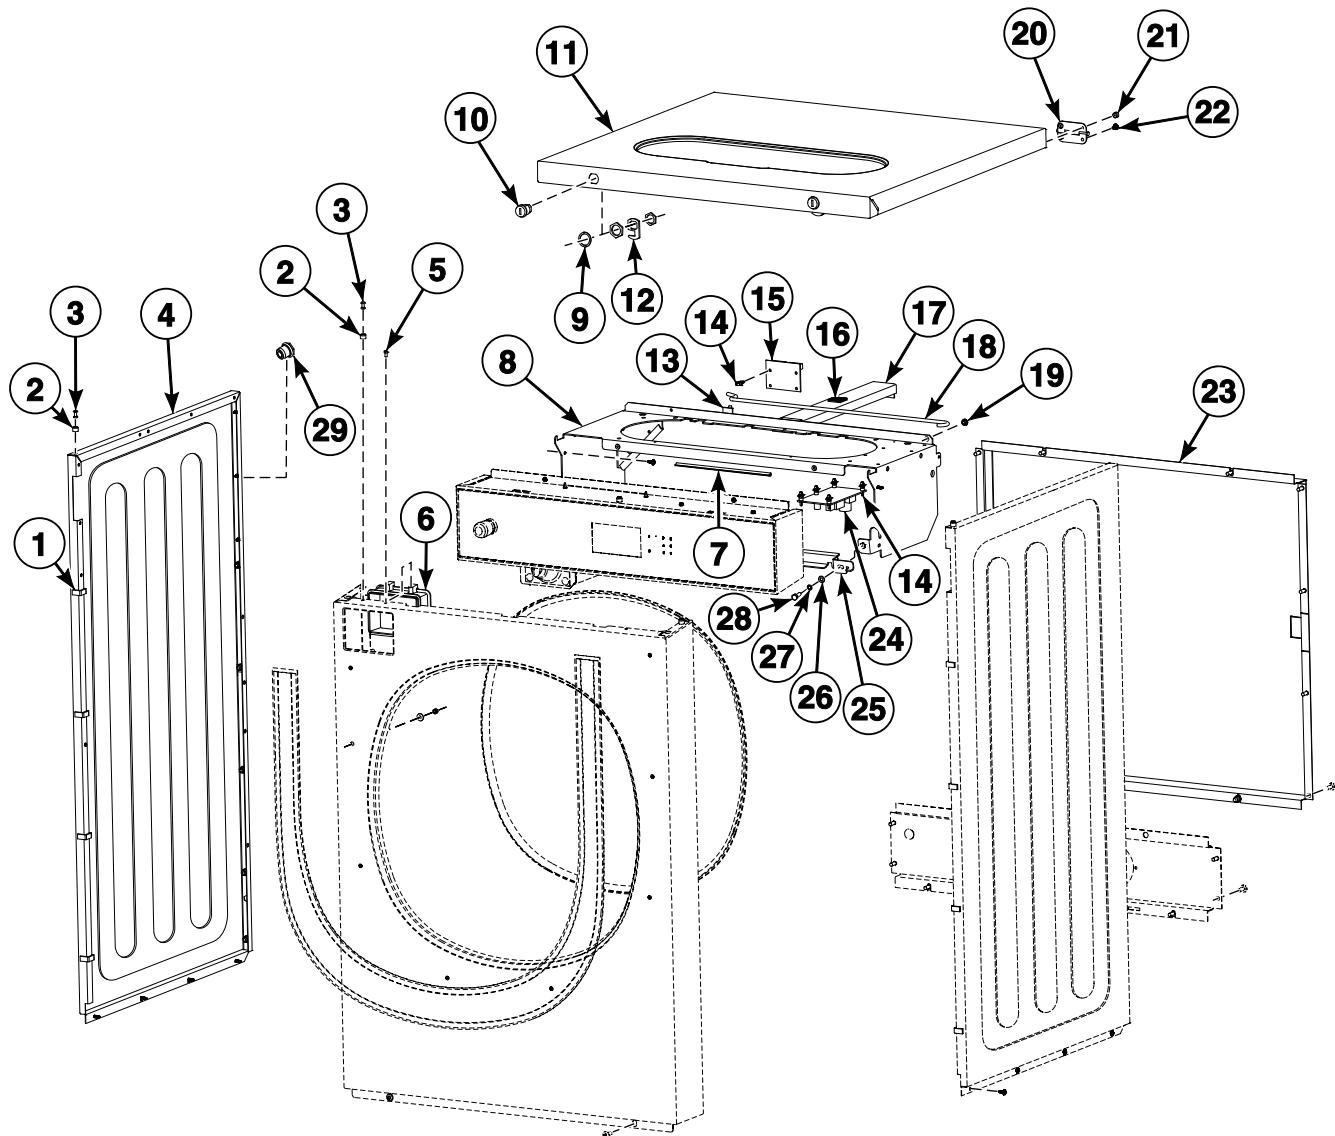


CFD3567P\_D2410

# Cabinet - H, IY and J Models (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP517232	Seal	
2	SP520408	Pin Insertion	
3	SP547779	Rivet	4x16.7
4	SP557651	Side Panel	Stainless; Left
	SP558980	Side Panel	Black; Left
5	SP309084000408	Bolt	M4x8
6	SP533103	Coin Vault Plate	
7	SPPRI505000058	Profiled Sealing	Through Serial No. 135FX011287KZ
8	SP560302	Panel Holder	
9	SPPRI522000012	Washer	21x27x1
10	SP547527	Lock	
	SP550616	Key	Used with SP547527 Lock
11	SP558902	Top Cover	
12	SPPRI610002007	Hook Lock	Small
13	SPPRI551016250	Hook	Stick-on
14	SPPRI326002004	Holder	
15	545238	Automatic Unlocking Module Assembly	MC6; Includes item 14, SP547004 Automatic Door Opening Module, SP345000160971 Binding Strip and SP545235 Door Timer Wiring
16	SP550115	Fastener	
17	SP547704	Top Cover Reinforcement	
18	SP533341	Upper Lid Prop	
19	SP273121005052	Cable Passage	5x2
20	SP516832	Hinge	
21	SP313250048008	Rivet	4.8x8
22	SP529206	Screw	
23	SP533143	Rear Cover	
24	SP552489	Automatic Unlocking Module Assembly	MC7; Includes item 14, SP553406 Automatic Door Opening Module, SP345000160971 Binding Strip, SP552455 Automatic Door Opening Module Wiring and SP552381 Power Terminal Protection
25	SP558944	Reinforcement	
26	SP311125000006	Washer	6.4
27	SP311127000006	Washer	6
28	SP309933000616	Bolt	M6x16
29	SP313251000006	Nut	M6

## Cabinet - H, IY and J Models (Drawing 2 of 2)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

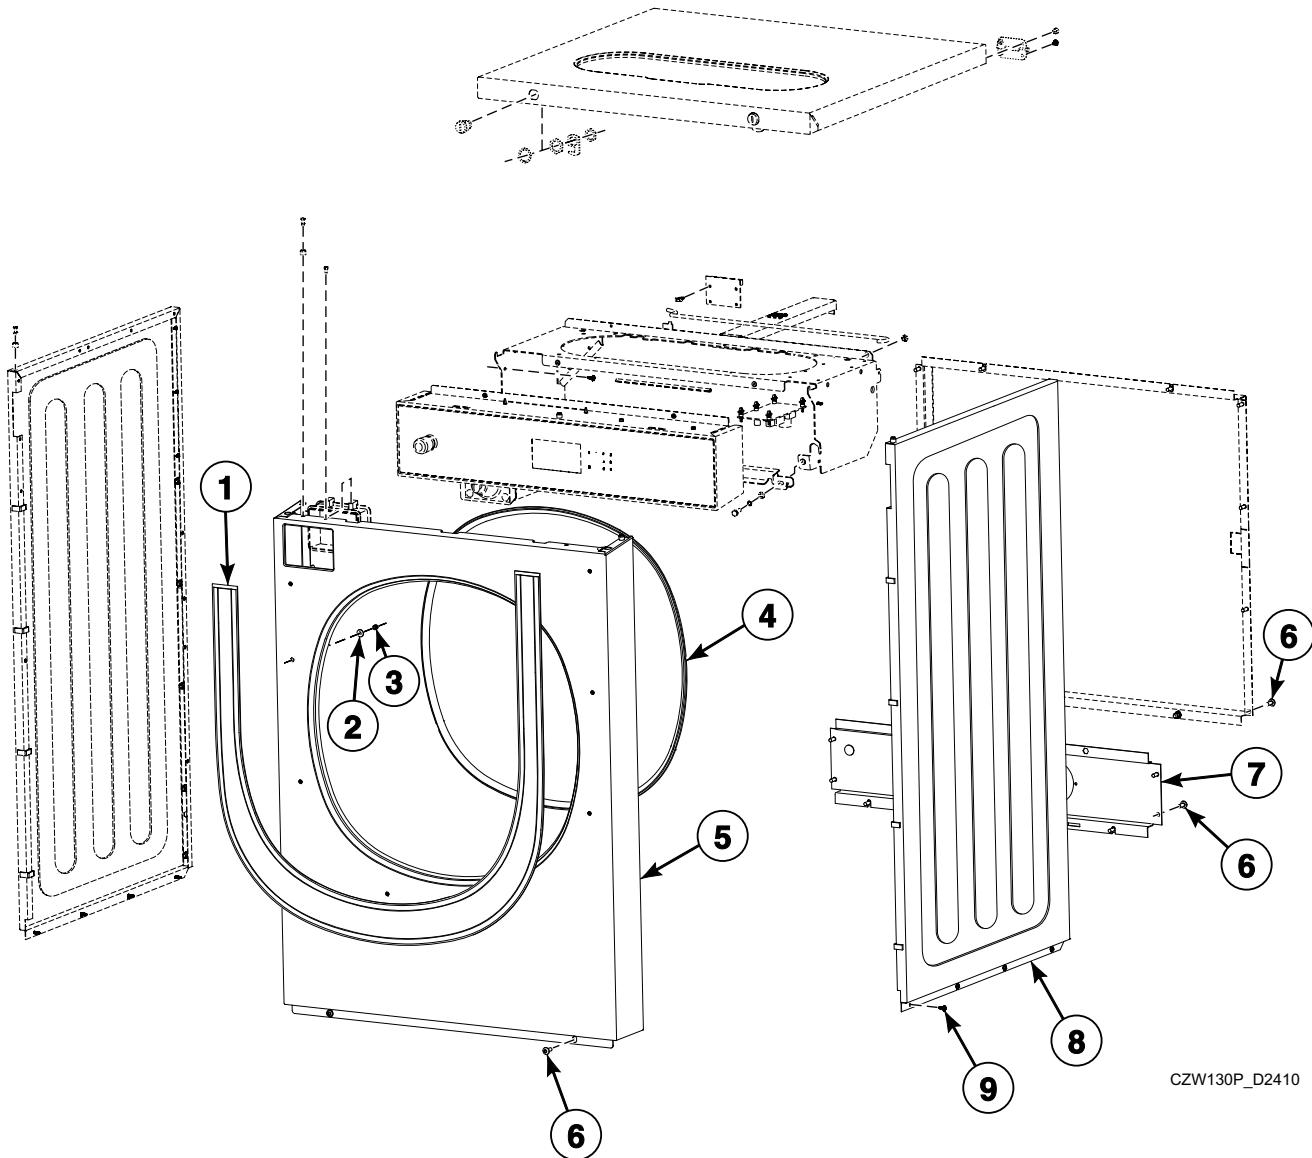

CZW130P\_D2410


## Cabinet - H, IY and J Models (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP556983	U Shape	OPL
	SP556984	U Shape	Vended
2	SP311902100004	Washer	M4
3	SP514193	Nut	M4
4	SP529068	Edge Protection	
5	SP557056	Front Panel	OPL; Stainless
	SP557057	Front Panel	Vended; Stainless
	SP562724	Front Panel	J models; OPL
	SP562725	Front Panel	J models; Vended
	550446	Washer	Not sliding accessories
6	SP555658	Bolt	M6x16
7	SP533382	Lower Rear Cover	
8	SP557653	Side Panel	Stainless; Right
	SP558982	Side Panel	Black; Right
9	SP529206	Screw	

# Cabinet - AF, FX, HX, LY, MWF, PY, QW and SW Models

## (Drawing 1 of 2)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

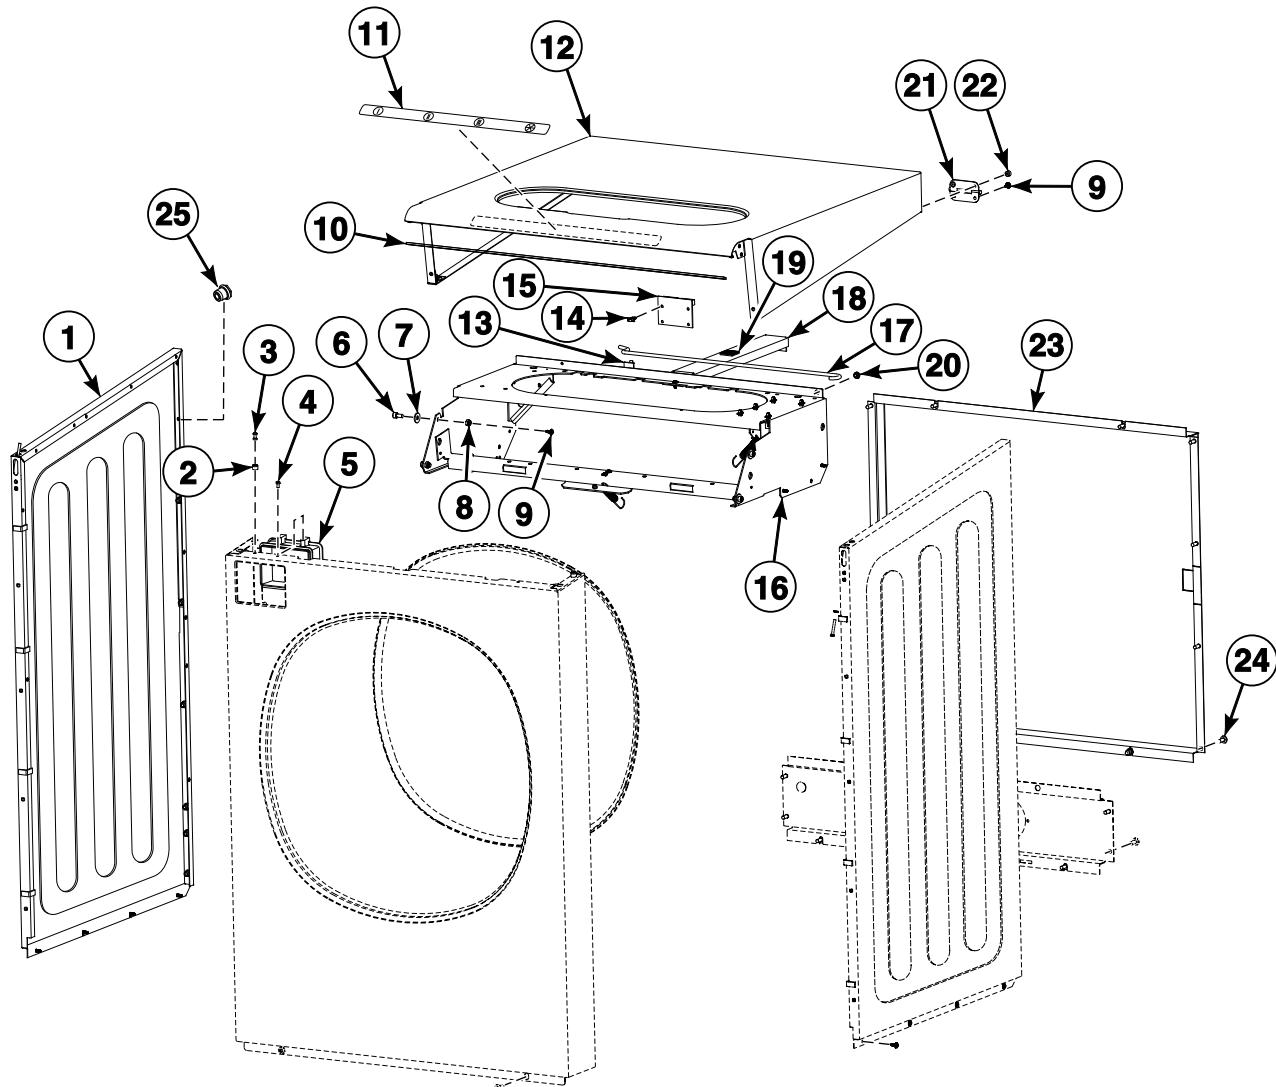

CFD3568P\_D2410

# Cabinet - AF, FX, HX, LY, MWF, PY, QW and SW Models


## (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP550322	Side Panel	Painted; Left; Through Serial No. 135FX004386FD
	563476	Side Panel	Painted; Left; Starting Serial No. 135FX004387FD
	SP550346	Side Panel	Stainless; Left
2	SP520408	Pin Insertion	
3	SP547779	Rivet	4x16.7
4	SP309084000408	Bolt	M4x8
5	SP533103	Coin Vault Plate	
6	SP506431	Bolt	M6x12
7	SP311902100006	Washer	6
8	SP310985000006	Nut	M6
9	SP529206	Screw	4x11
10	SP284000012003	Tape	
11	560786	Label	Soap Hopper; CSA
12	SP550305	Top Cover	
	SP551995	Top Cover	Without soap hopper opening
13	SPPRI551016250	Hook	Stick-on
14	SPPRI326002004	Holder	
15	545238	Automatic Unlocking Module Assembly	MC6; Includes item 14, SP547004 Automatic Door Opening Module, SP345000160971 Binding Strip and SP545235 Door Timer Wiring
	SP552489	Automatic Unlocking Module Assembly	MC7; Includes item 14, SP553406 Automatic Door Opening Module, SP345000160971 Binding Strip, SP552455 Automatic Door Opening Module Wiring and SP552381 Power Terminal Protection
16	SP533293	Panel Holder	
17	SP533341	Upper Lid Prop	
18	SP547704	Top Cover Reinforcement	
19	SP550115	Fastener	
20	SP273121005052	Cable Passage	5x2
21	SP516832	Hinge	
22	SP555658	Bolt	M6x16
23	SP533143	Rear Cover	
24	SP313250048008	Rivet	4.8x8
25	SP313251000006	Nut	M6

# Cabinet - AF, FX, HX, LY, MWF, PY, QW and SW Models

## (Drawing 2 of 2)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

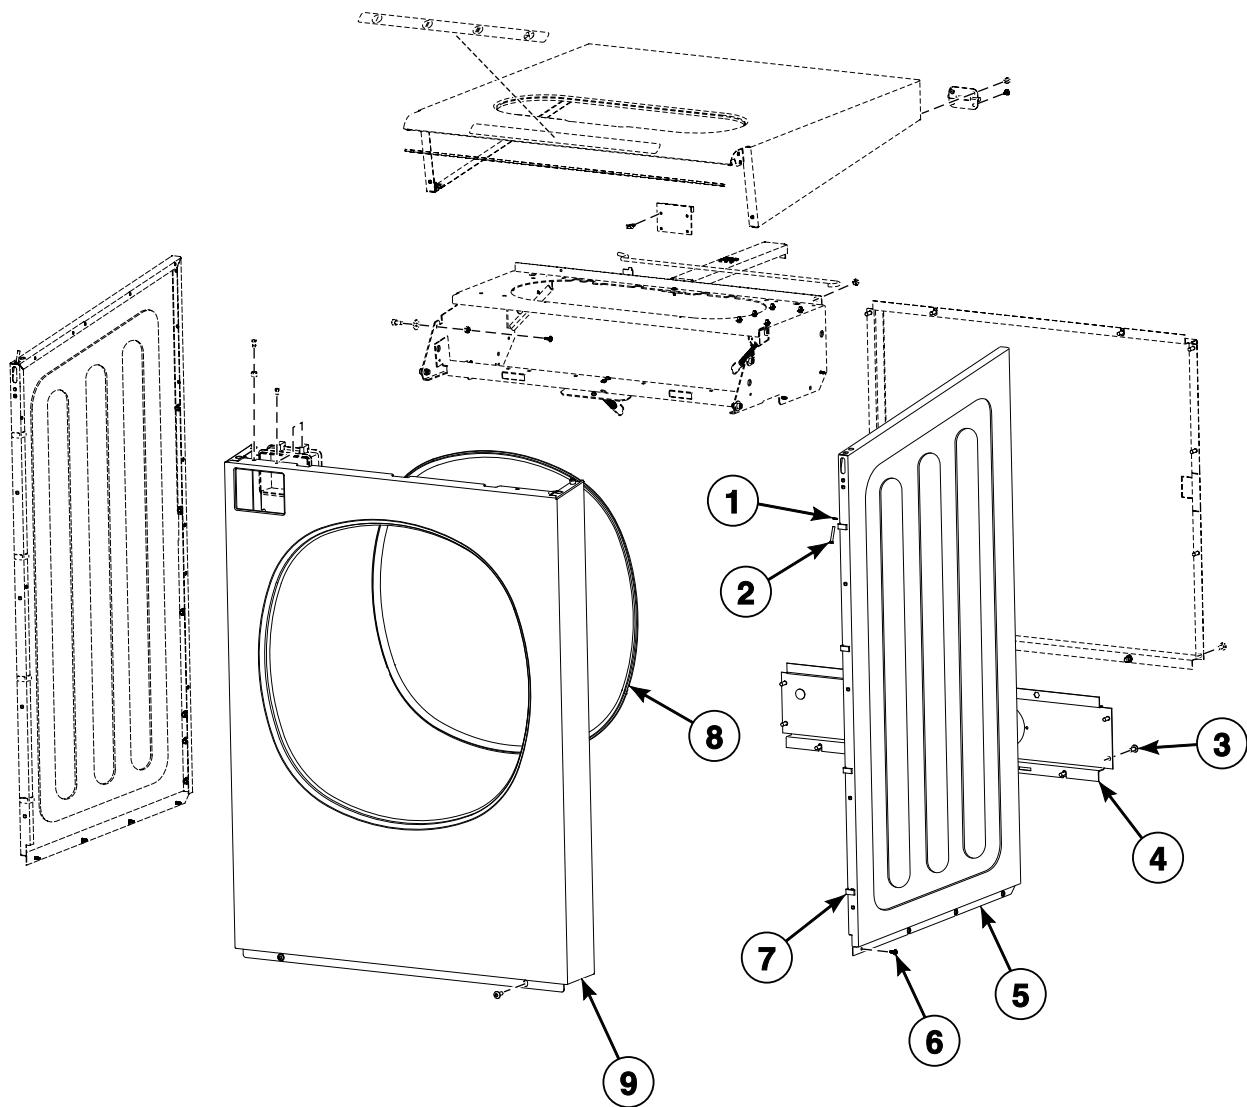


CZW132P\_D2410

## Cabinet - AF, FX, HX, LY, MWF, PY, QW and SW Models (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	SP552455	Automatic Door Opening Module Wiring	
1	SP311679800004	Washer	M4
2	SP550482	Bolt	M4x25
3	SP555658	Bolt	M6x16
4	SP533383	Lower Rear Cover	
5	SP550324	Side Panel	Painted; Right; Through Serial No. 135FX004386FD
	563478	Side Panel	Painted; Right; Starting Serial No. 135FX004387FD
	SP550348	Side Panel	Stainless; Right
6	SP529206	Screw	4x11
7	SP517232	Seal	
8	SP529068	Edge Protection	
9	SP547744	Front Panel	OPL; Painted; Through Serial No. 135FX004386FD
	563458	Front Panel	OPL; Painted; Starting Serial No. 135FX004387FD
	SP547746	Front Panel	Vended; Painted; Through Serial No. 135FX004386FD
	563460	Front Panel	Vended; Painted; Starting Serial No. 135FX004387FD
	SP547752	Front Panel	OPL; Stainless
	SP547754	Front Panel	Vended; Stainless
	550446	Washer	Not sliding accessories

# Cabinet - AF, IY and NY Models (Drawing 1 of 3)

Models with V in 7th position of the model number or models with G, H, J or K in 13th position of the model number

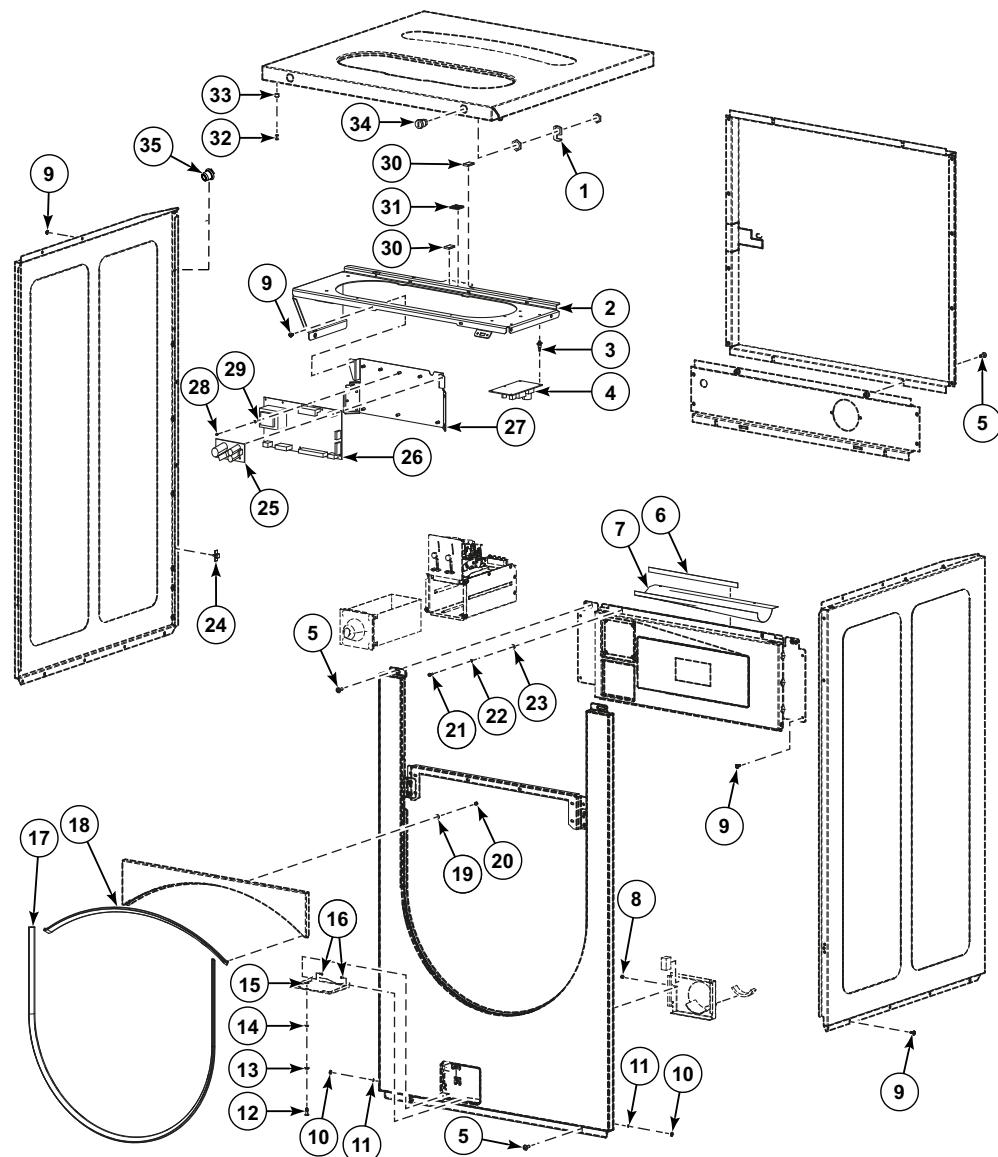

CFD3569P\_D2410


# Cabinet - AF, IY and NY Models (Drawing 1 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SPPRI610002007	Hook Lock	
2	567960	Panel Holder	
3	SPPRI326002004	Holder	
4	SP552489	Automatic Unlocking Module Assembly	MC7; Includes item 3, SP553406 Automatic Door Opening Module, SP345000160971 Binding Strip, SP552455 Automatic Door Opening Module Wiring and SP552381 Power Terminal Protection
5	SP555658	Bolt	M6x16
6	SP537896	Adhesive	Reversible
7	569656	Cover	
8	SP313250004063	Rivet	4x6.3
9	SP529206	Screw	4x11
10	PRI247000013	Washer	
11	SP527021	Washer	
12	SP527084	Bolt	
13	SP527087	Washer	
14	SP527086	Spring	
15	SP527085	Ring	
16	SP521706	Rivet	
17	SP529068	Edge Protection	1.6m
18	SP529068	Edge Protection	0.66m
19	SP311902100004	Washer	4
20	SP514193	Nut	M4
21	SP555504	Bolt	M4x12
22	SP311127000004	Washer	4
23	SP311902100004	Washer	M4
24	SP528313	Cable Holder	
25	N/A	Module	Door Lock
26	SP553405	Control Board Power	MC7; Power
	575630	Control Board I/O	MC10; Power; Models with V in 7th Position
27	569578	Programmer Holder	Includes SPPRI212000055 Nut
28	SP309798500306	Bolt	M3x6
29	SP311679800003	Washer	M3
30	564202	Seal	0.05m
31	SP550115	Fastener	
32	SP547779	Rivet	
33	SP520408	Pin Insertion	
34	SP547527	Lock	includes Nuts - 2pieces
35	SP313251000006	Nut	M6x16

N/A = Part no longer available

## Cabinet - AF, IY and NY Models (Drawing 2 of 3)

Models with V in 7th position of the model number or models with G, H, J or K in 13th position of the model number

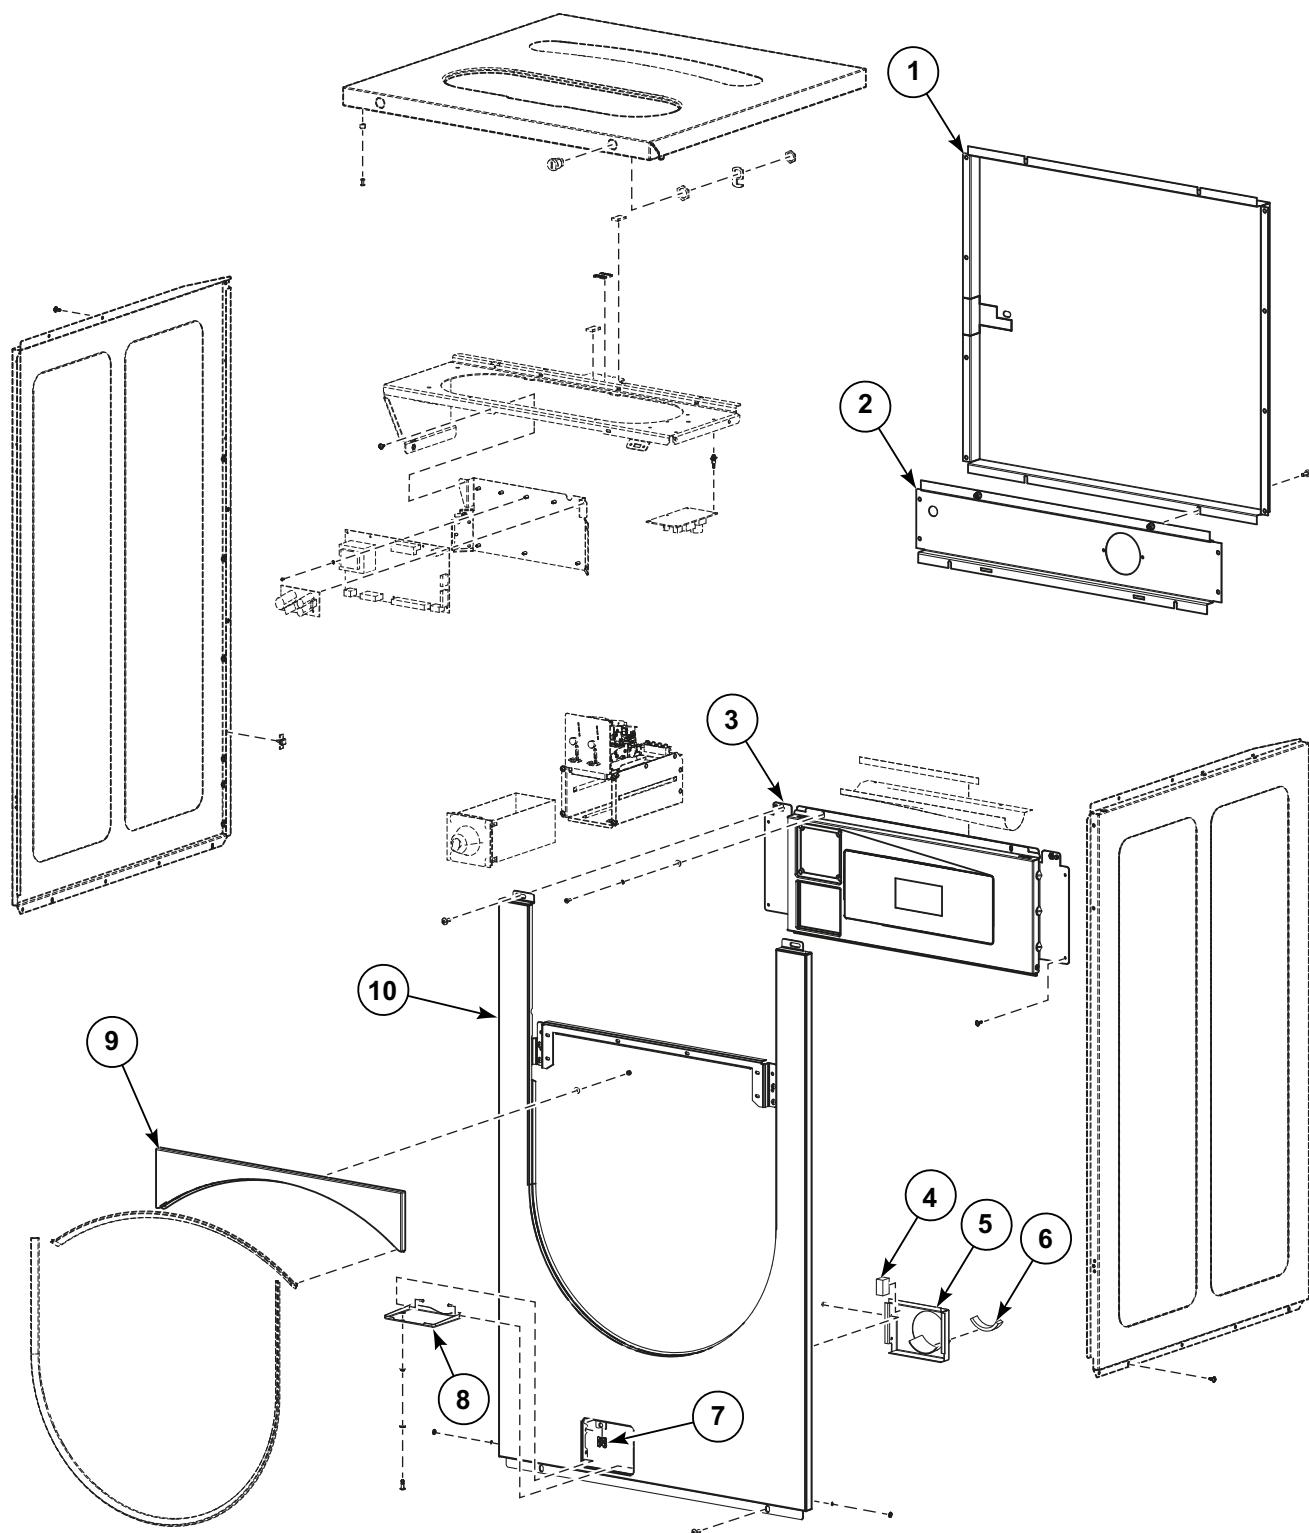


CZW280P\_D2410

## Cabinet - AF, IY and NY Models (Drawing 2 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
1	570468	Rear Cover	
2	SP533383	Lower Rear Cover	
3	573025	Control Panel Frame	
4	SP527088	Profile	15x30
5	SP527088	Drain Cover	
6	522450	Profile	15x6
7	SP527083	Latch	
8	SP521511	Drain Pump Cover	
9	573014	Front Cover	Stainless steel
	SP564368	Front Cover	IY models; Black
10	571073	Front Panel	Stainless steel
	574091	Front Panel	AF and NY models; Gray
	550446	Washer	Not sliding accessories

## Cabinet - AF, IY and NY Models (Drawing 3 of 3)

Models with V in 7th position of the model number or models with G, H, J or K in 13th position of the model number

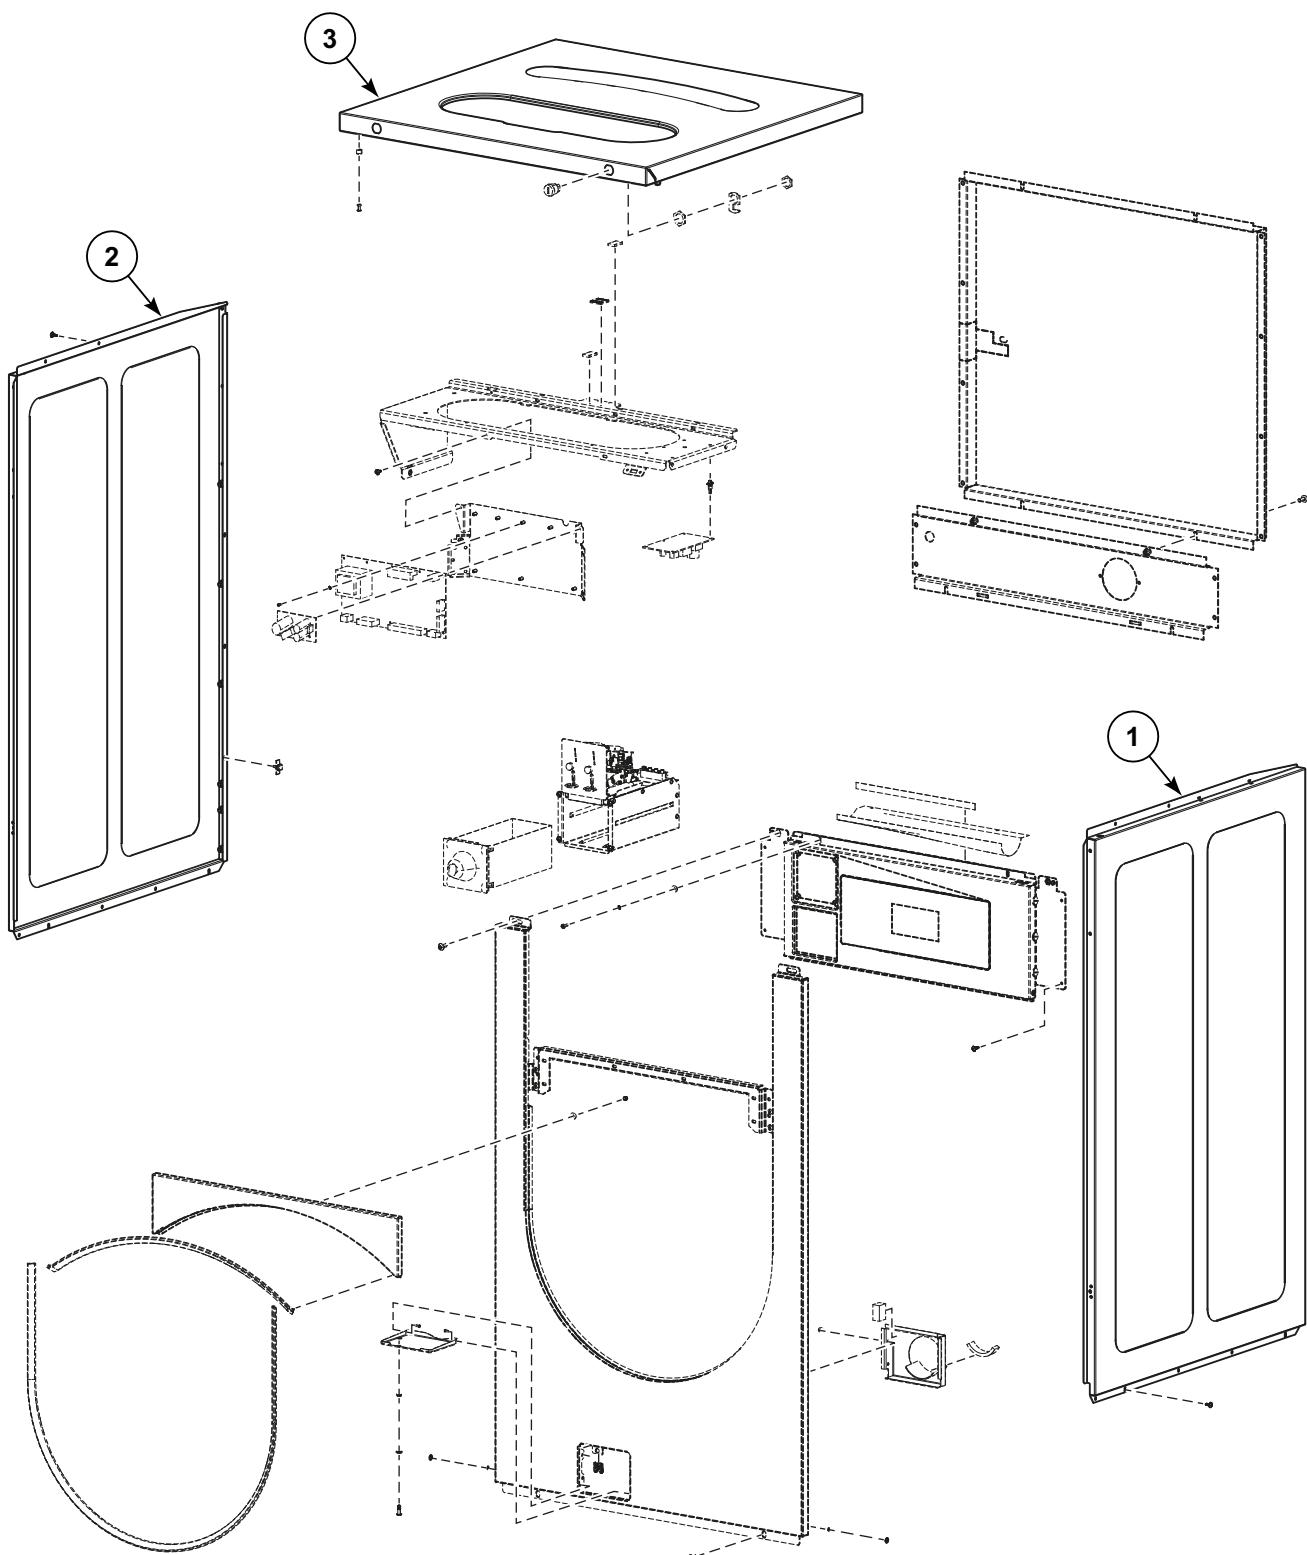


CZW303P\_D2410

## Cabinet - AF, IY and NY Models (Drawing 3 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
1	572002	Side Panel	Stainless; Right; Includes SP313251000006 Nut
	573048	Side Panel	IY models; Black; Right; Includes SP313251000006 Nut
	574064	Side Panel	AF and NY models; Gray; Right; Includes SP313251000006 Nut
2	572001	Side Panel	Stainless; Left; Includes SP313251000006 Nut
	574063	Side Panel	AF and NY models; Gray; Left; Includes SP313251000006 Nut
	573046	Side Panel	IY models; Black; Left; Includes SP313251000006 Nut
3	567992	Top Cover	Includes SP547527 Lock, SP550616 Key, SPPRI610002007 Hook Lock, SP520408 Pin Insertion, SP547779 Rivet and SP550115 Fastener
	569647	Top Cover	Without soap hopper opening, Includes SP547527 Lock, SP550616 Key, SPPRI610002007 Hook Lock, SP520408 Pin Insertion, SP547779 Rivet and SP550115 Fastener

# Cabinet - PY Models (Drawing 1 of 2)

Models with V in 7th position of the model number

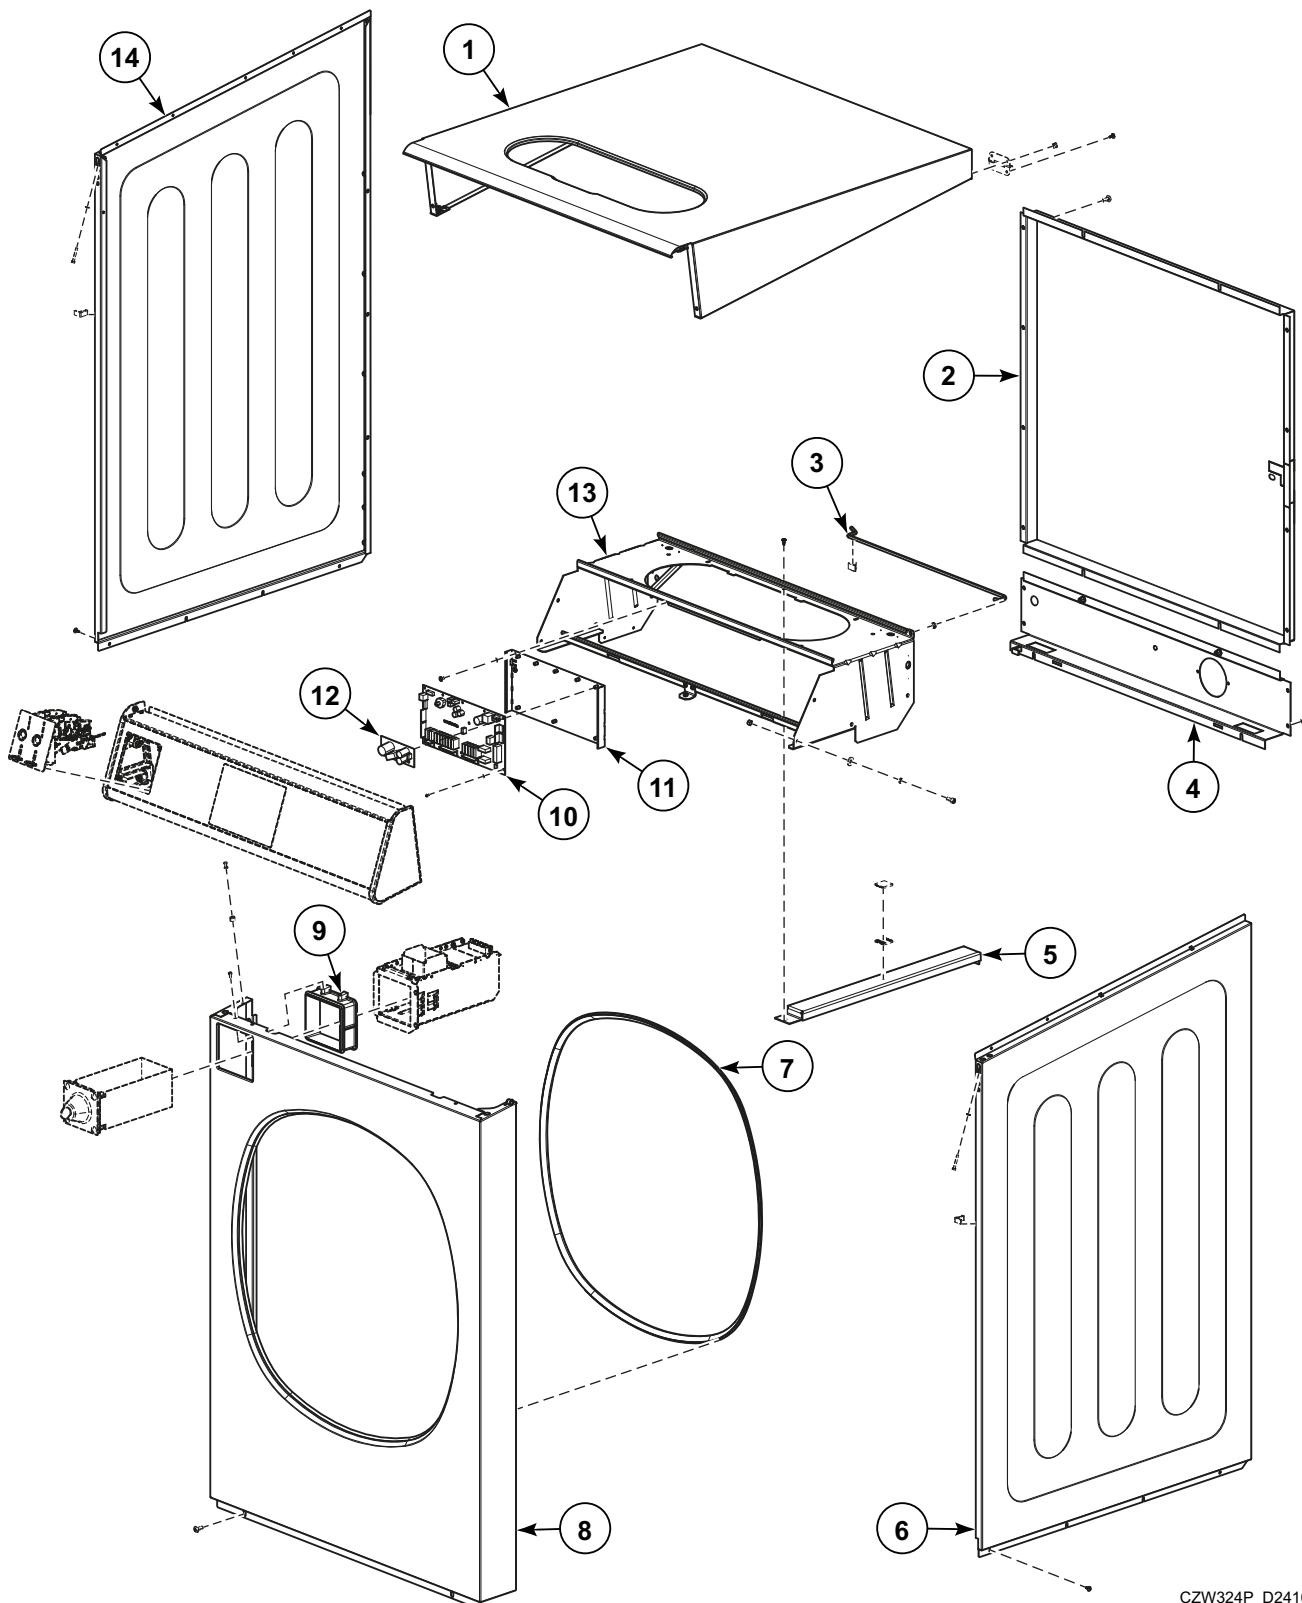


CZW324P\_D2410

## Cabinet - PY Models (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	574204	Top Cover	
	574253	Top Cover	Without soap hopper opening
2	570468	Rear Cover	
3	SP533341	Upper Lid Prop	
4	SP533383	Lower Rear Cover	
5	SP547704	Top Cover Reinforcement	
6	574143	Side Panel Assembly	Painted; Right
	574144	Side Panel Assembly	Stainless; Right
7	SP529068	Edge Protection	2.06m
8	572537	Front Panel	OPL; Painted
	572538	Front Panel	Vended; Painted
	572535	Front Panel	OPL; Stainless
	572536	Front Panel	Vended; Stainless
	550446	Washer	Not sliding accessories
9	566737	Coin Vault Plate	
10	575630	Control Board I/O	MC10; Power; Used with 547089 Interconnection Flat Cable
11	573934	Programmer Holder	Includes 527279 Nut
12	553189	Module	Door Lock
13	573938	Panel Holder	
14	574147	Side Panel Assembly	Painted; left
	574148	Side Panel Assembly	Stainless; Left

# Cabinet - PY Models (Drawing 2 of 2)

Models with V in 7th position of the model number

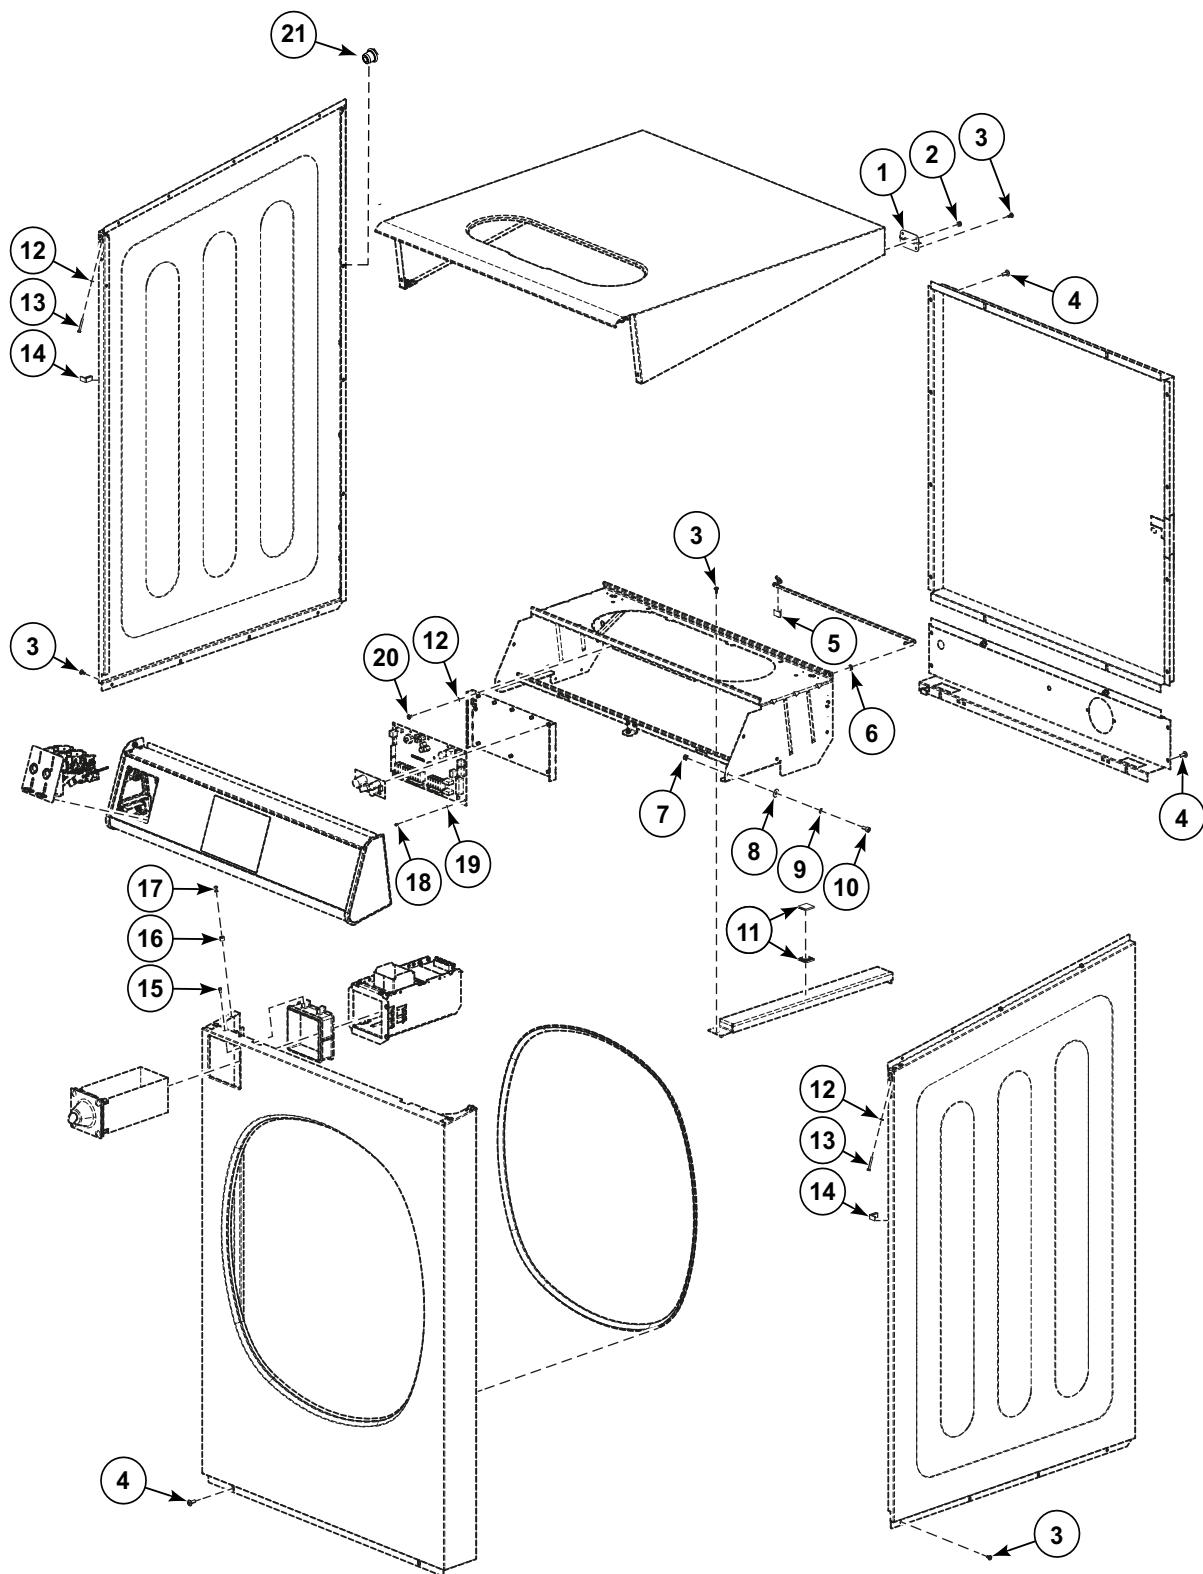


CZW325P\_D2410

## Cabinet - PY Models (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP516832	Hinge	
2	SP313250048103	Rivet	
3	SP529206	Screw	4x11
4	SP555658	Bolt	M6x16
5	SPPRI551016250	Hook	Stick-on
6	SP273121005052	Cable Passage	5.5x2
7	SP310985000006	Nut	M6x16
8	SP311902100006	Washer	6
9	576338	Washer	
10	SP506431	Bolt	M6x12
11	SP550115	Fastener	
12	SP311679800004	Washer	M4
13	SP550482	Bolt	M4x12
14	SP517232	Seal	
15	SP309084000408	Bolt	M4x8
16	SP520408	Pin Insertion	
17	SP547779	Rivet	4x16.7
18	SP309798500306	Bolt	M3x6
19	SP311679800003	Washer	M3
20	SP506013	Bolt	M4x8
21	SP313251000006	Nut	M6

# Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 1 of 5)

Models with A, D, F, I, J, R, T or X in 7th Position of the model number

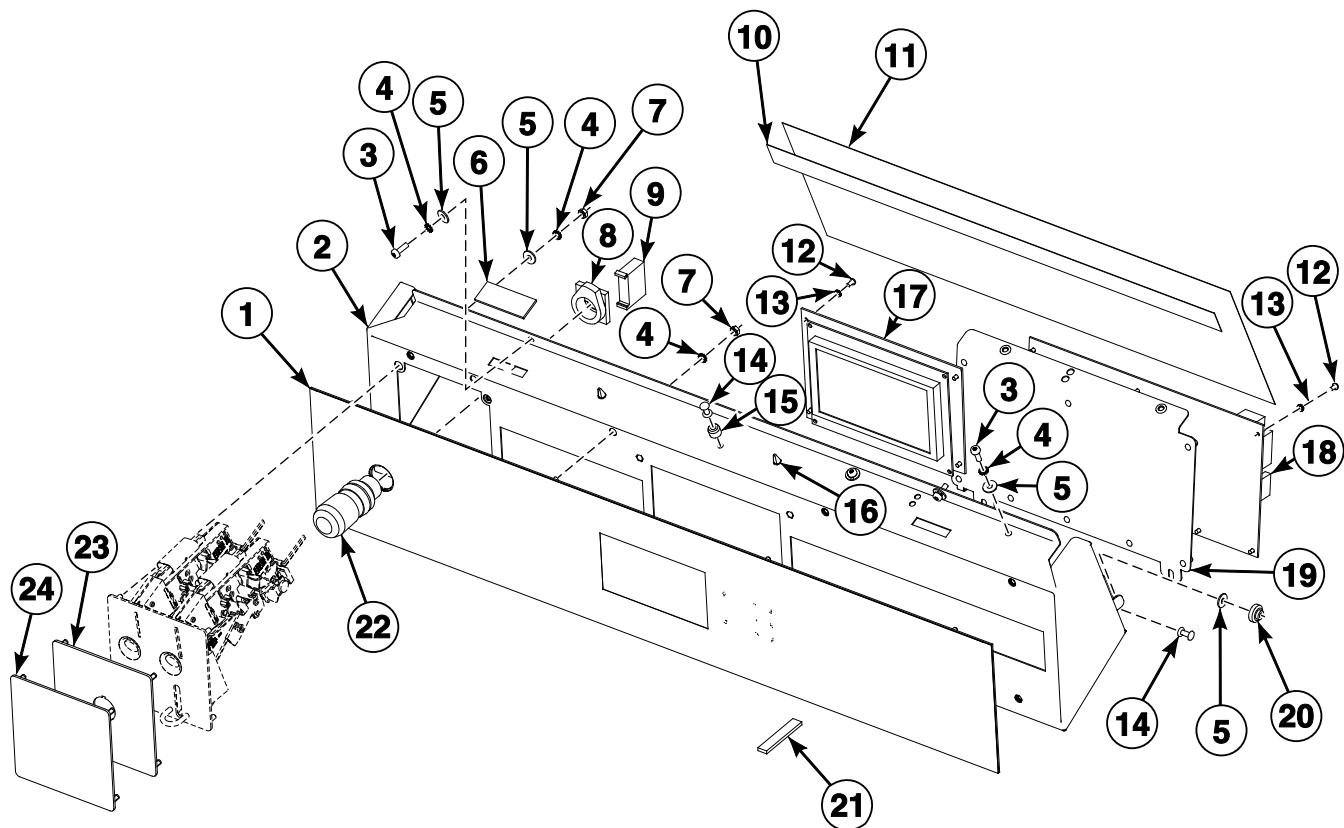


CFD2893P\_D2410

# Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 1 of 5)

REF	PART NO.	DESCRIPTION	COMMENTS
	569593	Network Installation Kit	Includes 569595 Holder, 203532 Wireless Network Control Assembly, 568363 Power Supply, 568362 Cable, 568378 Wiring, 568379 Wiring Diagram, SP345000626088 Binding Strip and connection accessories
	F8600501	Programming Cable	
1	SP557580	Keyboard	UY models; OPL
	SP557575	Keyboard	SY models; OPL
	SP557576	Keyboard	SY models; Vended
	SP557583	Keyboard	HY models; OPL
	SP547026	Keyboard	AF Non-Brand, LP and NY models; OPL; Professional; Black
	SP547025	Keyboard	AF Non-Brand, LP and NY models; OPL; Basic; Black
	SP547023	Keyboard	AF Non-Brand, LP and NY models; Vended; Basic; Black
	SP547024	Keyboard	SY135_KIS_PHOTO-ME, AF Non-Brand, LP and NY models; CPS; Basic; Black
2	SP557614	Control Panel	
3	SP555504	Bolt	M4x12
4	SP311679800004	Washer	M4
5	SP311902100004	Washer	M4
6	SPMEC001410	Self-Adhesive Pad	
7	SP310934000004	Nut	M4
8	SP528311	Emergency Stop Connector	OPL
9	SP528312	Switching Unit	
10	SP510846	Tape	
11	SPPRI543000004	Cover	
12	SP309798500306	Bolt	M3x6
13	SP311679800003	Washer	M3
14	SP547779	Rivet	4x16.7
15	SP520408	Pin Insertion	
16	SP528313	Cable Holder	
17	SP553412	Control Board	MC7; HY, SY, SY135_KIS_PHOTO-ME and UY models
	SP553411	Control Board	AF Non-Brand, LP and NY models; MC7
18	SP553405	Control Board Power	MC7
	SP547005	Board Interconnection Cable	
19	SP557618	Programmer Holder	
20	SP550113	Leading Pin	
21	SP284000012003	Tape	
22	SP528310	Emergency Stop Knob	OPL
	SP520032	Emergency Stop Wiring	OPL
	SP520033	Emergency Stop Interconnection	Vended
23	SP558929	Coin Meter Cover Plate	SY models; Black
24	SP558930	CPS Cover Plate	SY models; Black

# Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 2 of 5)

Models with A, D, F, I, J, R, T or X in 7th Position of the model number

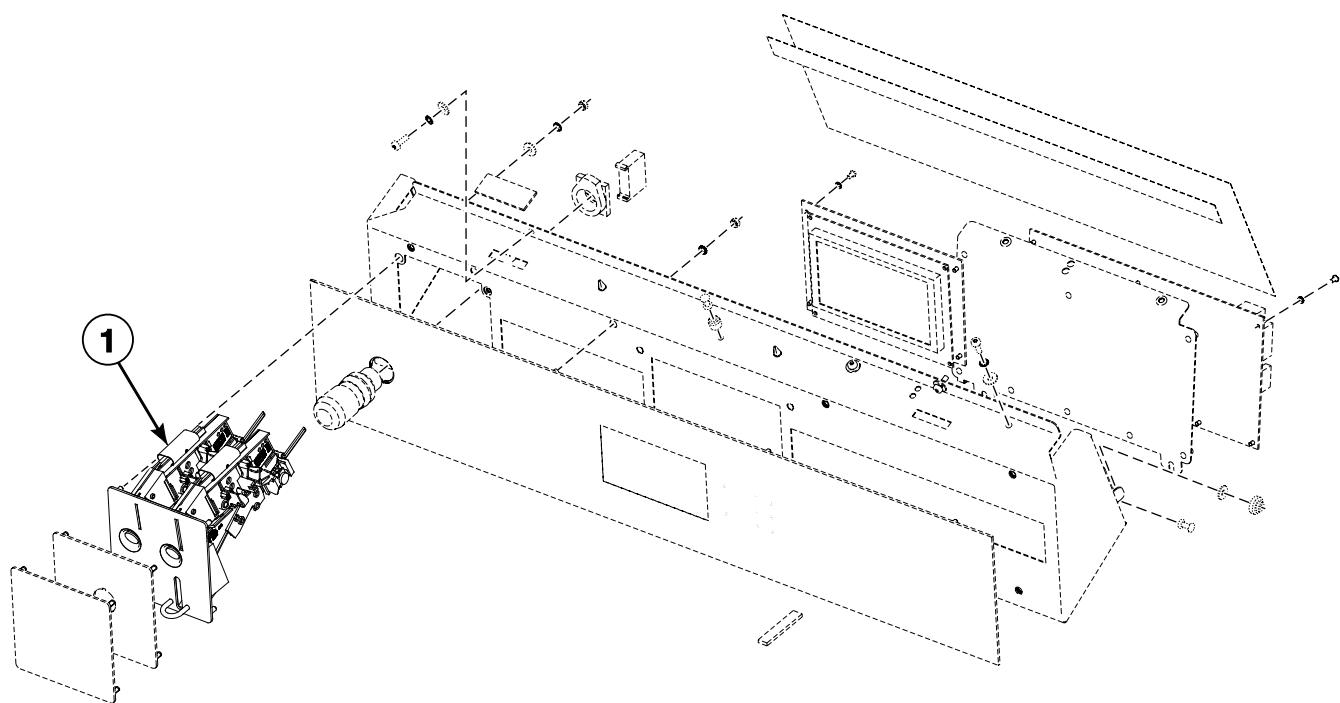


CFD2894P\_D2410

# Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 2 of 5)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP547601	Coin Meter	5K Primus jeton
	SP547602	Coin Meter	7K Primus jeton
	SP547603	Coin Meter	10K Primus jeton
	SP547604	Coin Meter	12K Primus jeton
	SP547605	Coin Meter	15K Primus jeton
	SP547606	Coin Meter	D jeton
	SP547648	Coin Meter	0.05EUR
	SP547638	Coin Meter	0.2EUR
	SP547616	Coin Meter	0.5EUR
	SP547614	Coin Meter	1EUR
	SP547647	Coin Meter	2EUR
	SP547622	Coin Meter	0.2EUR + 0.5EUR
	SP547639	Coin Meter	0.2EUR + 1EUR
	SP547617	Coin Meter	0.5EUR + 1EUR
	SP547656	Coin Meter	0.5EUR + 2EUR
	SP547631	Coin Meter	1EUR + 2EUR
	SP547652	Coin Meter	7K + D jeton
	SP547666	Coin Meter	7K jeton and 2EUR
	SP547665	Coin Meter	D jeton and 2EUR
	SP547600	Coin Meter	1AUD + 20C
	SP547607	Coin Meter	1POND + 20PC
	SP547608	Coin Meter	1POND + 50PC
	SP547609	Coin Meter	100YEN
	SP547610	Coin Meter	500JPY + 100JPY
	SP547611	Coin Meter	5DKK
	SP547612	Coin Meter	20DKK
	SP547613	Coin Meter	5ILS + 1ILS
	SP547615	Coin Meter	1MYR
	SP547618	Coin Meter	1DKK + 5DKK
	SP547619	Coin Meter	10NOK + 20NOK
	SP547620	Coin Meter	2DKK + 5DKK
	SP547621	Coin Meter	5NOK
	SP547623	Coin Meter	1NZD + 2NZD
	SP547624	Coin Meter	10 NOK
	SP547625	Coin Meter	10NT + 50NT
	SP547626	Coin Meter	2DKK
	SP547627	Coin Meter	Lucky Winner jeton
	SP547628	Coin Meter	10TWD
	SP547629	Coin Meter	10CZK + 20CZK
	SP547630	Coin Meter	7K Equipos Par Lavar jeton
	569921	Coin Meter	0.2GBP, 0.5GBP, 1GBP, 2GBP, 0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR; Electronic EMPv7
	SP547634	Coin Meter	500WON
	SP547635	Coin Meter	0.25USD
	SP547636	Coin Meter	1AUD + 2AUD
	SP547637	Coin Meter	5DK + 10DK
	SP547640	Coin Meter	Sun Wash jeton

# Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 3 of 5)

Models with A, D, F, I, J, R, T or X in 7th Position of the model number

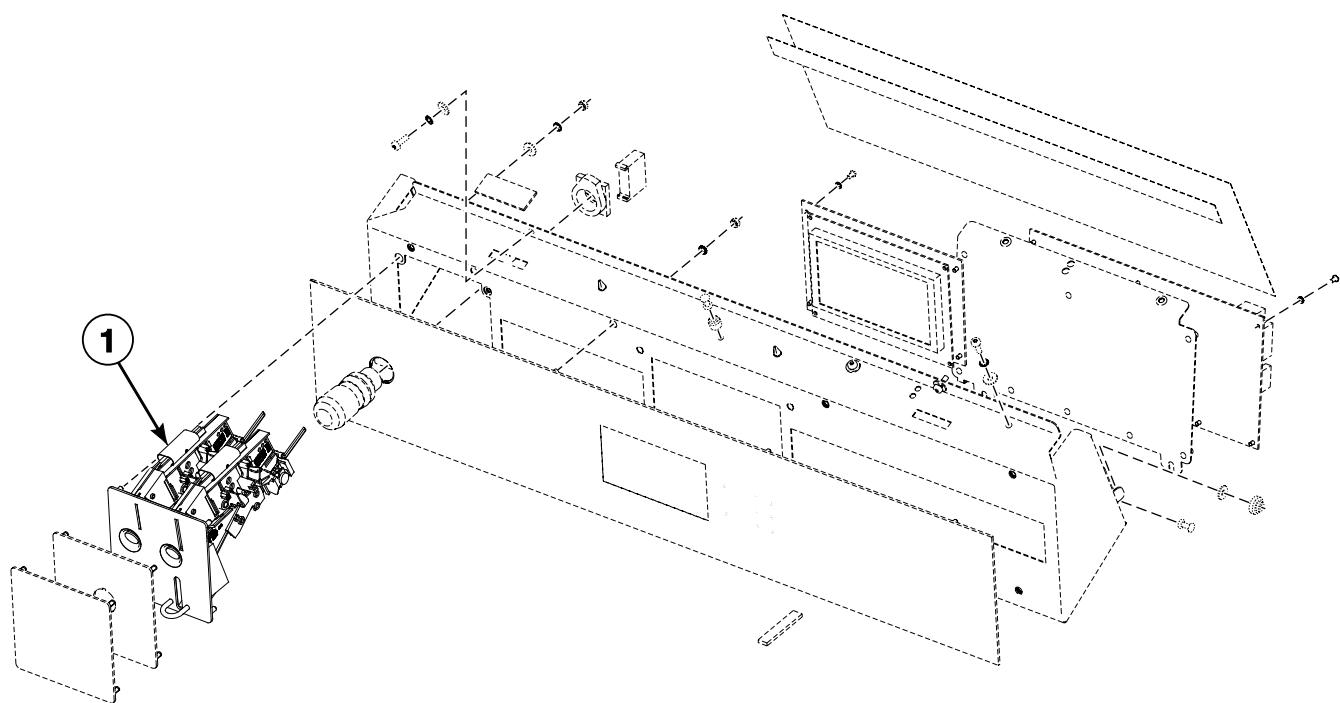


CFD2894P\_D2410

# Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 3 of 5)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP547641	Coin Meter	2DK + 10DK
	SP547642	Coin Meter	1AUD
	SP547643	Coin Meter	1CHF
	SP547644	Coin Meter	5NOK + 10NOK
	SP547645	Coin Meter	1 TopMos jeton + 1LEV jeton
	SP547646	Coin Meter	1 Vendo jeton
	SP547649	Coin Meter	1 jeton
	569951	Coin Meter	0.5MAD, 1MAD, 2MAD, 5MAD, 10MAD; Electronic EMPv7
	SP547651	Coin Meter	20 penny
	SP547653	Coin Meter	1 Wascator jeton, jeton diamater 22.2 mm
	SP547654	Coin Meter	1 Unibel jeton, jeton diamater 18.55 mm
	SP547657	Coin Meter	50HUF + 100HUF
	SP547658	Coin Meter	1 jeton without coining, jeton diamater 20 mm
	SP547659	Coin Meter	1 Volund jeton, jeton diamater 22.5 mm
	SP547660	Coin Meter	1 Wascator jeton, jeton diamater 19 mm
	SP547661	Coin Meter	1 Miele jeton
	SP547662	Coin Meter	1 jeton without coining, jeton diamater 26 mm
	SP547663	Coin Meter	Three-groove jeton; jeton diamater 27 mm
	SP547664	Coin Meter	Three-groove jeton; jeton diamater 24.9 mm
	SP537996	Coin Meter	Top-Mosr jeton
	SP547667	Coin Meter	Milano Italy jeton
	SP547668	Coin Meter	5PLN + 1PLN
	SP547669	Coin Meter	Two-grooves jeton; jeton diamater 27 mm
	SP547670	Coin Meter	A.S.A.R.D. jeton, jeton diamater 25.8 mm
	SP547671	Coin Meter	20CZK
	SP547672	Coin Meter	Jeton ASARD, jeton diamater 22.3 mm
	SP547673	Coin Meter	Jeton Laundromatic Belgium, jeton diamater 22.3 mm
	SP547674	Coin Meter	1SGD
	SP547675	Coin Meter	Jeton Asard Wascator, jeton diamater 19.9 mm
	SP555502	Coin Meter	Easy Games jeton
	SP555543	Coin Meter	Brev.C jeton
	SP555546	Coin Meter	50 Malaysian cent
	SP555549	Coin Meter	Flat Polis jeton
	SP555550	Coin Meter	Butzi Wash jeton
	SP555578	Coin Meter	1 New Singapore Dollar
	SP555558	Coin Meter	Copper without grooves jeton
	569939	Coin Meter	0.1SGD, 0.2SGD, 0.5SGD, 1SGD; Electronic EMPv7
	SP555666	Coin Meter	2x50 Malaysian cent
	569933	Coin Meter	0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR; Electronic EMPv7
	SP555559	Coin Meter	Speedy Matic jeton
	SP555579	Coin Meter	Was-Salon Lavoir jeton
	569948	Coin Meter	5CZK, 10CZK, 20CZK, 50CZK; Electronic EMPv7
	SP560744	Coin Meter	Electronic for Dobi Ekspress jeton
	569964	Coin Meter	0.2GBP, 0.5GBP, 1GBP, 2GBP, 0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, jeton "KWL Aqua", jeton "Gettone"; Electronic EMPv7
	SP560089	Coin Meter	STD 118-1 jeton

# Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 4 of 5)

Models with A, D, F, I, J, R, T or X in 7th Position of the model number

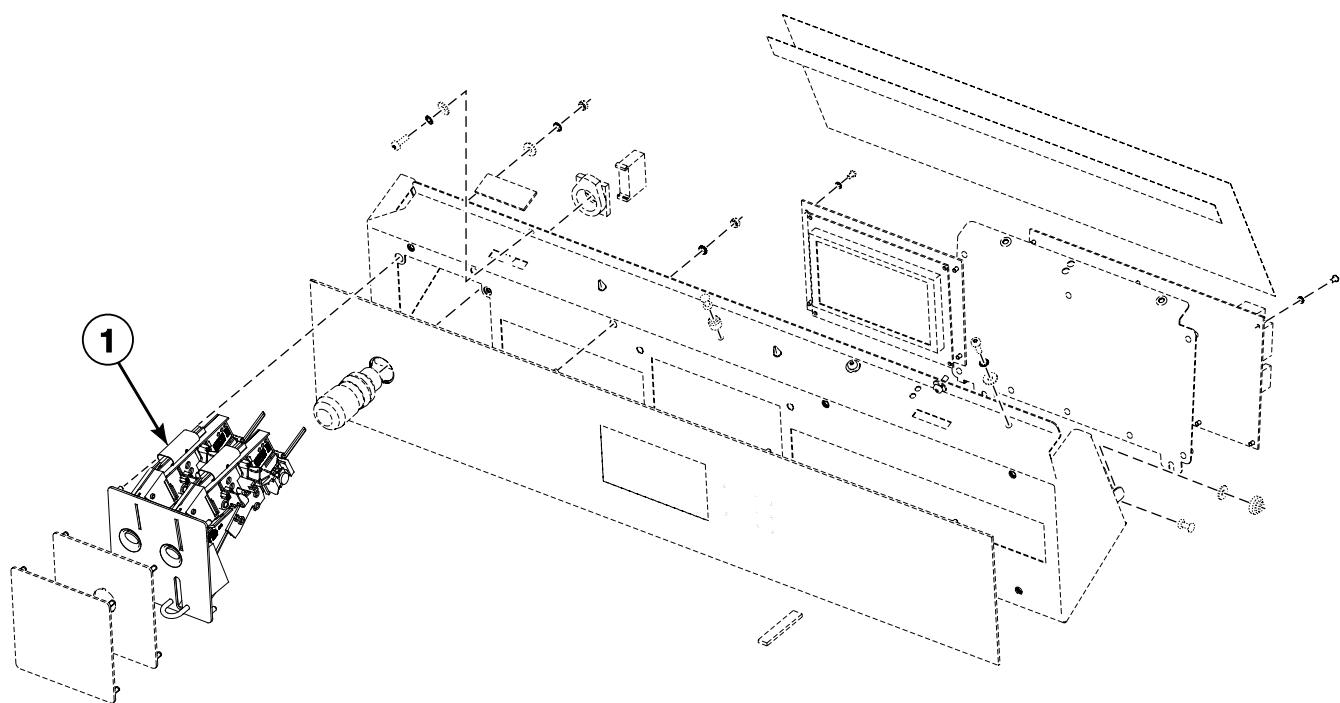


CFD2894P\_D2410

# Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 4 of 5)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP560082	Coin Meter	5k IPSO jeton
	SP560083	Coin Meter	7k IPSO jeton
	SP560084	Coin Meter	10k IPSO jeton
	SP560085	Coin Meter	12k IPSO jeton
	SP560086	Coin Meter	15k IPSO jeton
	561378	Coin Meter	10 Moroccan Dirham
	569918	Coin Meter	0.25USD, 1USD, 0.25CAD, 1CAD, 2CAD; Electronic EMPv7
	560073	Coin Meter	0.25 USD/1 USD
	569930	Coin Meter	1CNY, 0.1MYR, 0.2MYR, 0.5MYR; Electronic EMPv7
	569927	Coin Meter	0.2AUD, 1AUD, 2AUD, 0.2NZD, 1NZD, 2NZD, 5HKD, 10HKD, 500KRW; Electronic EMPv7
	SP561496	Coin Meter	Jeton Grupo Azkoyen CDS Automaten
	569936	Coin Meter	1PHP, 5PHP, 10PHP; Electronic EMPv7
	569942	Coin Meter	0.1MYR, 0.2MYR, 0.5MYR, 0.5SGD, 1SGD; Electronic EMPv7
	569945	Coin Meter	1HRK, 2HRK, 5HRK; Electronic EMPv7
	569924	Coin Meter	1DKK, 2DKK, 5DKK, 10DKK, 20DKK, 1NOK, 5NOK, 10NOK, 20NOK, 0.2EUR, 0.5EUR, 1EUR, 2EUR; Electronic EMPv7
	SP564484	Coin Meter	Jeton 118-5
	SP564486	Coin Meter	Jeton Barisart (LDL)
	569961	Coin Meter	0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, jeton IPSO 5K; Electronic EMPv7
	SP564489	Coin Meter	Jeton Sporrong
	569970	Coin Meter	0.5MYR, jeton "DOBI PAPA"; Electronic EMPv7
	553150	Coin Meter	Jeton with hole
	553151	Coin Meter	Jeton Deton Wash
	569901	Coin Meter	Brass jeton
	569912	Coin Meter	Jeton Wassalon lavoir
	569954	Coin Meter	1PLN, 2PLN, 5PLN, 0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, 10ISK, 50ISK, 100ISK; Electronic EMPv7
	569967	Coin Meter	0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, jeton G-FIS "LAVOIR BIANCA"; Electronic EMPv7
	569973	Coin Meter	1AUD, 2AUD, jeton "No Cash Value"; Electronic EMPv7
	569979	Coin Meter	0.5MYR, jeton "BUBBLELAB"; Electronic EMPv7
	569987	Coin Meter	Jeton HAUCK 2018

# Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 5 of 5)

Models with A, D, F, I, J, R, T or X in 7th Position of the model number

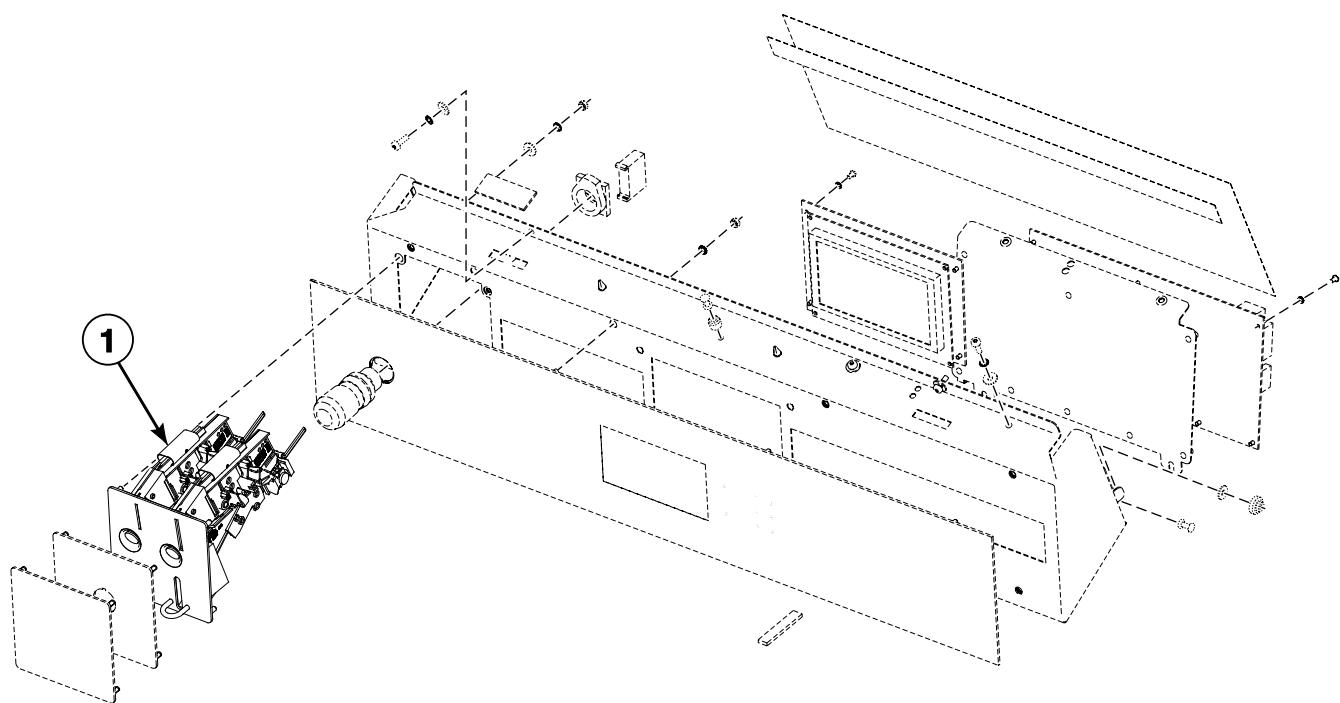


CFD2894P\_D2410

# Control Panel - AF Non-Brand, HY, LP, NY, SY and UY Models (Drawing 5 of 5)

REF	PART NO.	DESCRIPTION	COMMENTS
1	569998	Coin Meter	100+500 ISK
	572301	Coin Meter	Token 118-16
	572304	Coin Meter	1ILS, 2ILS, 5ILS, 10ILS; Electronic EMPv7
	572307	Coin Meter	1ZAR, 2ZAR, 5ZAR; Electronic EMPv7
	572310	Coin Meter	5RUB, 10RUB; Electronic EMPv7
	572313	Coin Meter	50CLP, 100CLP, 500CLP; Electronic EMPv7
	572317	Coin Meter	100JPY, 500JPY, 10TWD, 50TWD; Electronic EMPv7
	572320	Coin Meter	0.5GEL, 1GEL, 2GEL; Electronic EMPv7
	572323	Coin Meter	0.2 EUR, 0.5EUR, 1EUR, 2EUR, Jeton 7K; Electronic EMPv7
	572326	Coin Meter	20HUF, 50HUF, 100HUF, 200HUF; Electronic EMPv7
	572342	Coin Meter	Token WH121
	572339	Coin Meter	Getton Jeton (26mm diameter x 1.7mm)
	579808	Coin Meter	1EAD, 1TK, 2TK; Electronic EMPv7

# Control Panel - H, IY and J Models (Drawing 1 of 4)

Models with A, D, F, I, J, R, T or X in 7th Position of the model number

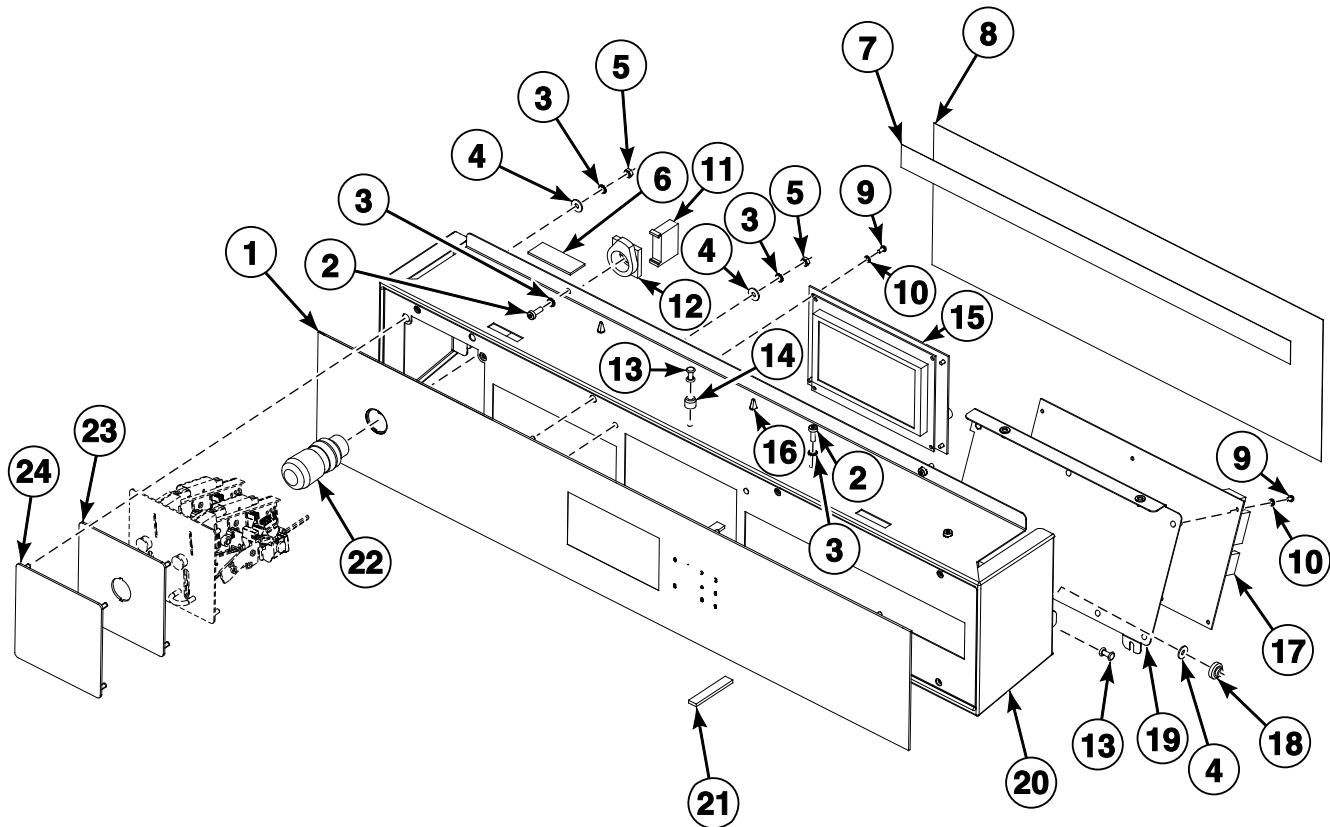


CFD2895P\_D2410

# Control Panel - H, IY and J Models (Drawing 1 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
	SP557744	USB Connection	J models
	F8600501	Programming Cable	
	569593	Network Installation Kit	Includes 569595 Holder, 203532 Wireless Network Control Assembly, 568363 Power Supply, 568362 Cable, 568378 Wiring, 568379 Wiring Diagram, SP345000626088 Binding Strip and connection accessories
1	SP557569	Keyboard	Aries-Elite
	SP557570	Keyboard	Aries
	SP560761	Keyboard	Without logo; With numeric keypad
	SP560762	Keyboard	Without logo; Without numeric keypad
	SP559375	Keyboard	J models; OPL
	SP559378	Keyboard	J models; Vended
2	SP555504	Bolt	M4x12
3	SP311679800004	Washer	M4
4	SP311902100004	Washer	M4
5	SP310934000004	Nut	M4
6	SPMEC001410	Self-Adhesive Pad	
7	SP510846	Tape	
8	SPPRI54300004	Cover	
9	SP309798500306	Bolt	M3x6
10	SP311679800003	Washer	M3
11	SP528312	Switching Unit	
12	SP528311	Emergency Stop Connector	
13	SP547779	Rivet	4x16.7
14	SP520408	Pin Insertion	
15	SP553419	Control Board	MC7
	SP553411	Control Board	MC7; J models
16	SP528313	Cable Holder	
17	SP553405	Control Board Power	MC7
	SP547005	Board Interconnection Cable	
18	SP550113	Leading Pin	
19	SP558896	Programmer Holder	
20	SP558894	Control Panel	
21	SP284000012003	Tape	
22	SP528310	Emergency Stop Knob	OPL
	SP520032	Emergency Stop Wiring	OPL
	SP520033	Emergency Stop Interconnection	Vended
23	SP558929	Coin Meter Cover Plate	
24	SP558930	CPS Cover Plate	

## Control Panel - H, IY and J Models (Drawing 2 of 4)

Models with A, D, F, I, J, R, T or X in 7th Position of the model number

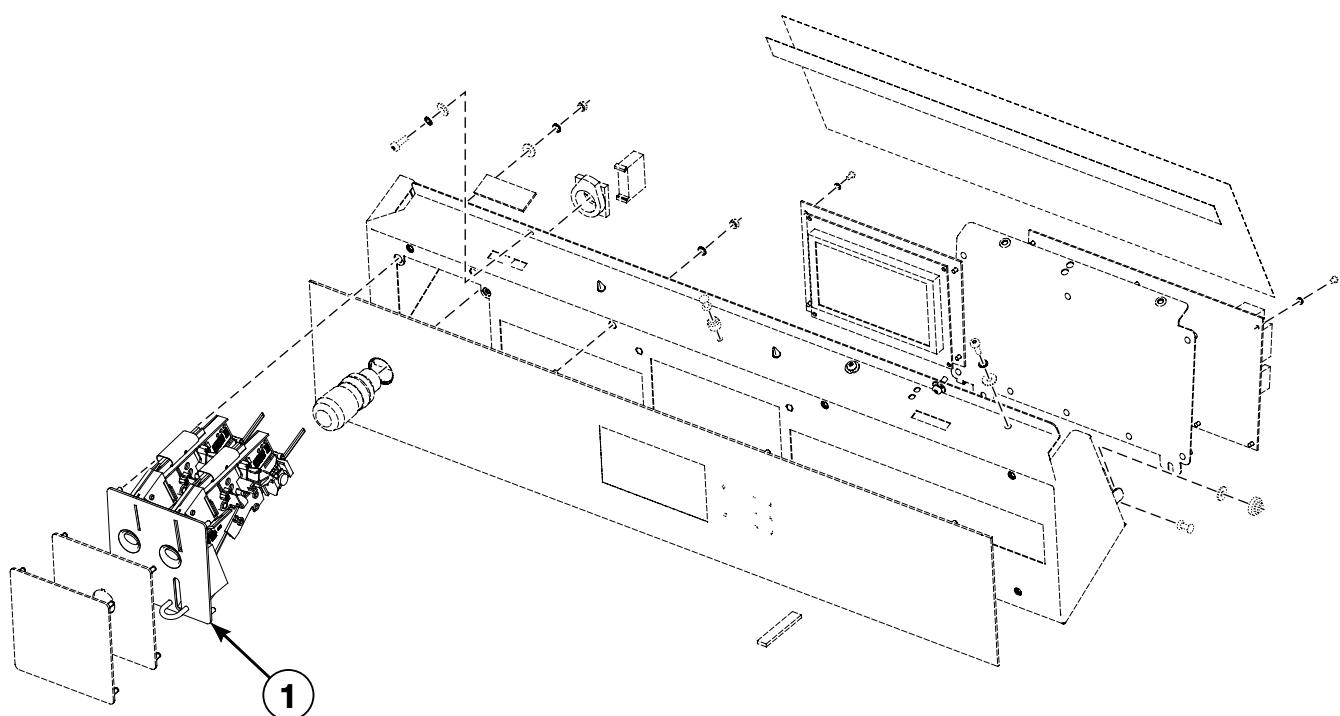


CFD2896P\_D2410

## Control Panel - H, IY and J Models (Drawing 2 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
1	569922	Coin Meter	0.2GBP, 0.5GBP, 1GBP, 2GBP, 0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR; Electronic EMPv7
	SP558958	Coin Meter	0.25USD
	SP558959	Coin Meter	0.5EUR and 1EUR
	SP560310	Coin Meter	1EUR
	SP560311	Coin Meter	0.5EUR
	SP560312	Coin Meter	1EUR and 2EUR
	SP559933	Coin Meter	5K Primus jeton
	SP559934	Coin Meter	10K Primus jeton
	569965	Coin Meter	0.2GBP, 0.5GBP, 1GBP, 2GBP, 0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, jeton "KWL Aqua", jeton "Gettone"; Electronic EMPv7
	SP559938	Coin Meter	STD 118-1 jeton
	SP560309	Coin Meter	7K Primus jeton
	SP560405	Coin Meter	12K Primus jeton
	SP560406	Coin Meter	15K Primus jeton
	SP560407	Coin Meter	2EUR
	SP560408	Coin Meter	0.2EUR and 0.5EUR
	SP560409	Coin Meter	0.2EUR
	SP560410	Coin Meter	1EUR and 0.2EUR
	SP560411	Coin Meter	2EUR and 0.5EUR
	SP560412	Coin Meter	1AUD and 0.2AUD
	SP560413	Coin Meter	1GBP and 20PC
	SP560414	Coin Meter	1GBP and 50PC
	SP560415	Coin Meter	100JPY
	SP560416	Coin Meter	500JPY and 100 JPY
	SP560417	Coin Meter	1AUD and 2AUD
	SP560418	Coin Meter	1AUD
	SP560419	Coin Meter	20PC
	SP560420	Coin Meter	50 Malaysian cent
	SP560421	Coin Meter	1SGD; New Singaporean dollar
	SP560422	Coin Meter	2MYR and 0.5MYR
	SP560423	Coin Meter	1SGD
	SP560424	Coin Meter	1NZD and 2NZD
	SP560425	Coin Meter	Easy games jeton
	SP560426	Coin Meter	Flat polis jeton
	SP560427	Coin Meter	Butzi wash jeton
	SP560428	Coin Meter	Speedy matic jeton
	SP560429	Coin Meter	Laundromatic Belgium jeton; Diameter 22.3mm
	569940	Coin Meter	0.1SGD, 0.2SGD, 0.5SGD, 1SGD; Electronic EMPv7
	569934	Coin Meter	0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR; Electronic EMPv7
	SP560432	Coin Meter	500WON
	SP560745	Coin Meter	Dobi ekspress jeton
	SP560751	Coin Meter	Lucky winner jeton
	SP559969	Coin Meter	Gettone jeton
	SP559949	Coin Meter	10 Taiwan dollar
	SP560090	Coin Meter	5K IPSO jeton
	SP560091	Coin Meter	7K IPSO jeton
	SP560092	Coin Meter	10K IPSO jeton
	SP560093	Coin Meter	12K IPSO jeton
	SP560094	Coin Meter	15K IPSO jeton
	SP560100	Coin Meter	Electrolux Asard jeton
	SP560087	Coin Meter	Gettone jeton

## Control Panel - H, IY and J Models (Drawing 3 of 4)

Models with A, D, F, I, J, R, T or X in 7th Position of the model number

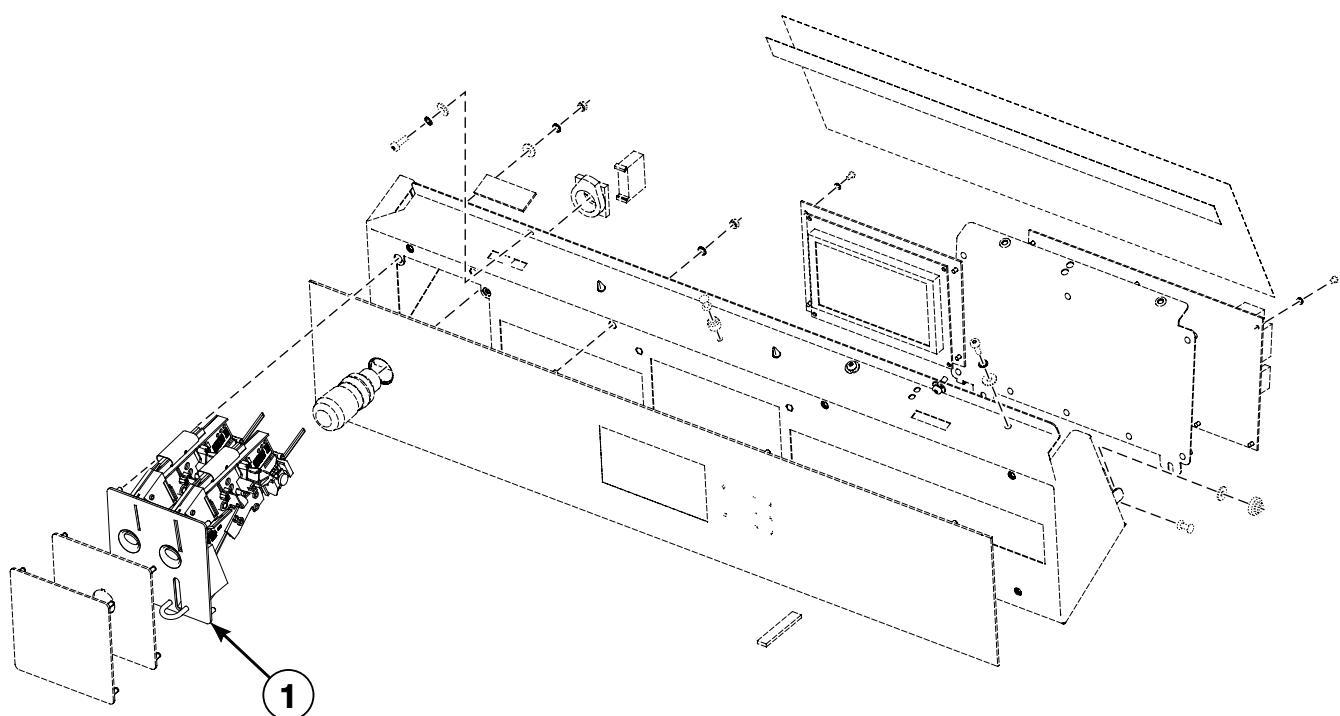


CFD2896P\_D2410

## Control Panel - H, IY and J Models (Drawing 3 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP560075	Coin Meter	5+1 Shekel
	SP560071	Coin Meter	1HKD
	569968	Coin Meter	0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, jeton G-FIS "LAVOIR BIANCA"; Electronic EMPv7
	569946	Coin Meter	1HRK, 2HRK, 5HRK; Electronic EMPv7
	569974	Coin Meter	1AUD, 2AUD, jeton "No Cash Value"; Electronic EMPv7
	561497	Coin Meter	Jeton Prinz Firbitex
	563405	Coin Meter	Token Ldl Chamberland Washing Machine
	569943	Coin Meter	0.1MYR, 0.2MYR, 0.5MYR, 0.5SGD, 1SGD; Electronic EMPv7
	569925	Coin Meter	1DKK, 2DKK, 5DKK, 10DKK, 20DKK, 1NOK, 5NOK, 10NOK, 20NOK, 0.2EUR, 0.5EUR, 1EUR, 2EUR; Electronic EMPv7
	564485	Coin Meter	Token 118-5
	564487	Coin Meter	Token Barisart (Ldl)
	569971	Coin Meter	0.5MYR, jeton "DOBI PAPA"; Electronic EMPv7
	553156	Coin Meter	Token Rotondi
	569905	Coin Meter	Brass jeton
	569911	Coin Meter	0.5CHF, 2CHF
	569919	Coin Meter	0.25USD, 1USD, 0.25CAD, 1CAD, 2CAD; Electronic EMPv7
	569928	Coin Meter	0.2AUD, 1AUD, 2AUD, 0.2NZD, 1NZD, 2NZD, 5HKD, 10HKD, 500KRW; Electronic EMPv7
	569931	Coin Meter	1CNY, 0.1MYR, 0.2MYR, 0.5MYR; Electronic EMPv7
	569937	Coin Meter	1PHP, 5PHP, 10PHP; Electronic EMPv7
	569949	Coin Meter	5CZK, 10CZK, 20CZK, 50CZK; Electronic EMPv7
	569952	Coin Meter	0.5MAD, 1MAD, 2MAD, 5MAD, 10MAD; Electronic EMPv7
	569955	Coin Meter	1PLN, 2PLN, 5PLN, 0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, 10ISK, 50ISK, 100ISK; Electronic EMPv7
	569962	Coin Meter	0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, jeton IPRSO 5K; Electronic EMPv7
	569980	Coin Meter	0.5MYR, jeton "BUBBLELAB"; Electronic EMPv7
	569988	Coin Meter	Jeton HAUCK 2018
	569993	Coin Meter	Jeton 08 MS
	569995	Coin Meter	Jeton D

## Control Panel - H, IY and J Models (Drawing 4 of 4)

Models with A, D, F, I, J, R, T or X in 7th Position of the model number

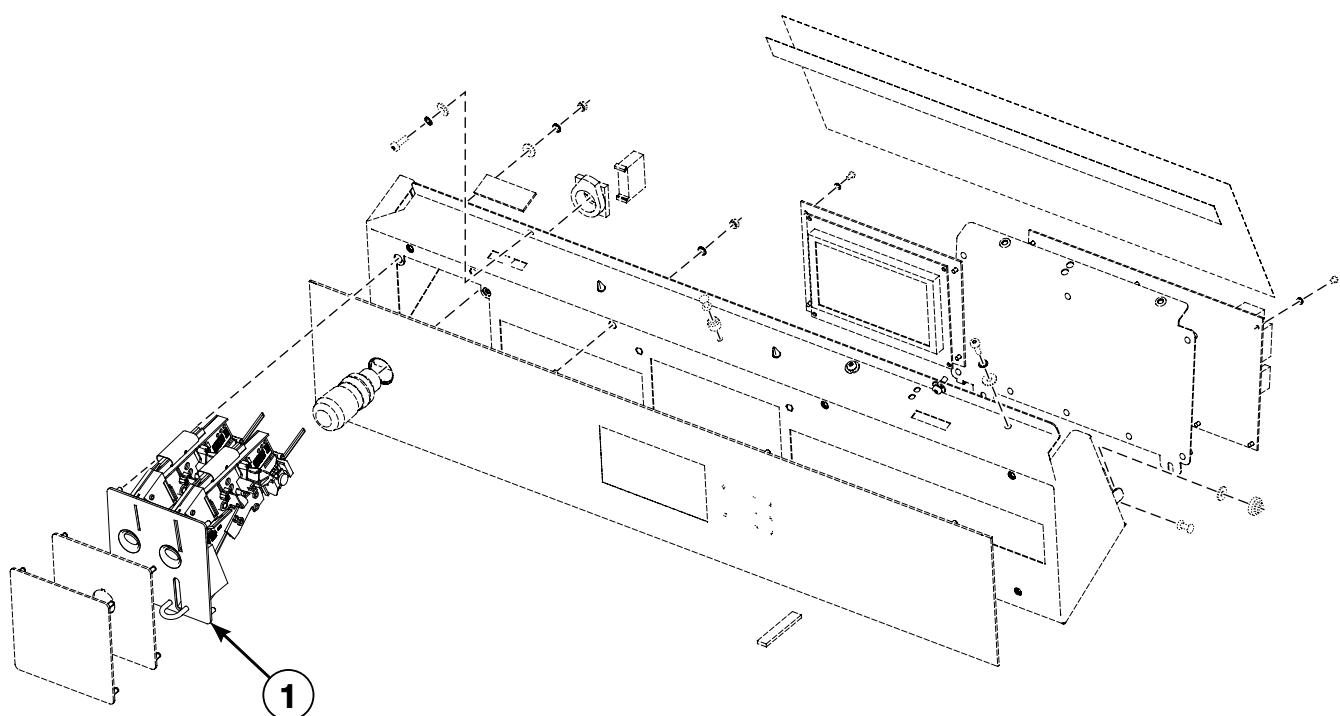

CFD2896P\_D2410


## Control Panel - H, IY and J Models (Drawing 4 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
1	569999	Coin Meter	10+50 TWD
	570000	Coin Meter	100+500 ISK
	572302	Coin Meter	Token 118-16
	572305	Coin Meter	1ILS, 2ILS, 5ILS, 10ILS; Electronic EMPv7
	572308	Coin Meter	1ZAR, 2ZAR, 5ZAR; Electronic EMPv7
	572311	Coin Meter	5RUB, 10RUB; Electronic EMPv7
	572314	Coin Meter	50CLP, 100CLP, 500CLP; Electronic EMPv7
	572318	Coin Meter	100JPY, 500JPY, 10TWD, 50TWD; Electronic EMPv7
	572321	Coin Meter	0.5GEL, 1GEL, 2GEL; Electronic EMPv7
	572324	Coin Meter	0.2 EUR, 0.5EUR, 1EUR, 2EUR, Jeton 7K; Electronic EMPv7
	572327	Coin Meter	20HUF, 50HUF, 100HUF, 200HUF; Electronic EMPv7
	569988	Coin Meter	Jeton HAUCK 2018
	572359	Coin Meter	1THB, 2THB, 5THB, 10THB/TK1+2; Electronic EMPv7
	572355	Coin Meter	Token 1699360
	572389	Coin Meter	0.25CAD
	575276	Coin Meter	0.25USD +1USD
	572384	Coin Meter	0.2CHF, 0.5CHF, 1CHF, 2CHF; Electronic EMPv7
	575277	Coin Meter	0.25CAD +1CAD
	579809	Coin Meter	1EAD, 1TK, 2TK; Electronic EMPv7

# Control Panel - AF, FX, HX, LY, MWF, PY, QW and SW Models

## (Drawing 1 of 2)

Models with A, D, F, I, J, R, T or X in 7th Position of the model number

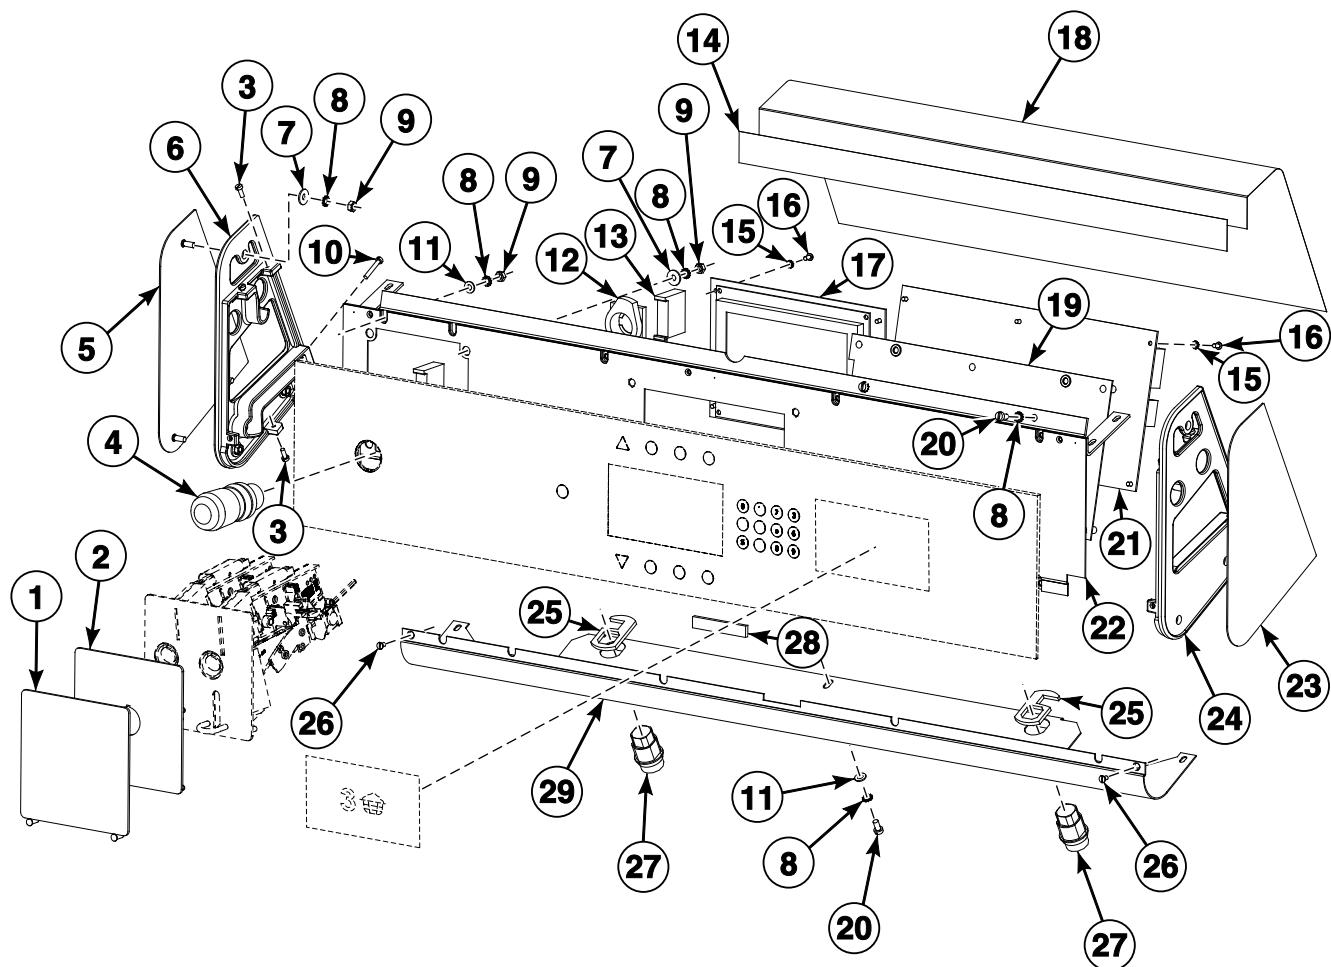

CZW136P\_D2410

# Control Panel - AF, FX, HX, LY, MWF, PY, QW and SW Models


## (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	F8600501	Programming Cable	
	569593	Network Installation Kit	Includes 569595 Holder, 203532 Wireless Network Control Assembly, 568363 Power Supply, 568362 Cable, 568378 Wiring, 568379 Wiring Diagram, SP345000626088 Binding Strip and connection accessories
1	SP550149	Cover Plate	PY models; CSA
2	SP547565	Coin Meter Cover	
3	577761	Bolt	3x8
4	SP528310	Emergency Stop Knob	OPL
	SP520032	Emergency Stop Wiring	OPL
	SP520033	Emergency Stop Interconnection	Vended
5	SP547507	Side Sheet Metal	Left
6	570391	Side Board	Left
7	SP311902100004	Washer	M4
8	SP311679800004	Washer	M4
9	SP310934000004	Nut	M4
10	577763	Bolt	3x20
11	SP311125000004	Washer	M4
12	SP528311	Emergency Stop Connector	
13	SP528312	Switching Unit	
14	SP510846	Tape	
15	SP311679800003	Washer	M3
16	SP309798500306	Bolt	M3x6
17	SP547001	Control Board	MC6 (green color); Through Serial No. 135FX002197BZ; Refer to NOTE*
	SP553411	Control Board	MC7 (blue color); Starting Serial No. 135FX002223BZ; Refer to NOTE*
18	SPPRI54300004	Cover	
19	SP547513	Programmer Holder	
20	SP555504	Bolt	M4x12
21	SP547002	Control Board Power	MC6
	SP553405	Control Board Power	MC7
	SP537995	Board Interconnection Cable	QW models
	SP547005	Board Interconnection Cable	All other models
22	SP547510	Programmer Holder	
23	SP547506	Side Sheet Metal	Right
24	570392	Side Board	Right
25	SPPRI610002007	Hook Lock	Small; MC7; OPL
26	577762	Bolt	3x8
27	SP547527	Lock	
	SP550616	Key	Used with SP547527 Lock
28	SP284000012003	Tape	
29	SP547515	Lower Lath	

\* NOTE: For machines within the Serial No. range 135FX002224BZ - 135FX002644DF, contact the After Sales department.

# Control Panel - AF, FX, HX, LY, MWF, PY, QW and SW Models (Drawing 2 of 2)

Models with A, D, F, I, J, R, T or X in 7th Position of the model number

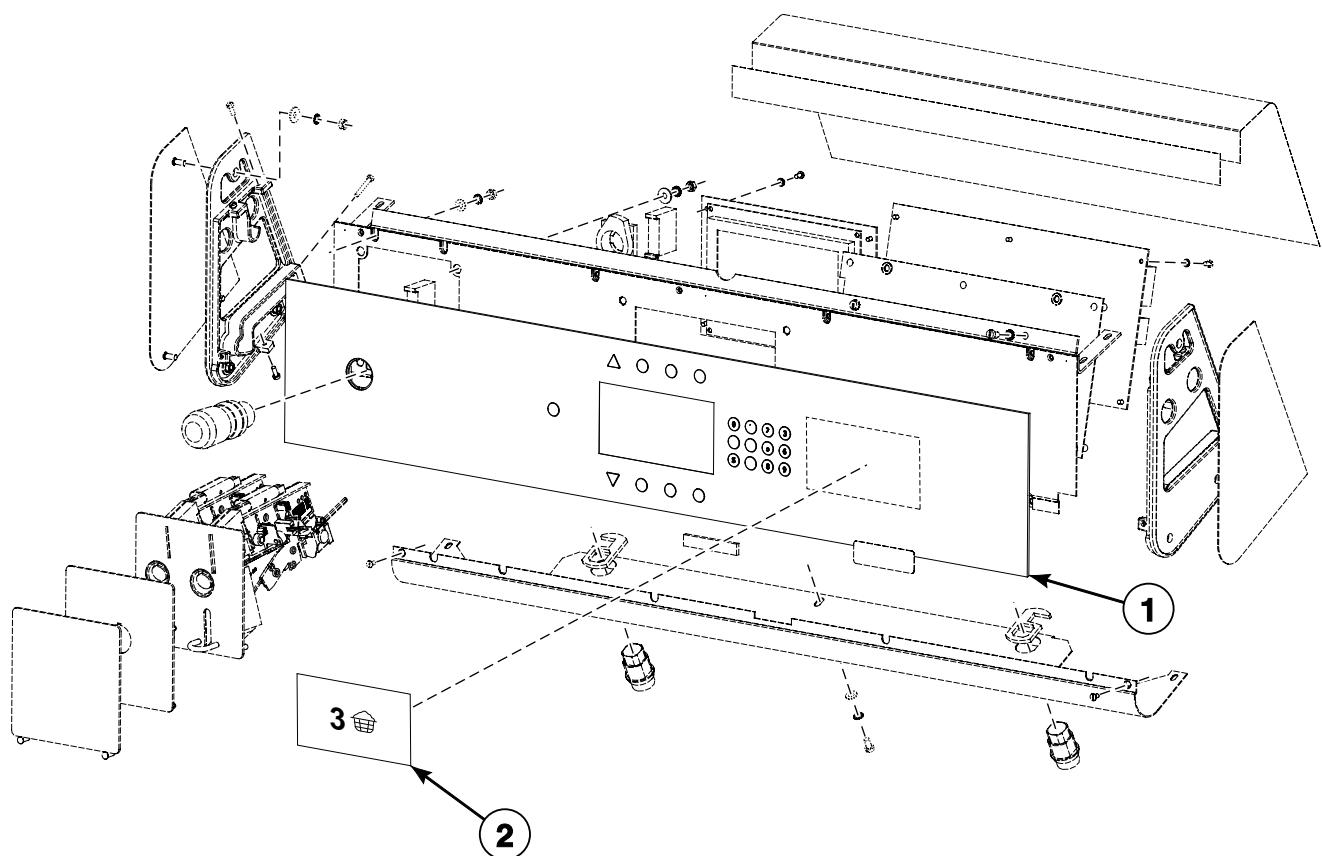


CZW137P\_D2410

## Control Panel - AF, FX, HX, LY, MWF, PY, QW and SW Models (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP560755	Keyboard	X Control; CSA
	SP547014	Keyboard	FX, MWF and PY models; OPL; X Control Plus; Gray-black; CE
	SP547013	Keyboard	FX, MWF and PY models; OPL; X Control; Gray-black; CE
	SP547011	Keyboard	FX, MWF and PY models; Vended; X Control; Gray-black; CE
	SP547012	Keyboard	FX, MWF and PY models; CPS; X Control; Gray-black; CE
	SP547026	Keyboard	AF and LY models; OPL; X Control Plus; Black; CE
	SP547025	Keyboard	AF and LY models; OPL; X Control; Black; CE
	SP547023	Keyboard	AF and LY models; Vended; X Control; Black; CE
	SP547024	Keyboard	AF and LY models; CPS; X Control; Black; CE
	SP547038	Keyboard	FX, MWF and PY models; OPL; X Control Plus; Gray; CE
	SP547037	Keyboard	FX, MWF and PY models; OPL; X Control; Gray; CE
	SP547035	Keyboard	FX, MWF and PY models; Vended; X Control; Gray; CE
	SP547036	Keyboard	FX, MWF and PY models; CPS; X Control; Gray; CE
	SP537994	Keyboard	QW models; CE
2	SP556112	Keyboard	SW models; CE
	SP552911	Keyboard	HX models; CE
2	SP563291	Label	Basket Capacity; 3; Vended; CSA

## Control Panel OPL - AF, IY and NY Models

Models with A, D, F, I, J, R, T or X in 7th position of the model number

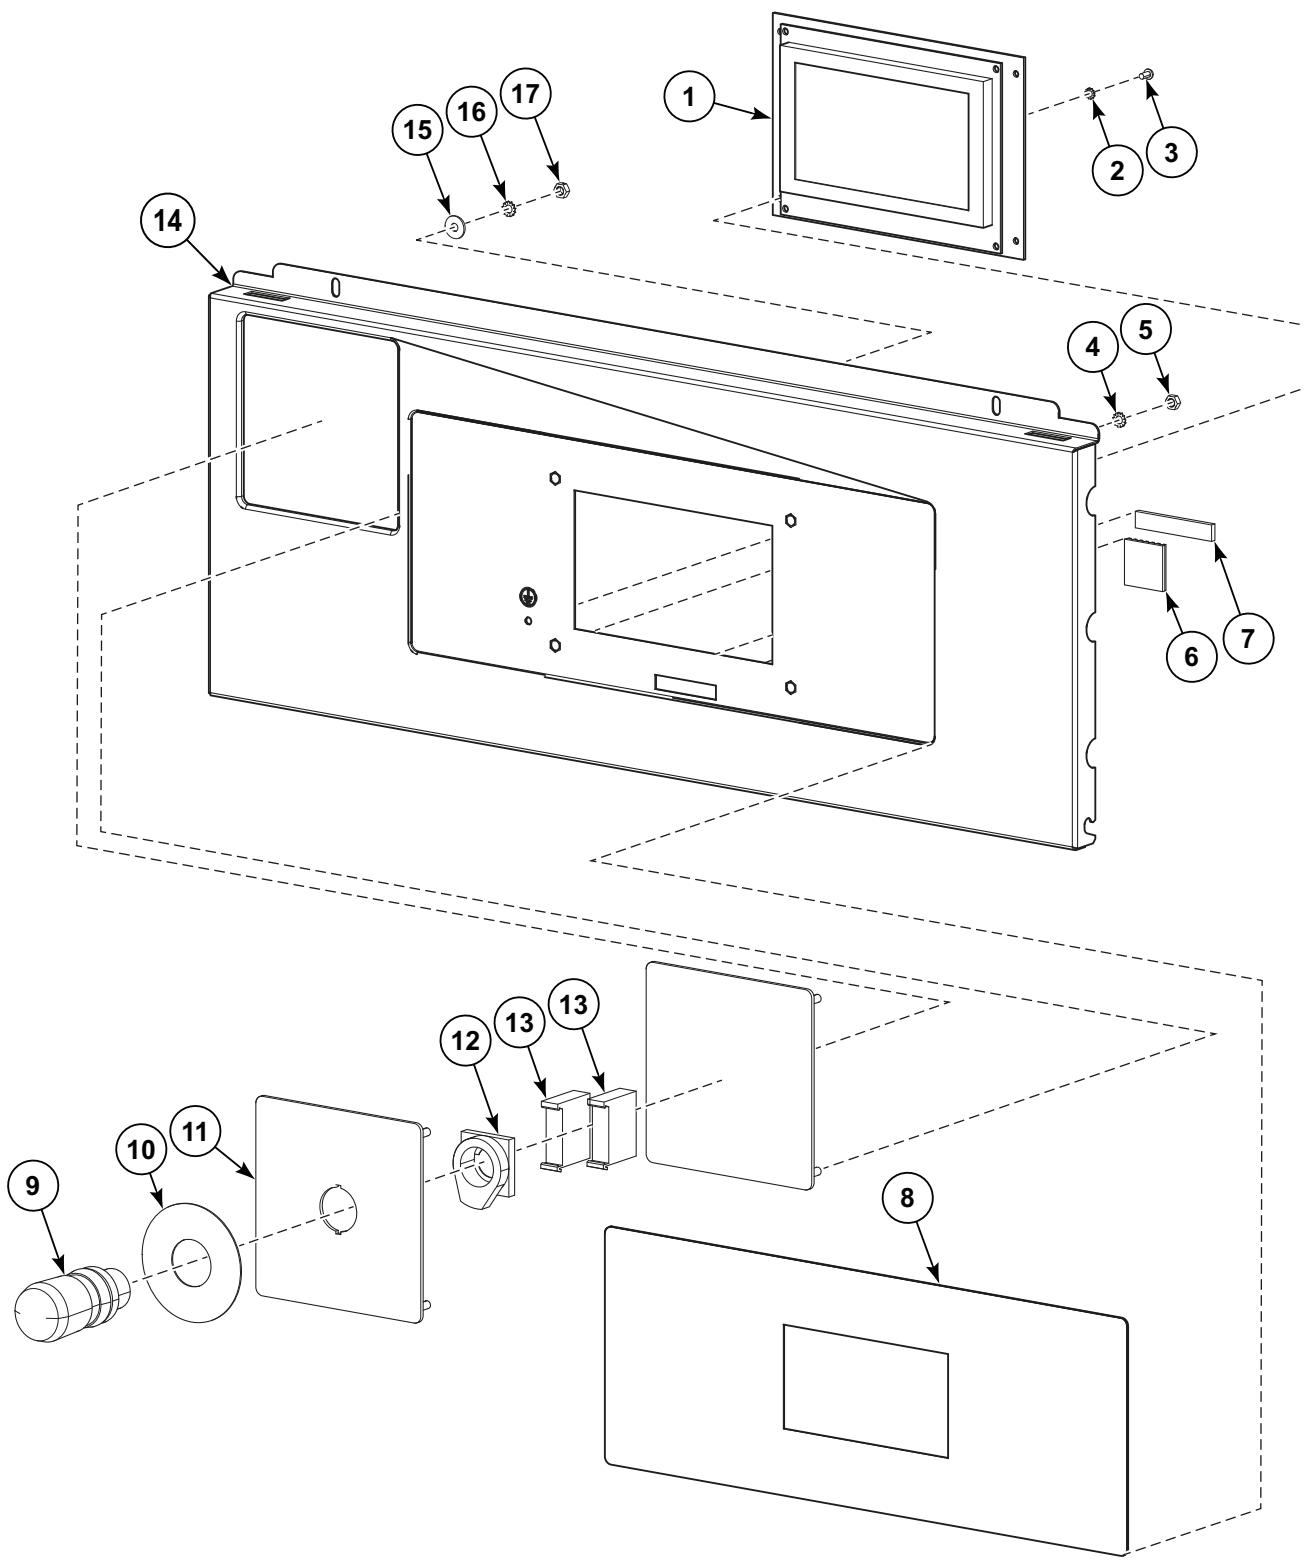


CZW284P\_D2410

## Control Panel OPL - AF, IY and NY Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP553419	Control Board	MC7
	553411	Control Board	AF and NY Models
2	SP311679800003	Washer	M3
3	SP309798500306	Bolt	M3x6
4	SP311679800004	Washer	M4
5	SP310934000004	Nut	M4
6	SP550115	Fastener	
7	SP284000012003	Tape	
8	SP557566	Keyboard	Aries
	SP557565	Keyboard	Aries Elite
	547088	Keyboard	AF and NY Models; Basic; Black
	547087	Keyboard	AF and NY Models; Professional; Black
9	SP528310	Emergency Stop Knob	Used with SP520032 Emergency Stop Wiring
10	SPPRI551005248	Emergency Stop Label	
11	567924	Coin Meter Cover	
12	SP528311	Emergency Stop Connector	
13	SP528312	Switching Unit	
14	573064	Control Panel	
15	SP311902100004	Washer	M4
16	SP311679800004	Washer	M4
17	SP310934000004	Nut	M4

## Control Panel Vended - AF, IY and NY Models

Models with A, D, F, I, J, R, T or X in 7th position of the model number

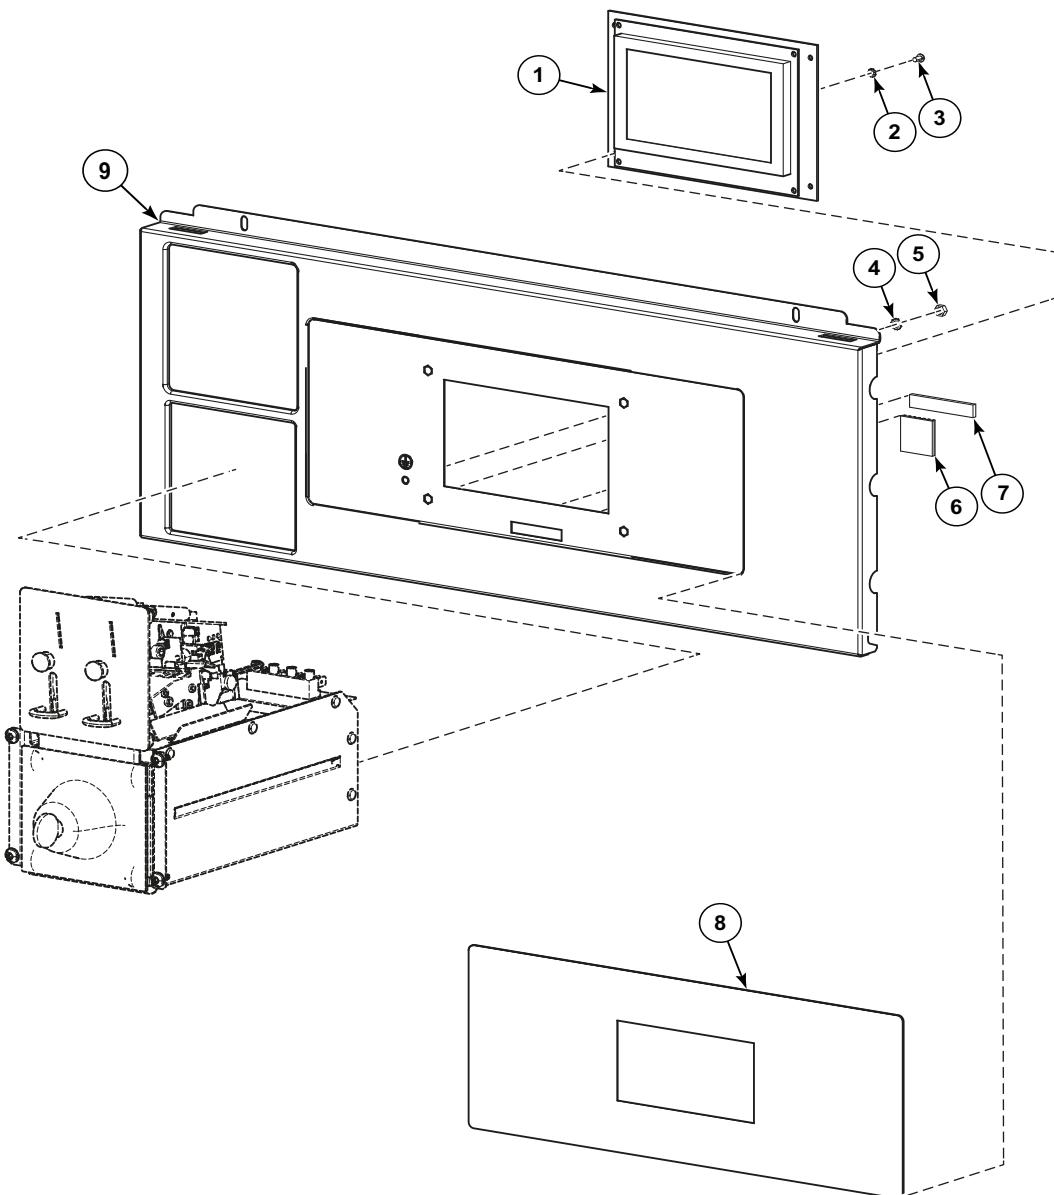


CZW285P\_D2410

## Control Panel Vended - AF, IY and NY Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP553419	Control Board	IY models; MC7
	553411	Control Board	AF and NY Models; MC7
2	SP311679800003	Washer	M3
3	SP309798500306	Bolt	M3x6
4	SP311679800004	Washer	M4
5	SP310934000004	Nut	M4
6	SP550115	Fastener	
7	SP284000012003	Tape	
8	SP557566	Keyboard	IY models; Aries
	547088	Keyboard	AF and NY Models; Basic; Black
9	573062	Control Panel	

# Control Panel for Central Payment System - AF, IY and NY Models

Models with A, D, F, I, J, R, T or X in 7th position of the model number

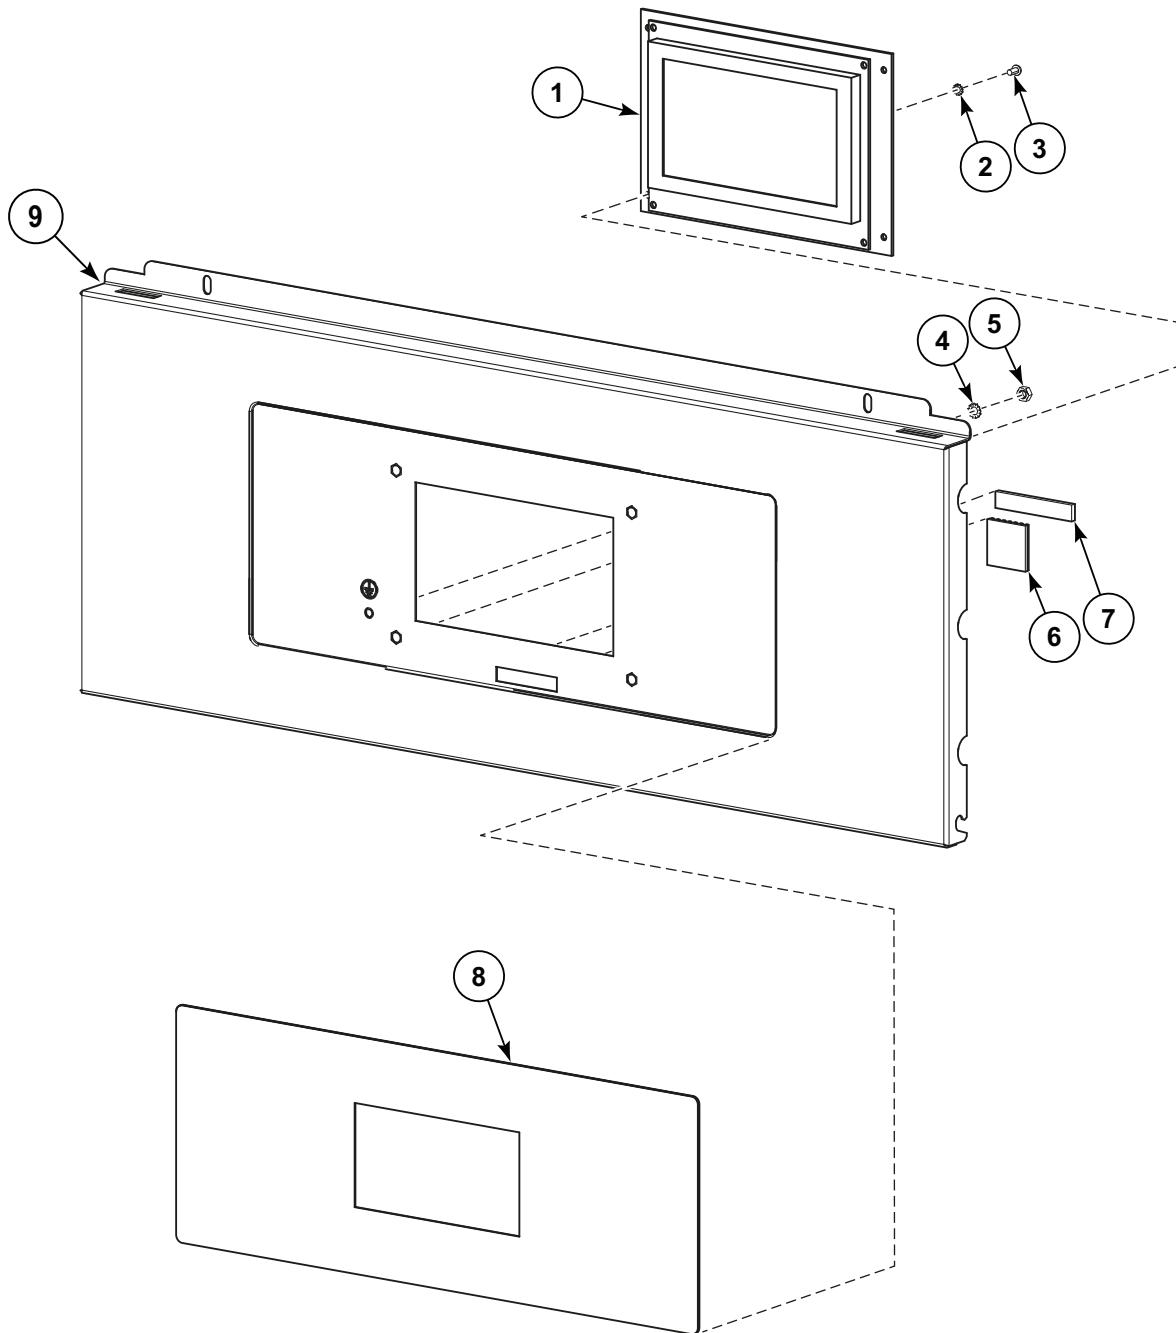


CZW286P\_D2410

## Control Panel for Central Payment System - AF, IY and NY Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP553419	Control Board	IY models; MC7
	553411	Control Board	AF and NY Models; MC7
2	SP311679800003	Washer	M3
3	SP309798500306	Bolt	M3x6
4	SP311679800004	Washer	M4
5	SP310934000004	Nut	M4
6	SP550115	Fastener	
7	SP284000012003	Tape	
8	SP557566	Keyboard	IY models; Aries
	547088	Keyboard	AF and NY Models; Basic; Black
9	573074	Control Panel	

# Control Panel OPL - AF, IY and NY Models

Models with V in the 7th position of the model number

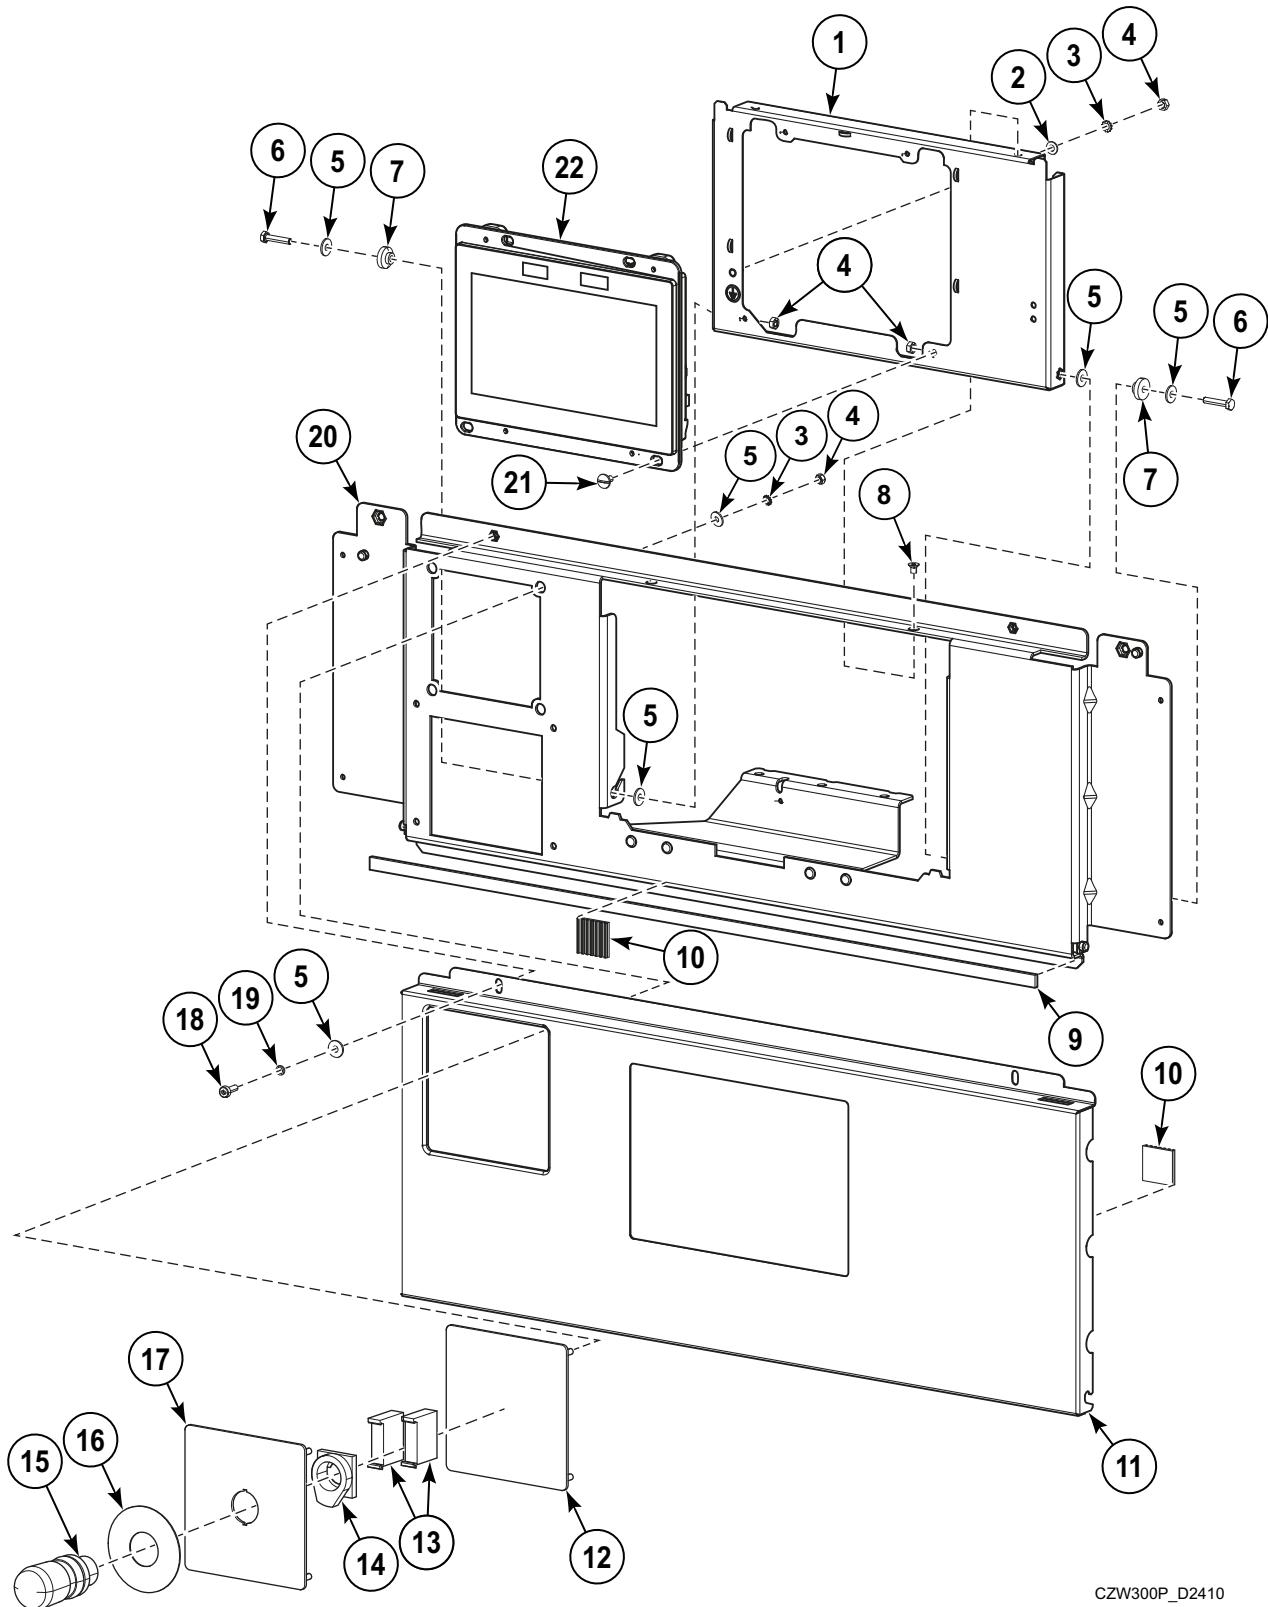


CZW300P\_D2410

## Control Panel OPL - AF, IY and NY Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	571041	Control Holder	
2	SP311125000004	Washer	M4
3	SP311679800004	Washer	M4
4	SP310934000004	Nut	M4
5	SP311902100004	Washer	M4
6	569655	Bolt	M4x25
7	SP550113	Leading Pin	
8	SP309965240408	Bolt	M4x8
9	SP284000012003	Tape	0.558m
10	SP550115	Fastener	
11	573117	Control Panel	
12	567925	Label Covering	
13	SP528312	Switching Unit	
14	SP528311	Emergency Stop Connector	
15	SP528310	Emergency Stop Knob	Used with SP520032 Emergency Stop Wiring
16	SPPRI551005248	Emergency Stop Label	
17	567924	Coin Meter Cover	
18	SP555504	Bolt	M4x12
19	SP311127000004	Washer	4
20	573025	Control Panel Frame	
21	309500240408	Bolt	M4x8
22	575632	Control	7", MC10

# Control Panel Vended - AF, IY and NY Models

Models with V in the 7th position of the model number

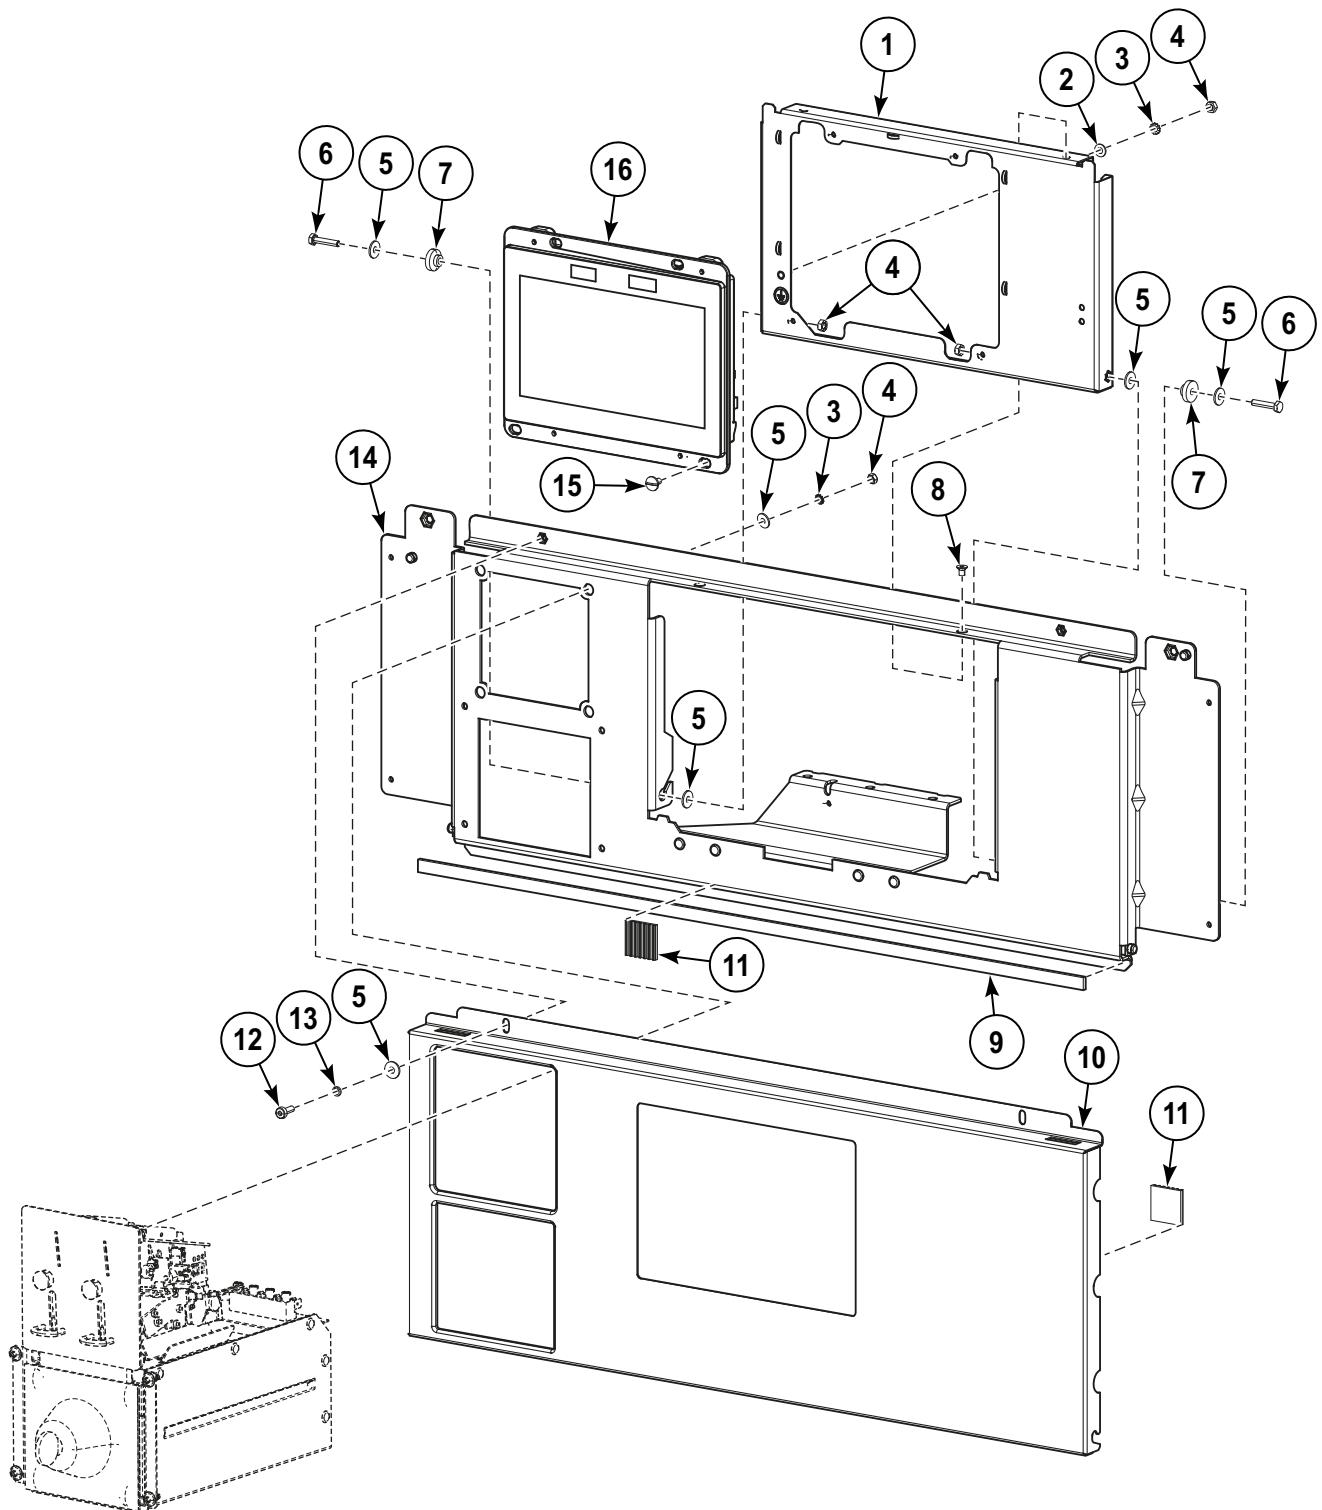


CZW301P\_D2410

## Control Panel Vended - AF, IY and NY Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	571041	Control Holder	
2	SP311125000004	Washer	M4
3	SP311679800004	Washer	M4
4	SP310934000004	Nut	M4
5	SP311902100004	Washer	M4
6	569655	Bolt	M4x25
7	SP550113	Leading Pin	
8	SP309965240408	Bolt	M4x8
9	SP284000012003	Tape	0.558m
10	573119	Control Panel	
11	SP550115	Fastener	
12	SP555504	Bolt	M4x12
13	SP311127000004	Washer	4
14	573025	Control Panel Frame	
15	309500240408	Bolt	M4x8
16	575632	Control	7", MC10

# Control Panel for Central Payment System - AF, IY and NY Models

Models with V in the 7th position of the model number

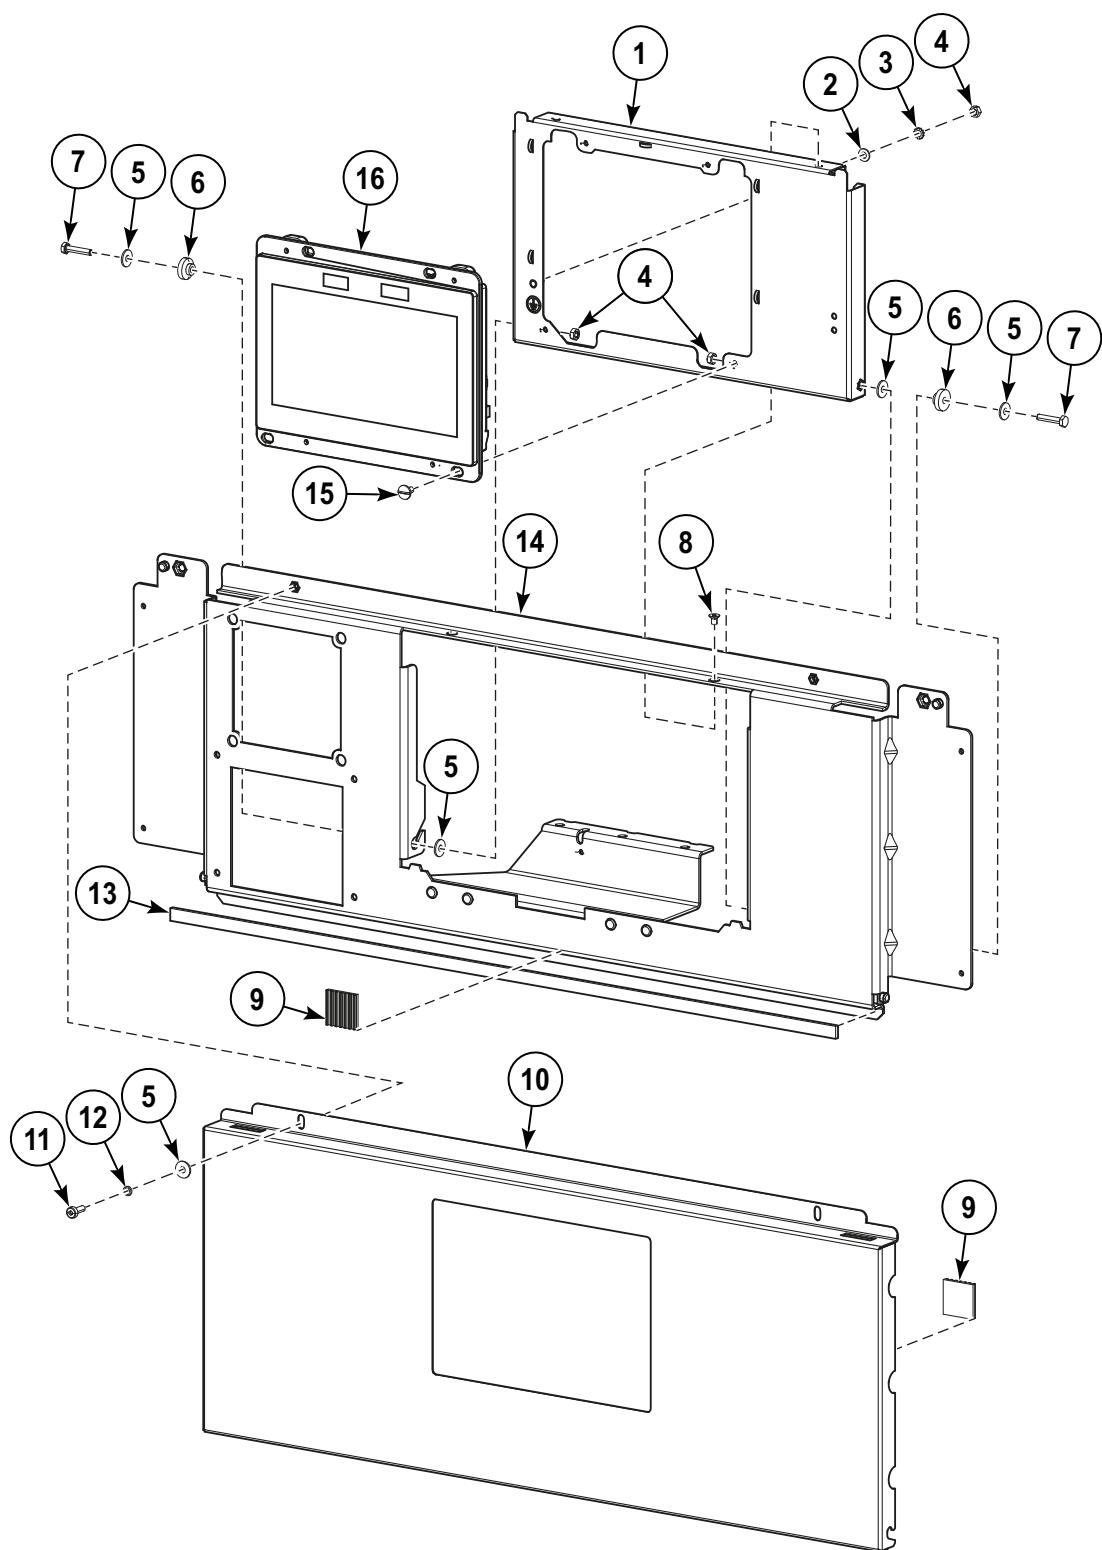


CZW302P\_D2410

## Control Panel for Central Payment System - AF, IY and NY Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	571041	Control Holder	
2	SP311125000004	Washer	M4
3	SP311679800004	Washer	M4
4	SP310934000004	Nut	M4
5	SP311902100004	Washer	M4
6	SP550113	Leading Pin	
7	569655	Bolt	M4x25
8	SP309965240408	Bolt	M4x8
9	SP550115	Fastener	
10	573119	Control Panel	
11	SP555504	Bolt	M4x12
12	SP311127000004	Washer	4
13	SP284000012003	Tape	0.558m
14	573025	Control Panel Frame	
15	309500240408	Bolt	M4x8
16	575632	Control	7", MC10

## Control Panel OPL - FX and PY Models

Models with V in 7th position and with H or 6 in 10th position of the model number Through Serial No. 135FX016170SF

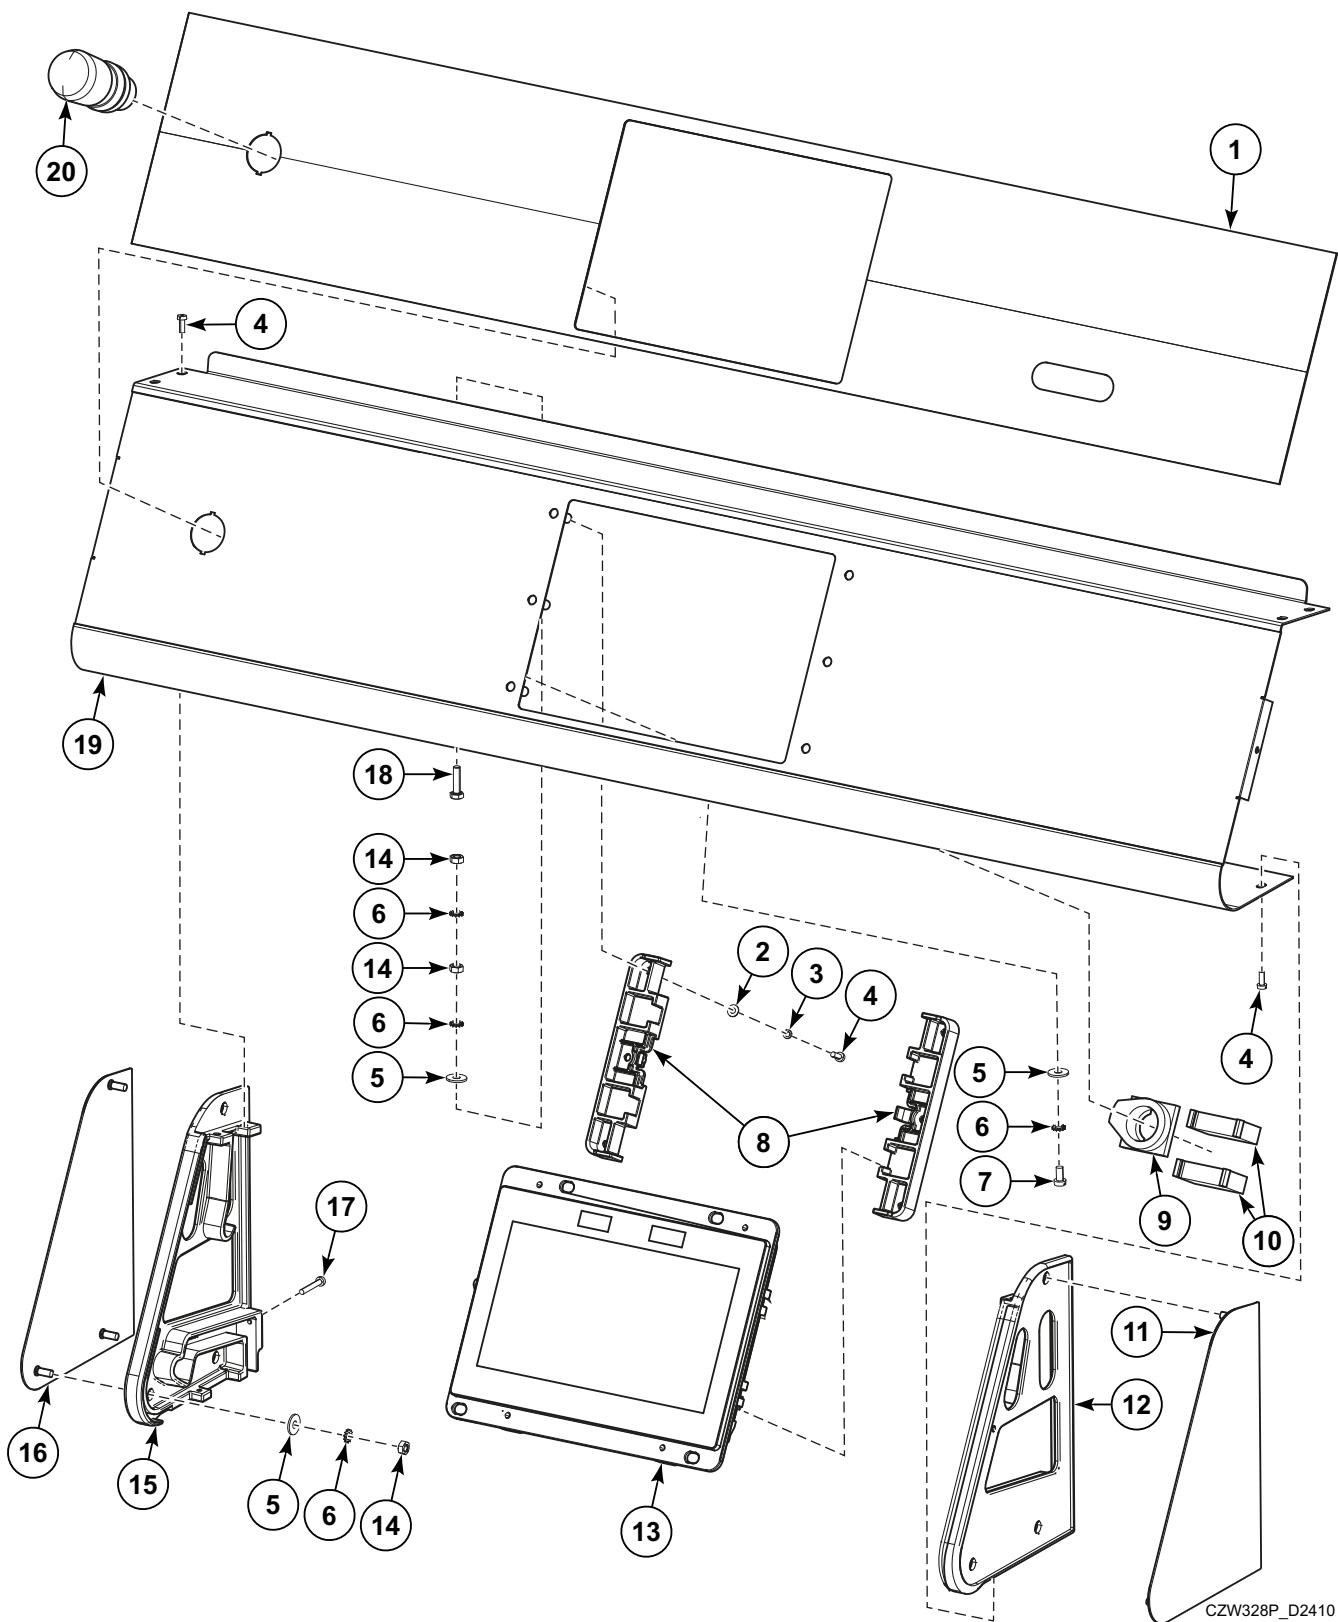


CZW328P\_D2410

## Control Panel OPL - FX and PY Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	573927	Overlay	
	574217	Overlay	OEM
2	SP311125000003	Washer	M3
3	SP311127000003	Washer	3
4	SP309084000308	Bolt	M3x8
5	SP311902100004	Washer	M4
6	SP311679800004	Washer	M4
7	SP309084000408	Bolt	M4x8
8	573929	Sidewall	
9	SP528311	Emergency Stop Connector	
10	SP528312	Switching Unit	
11	572586	Sidewall	Right
12	572572	Sidewall	Right
13	575632	Control	7", MC10
14	SP310934000004	Nut	M4
15	572571	Sidewall	Left
16	572588	Sidewall	Left
17	SP309084000320	Bolt	M3x20
18	SP309933000416	Bolt	M4x16
19	572582	Nose Assembly	Includes item 1 and 573930 Nut
	574235	Nose Assembly	OEM; Includes item 1 and 573930 Nut
20	SP528310	Emergency Stop Knob	Used with SP520032 Emergency Stop Wiring

## Control Panel OPL - FX and PY Models

Models with V in 7th position and with H or 6 in 10th position of the model number Starting Serial No. 135FX016171SF

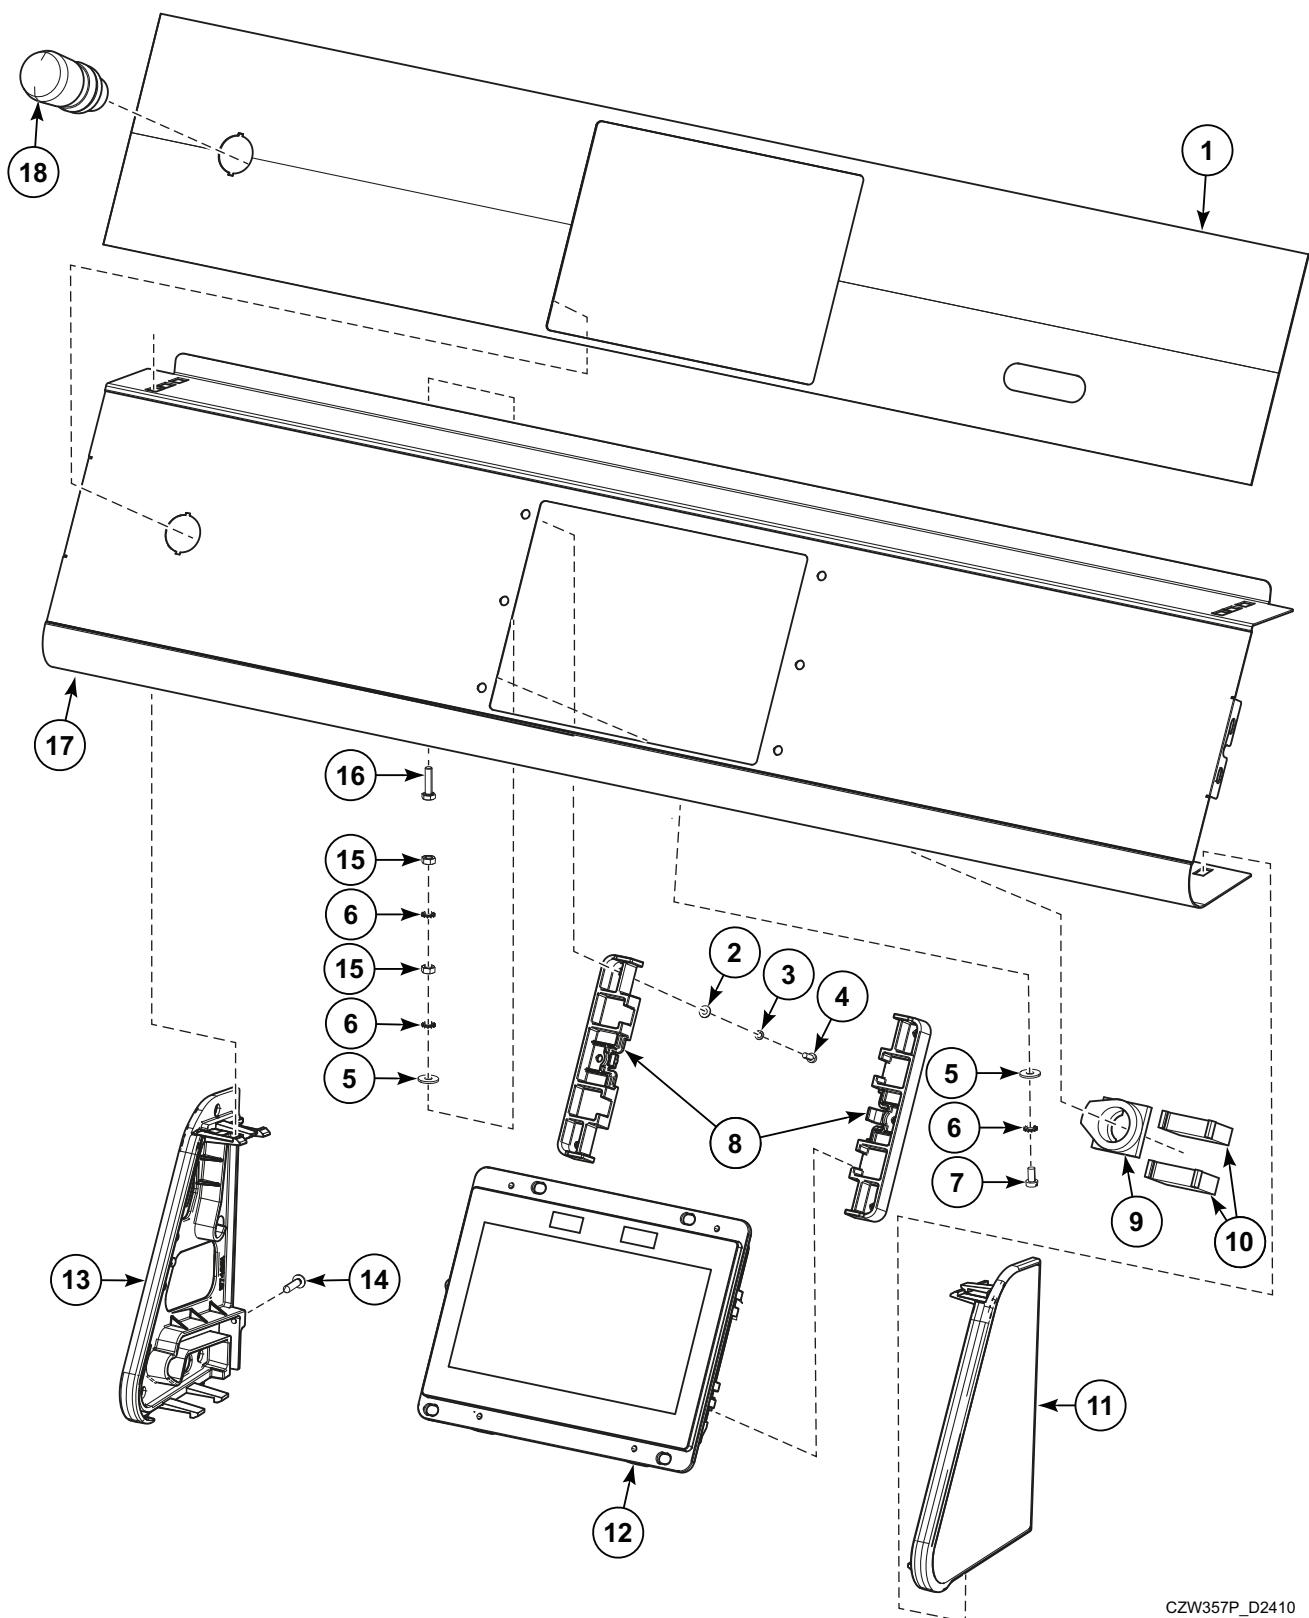


CZW357P\_D2410

## Control Panel OPL - FX and PY Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	573927	Overlay	
	574217	Overlay	OEM
2	SP311125000003	Washer	M3
3	SP311127000003	Washer	3
4	SP309084000308	Bolt	M3x8
5	SP311902100004	Washer	M4
6	SP311679800004	Washer	M4
7	SP309084000408	Bolt	M4x8
8	573929	Sidewall	
9	SP528311	Emergency Stop Connector	
10	SP528312	Switching Unit	
11	576070	Sidewall	Right
12	575632	Control	7", MC10
13	576069	Sidewall	Left
14	SP520407	Screw	
15	SP310934000004	Nut	M4
16	SP309933240412	Bolt	M4x12
17	576034	Nose Assembly	Includes item 1 and 573930 Nut
	576043	Nose Assembly	OEM; Includes item 1 and 573930 Nut
18	SP528310	Emergency Stop Knob	Used with SP520032 Emergency Stop Wiring

## Control Panel OPL - FX and PY Models

Models with V in 7th position and with N, U or 8 in 10th position of the model number Starting Serial No. 135FX020021WB

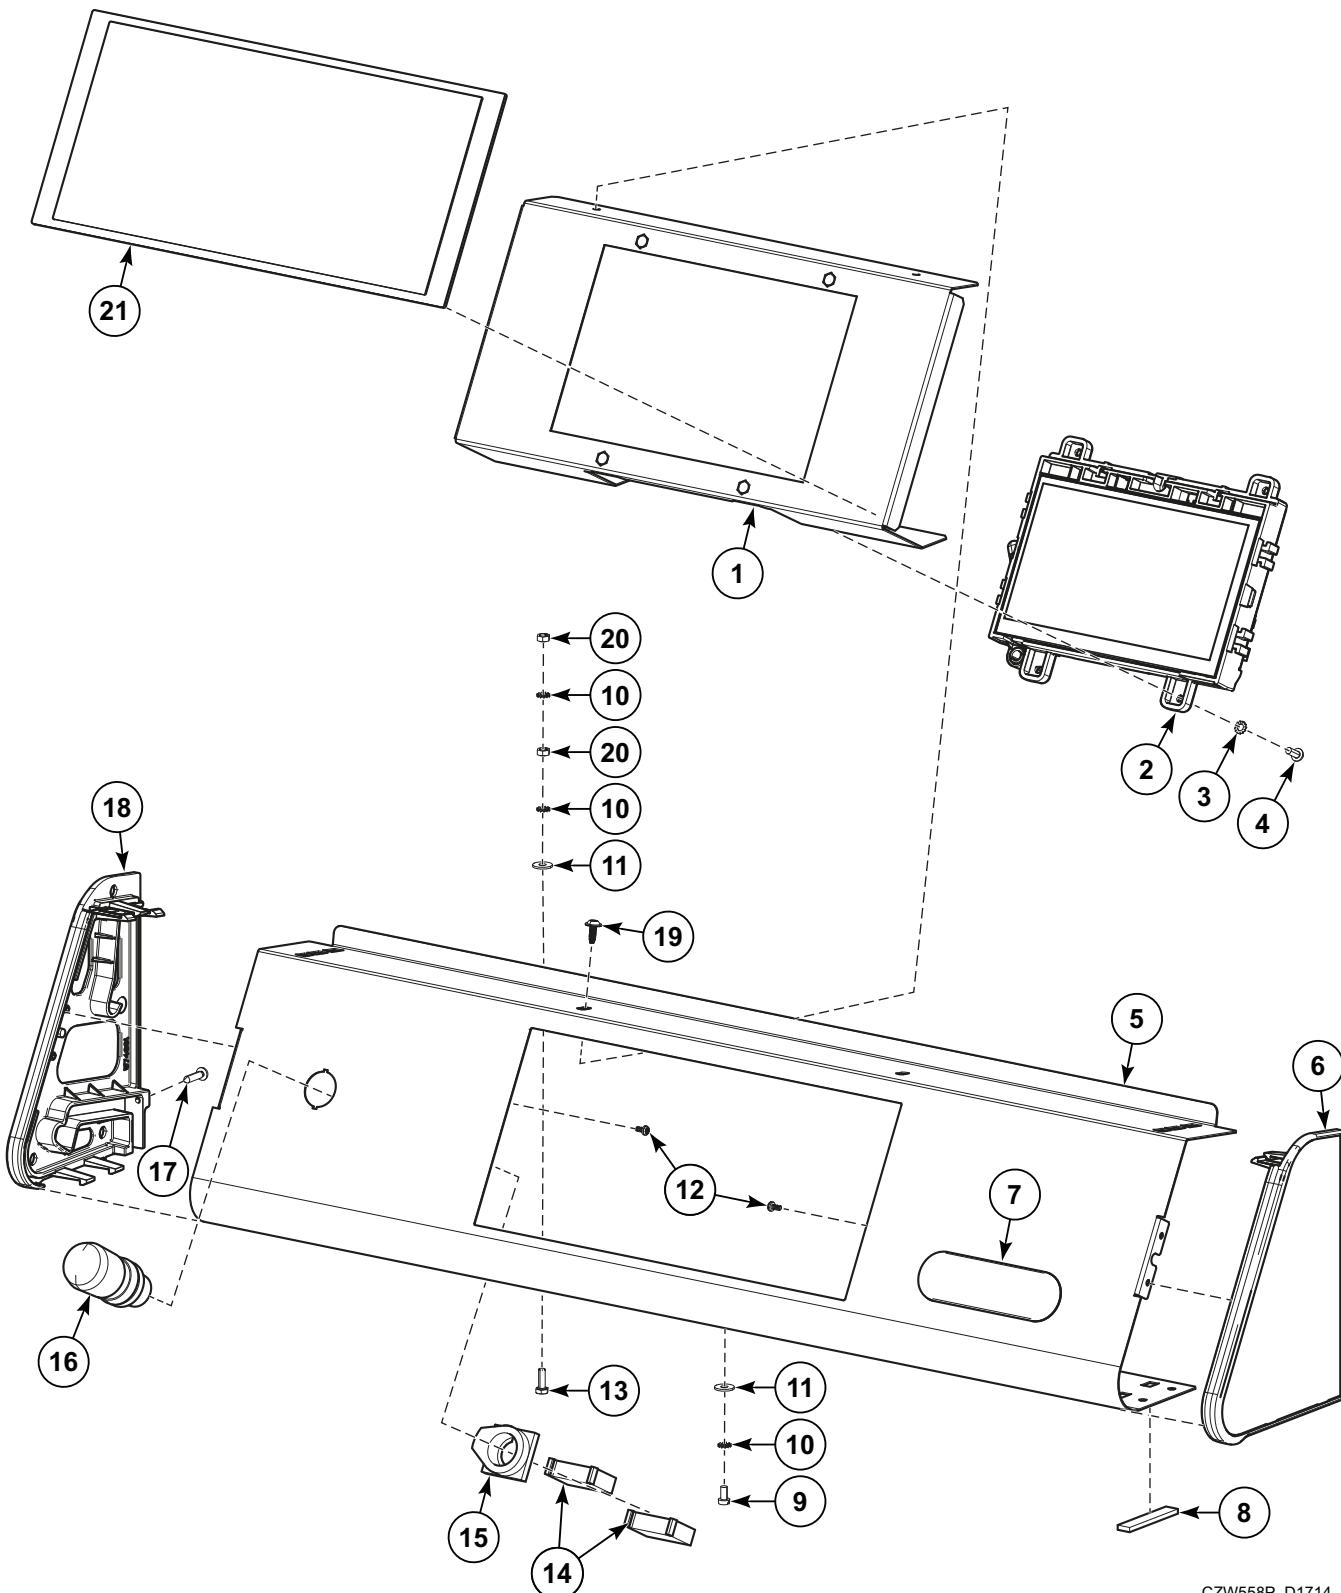


CZW558P\_D1714

## Control Panel OPL - FX and PY Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	582260	Holder	
2	582285	Control	7", MC10
3	SP311679800004	Washer	M4
4	582307	Bolt	M4x10
5	579187	Nose Assembly	
6	576070	Sidewall	Right
7	567887	Logo	
8	SP284000012003	Tape	0.5m; 2pcs
9	SP309084000408	Bolt	M4x8
10	SP311679800004	Washer	M4
11	SP311902100004	Washer	M4
12	582361	Screw	3x6
13	SP309933240412	Bolt	M4x12
14	SP528312	Switching Unit	
15	SP528311	Emergency Stop Connector	
16	SP528310	Emergency Stop Knob	Used with SP520032 Emergency Stop Wiring
17	SP520407	Screw	
19	SP529206	Screw	4x11
18	576069	Sidewall	Left
20	SP310934000004	Nut	M4
21	582274	Plastic Window	

## Control Panel Vended - FX and PY Models

Models with V in 7th position and with H or 6 in 10th position of the model number Through Serial No. 135FX016170SF

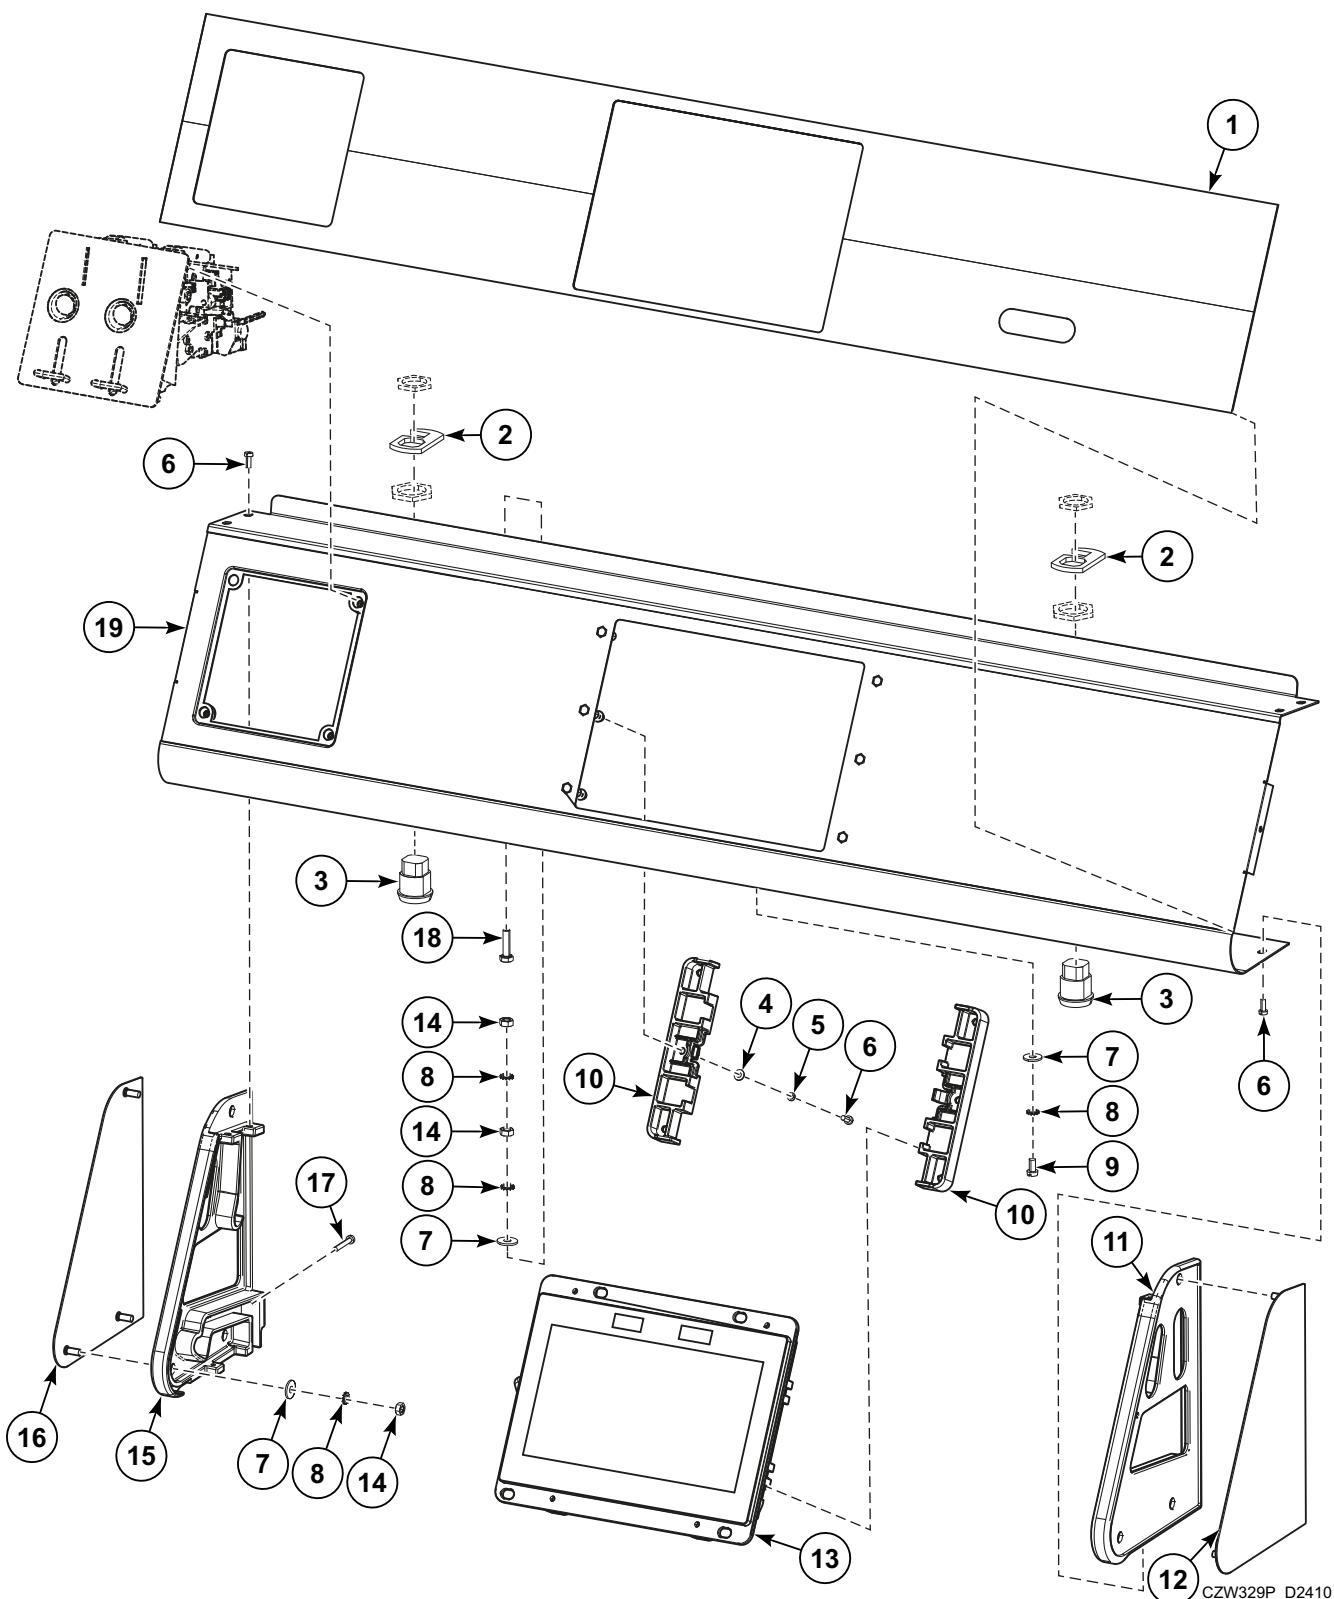


## Control Panel Vended - FX and PY Models

REF	PART NO.	DESCRIPTION	COMMENTS
	SP520033	Emergency Stop Interconnection	
1	573936	Overlay	
	574220	Overlay	OEM
2	SPPRI610002007	Hook Lock	
3	SP547527	Lock	Includes Nuts – 2 pieces
	SP550616	Key	Used with SP547527 Lock
4	SP311125000003	Washer	M3
5	SP311127000003	Washer	3
6	SP309084000308	Bolt	M3x8
7	SP311902100004	Washer	M4
8	SP311679800004	Washer	M4
9	SP309084000408	Bolt	M4x8
10	573929	Sidewall	
11	573929	Sidewall	Right
12	572586	Sidewall	Right
13	575632	Control	7", MC10
14	SP310934000004	Nut	M4
15	572571	Sidewall	Left
16	572588	Sidewall	Left
17	SP309084000320	Bolt	M3x20
18	SP309933000416	Bolt	M4x16
19	574126	Nose Assembly	Includes item 1 and 573930 Nut
	574238	Nose Assembly	OEM; Includes item 1 and 573930 Nut

## Control Panel Vended - FX and PY Models

Models with V in 7th position and with H or 6 in 10th position of the model number Starting Serial No. 135FX016171SF

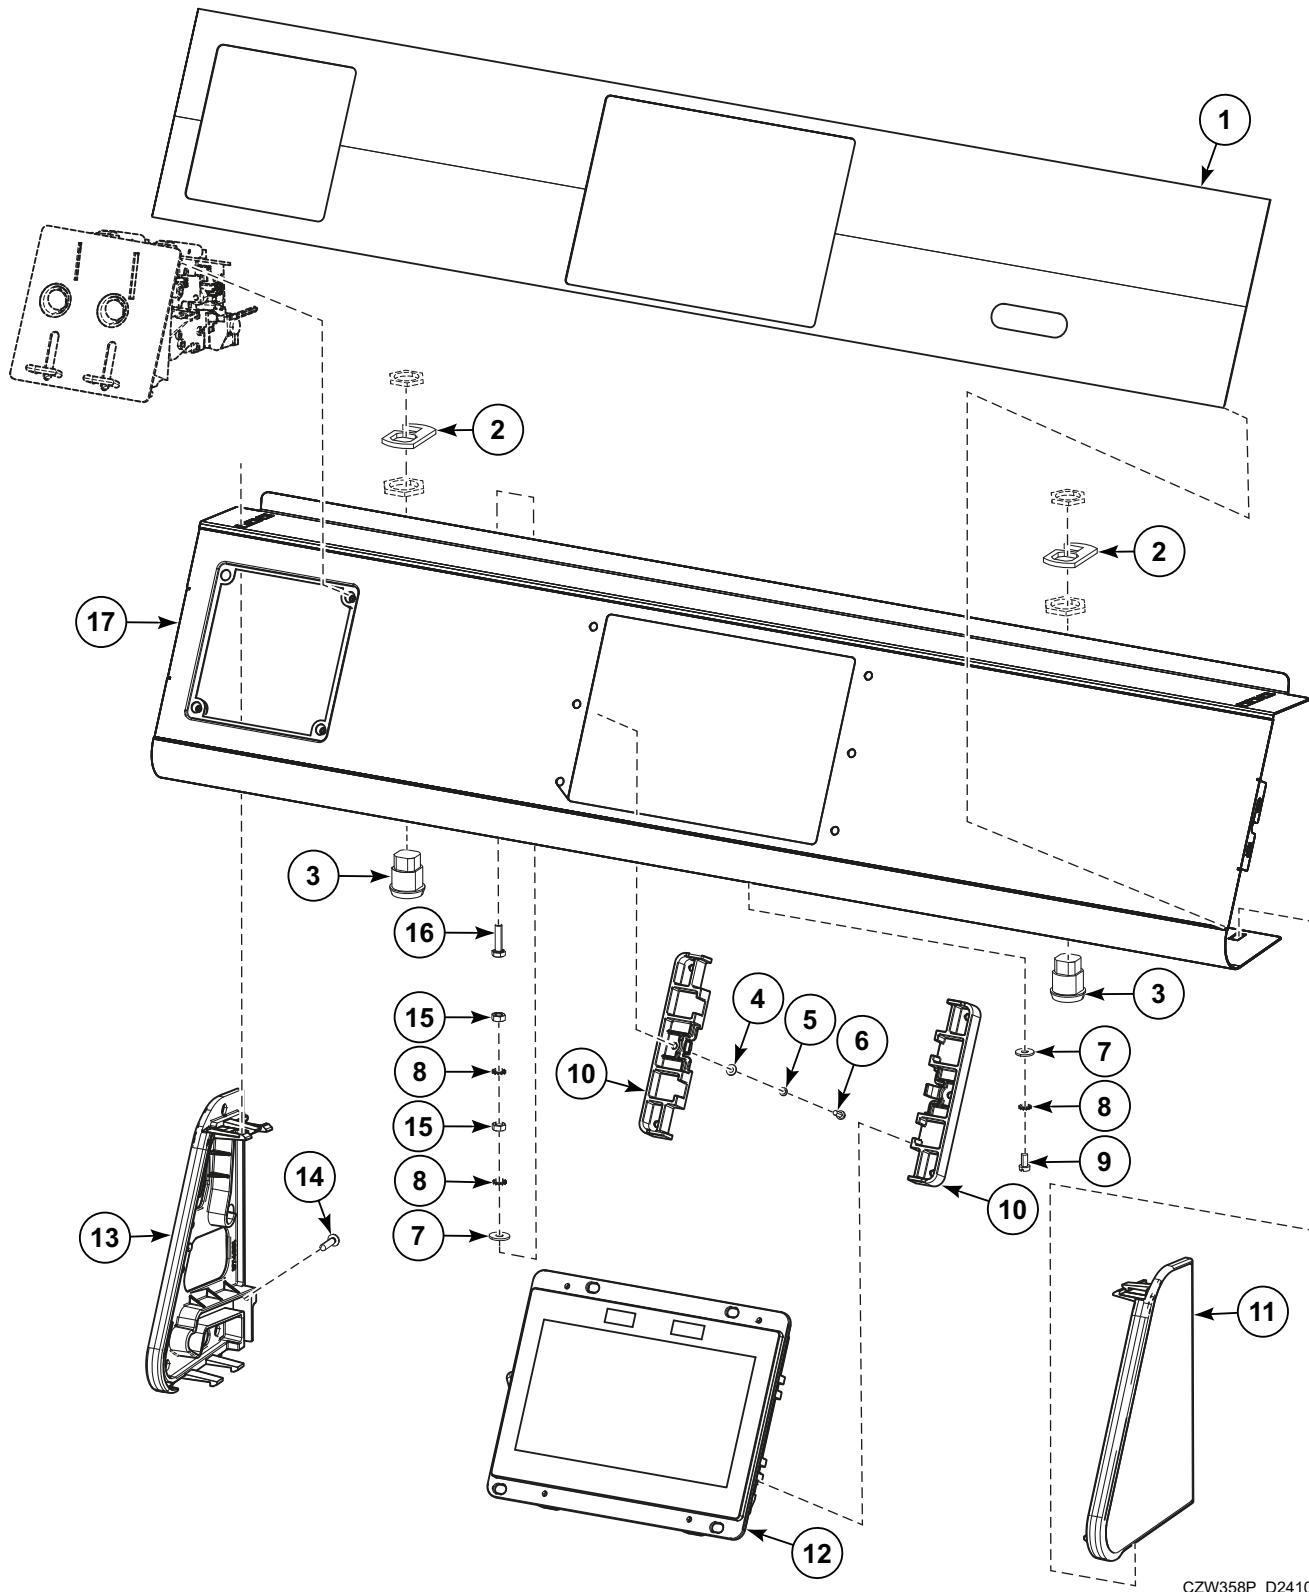


## Control Panel Vended - FX and PY Models

REF	PART NO.	DESCRIPTION	COMMENTS
	SP520033	Emergency Stop Interconnection	
1	573935	Overlay	
	574219	Overlay	OEM
2	SPPRI610002007	Hook Lock	
3	SP547527	Lock	Includes Nuts – 2 pieces
	SP550616	Key	Used with SP547527 Lock
4	SP311125000003	Washer	M3
5	SP311127000003	Washer	3
6	SP309084000308	Bolt	M3x8
7	SP311902100004	Washer	M4
8	SP311679800004	Washer	M4
9	SP309084000408	Bolt	M4x8
10	573929	Sidewall	
11	576070	Sidewall	Right
12	575632	Control	7", MC10
13	576069	Sidewall	Left
14	SP520407	Screw	
15	SP310934000004	Nut	M4
16	SP309933240412	Bolt	M4x12
17	576037	Nose Assembly	Includes item 1 and 573930 Nut
	576046	Nose Assembly	OEM; Includes item 1 and 573930 Nut

## Control Panel Vended - FX and PY Models

Models with V in 7th position and with N, U or 8 in 10th position of the model number Starting Serial No. 135FX020021WB

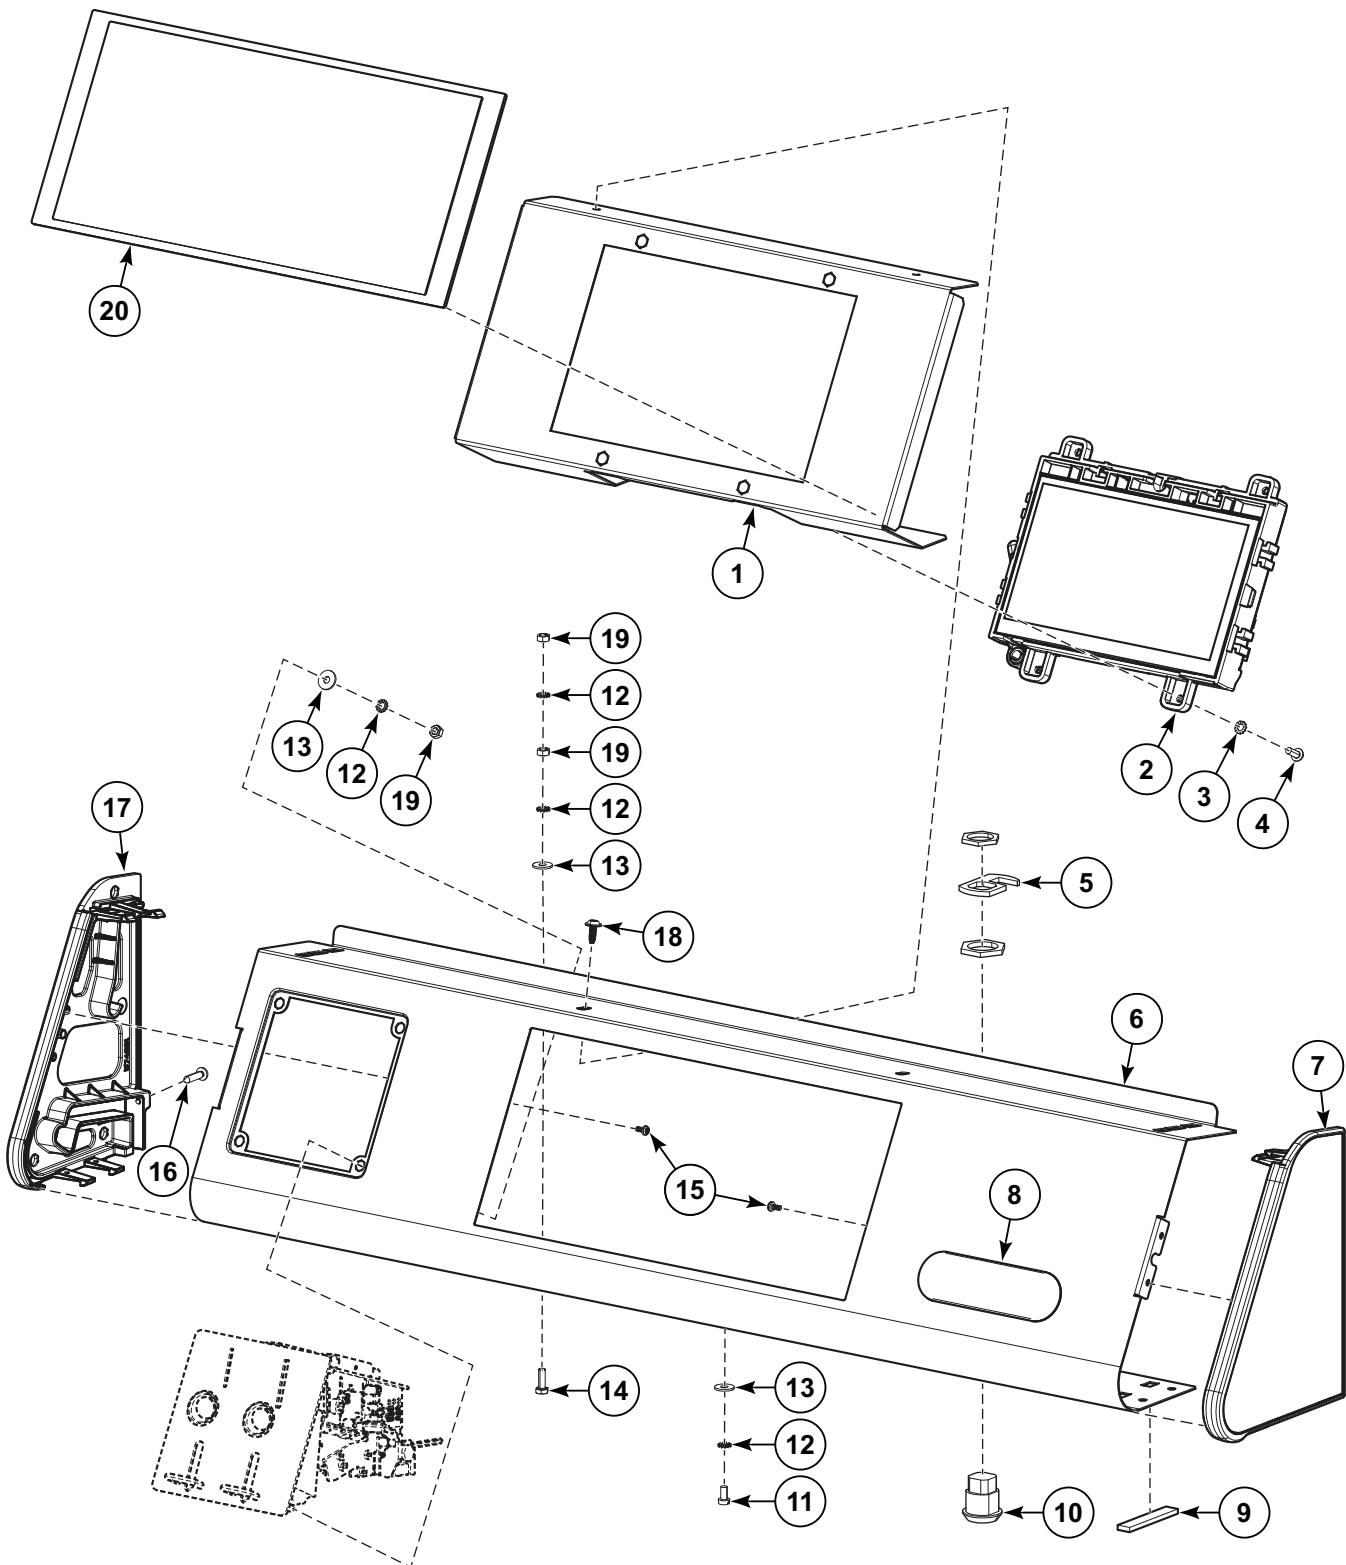


CZW560P\_D1714

## Control Panel Vended - FX and PY Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	582260	Holder	
2	582285	Control	7", MC10
3	SP311679800004	Washer	M4
4	582307	Bolt	M4x10
5	SPPRI610002007	Hook Lock	Small
6	581632	Nose Assembly	
7	576070	Sidewall	Right
8	567887	Logo	
9	SP284000012003	Tape	0.5m; 2pcs
10	SP547527	Lock	2pcs
	SP550616	Key	Used with SP547527 Lock
11	SP309084000408	Bolt	M4x8
12	SP311679800004	Washer	M4
13	SP311902100004	Washer	M4
14	SP309933240412	Bolt	M4x12
15	582361	Screw	3x6
16	SP520407	Screw	
17	576069	Sidewall	Left
18	SP529206	Screw	4x11
19	SP310934000004	Nut	M4
20	582274	Plastic Window	

# Control Panel for Central Payment System - FX and PY models

Models with V in 7th position and with H or 6 in 10th position of the model number Through Serial No. 135FX016170SF

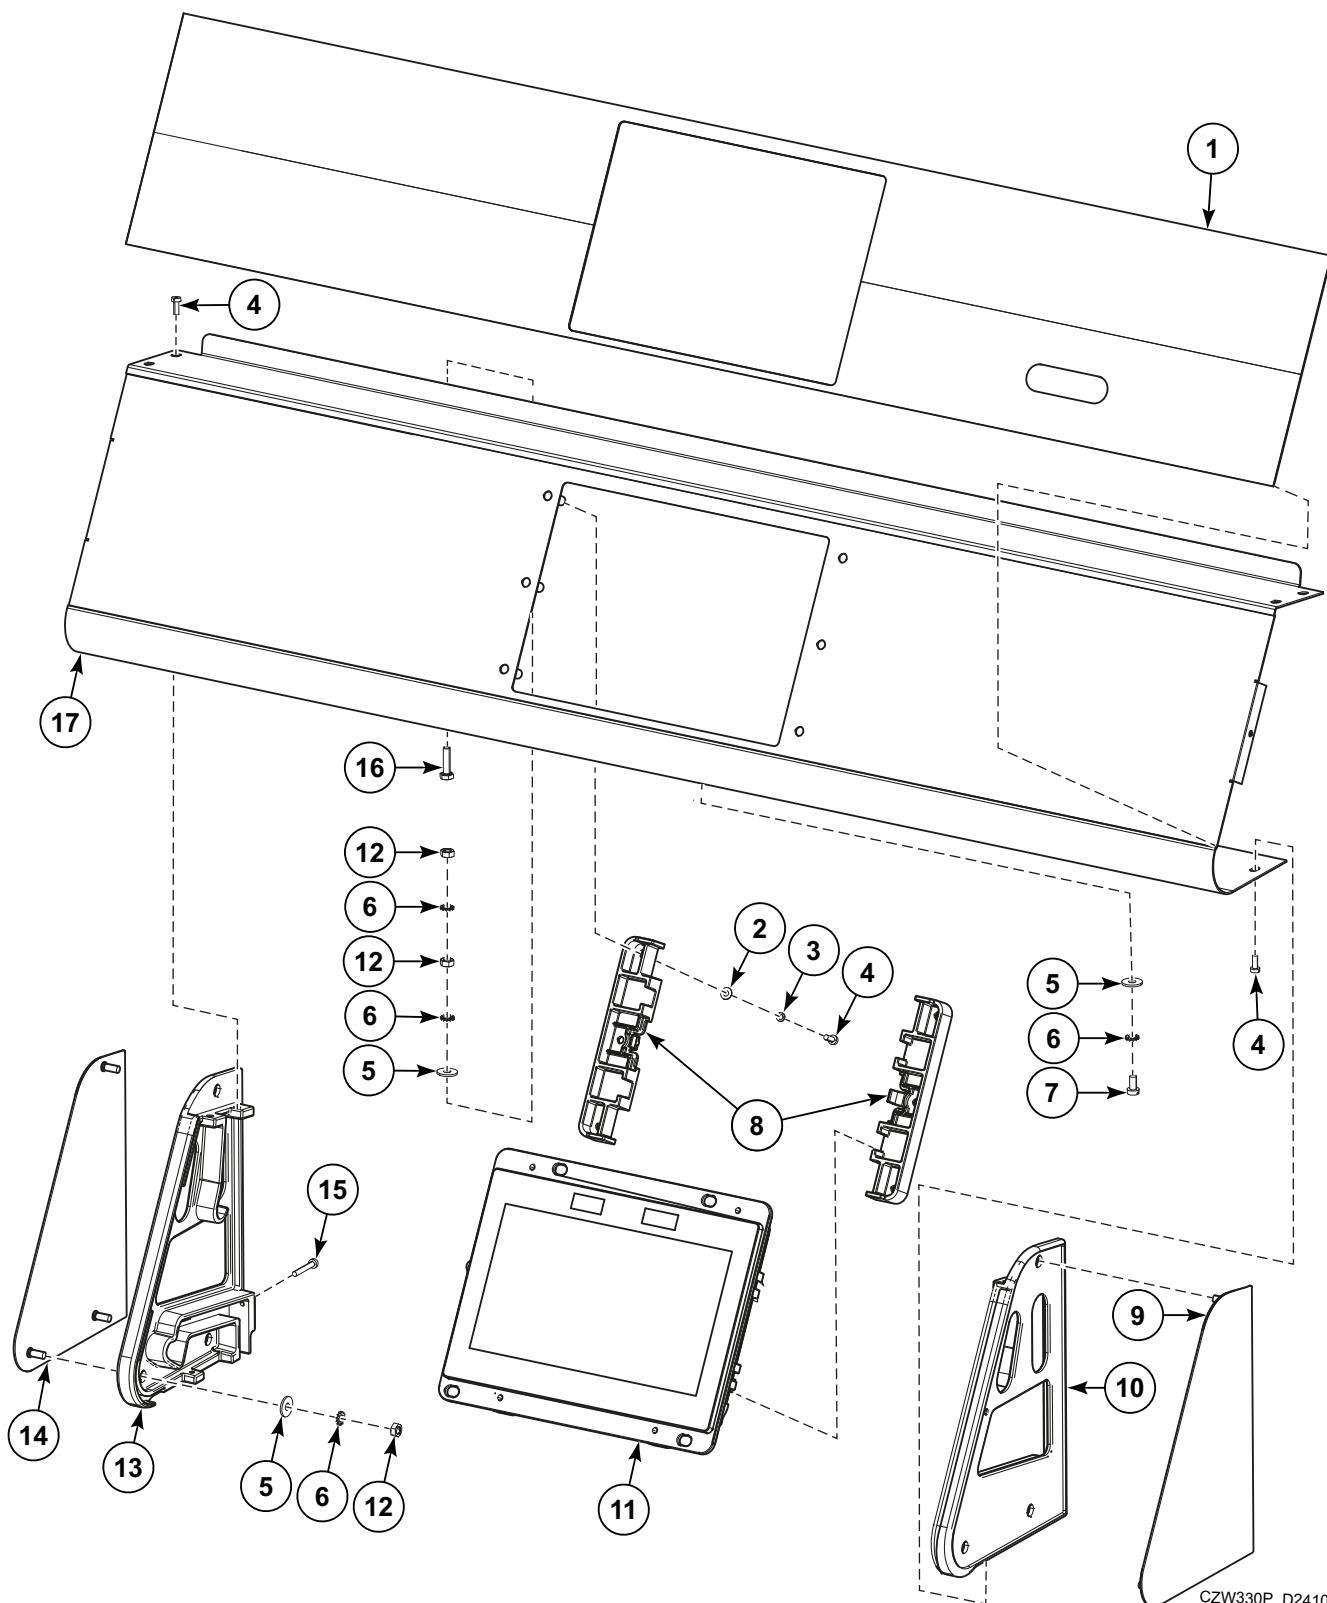


CZW330P\_D2410

# Control Panel for Central Payment System - FX and PY models

REF	PART NO.	DESCRIPTION	COMMENTS
	571485	Emergency Stop Interconnection	
1	573951	Overlay	
	574223	Overlay	OEM
2	SP311125000003	Washer	M3
3	SP311127000003	Washer	3
4	SP309084000308	Bolt	M3x8
5	SP311902100004	Washer	M4
6	SP311679800004	Washer	M4
7	SP309084000408	Bolt	M4x8
8	573929	Sidewall	
9	572586	Sidewall	Right
10	572572	Sidewall	Right
11	575632	Control	7", MC10
12	SP310934000004	Nut	M4
13	572571	Sidewall	Left
14	572588	Sidewall	Left
15	SP309084000320	Bolt	M3x20
16	SP309933000416	Bolt	M4x16
17	573954	Nose Assembly	Includes item 1 and 573930 Nut
	574241	Nose Assembly	OEM; Includes item 1 and 573930 Nut

# Control Panel for Central Payment System - FX and PY Models

Models with V in 7th position and with H or 6 in 10th position of the model number Starting Serial No. 135FX016171SF

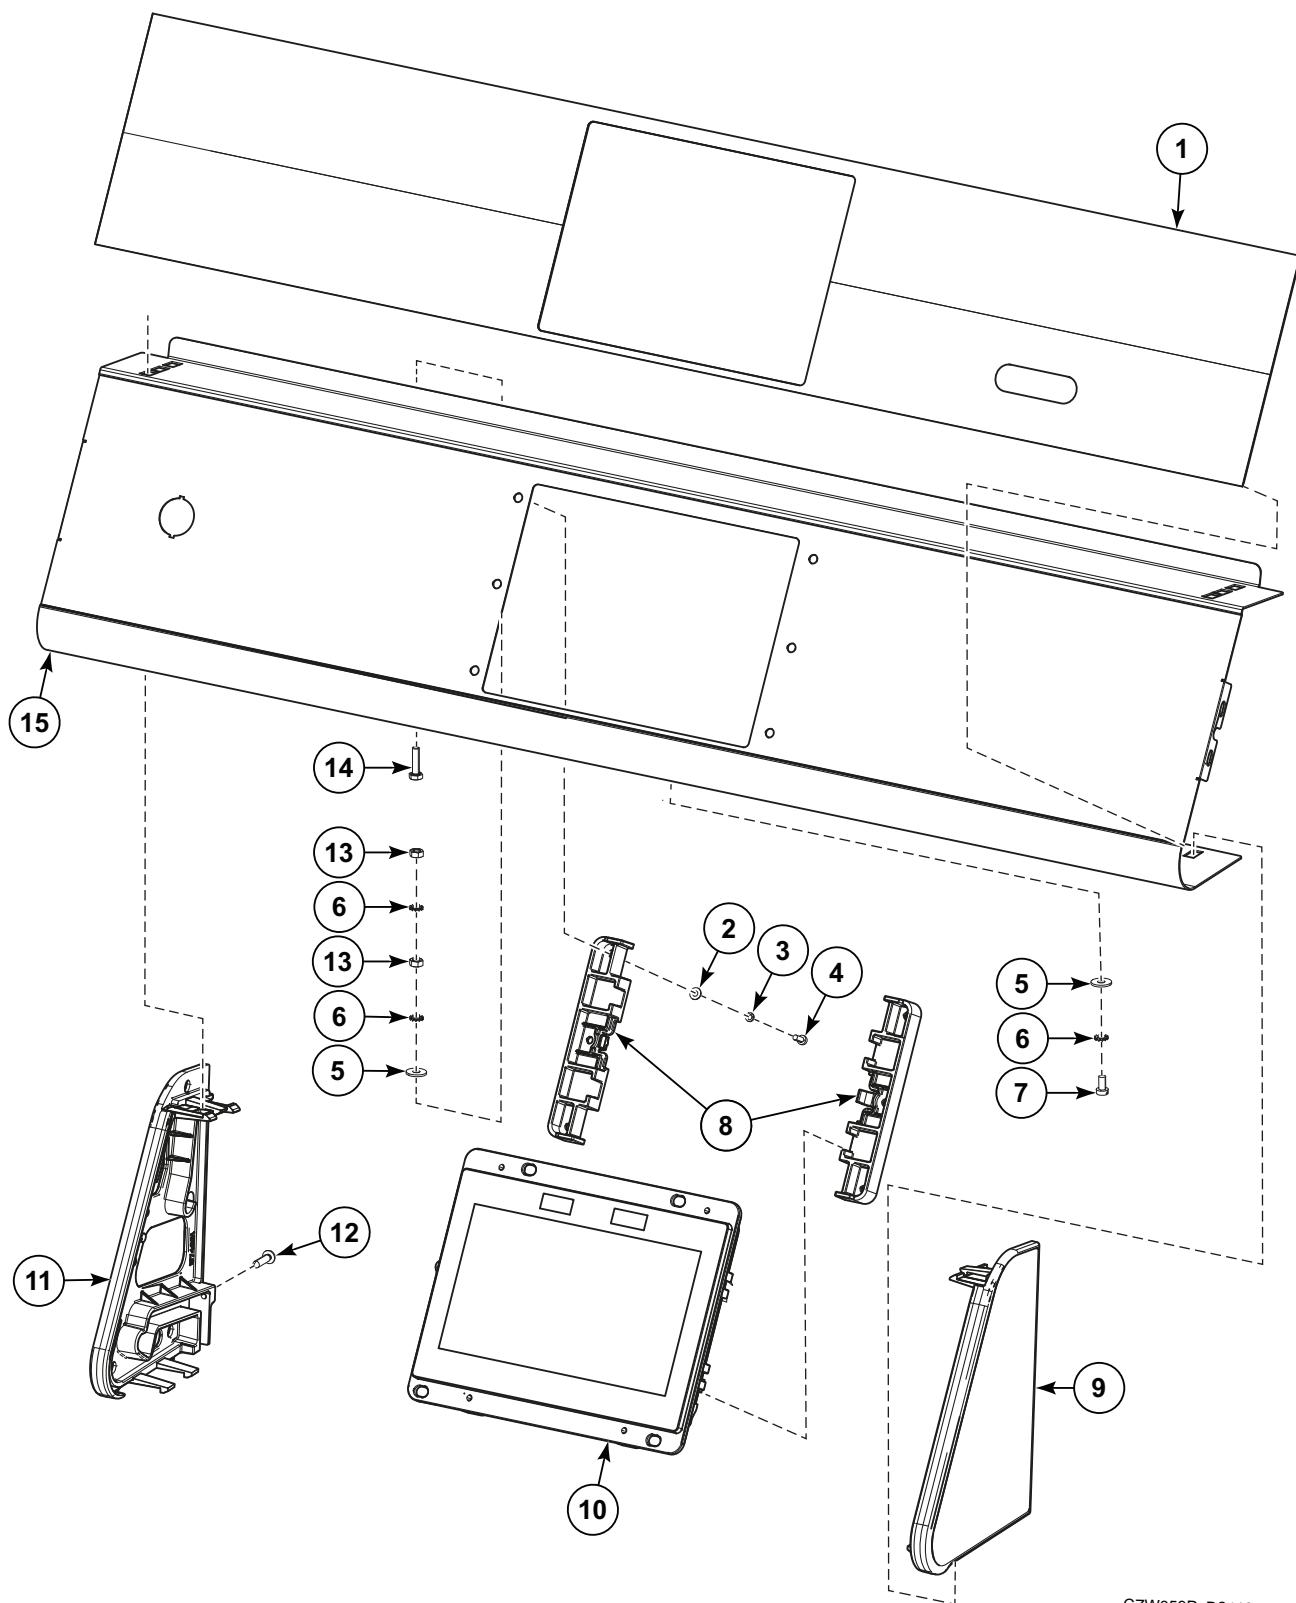


CZW359P\_D2410

# Control Panel for Central Payment System - FX and PY Models

REF	PART NO.	DESCRIPTION	COMMENTS
	571485	Emergency Stop Interconnection	
1	573950	Overlay	
	574222	Overlay	OEM
2	SP311125000003	Washer	M3
3	SP311127000003	Washer	3
4	SP309084000308	Bolt	M3x8
5	SP311902100004	Washer	M4
6	SP311679800004	Washer	M4
7	SP309084000408	Bolt	M4x8
8	573929	Sidewall	
9	576070	Sidewall	Right
10	575632	Control	
11	576069	Sidewall	Left
12	SP520407	Screw	
13	SP310934000004	Nut	M4
14	SP309933240412	Bolt	M4x12
15	576040	Nose Assembly	Includes item 1 and 573930 Nut
	576049	Nose Assembly	OEM; Includes item 1 and 573930 Nut

# Control Panel for Central Payment System - FX and PY Models

Models with V in 7th position and with N, U or 8 in 10th position of the model number Starting Serial No. 135FX020021WB

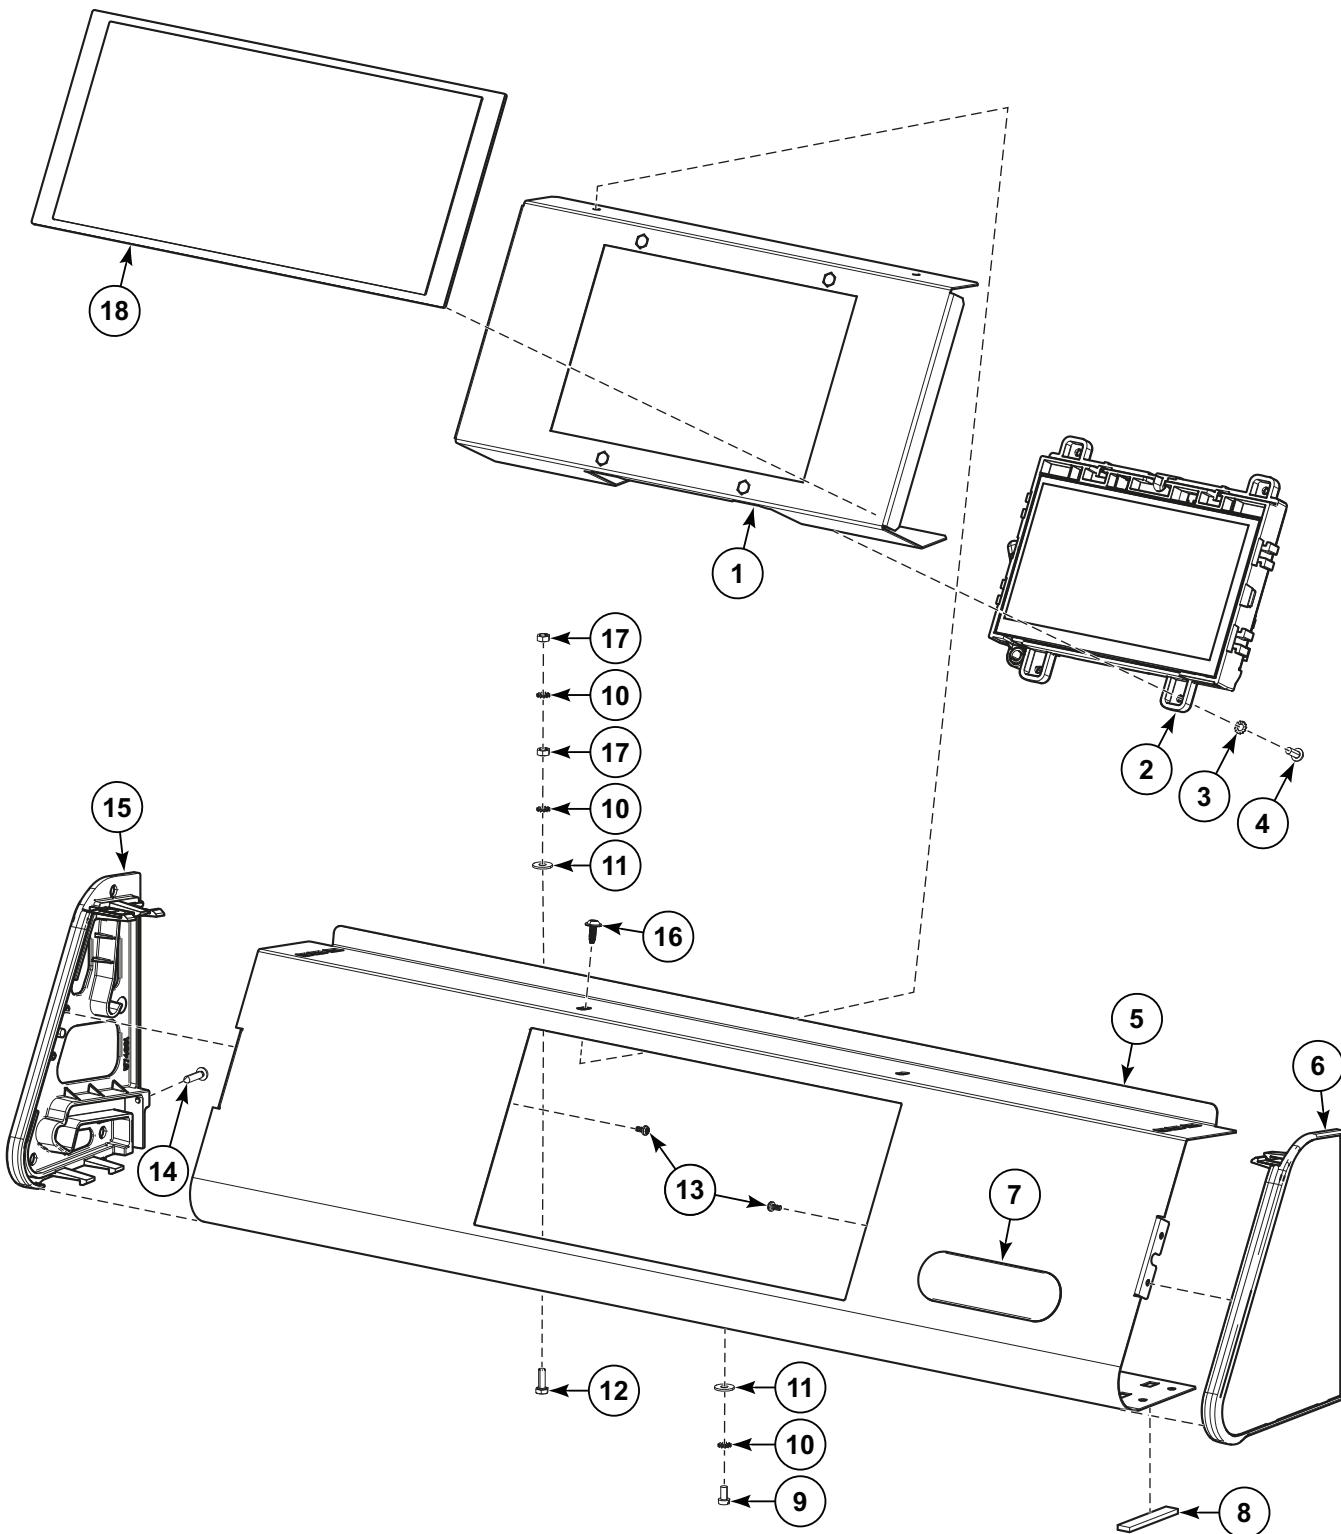


CZW559P\_D1714

# Control Panel for Central Payment System - FX and PY Models

REF	PART NO.	DESCRIPTION	COMMENTS
1	582260	Holder	
2	582285	Control	7", MC10
3	SP311679800004	Washer	M4
4	582307	Bolt	M4x10
5	581638	Nose Assembly	
6	576070	Sidewall	Right
7	567887	Logo	
8	SP284000012003	Tape	0.5m; 2pcs
9	SP309084000408	Bolt	M4x8
10	SP311679800004	Washer	M4
11	SP311902100004	Washer	M4
12	SP309933240412	Bolt	M4x12
13	582361	Screw	3x6
14	SP520407	Screw	
15	576069	Sidewall	Left
16	SP529206	Screw	4x11
17	SP310934000004	Nut	M4
18	582274	Plastic Window	

## Coin Meter Box

All Models except AF, IY and NY Models with V in 7th position of the model number or with G, H, J or K in 13th position of the model number

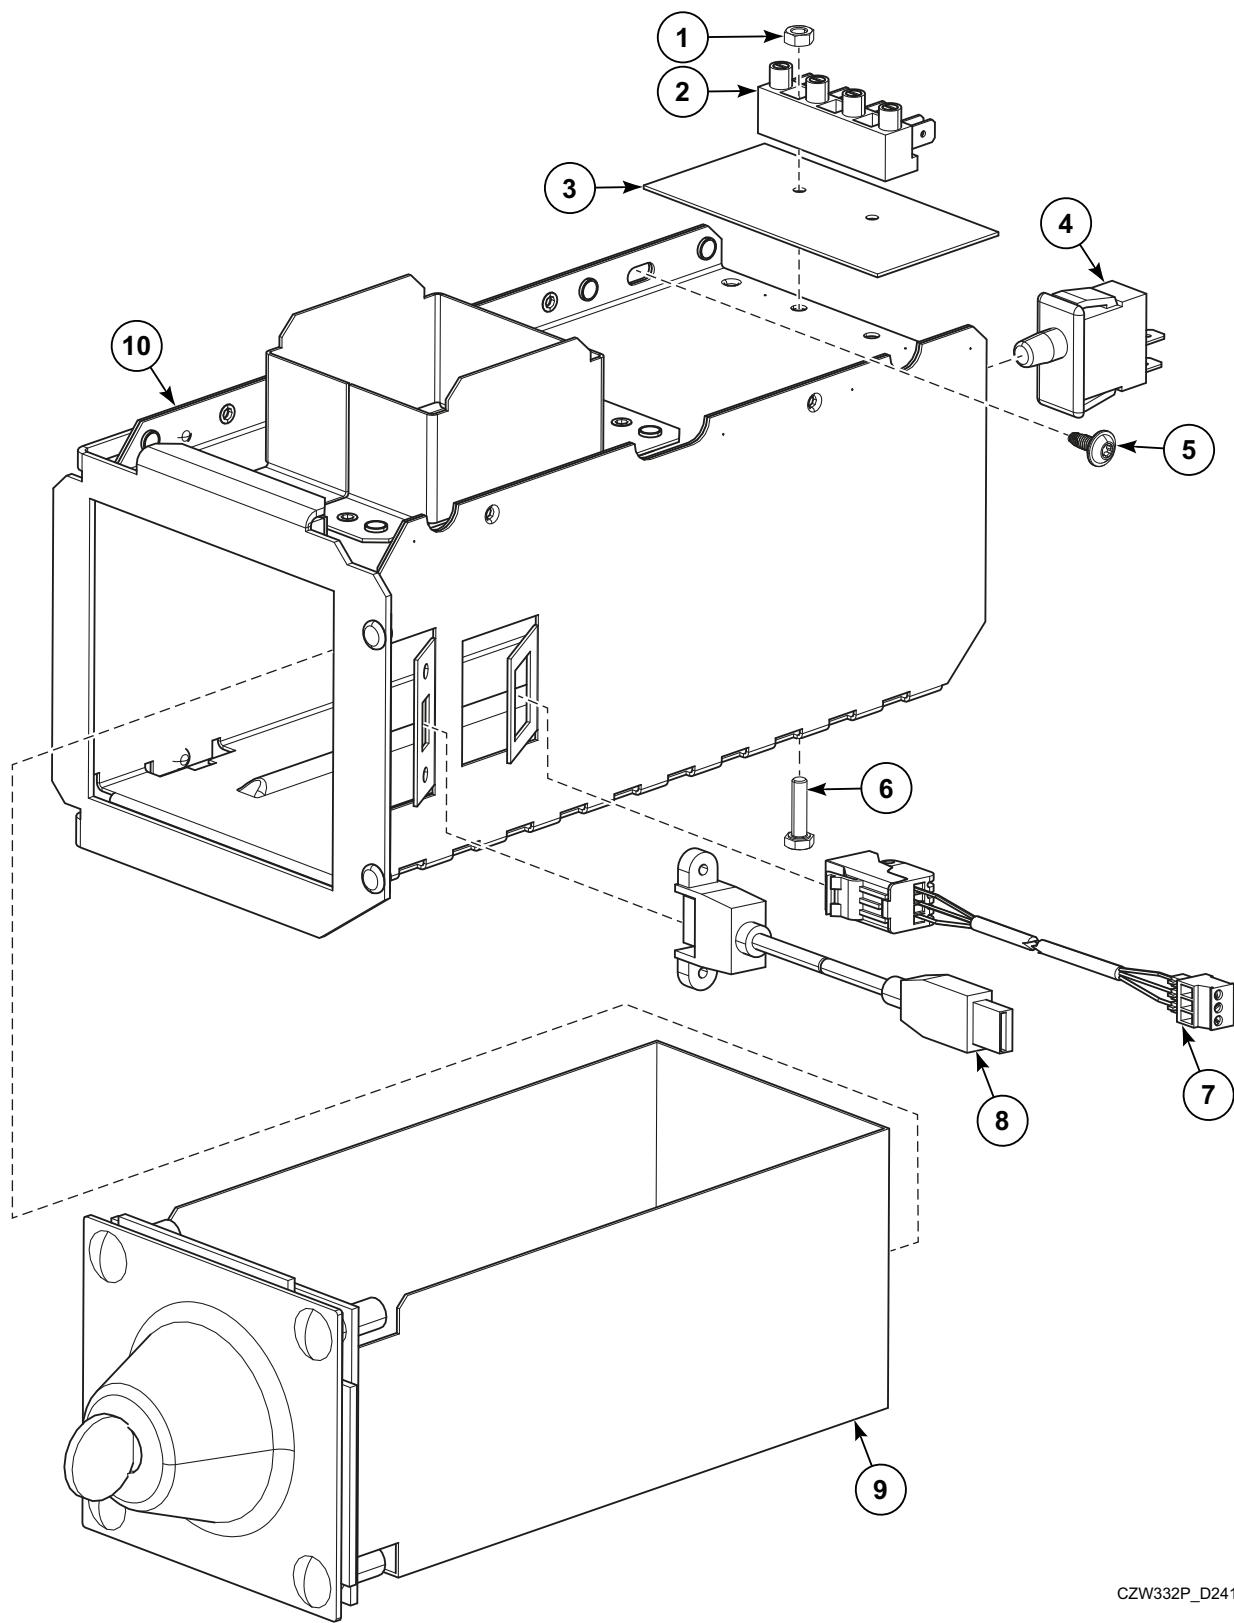

CZW332P\_D2410


## Coin Meter Box

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP310934000004	Nut	M4
2	SPPRI350000007	Terminal Board	
3	SPPRI350012007	Isolation Paper	
4	N/A	Microswitch	
5	SP529206	Screw	4x11
6	SP309933000416	Bolt	M4x16
7	SP545234	Cable	With connectors; RS485
8	569668	USB Cable	
9	SP102532	Coin Meter Box	
	100498	Coin Meter Box	Large; FX and PY models with H or K in 13th Position
10	571049	Coin Meter Case	
	571055	Coin Meter Case	Large; FX and PY models with H or K in 13th Position

**N/A = Part no longer available**

## Coin Meter Box

AF, IY and NY Models with V in 7th position of the model number or models with G, H, J or K in 13th position of the model number

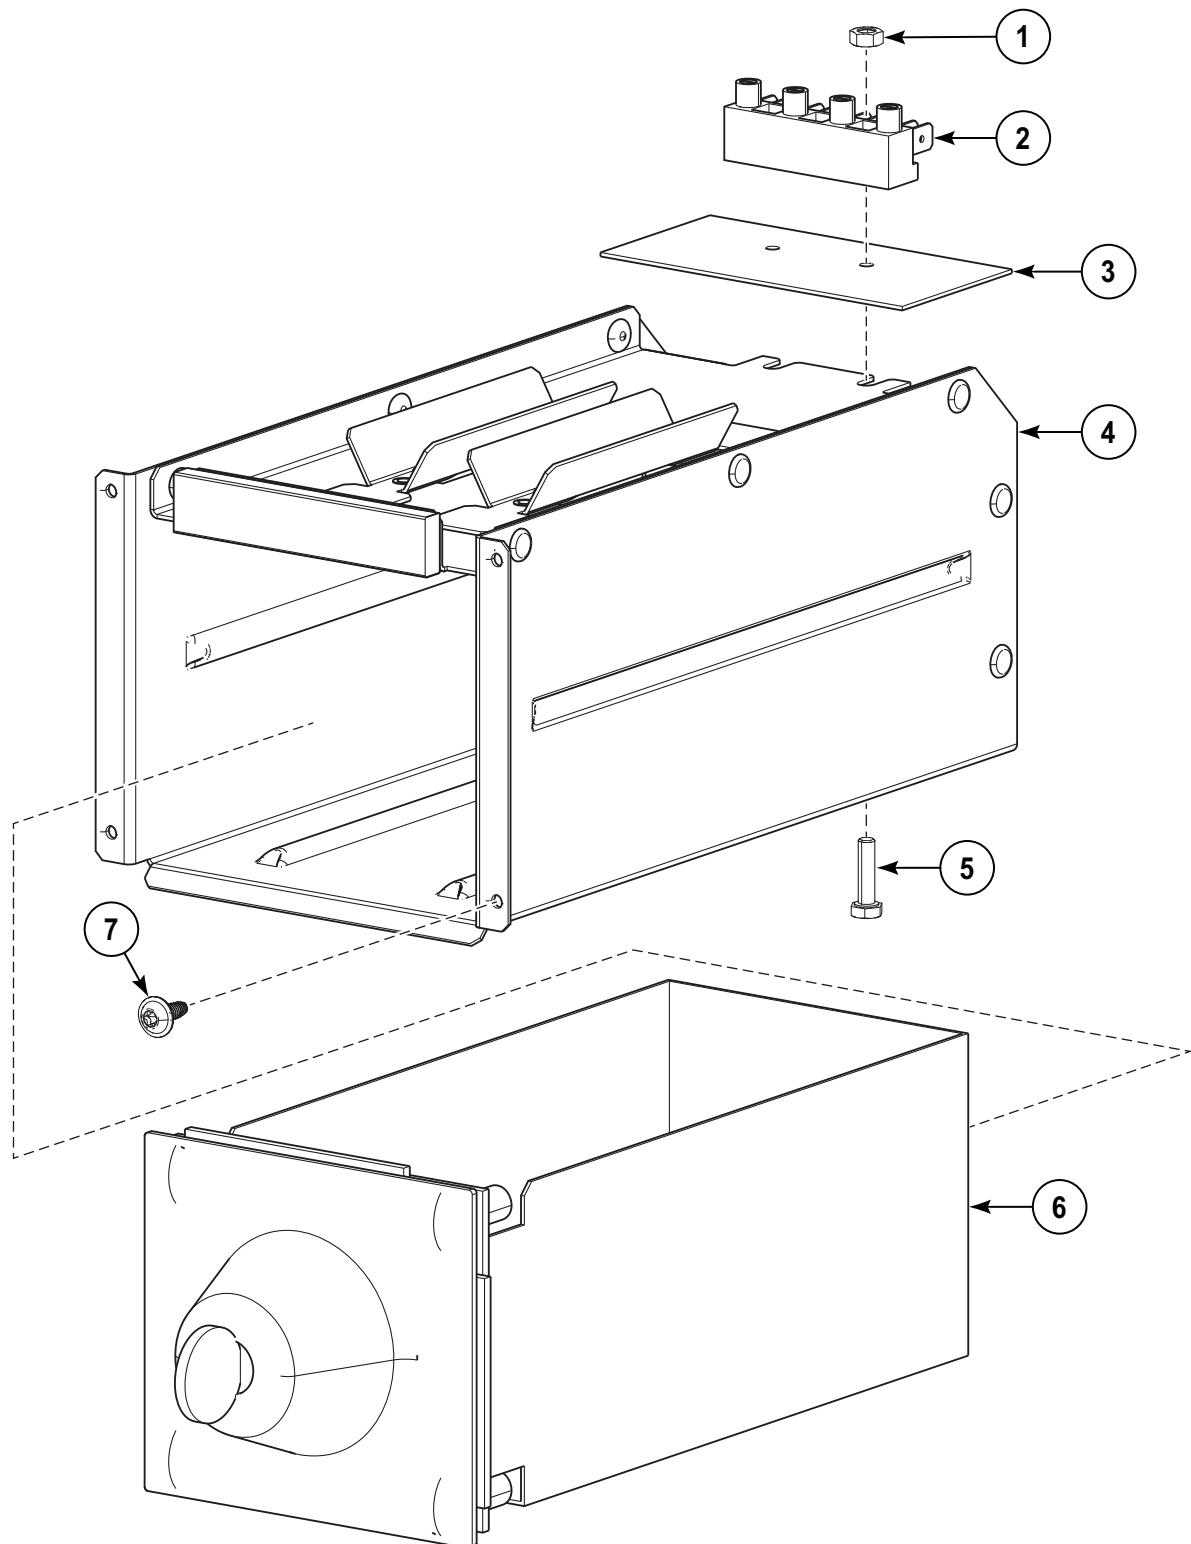


CZW287P\_D2410

## Coin Meter Box

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP310934000004	Nut	M4
2	SPPRI350000007	Terminal Board	
3	SPPRI350012007	Isolation Paper	
4	573009	Coin Meter Case	
5	SP309933000416	Bolt	M4x16
6	568036	Coin Meter Box	
7	SP529206	Screw	4x11

# Coin Meter - AF, IY and NY Models (Drawing 1 of 3)

Models with V in 7th position or models with G, H, J or K in 13th position of the model number

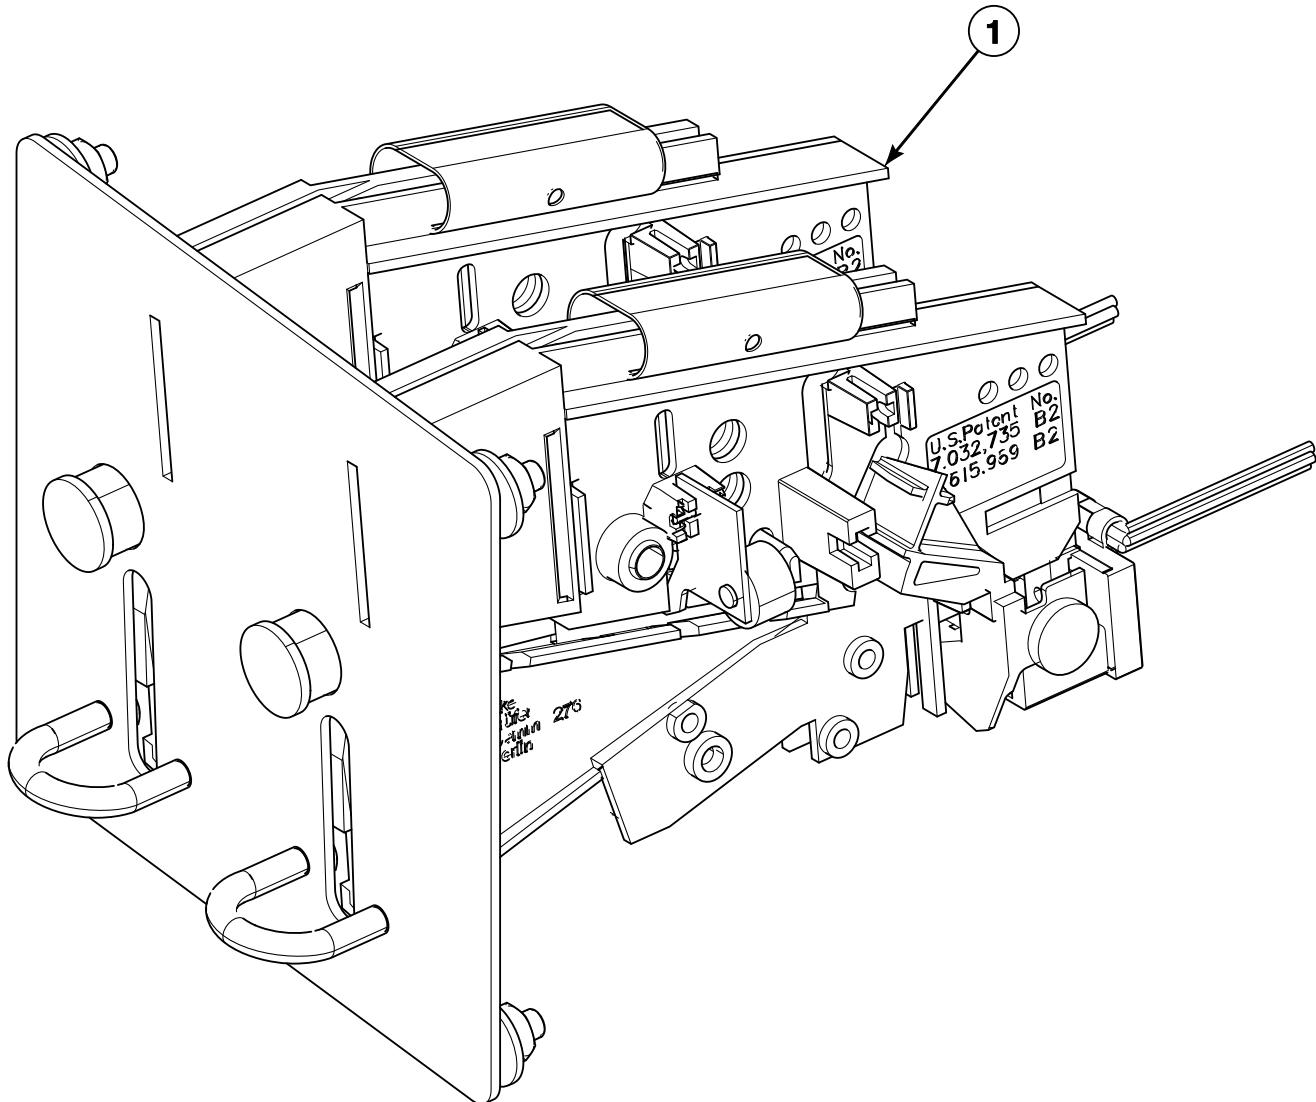


CZW233P\_D2410

# Coin Meter - AF, IY and NY Models (Drawing 1 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP568002	Coin Meter	GBP / EUR; Electronic EMPv7
	SP568003	Coin Meter	5K jeton
	SP568004	Coin Meter	7K jeton
	SP568005	Coin Meter	10K jeton
	SP568006	Coin Meter	12K jeton
	SP568007	Coin Meter	15K jeton
	SP568008	Coin Meter	0.5EUR + 1EUR
	SP568009	Coin Meter	1EUR
	SP568010	Coin Meter	0.5EUR
	SP568011	Coin Meter	1EUR + 2EUR
	SP568012	Coin Meter	2EUR
	SP568013	Coin Meter	0.2EUR + 0.5EUR
	SP568014	Coin Meter	0.2EUR
	SP568015	Coin Meter	1EUR + 0.2EUR
	SP568016	Coin Meter	2EUR + 0.5EUR
	SP568017	Coin Meter	0.25EUR
	575201	Coin Meter	5K PRIMUS jeton
	575202	Coin Meter	10K PRIMUS jeton
	575203	Coin Meter	STD 118-1 jeton
	575204	Coin Meter	7K PRIMUS jeton
	575205	Coin Meter	12K PRIMUS jeton
	575206	Coin Meter	15K PRIMUS jeton
	575207	Coin Meter	1AUD + 0.2AUD
	575208	Coin Meter	1POND + 20PC
	575209	Coin Meter	1POND + 50PC
	575210	Coin Meter	100YEN
	575211	Coin Meter	100YEN + 500YEN
	575212	Coin Meter	1AUD + 2AUD
	575213	Coin Meter	1AUD
	575214	Coin Meter	20 penny
	575215	Coin Meter	50 New Malaysian cent
	575216	Coin Meter	1 New Singapore dollar
	575217	Coin Meter	2x50 Malaysian cent
	575218	Coin Meter	1 Singapore dollar
	575219	Coin Meter	1NZD and 2NZD
	575220	Coin Meter	Easy games jeton
	575221	Coin Meter	Flat polis jeton
	575222	Coin Meter	Butzi wash jeton
	575223	Coin Meter	Speedy matic jeton
	575224	Coin Meter	Laundromatic Belgium jeton; Diameter 22.3mm
	575225	Coin Meter	500WON
	575226	Coin Meter	Dobi ekspress jeton
	575227	Coin Meter	Lucky winner jeton
	575228	Coin Meter	Gettone jeton
	575229	Coin Meter	10 Taiwan dollar
	575230	Coin Meter	Electrolux Asard jeton

## Coin Meter - AF, IY and NY Models (Drawing 2 of 3)

Models with V in 7th position or models with G, H, J or K in 13th position of the model number

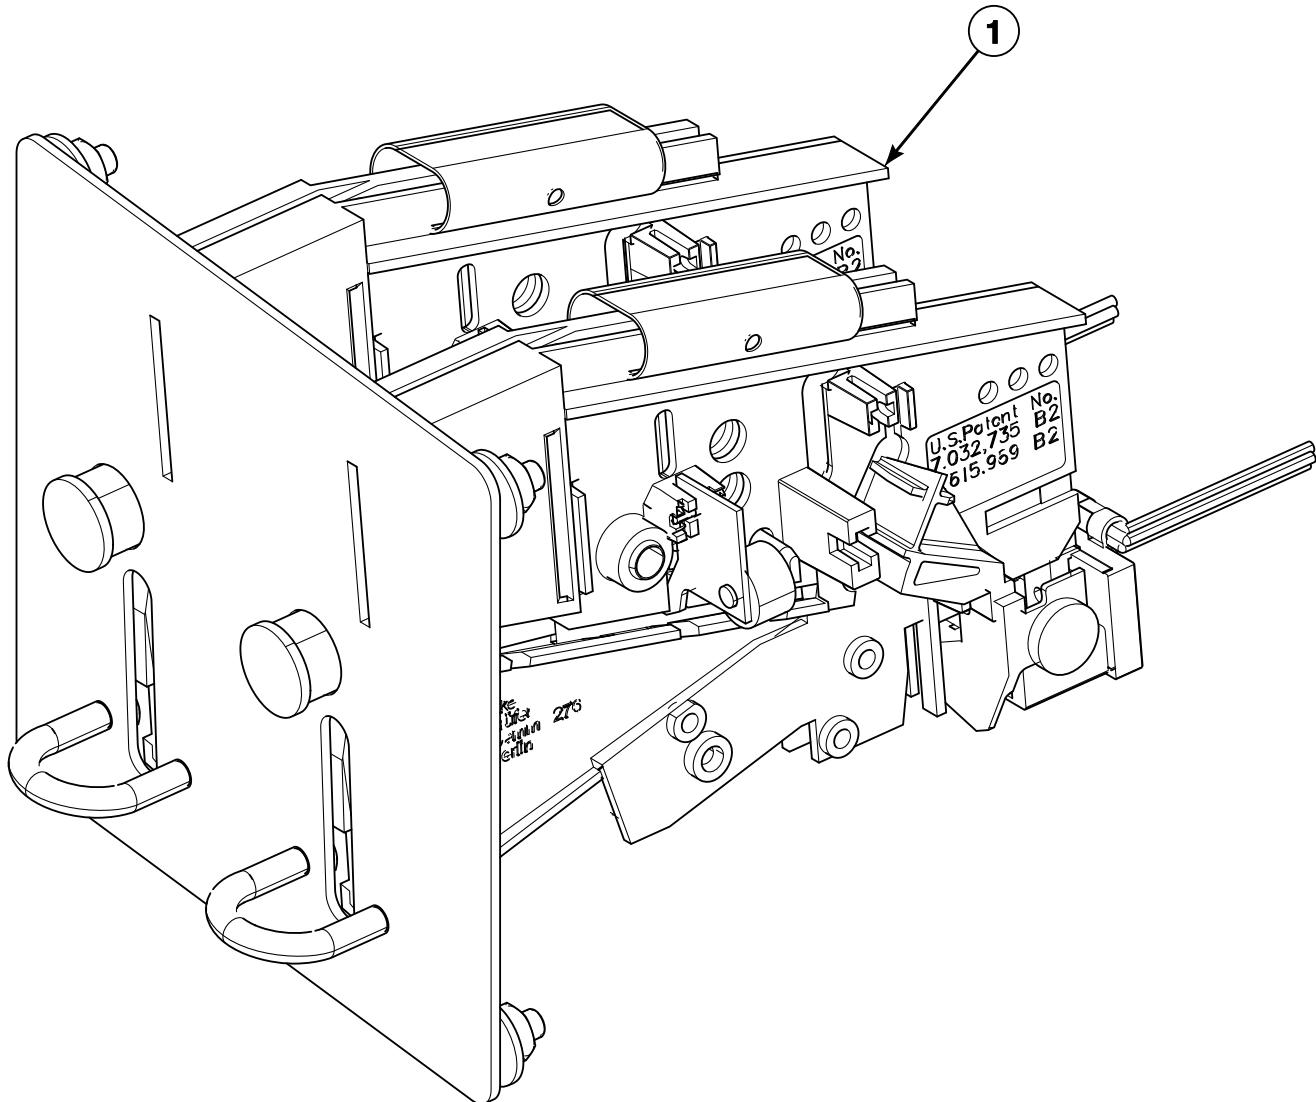


CZW233P\_D2410

## Coin Meter - AF, IY and NY Models (Drawing 2 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
1	575231	Coin Meter	Gettone jeton
	575232	Coin Meter	5+1 Shekel
	575233	Coin Meter	1HKD
	575234	Coin Meter	Jeton Prinz Firbitex
	575235	Coin Meter	Token Ldl Chamberland Washing Machine
	575236	Coin Meter	Token 118-5
	575237	Coin Meter	Token Barisart (Ldl)
	575238	Coin Meter	Token Rotondi
	575239	Coin Meter	Brass jeton
	575240	Coin Meter	0.5CHF + 2CHF
	575241	Coin Meter	Jeton HAUCK 2018
	575242	Coin Meter	Jeton 08 MS, diameter 24.9mm
	575243	Coin Meter	Jeton D
	575244	Coin Meter	10+50 TWD
	575245	Coin Meter	100+500 ISK
	575246	Coin Meter	Token 118-16
	575247	Coin Meter	Token WH121
	575248	Coin Meter	Token Nr. 1699360
	575278	Coin Meter	0.25USD + 1USD
	575279	Coin Meter	0.25CAD + 1CAD
	575249	Coin Meter	0.25USD + 1USD; 0.25CAD + 1CAD + 2CAD; TK1 + TK2; Electronic EMPv7
	568002	Coin Meter	0.2GBP + 0.5GBP + 1GBP + 2GBP; 0.1EUR + 0.2EUR + 0.5EUR + 1EUR + 2EUR; TK1 + TK2; Electronic EMPv7
	575250	Coin Meter	1DKK + 2DKK + 5DKK + 10DKK + 20DKK; 1NOK + 5NOK + 10NOK + 20NOK; 0.2EUR + 0.5EUR + 1EUR + 2EUR; TK1 + TK2; Electronic EMPv7
	575251	Coin Meter	0.2AUD + 1AUD + 2AUD; 0.2NZD + 1NZD + 2NZD; 5HKD + 10HKD; 500KRW; TK1 + TK2; Electronic EMPv7
	575252	Coin Meter	1CNY; 0.1MYR + 0.2MYR + 0.5MYR; TK1 + TK2; Electronic EMPv7
	575253	Coin Meter	0.1EUR + 0.2EUR + 0.5EUR + 1EUR + 2EUR; TK1 + TK2; Electronic EMPv7
	575254	Coin Meter	1PHP + 5PHP + 10PHP; TK1 + TK2; Electronic EMPv7
	575255	Coin Meter	0.1SGD + 0.2SGD + 0.5SGD + 1SGD; TK1 + TK2; Electronic EMPv7
	575256	Coin Meter	0.1MYR + 0.2MYR + 0.5MYR (old/new); 0.5SGD + 1SGD (old/new); TK1 + TK2; Electronic EMPv7
	575257	Coin Meter	1HRK + 2HRK + 5HRK; TK1 + TK2; Electronic EMPv7
	575258	Coin Meter	5CZK + 10CZK + 20CZK + 50CZK; Token Primus 7K; TK1 + TK2; Electronic EMPv7
	575259	Coin Meter	0.5MAD + 1MAD + 2MAD + 5MAD + 10MAD; TK1 + TK2; Electronic EMPv7
	575260	Coin Meter	1PLN + 2PLN + 5PLN; 0.1EUR + 0.2EUR + 0.5EUR + 1EUR + 2EUR; 10ISK + 50ISK + 100ISK; TK1 + TK2; Electronic EMPv7
	575261	Coin Meter	0.1EUR + 0.2EUR + 0.5EUR + 1EUR + 2EUR; jeton IPSO 5K; TK1 + TK2; Electronic EMPv7

# Coin Meter - AF, IY and NY Models (Drawing 3 of 3)

Models with V in 7th position or models with G, H, J or K in 13th position of the model number

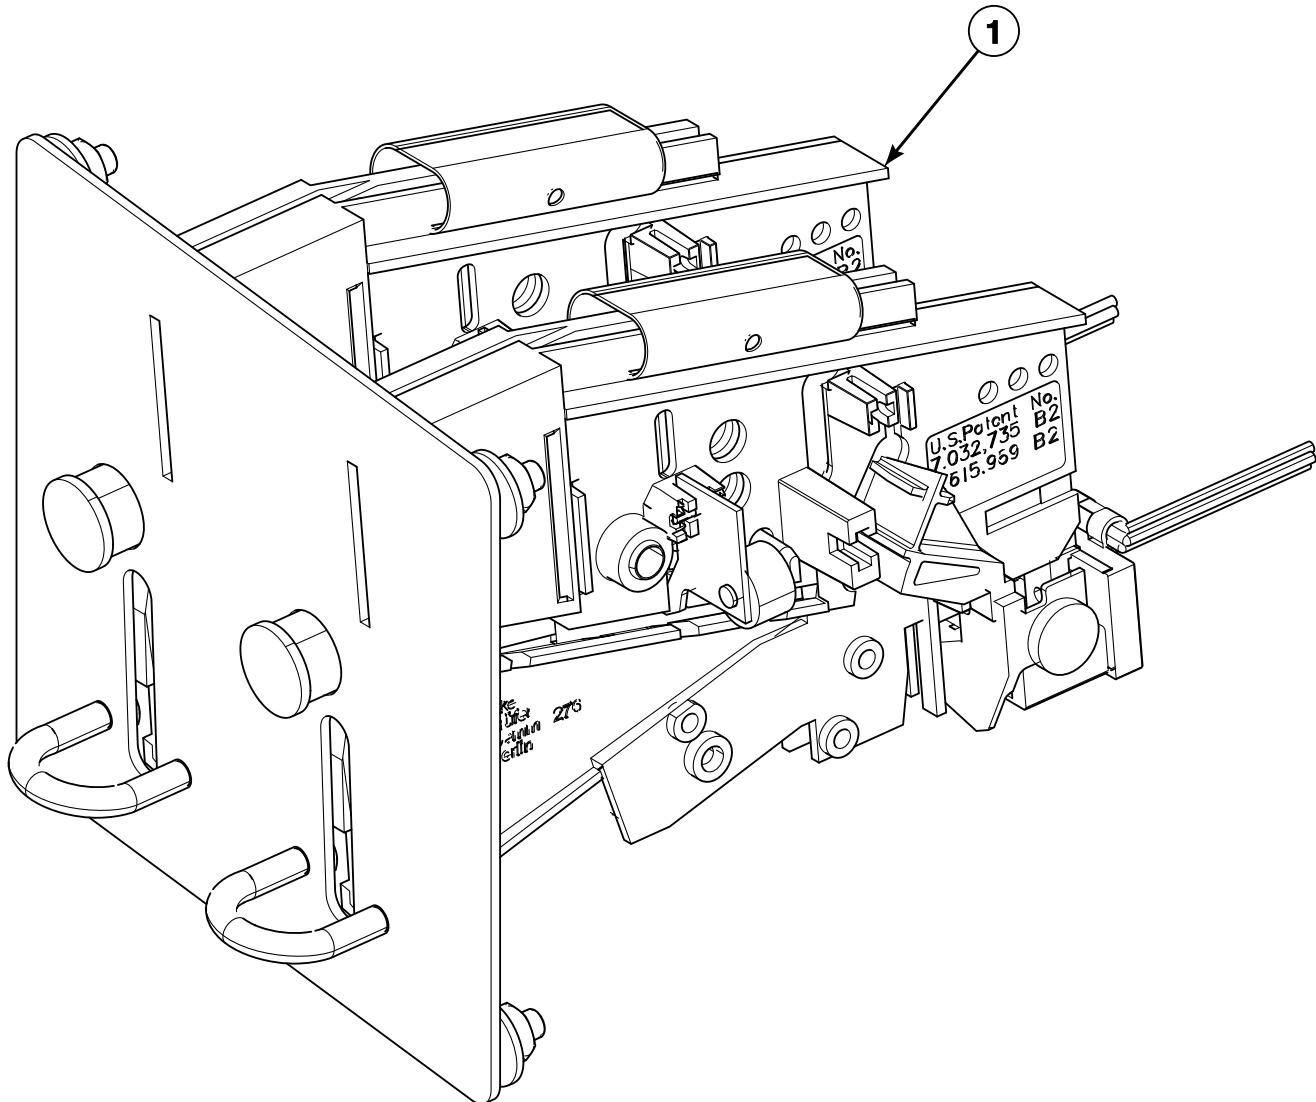


CZW233P\_D2410

## Coin Meter - AF, IY and NY Models (Drawing 3 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
1	575262	Coin Meter	0.2GBP + 0.5GBP + 1GBP + 2GBP; 0.1EUR + 0.2EUR + 0.5EUR + 1EUR + 2EUR; TK1: jeton Gettone; TK2: jeton "KLW Aqua"; Electronic EMPv7
	575263	Coin Meter	0.1EUR + 0.2EUR + 0.5EUR + 1EUR + 2EUR, jeton G-FIS "LAVOIR BIANCA" (20x1.8); TK1 + TK2; Electronic EMPv7
	575264	Coin Meter	0.5MYR; jeton "DOBI PAPA" (22.5x2); TK1 + TK2; Electronic EMPv7
	575265	Coin Meter	1AUD + 2AUD, jeton "No Cash Value" (28.6x1.58); TK1 + TK2; Electronic EMPv7
	575266	Coin Meter	0.5MYR; jeton "BUBBLELAB"; TK1 + TK2; Electronic EMPv7
	575267	Coin Meter	1ILS + 2ILS + 5ILS + 10ILS; TK1 + TK2; Electronic EMPv7
	575268	Coin Meter	1ZAR + 2ZAR + 5ZAR; TK1 + TK2; Electronic EMPv7
	575269	Coin Meter	5RUB + 10RUB; TK1 + TK2; Electronic EMPv7
	575270	Coin Meter	50CLP + 100CLP + 500CLP; TK1 + TK2; Electronic EMPv7
	575271	Coin Meter	100JPY + 500JPY; 10TWD + 50TWD; TK1 + TK2; Electronic EMPv7
	575272	Coin Meter	0.5GEL + 1GEL + 2GEL; TK1 + TK2; Electronic EMPv7
	575273	Coin Meter	0.1EUR + 0.2 EUR + 0.5EUR + 1EUR + 2EUR; Jeton 7K; TK1 + TK2; Electronic EMPv7
	575274	Coin Meter	20HUF + 50HUF + 100HUF + 200HUF; TK1 + TK2; Electronic EMPv7
	575275	Coin Meter	1THB + 2THB + 5THB + 10THB; TK1 + TK2; Electronic EMPv7
	572386	Coin Meter	0.2CHF + 0.5CHF + 1CHF + 2CHF; TK1 + TK2; Electronic EMPv7
	579811	Coin Meter	1EAD; 1TK, 2TK Jeton; Electronic EMPv7

## Coin Meter - FX, LY and PY Models (Drawing 1 of 4)

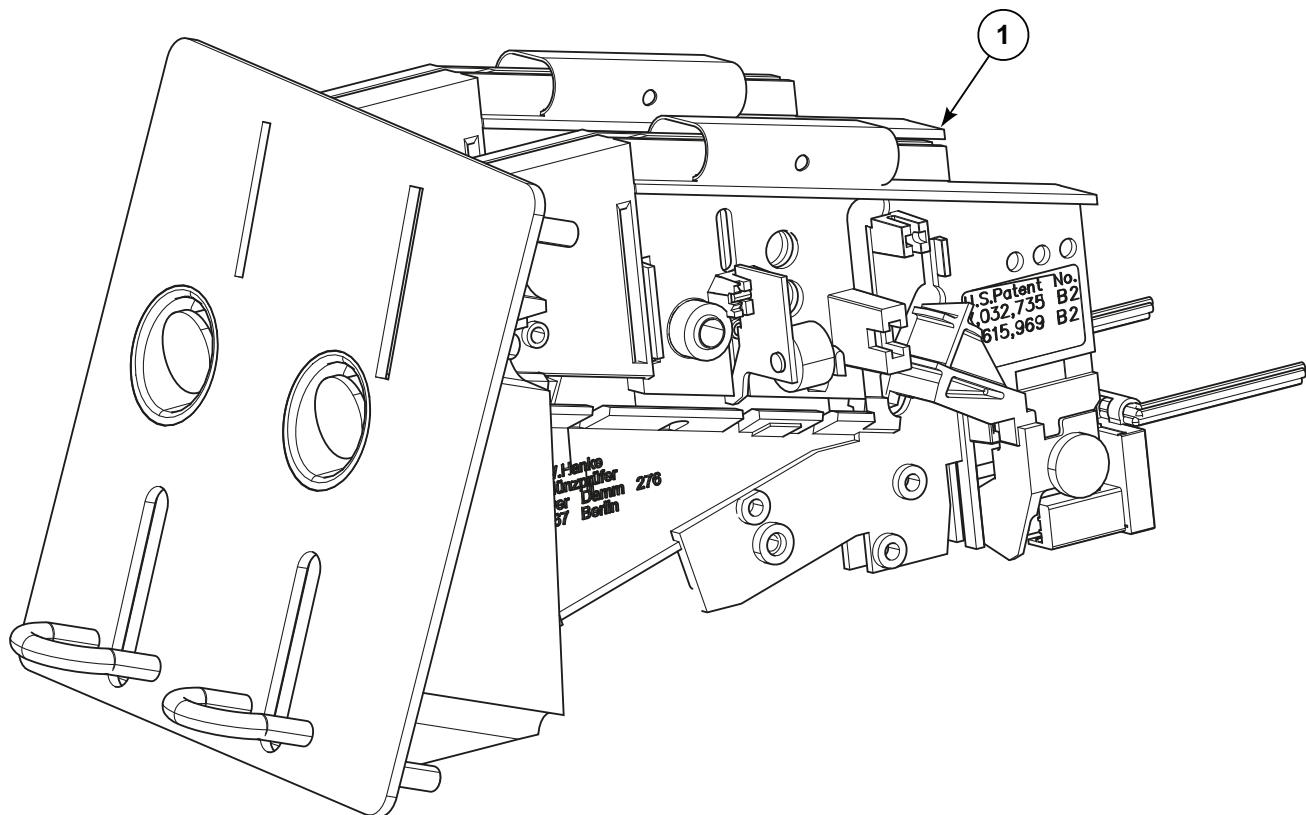


CZT185P\_D2410

# Coin Meter - FX, LY and PY Models (Drawing 1 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP547601	Coin Meter	5K Primus jeton
	SP547602	Coin Meter	7K Primus jeton
	SP547603	Coin Meter	10K Primus jeton
	SP547604	Coin Meter	12K Primus jeton
	SP547605	Coin Meter	15K Primus jeton
	SP547606	Coin Meter	D jeton
	SP547648	Coin Meter	0.05EUR
	SP547638	Coin Meter	0.2EUR
	SP547616	Coin Meter	0.5EUR
	SP547614	Coin Meter	1EUR
	SP547647	Coin Meter	2EUR
	SP547622	Coin Meter	0.2EUR + 0.5EUR
	SP547639	Coin Meter	0.2EUR + 1EUR
	SP547617	Coin Meter	0.5EUR + 1EUR
	SP547656	Coin Meter	0.5EUR + 2EUR
	SP547631	Coin Meter	1EUR + 2EUR
	SP547652	Coin Meter	7K + D jeton
	SP547666	Coin Meter	7K jeton and 2EUR
	SP547665	Coin Meter	D jeton and 2EUR
	SP547600	Coin Meter	1AUD + 20C
	SP547607	Coin Meter	1POND + 20PC
	SP547608	Coin Meter	1POND + 50PC
	SP547609	Coin Meter	100YEN
	SP547610	Coin Meter	500JPY + 100JPY
	SP547611	Coin Meter	5DKK
	SP547612	Coin Meter	20DKK
	SP547613	Coin Meter	5ILS + 1ILS
	SP547615	Coin Meter	1MYR
	SP547618	Coin Meter	1DKK + 5DKK
	SP547619	Coin Meter	10NOK + 20NOK
	SP547620	Coin Meter	2DKK + 5DKK
	SP547621	Coin Meter	5NOK
	SP547623	Coin Meter	1NZD + 2NZD
	SP547624	Coin Meter	10 NOK
	SP547625	Coin Meter	10NT + 50NT
	SP547626	Coin Meter	2DKK
	SP547627	Coin Meter	Lucky Winner jeton
	SP547628	Coin Meter	10TWD
	SP547629	Coin Meter	10CZK + 20CZK
	SP547630	Coin Meter	7K Equipos Par Lavar jeton
	569921	Coin Meter	0.2GBP, 0.5GBP, 1GBP, 2GBP, 0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR; Electronic EMPv7
	SP547634	Coin Meter	500WON
	SP547635	Coin Meter	0.25USD
	SP547636	Coin Meter	1AUD + 2AUD

## Coin Meter - FX, LY and PY Models (Drawing 2 of 4)

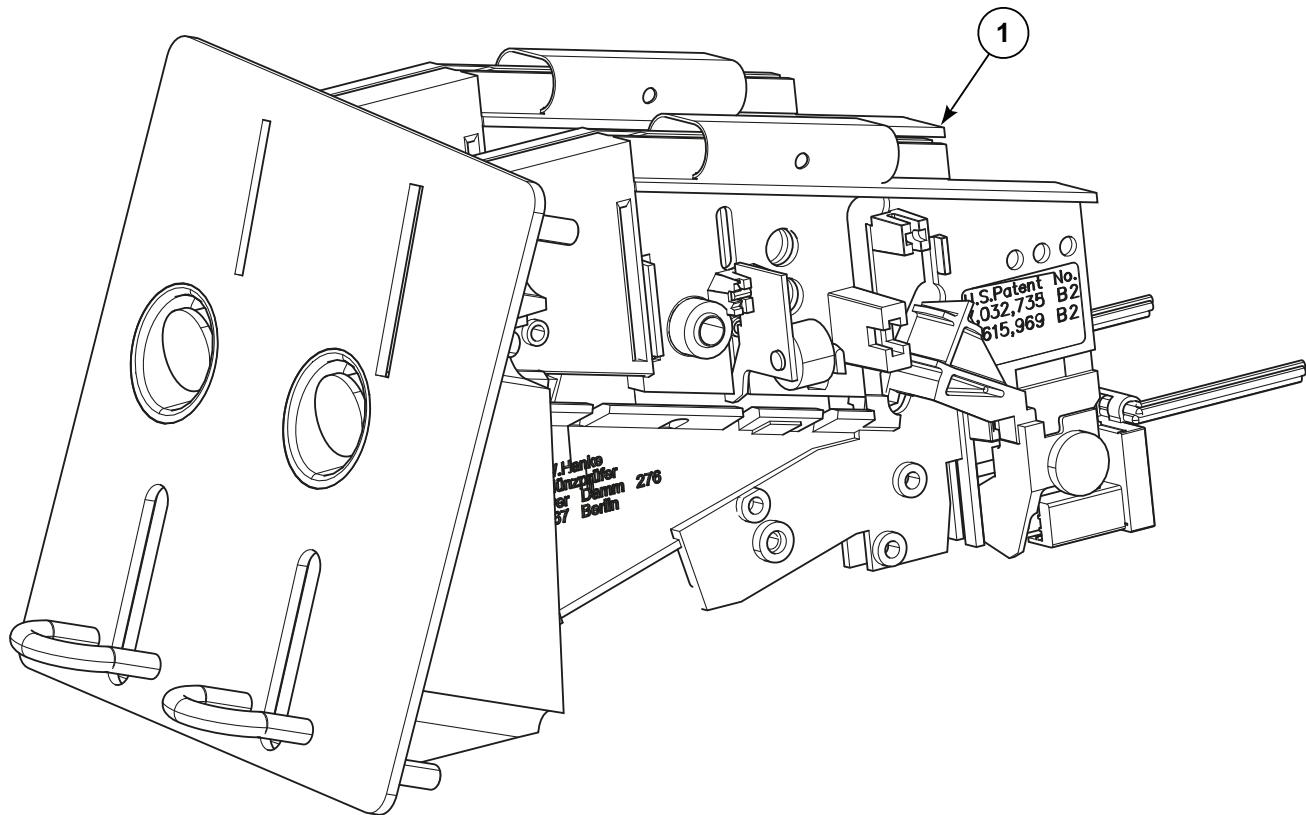


CZT185P\_D2410

## Coin Meter - FX, LY and PY Models (Drawing 2 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP547641	Coin Meter	2DK + 10DK
	SP547642	Coin Meter	1AUD
	SP547643	Coin Meter	1CHF
	SP547644	Coin Meter	5NOK + 10NOK
	SP547645	Coin Meter	1 TopMos jeton + 1LEV jeton
	SP547646	Coin Meter	1 Vendo jeton
	SP547649	Coin Meter	1 jeton
	569951	Coin Meter	0.5MAD, 1MAD, 2MAD, 5MAD, 10MAD; Electronic EMPv7
	SP547651	Coin Meter	20 penny
	SP547653	Coin Meter	1 Wascator jeton, jeton diamater 22.2 mm
	SP547654	Coin Meter	1 Unibel jeton, jeton diamater 18.55 mm
	SP547657	Coin Meter	50HUF + 100HUF
	SP547658	Coin Meter	1 jeton without coining, jeton diamater 20 mm
	SP547659	Coin Meter	1 Volund jeton, jeton diamater 22.5 mm
	SP547660	Coin Meter	1 Wascator jeton, jeton diamater 19 mm
	SP547661	Coin Meter	1 Miele jeton
	SP547662	Coin Meter	1 jeton without coining, jeton diamater 26 mm
	SP547663	Coin Meter	Three-groove jeton; jeton diamater 27 mm
	SP547664	Coin Meter	Three-groove jeton; jeton diamater 24.9 mm
	SP537996	Coin Meter	Top-Mosr jeton
	SP547667	Coin Meter	Milano Italy jeton
	SP547668	Coin Meter	5PLN + 1PLN
	SP547669	Coin Meter	Two-grooves jeton; jeton diamater 27 mm
	SP547670	Coin Meter	A.S.A.R.D. jeton, jeton diamater 25.8 mm
	SP547671	Coin Meter	20CZK
	SP547672	Coin Meter	Jeton ASARD, jeton diamater 22.3 mm
	SP547673	Coin Meter	Jeton Laundromatic Belgium, jeton diamater 22.3 mm
	SP547674	Coin Meter	1SGD
	SP547675	Coin Meter	Jeton Asard Wascator, jeton diamater 19.9 mm
	SP555502	Coin Meter	Easy Games jeton
	SP555543	Coin Meter	Brev.C jeton
	SP555546	Coin Meter	50 Malaysian cent
	SP555549	Coin Meter	Flat Polis jeton
	SP555550	Coin Meter	Butzi Wash jeton
	SP555578	Coin Meter	1 New Singapore Dollar
	SP555558	Coin Meter	Copper without grooves jeton
	569939	Coin Meter	0.1SGD, 0.2SGD, 0.5SGD, 1SGD; Electronic EMPv7
	SP555666	Coin Meter	2x50 Malaysian cent
	569933	Coin Meter	0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR; Electronic EMPv7
	SP555559	Coin Meter	Speedy Matic jeton
	SP555579	Coin Meter	Was-Salon Lavoir jeton
	569948	Coin Meter	5CZK, 10CZK, 20CZK, 50CZK; Electronic EMPv7
	SP560744	Coin Meter	Electronic for Dobi Ekspress jeton
	569964	Coin Meter	0.2GBP, 0.5GBP, 1GBP, 2GBP, 0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, jeton "KWL Aqua", jeton "Gettone"; Electronic EMPv7

## Coin Meter - FX, LY and PY Models (Drawing 3 of 4)

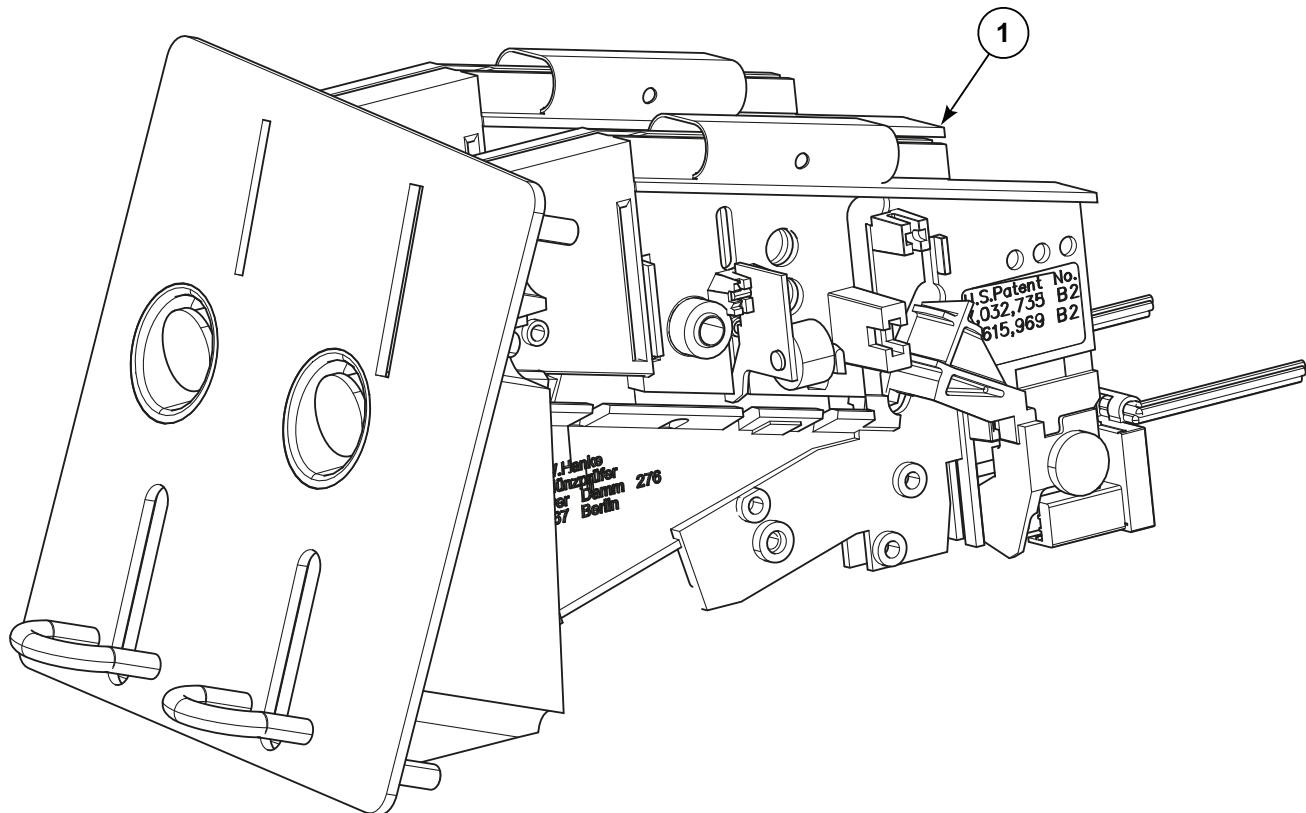


CZT185P\_D2410

# Coin Meter - FX, LY and PY Models (Drawing 3 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP560082	Coin Meter	5k IPSO jeton
	SP560083	Coin Meter	7k IPSO jeton
	SP560084	Coin Meter	10k IPSO jeton
	SP560085	Coin Meter	12k IPSO jeton
	SP560086	Coin Meter	15k IPSO jeton
	561378	Coin Meter	10 Moroccan Dirham
	569918	Coin Meter	0.25USD, 1USD, 0.25CAD, 1CAD, 2CAD; Electronic EMPv7
	560073	Coin Meter	0.25 USD/1 USD
	569930	Coin Meter	1CNY, 0.1MYR, 0.2MYR, 0.5MYR; Electronic EMPv7
	569927	Coin Meter	0.2AUD, 1AUD, 2AUD, 0.2NZD, 1NZD, 2NZD, 5HKD, 10HKD, 500KRW; Electronic EMPv7
	SP561496	Coin Meter	Jeton Grupo Azkoyen CDS Automaten
	569936	Coin Meter	1PHP, 5PHP, 10PHP; Electronic EMPv7
	569942	Coin Meter	0.1MYR, 0.2MYR, 0.5MYR, 0.5SGD, 1SGD; Electronic EMPv7
	569945	Coin Meter	1HRK, 2HRK, 5HRK; Electronic EMPv7
	569924	Coin Meter	1DKK, 2DKK, 5DKK, 10DKK, 20DKK, 1NOK, 5NOK, 10NOK, 20NOK, 0.2EUR, 0.5EUR, 1EUR, 2EUR; Electronic EMPv7
	SP564484	Coin Meter	Jeton 118-5
	SP564486	Coin Meter	Jeton Barisart (LDL)
	569961	Coin Meter	0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, jeton IPSO 5K; Electronic EMPv7
	SP564489	Coin Meter	Jeton Sporrong
	569970	Coin Meter	0.5MYR, jeton "DOBI PAPA"; Electronic EMPv7
	553150	Coin Meter	Jeton with hole
	553151	Coin Meter	Jeton Deton Wash
	569901	Coin Meter	Brass jeton
	569912	Coin Meter	Jeton Wassalon lavoir
	569954	Coin Meter	1PLN, 2PLN, 5PLN, 0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, 10ISK, 50ISK, 100ISK; Electronic EMPv7
	569967	Coin Meter	0.1EUR, 0.2EUR, 0.5EUR, 1EUR, 2EUR, jeton G-FIS "LAVOIR BIANCA"; Electronic EMPv7
	569973	Coin Meter	1AUD, 2AUD, jeton "No Cash Value"; Electronic EMPv7
	569979	Coin Meter	0.5MYR, jeton "BUBBLELAB"; Electronic EMPv7
	569987	Coin Meter	Jeton HAUCK 2018
	572358	Coin Meter	1THB, 2THB, 5THB, 10THB; 1TK, 2TK Jeton; Electronic EMPv7
	569998	Coin Meter	100+500 ISK
	572301	Coin Meter	Token 118-16
	572339	Coin Meter	Getton Jeton (26 x 1.7mm)
	572342	Coin Meter	Token WH121
	572304	Coin Meter	1ILS, 2ILS, 5ILS, 10ILS; 1TK, 2TK Jeton; Electronic EMPv7
	572307	Coin Meter	1ZAR, 2ZAR, 5ZAR; 1TK, 2TK Jeton; Electronic EMPv7
	572310	Coin Meter	5RUB, 10RUB; 1TK, 2TK Jeton; Electronic EMPv7
	572313	Coin Meter	550CLP, 100CLP, 500CLP; 1TK, 2TK Jeton; Electronic EMPv7
	572317	Coin Meter	100JPY, 500JPY; 10TWD, 50TWD; 1TK, 2TK Jeton; Electronic EMPv7
	572320	Coin Meter	0.5GEL, 1GEL, 2GEL; 1TK, 2TK Jeton; Electronic EMPv7

## Coin Meter - FX, LY and PY Models (Drawing 4 of 4)

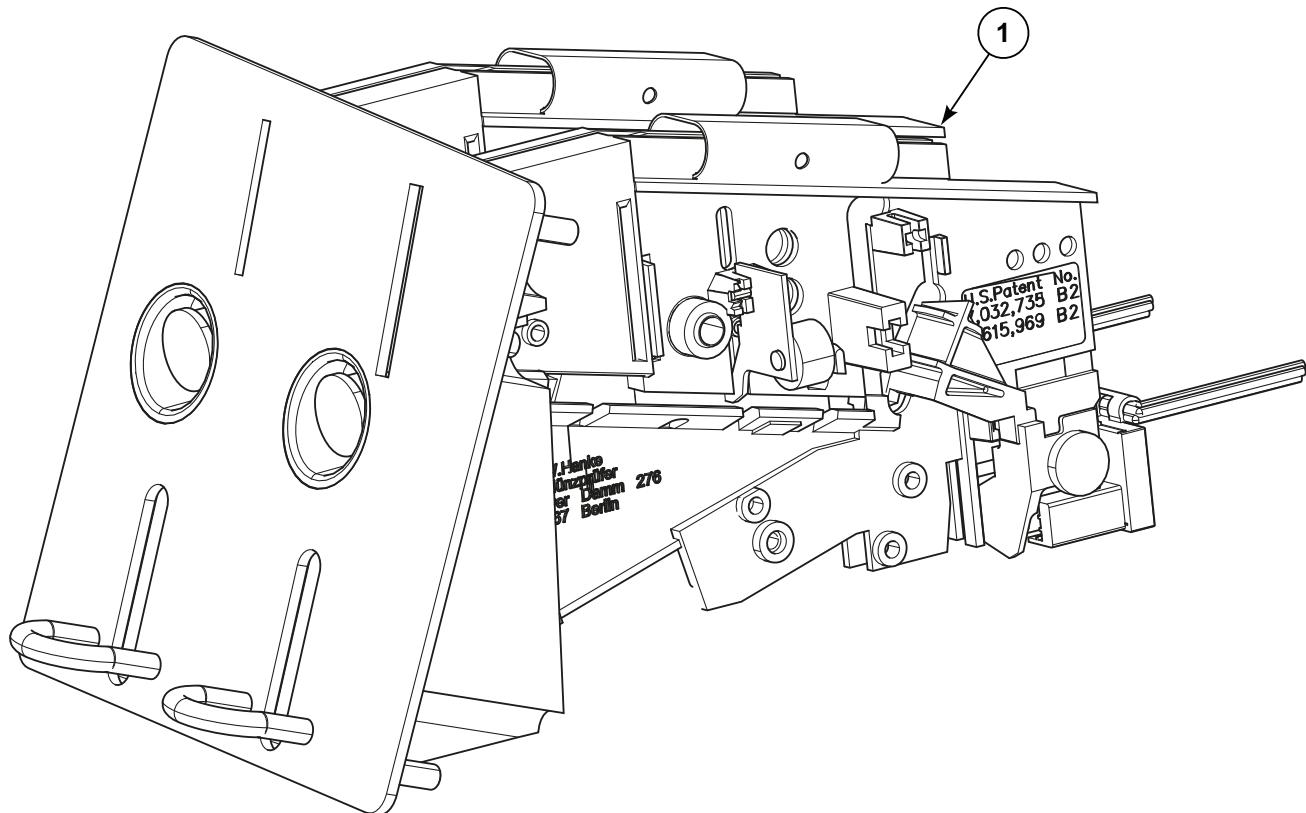


CZT185P\_D2410

## Coin Meter - FX, LY and PY Models (Drawing 4 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP547637	Coin Meter	5DK + 10DK
	SP547640	Coin Meter	Sun Wash jeton
	SP560089	Coin Meter	STD 118-1 jeton
	572323	Coin Meter	0.2 EUR, 0.5EUR, 1EUR, 2EUR, Jeton 7K; Electronic EMPv7
	572326	Coin Meter	20HUF, 50HUF, 100HUF, 200HUF; 1TK, 2TK Jeton; Electronic EMPv7
	572383	Coin Meter	0.2CHF, 0.5CHF, 1CHF, 2CHF; 1TK, 2TK Jeton; Electronic EMPv7
	572391	Coin Meter	0.25CAD
	572358	Coin Meter	0.25CAD
	579808	Coin Meter	1EAD, 1TK, 2TK; Electronic EMPv7

## Door (Drawing 1 of 4)

All Models; Models AF, FX, IY, J, NY, PY with V in 7th position of the model number Starting 1 March 2021

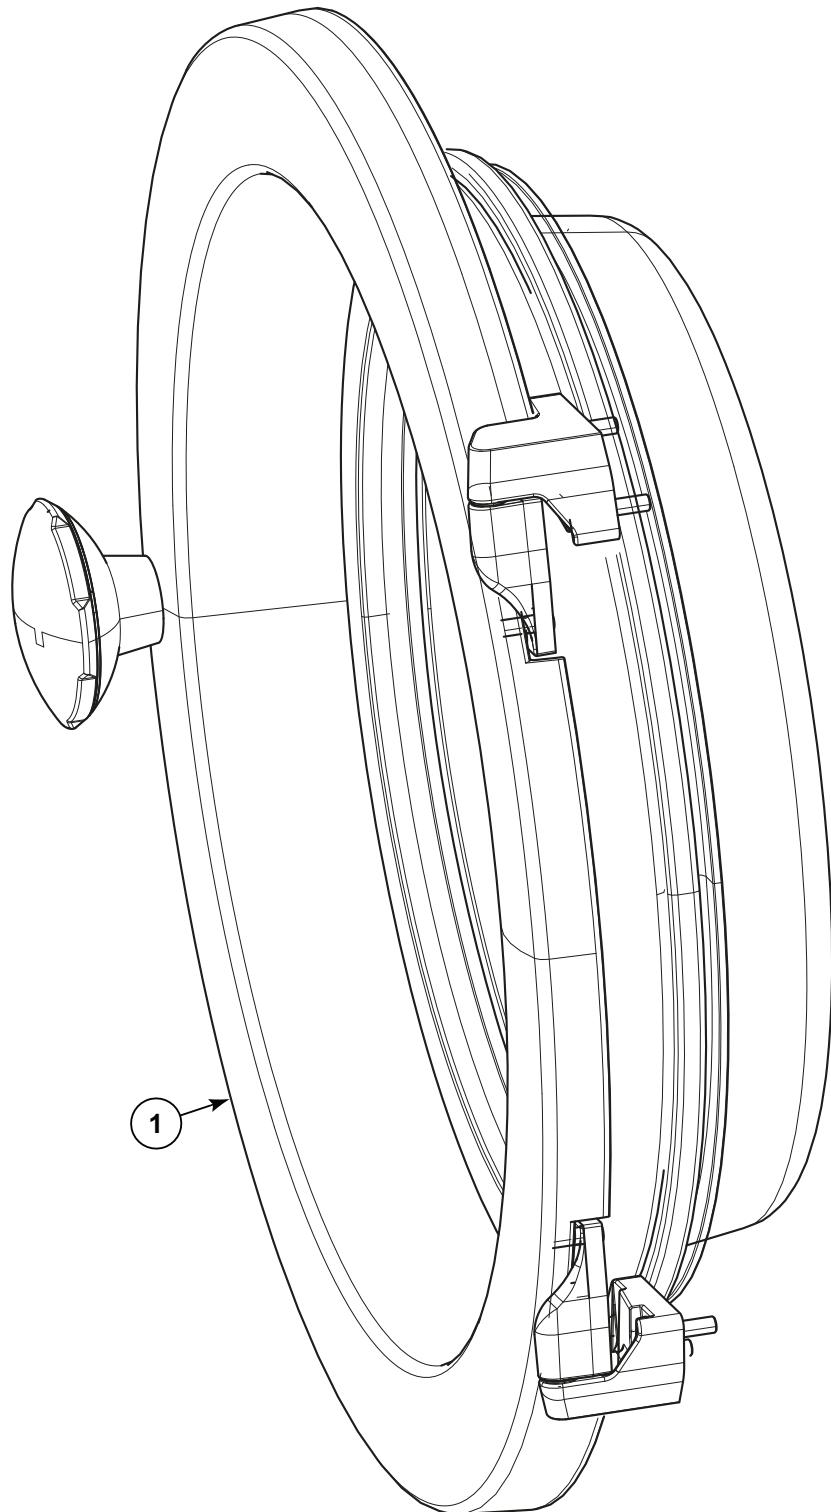


CZW586P\_D1714

## Door (Drawing 1 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
	582319	Plexiglass Assembly	Door-glass Insulation
	SP552454	Door Lock Wiring	MC7; CSA
	SP552453	Door Lock Wiring	MC7; CE
	SP528270	Door Lock Wiring	MC6 control board; CE
	569723	Door Lock Wiring	MC10 control board; CE
	SP537896	Adhesive	Reversible
	SP245704000603	Adhesive	Loctite 603; Used with SP537854 Bolt
	SP245704003021	Adhesive	Loctite 243
	568991	Service Door Kit	Includes 569353 Door Seal, 568804 Shim, 560069 Shim, PRI722000004 Plastic Protection, PRI722000001 Plastic Protection and SP345000160971 Binding Strip
1	556271	Door Assembly	HY, SY and UY models; Items 1-13 in (Drawing 2 of 4), 1-17 in (Drawing 3 of 4) and 1-10 in (Drawing 4 of 4)
	535415	Door Assembly	FX, HX, MWF, PY, QW and SW models; Items 1-13 in (Drawing 2 of 4), 1-17 (Drawing 3 of 4) and 1-10 (Drawing 4 of 4)
	582300	Door Assembly	FX and PY models with N, U or 8 in 10th position of the model number; Items 1-13 in (Drawing 2 of 4), 1-17 (Drawing 3 of 4) and 1-10 (Drawing 4 of 4)
	574098	Door Assembly	AF and NY models with "G", "H", "J" or "K" in 13th Position; Items 1-13 in (Drawing 2 of 4), 1-17 in (Drawing 3 of 4) and 1-10 in (Drawing 4 of 4)
	535434	Door Assembly	AF, LY and NY models with T or X in 7th Pos.; Items 1-13 in (Drawing 2 of 4), 1-17 in (Drawing 3 of 4) and 1-10 in (Drawing 4 of 4)
	563371	Door Assembly	IY models with "G", "H", "J" or "K" in 13th Position; Items 1-13 in (Drawing 2 of 4), 1-17 in (Drawing 3 of 4) and 1-10 in (Drawing 4 of 4)
	556253	Door Assembly	IY models with J or R in 7th Position; Items 1-13 in (Drawing 2 of 4), 1-17 in (Drawing 3 of 4) and 1-10 in (Drawing 4 of 4)
	571638	Door Assembly	Model SY135_KIS_PHOTO-ME; Items 1-13 in (Drawing 2 of 4), 1-17 in (Drawing 3 of 4) and 1-10 in (Drawing 4 of 4)
	573185	Door Assembly	Model JYE135V; Items 1-13 in (Drawing 2 of 4), 1-17 in (Drawing 3 of 4) and 1-10 in (Drawing 4 of 4)
	562705	Door Assembly	J models with J or R in 7th Position; Items 1-13 in (Drawing 2 of 4), 1-17 in (Drawing 3 of 4) and 1-10 in (Drawing 4 of 4)

## Door (Drawing 2 of 4)

All Models; Models AF, FX, IY, J, NY, PY with V in 7th position of the model number Starting 1 March 2021

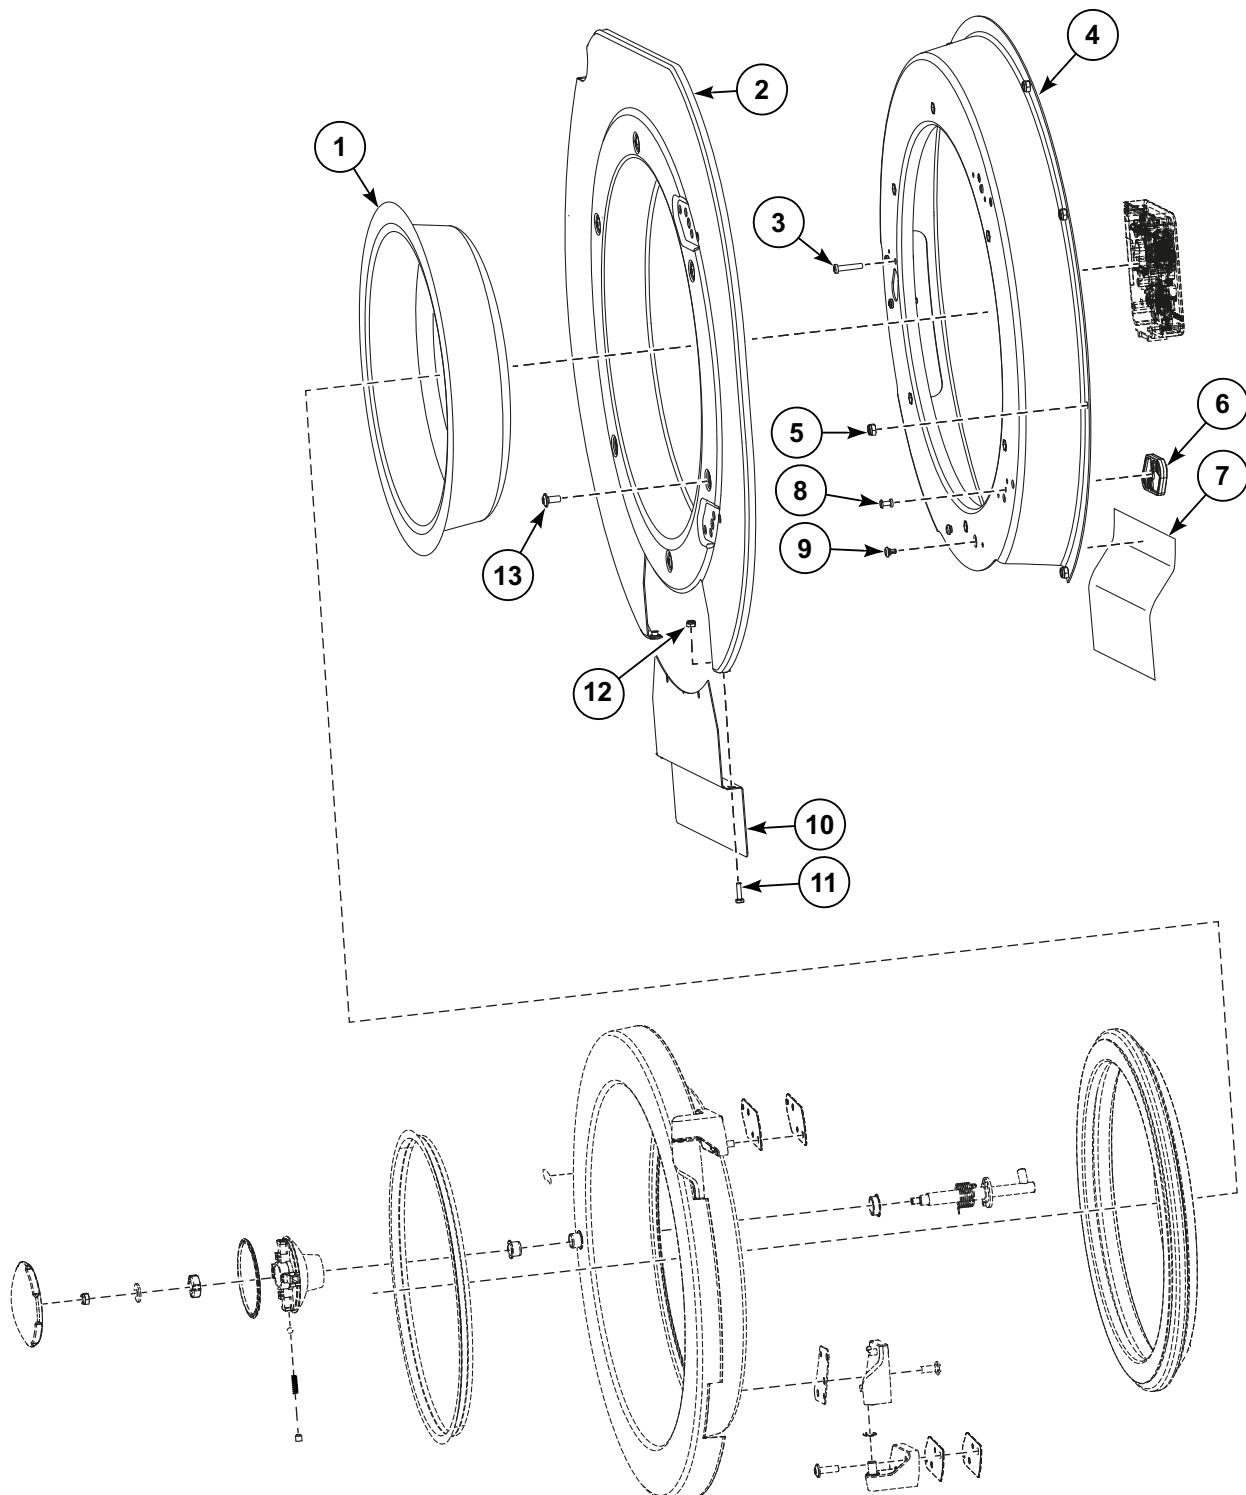


CZW370P\_D2410

## Door (Drawing 2 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP556227	Door Glass	IY models; With logo
	SP562702	Door Glass	J models
	573191	Door Glass	J models with "V" in 7th position
	SP535417	Door Glass	All other models; Without logo
2	571722	Front Panel	Black
	571725	Front Panel	Stainless
	568976	Front Panel	Models with V in 7th Position of the model number through 28 February 2021; Black
	568999	Front Panel	Models with V in 7th Position of the model number through 28 February 2021; Stainless
	579114	Front Panel	Model SY135_KIS_PHOTO-ME; Stainless steel; 316L
3	SP556137	Bolt	M5x25
4	SP537853	Door and Lock Holder	
	568906	Door and Lock Holder	Models with V in 7th Position of the model number through 28 February 2021
5	SP310985000006	Nut	M6
6	SP537849	Hinge Spacer	
7	552972	Cover	Models with A, D, F, I, J, R, T or X in 7th Position of the model number
	568938	Cover	Models with V in 7th Position of the model number
8	SP547779	Rivet	4x16.7
9	SP537856	Connector	
10	SP563274	Heating Element Front Cover	Black
	568986	Heating Element Front Cover	Stainless
	579088	Heating Element Front Cover	Model SY135_KIS_PHOTO-ME; 316L
11	SP309084000416	Bolt	M4x16
12	SP313251002104	Nut	M4
13	SP537854	Bolt	M6x14

## Door (Drawing 3 of 4)

All Models; Models AF, FX, IY, J, NY, PY with V in 7th position of the model number Starting 1 March 2021

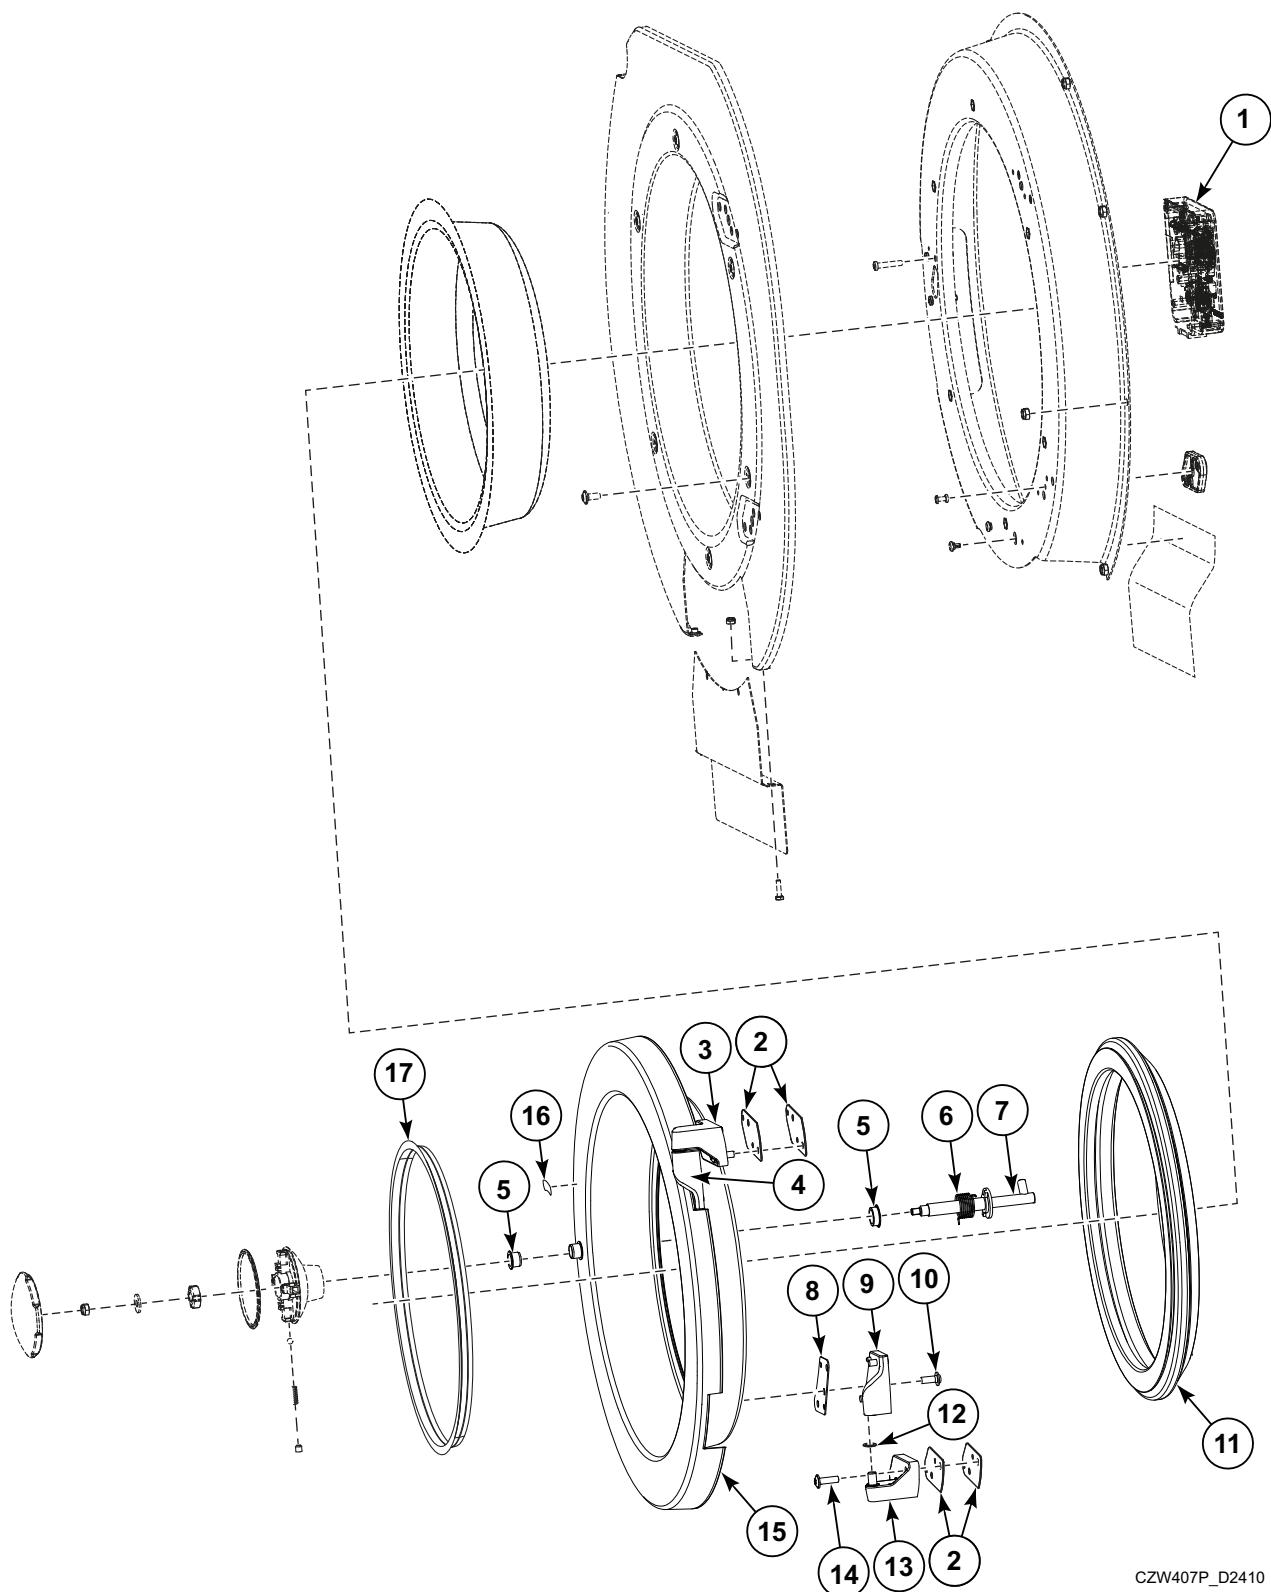


CZW407P\_D2410

## Door (Drawing 3 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
	F8301201	Double Check Valve	J models; Used with SPPRI426001217 Pipe Nipple
	570554	Kit of Hinges	HY, SY and UY models; includes 568981, 568984, 575962, 575965 and 571642
	570553	Kit of Hinges	All other models; includes 568979, 568982, 575960, 575963 and 571642
<b>1</b>	SP537760	Lock	
<b>2</b>	N/A	Washer	
<b>3</b>	568981	Fixed Upper Hinge	HY, SY and UY models
	568979	Fixed Upper Hinge	All other models
<b>4</b>	575962	Upper Hinge	HY, SY and UY models; with Case
	575960	Upper Hinge	All other models; with Case
<b>5</b>	SP529739	Casing	
<b>6</b>	SP535402	Handle Torsion Spring	
<b>7</b>	SP537933	Lock Pin	
<b>8</b>	SP535421	Hinge Spacer	
<b>9</b>	575965	Lower Hinge	HY, SY and UY models; with Case
	575963	Lower Hinge	All other models; with Case
<b>10</b>	SP537864	Bolt	M6x16
<b>11</b>	568991	Service Door Kit	
	563297	Door Seal	Model SY135_KIS_PHOTO-ME
<b>12</b>	571642	Washer	
<b>13</b>	568984	Fixed Lower Hinge	HY, SY and UY models
	568982	Fixed Lower Hinge	All other models
<b>14</b>	SP535479	Bolt	M6x25
<b>15</b>	SP535426	Door	HY, SY and UY and SY135_KIS_PHOTO-ME models; FX, HX, MWF, PY, QW and SW models through Serial No. 135FX011505MB; Chrome
	SP553526	Door	FX, HX, MWF, PY, QW and SW models starting Serial No. 135FX011506MB; Gray
	SP535428	Door	AF, AF Non-Brand, H, IY, J, LP, LY and NY models; Black
	568837	Door	AF, IY, J and NY models with "G", "H", "J", or "K" in 13th position; Black
<b>16</b>	SP564831	Label	Door Lock; CSA; Vended
<b>17</b>	SP562546	Rim	IY models with "G", "H", "J" or "K" in 13th Position
	573188	Rim	J models with "V" in 7th position
	582298	Rim	FX and PY models with N, U or 8 in 10th position of the model number

## Door (Drawing 4 of 4)

All Models; Models AF, FX, IY, J, NY, PY with V in 7th position of the model number Starting 1 March 2021

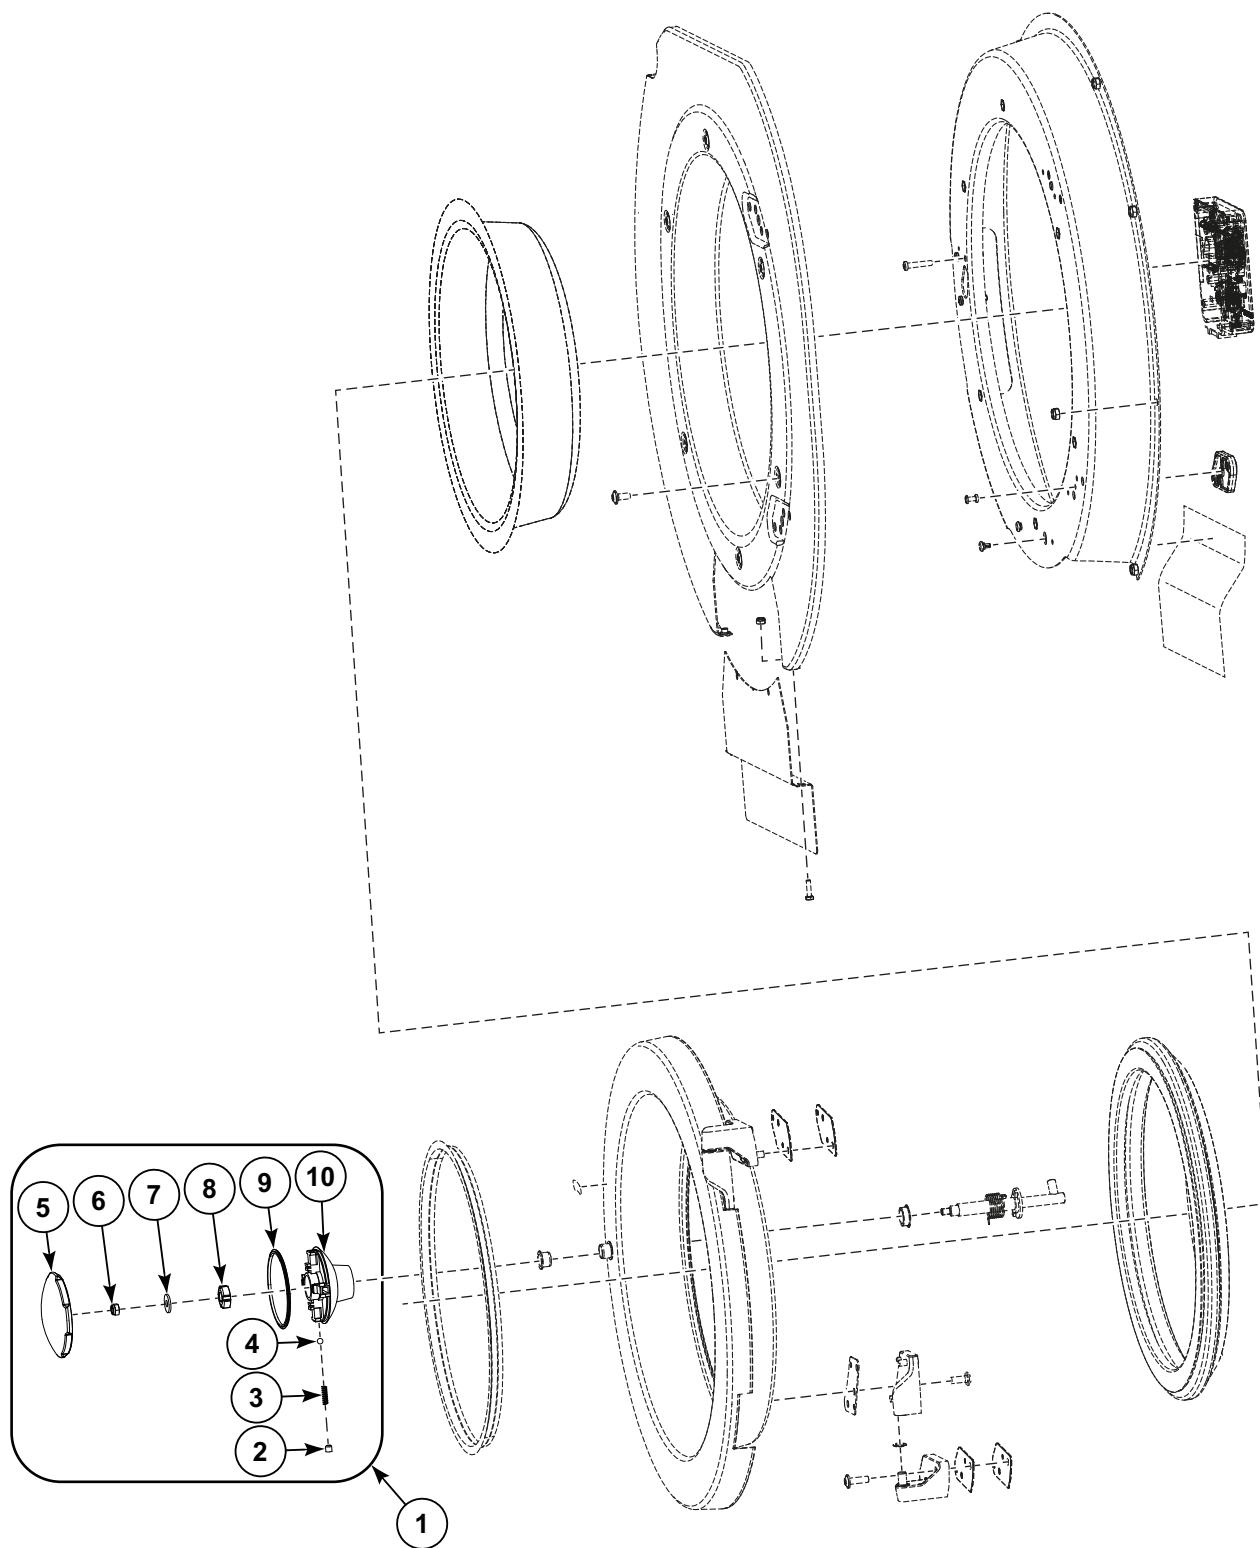


CZW372P\_D2410

## Door (Drawing 4 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP556297	Handle	HY, SY and UY models
	SP552908	Handle	FX, HX, MWF, PY, QW and SW models
	582330	Handle	FX and PY models with N, U or 8 in 10th position of the model number
	SP552909	Handle	AF, AF Non-Brand, H, IY, LP, LY and NY models
	571788	Handle	AF, IY and NY models with "G", "H", "J" or "K" in 13th Position
	562898	Handle	J models
	569335	Handle	Model SY135_KIS_PHOTO-ME
2	582341	Bolt	M6x8
3	SP535406	Compression Spring	
4	SP535407	Handle Ball	
5	SP556278	Holder Cover	HY, SY and UY models
	SP535438	Holder Cover	AF, AF Non-Brand, H, IY, J, LP, LY and NY models
	SP535430	Holder Cover	FX, HX, MWF, PY, QW and SW models
	569331	Holder Cover	Model SY135_KIS_PHOTO-ME
6	SP310985000006	Nut	M6
7	SP311902100006	Washer	M6
8	SP529710	Locating Segment	
9	582329	Distinguishing Ring	FX, HX, HY, J, MWF, PY, QW, SW, SY and UY models; Blue
	SP535437	Distinguishing Ring	AF, AF Non-Brand, H, IY, LP, LY, NY and SY135_KIS_PHOTO-ME models; Red
	571733	Distinguishing Ring	AF, IY and NY models with "G", "H", "J" or "K" in 13th Position; Red
10	SP535429	Handle Lower Part	

# Door

AF, IY, NY and J with V in 7th position of the model number Through 28 February 2021

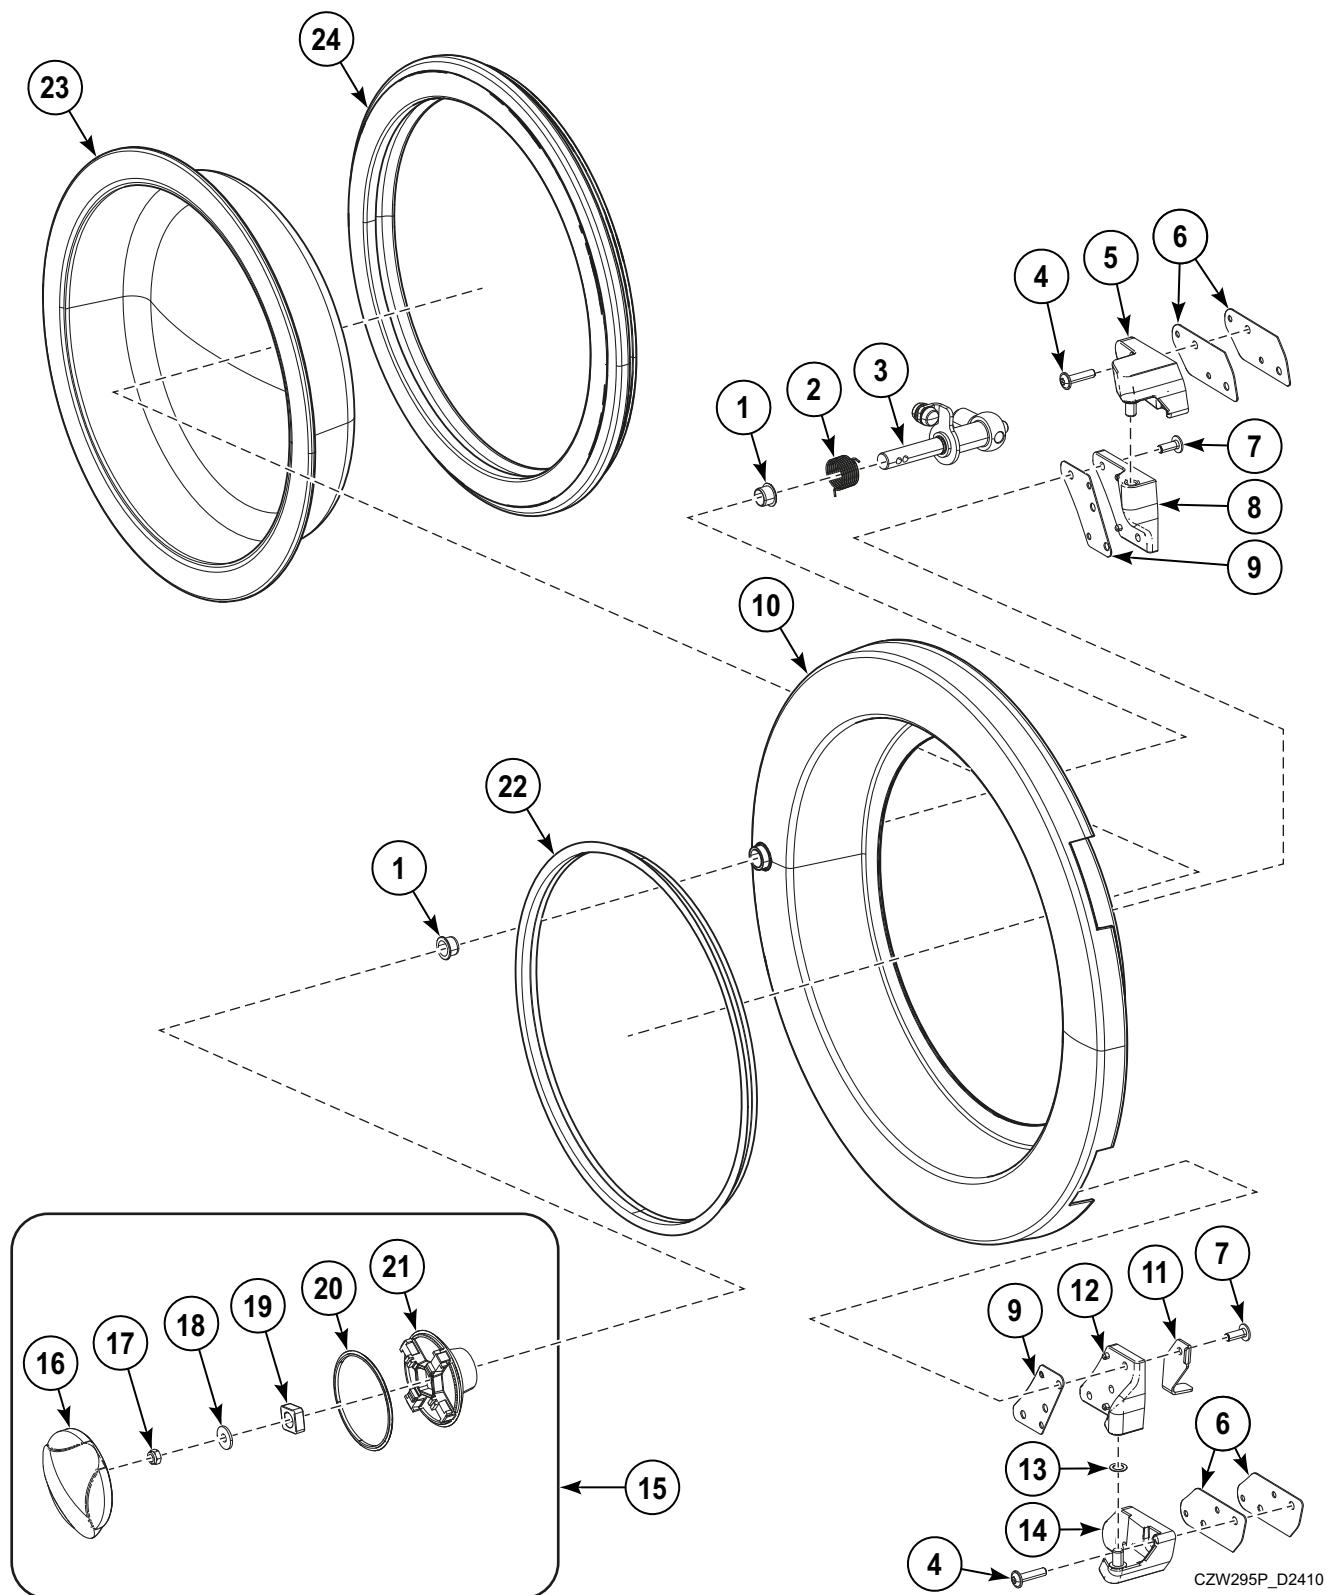


# Door

REF	PART NO.	DESCRIPTION	COMMENTS
	571767	Door Assembly	Black; Includes items 1-24
	570553	Kit of Hinges	Includes items 568979, 568982, 575960, 575963 and 571642
1	SP529739	Casing	
2	SP535402	Handle Torsion Spring	
3	571762	Door Level	
4	SP535479	Bolt	M6x25
5	568979	Fixed Upper Hinge	
6	N/A	Shim	
7	SP537864	Bolt	M6x16
8	575960	Upper Hinge	with Case
9	SP535421	Hinge Spacer	
10	568837	Door	Black
11	571633	Door Frame Sheet	
12	575963	Lower Hinge	with Case
13	571642	Washer	
14	568982	Fixed Hinge	Lower
15	571781	Handle	
16	SP535438	Holder Cover	
17	SP310985000006	Nut	M6
18	SP311902100006	Washer	M6
19	571773	Locating Segment	
20	571733	Distinguishing Ring	
21	571779	Handle Lower Part	
22	SP562546	Rim	IY models
23	556227	Door Glass	IY models
24	568991	Service Door Kit	

N/A = Part no longer available

# Door

FX and PY Models with V in 7th position of the model number Through 28 February 2021

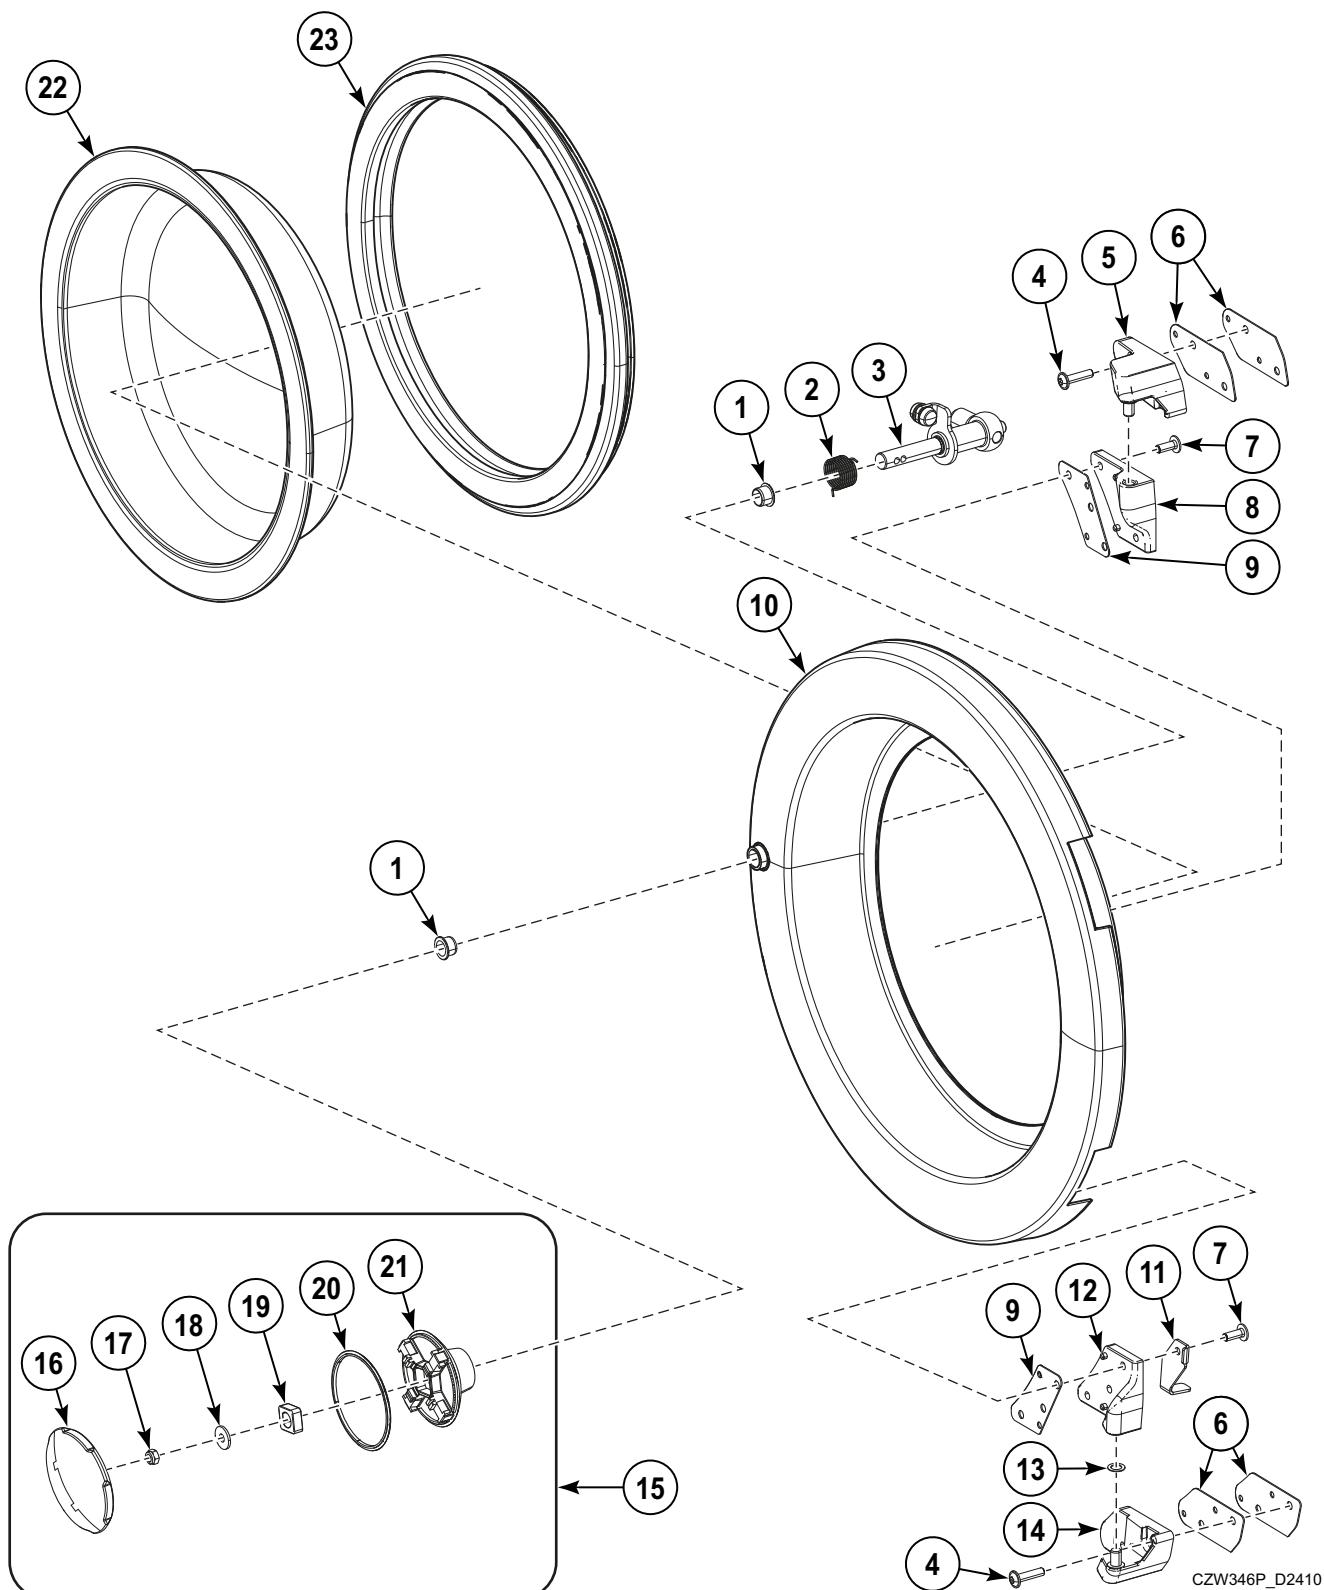


# Door

REF	PART NO.	DESCRIPTION	COMMENTS
	571764	Door Assembly	Gray; Includes items 1-23
	570553	Kit of Hinges	Includes items 568979, 568982, 575960, 575963 and 571642
<b>1</b>	SP529739	Casing	
<b>2</b>	SP535402	Handle Torsion Spring	
<b>3</b>	571762	Door Level	
<b>4</b>	SP535479	Bolt	M6x25
<b>5</b>	568979	Fixed Upper Hinge	
<b>6</b>	N/A	Shim	
<b>7</b>	SP537864	Bolt	M6x16
<b>8</b>	575960	Upper Hinge	with Case
<b>9</b>	SP535421	Hinge Spacer	
<b>10</b>	SP553526	Door	Gray
<b>11</b>	571633	Door Frame Sheet	
<b>12</b>	575963	Lower Hinge	with Case
<b>13</b>	571642	Washer	
<b>14</b>	568982	Fixed Hinge	Lower
<b>15</b>	571780	Handle	
<b>16</b>	SP535430	Holder Cover	
<b>17</b>	SP310985000006	Nut	M6
<b>18</b>	SP311902100006	Washer	M6
<b>19</b>	571773	Locating Segment	
<b>20</b>	582329	Distinguishing Ring	
<b>21</b>	571779	Handle Lower Part	
<b>22</b>	SP535417	Door Glass	
<b>23</b>	568991	Service Door Kit	

N/A = Part no longer available

# Door Lock (Drawing 1 of 2)

Models with V in 7th Position of the model number Through 28 February 2021

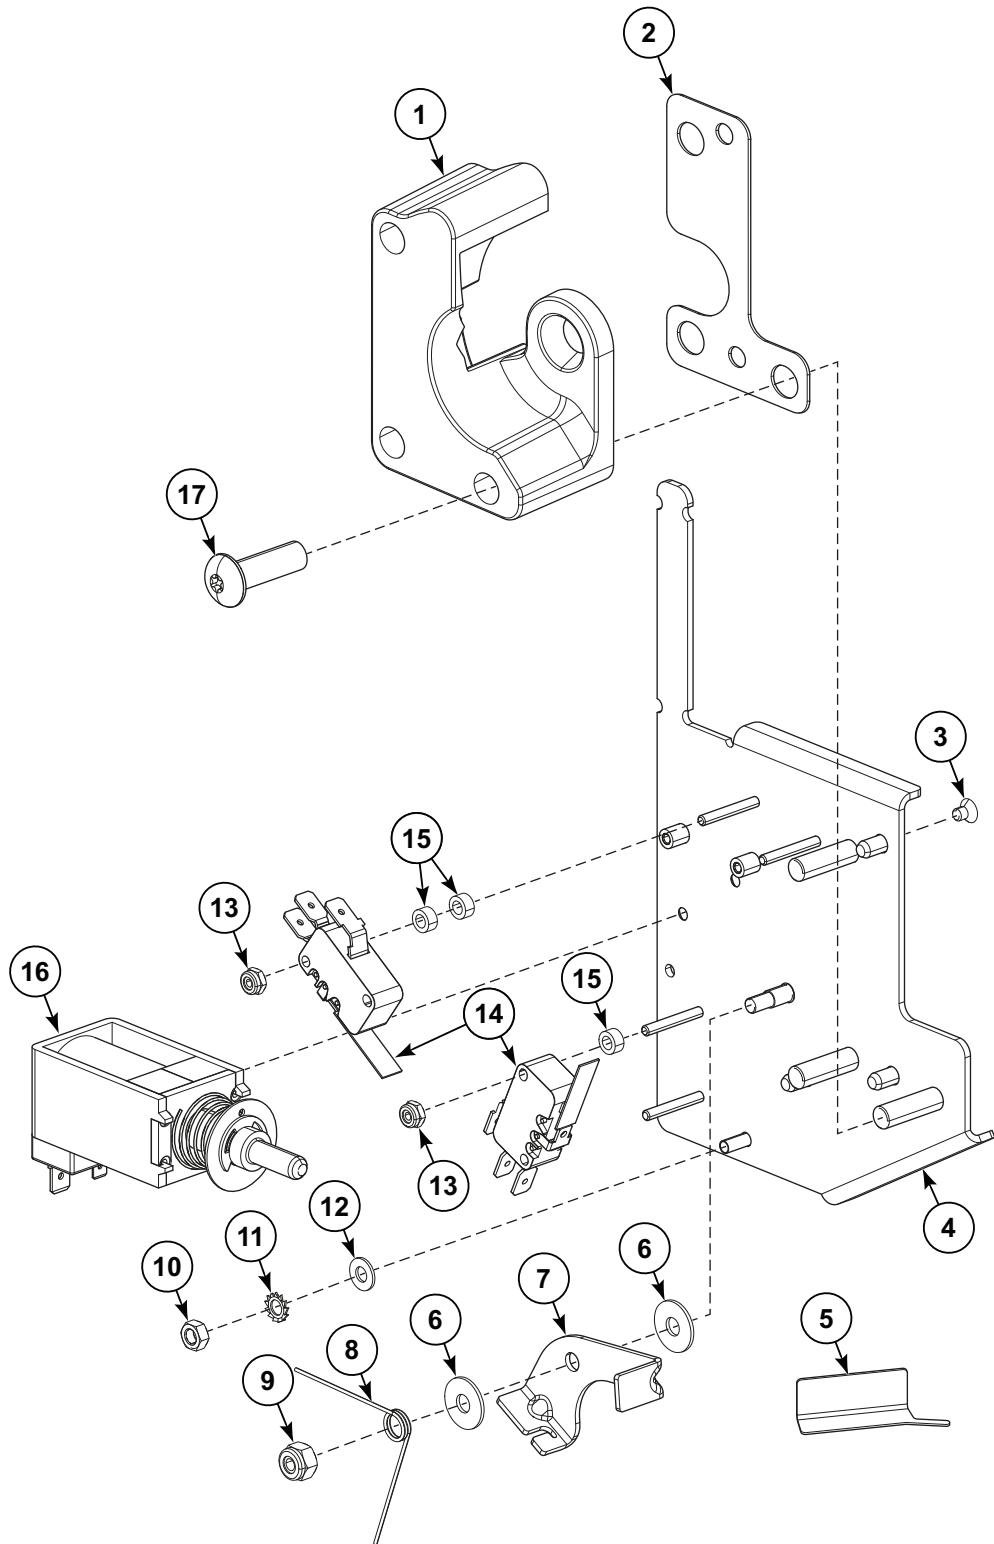


CZW588P\_D1714

## Door Lock (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	576085	Door Lock Assembly	Includes item 1-17, 569751 Door Lock Cable, SP345000160996 Binding Strip, 571466 Door Lock Switch Cable
1	576084	Door Lock Casting	
2	582327	Washer	
3	F430977	Screw	
4	568971	Door Lock Plate	
5	571615	Emergency Opener	For door lock
6	F8193101	Washer	
7	568941	Closing Plate	
8	571612	Torsion/Door Lock Spring	
9	F430232	Nut	
10	SP310934240004	Nut	M4
11	SP311679824004	Washer	4
12	SP311125240004	Washer	4
13	F430225	Nut	
14	568978	Microswitch	
15	F431901	Spacer	
16	568942	Coil	
17	F8270701	Bolt	Stainless
	568968	Bolt	Black

## Door Lock (Drawing 2 of 2)

Models with V in 7th position of the model number Starting 1 March 2021

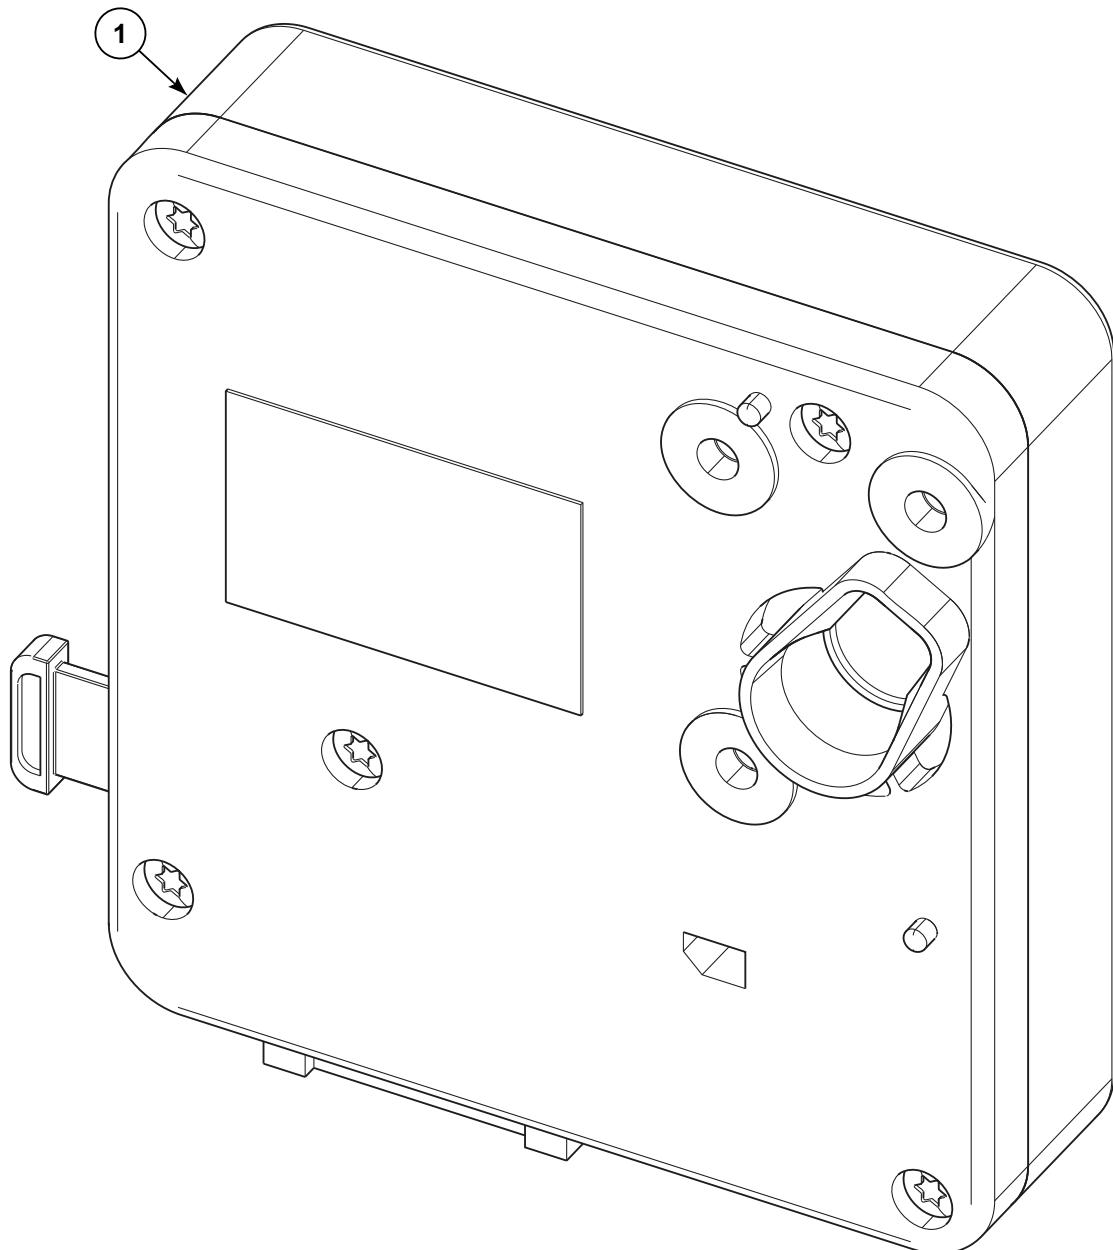


CZW360P\_D2410

## Door Lock (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP537760	Door Lock Assembly	

# Water Inlet System

Models with A, D, F, I, J, R, T or X in 7th position of the model number

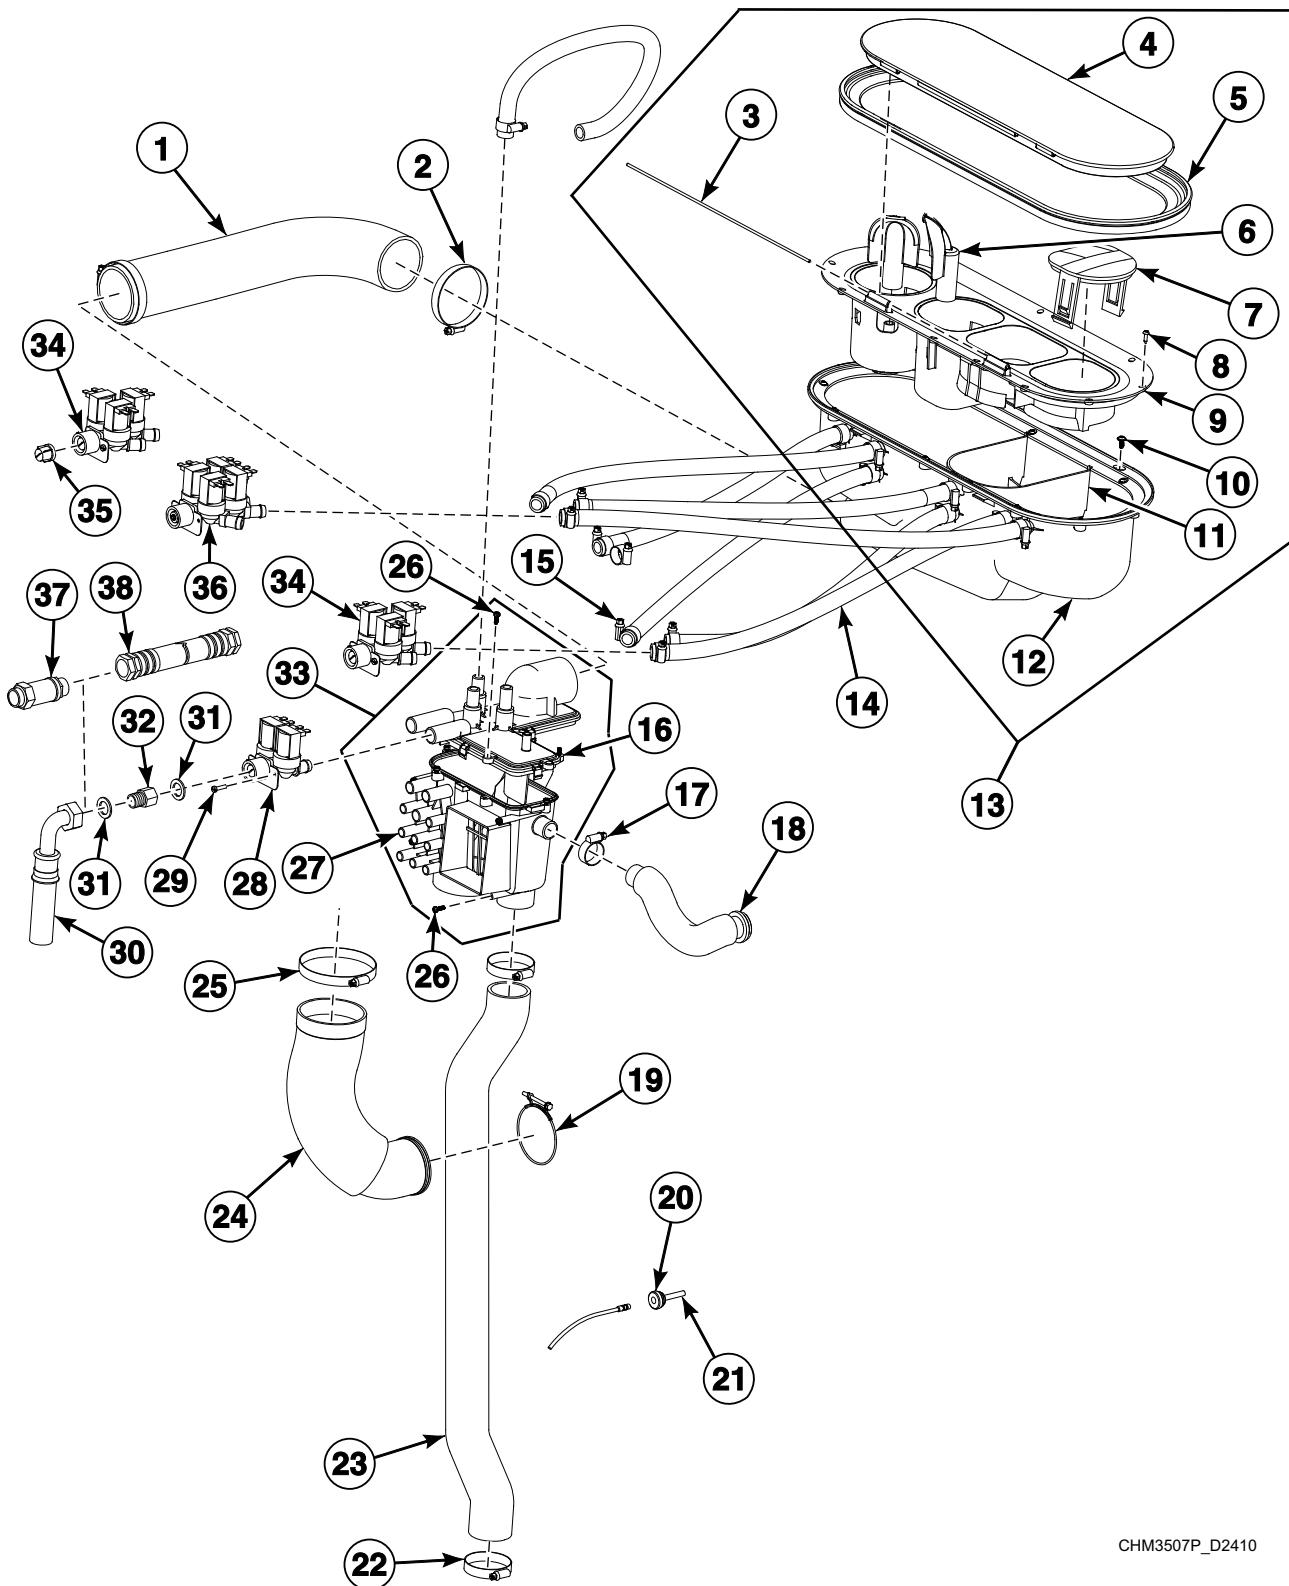


CHM3507P\_D2410

# Water Inlet System

REF	PART NO.	DESCRIPTION	COMMENTS
	F8301201	Double Check Valve	J models
	573621	1-Way Valve	Model SY135_KIS_PHOTO-ME; without Flow Regulator
1	SP526488	Dispenser Pipe	
2	SPPRI240000021	Hose Clamp	60-80
3	SP540117	Pin	
4	SP551695	Dispenser Lid	HY, SY, and UY models
	SP526461	Dispenser Lid	All other models
5	SP540158	Dispenser Seal	
6	SP540113	Flap	
7	SP526468	Soap Hopper Plug	
8	SP309798124313	Screw	ST3.5x13
9	SP540112	Soap Hopper Upper Cover	
10	SP529206	Screw	4x11
11	SP540122	Internal Vessel	
12	SP540115	Main Vessel	Requires SPPRI704000053 Silicon Sealant
13	SP554213	Soap Hopper	HY, SY, and UY models
	SP540111	Soap Hopper	All other models
14	SPPRI540000014	Hose	13/19
	SP101745	Hose Pipe	Valid for water approval
15	SPPRI240000002	Hose Clamp	12-22
16	SP526557	Mixer Lid	
17	SPPRI240000003	Hose Clamp	20-32
18	SP526482	Vent Hose	
19	SP526491	Hose Clamp	62-70
20	SP526439	Temperature Sensor Seal	
21	503839	Temperature Sensor	
22	SPPRI240000017	Hose Clamp	40-60
23	SP526480	Overflow Tube	
24	SP526506	Filling Elbow Pipe	
25	SPPRI240000007	Hose Clamp	70-90
26	SP526497	Screw	4x12
27	SP526565	Mixer Body	
28	SP547958	2-Way Valve	3/4 inch
29	SP309084000416	Bolt	4x16
30	SPPRI505000054	Filling Hose Pipe	Used with cold water
	SP547980	Filling Hose Pipe	Used with hot water
	SP101621	Filling Hose Pipe	Valid for water approval
	F200164	Water Hose	CSA
31	SPPRI520001009	Seal	
32	567174	Reduction	3/4 inch; BSP/GHT; CSA
33	SP526558	Mixer	
34	SP547959	3-Way Valve	3/4 inch
35	SPPRI340004030	Filter	
36	SP548933	4-Way Valve	3/4 inch
37	F200166	Filling Hose Pipe	IYY, LYY, NYY, PYY, SYY, and UYY models
38	B12543901	Check Valve	IYY, LYY, NYY, PYY, SYY, and UYY models

## Two Water Inlet System

Models with V in 7th position of the model number

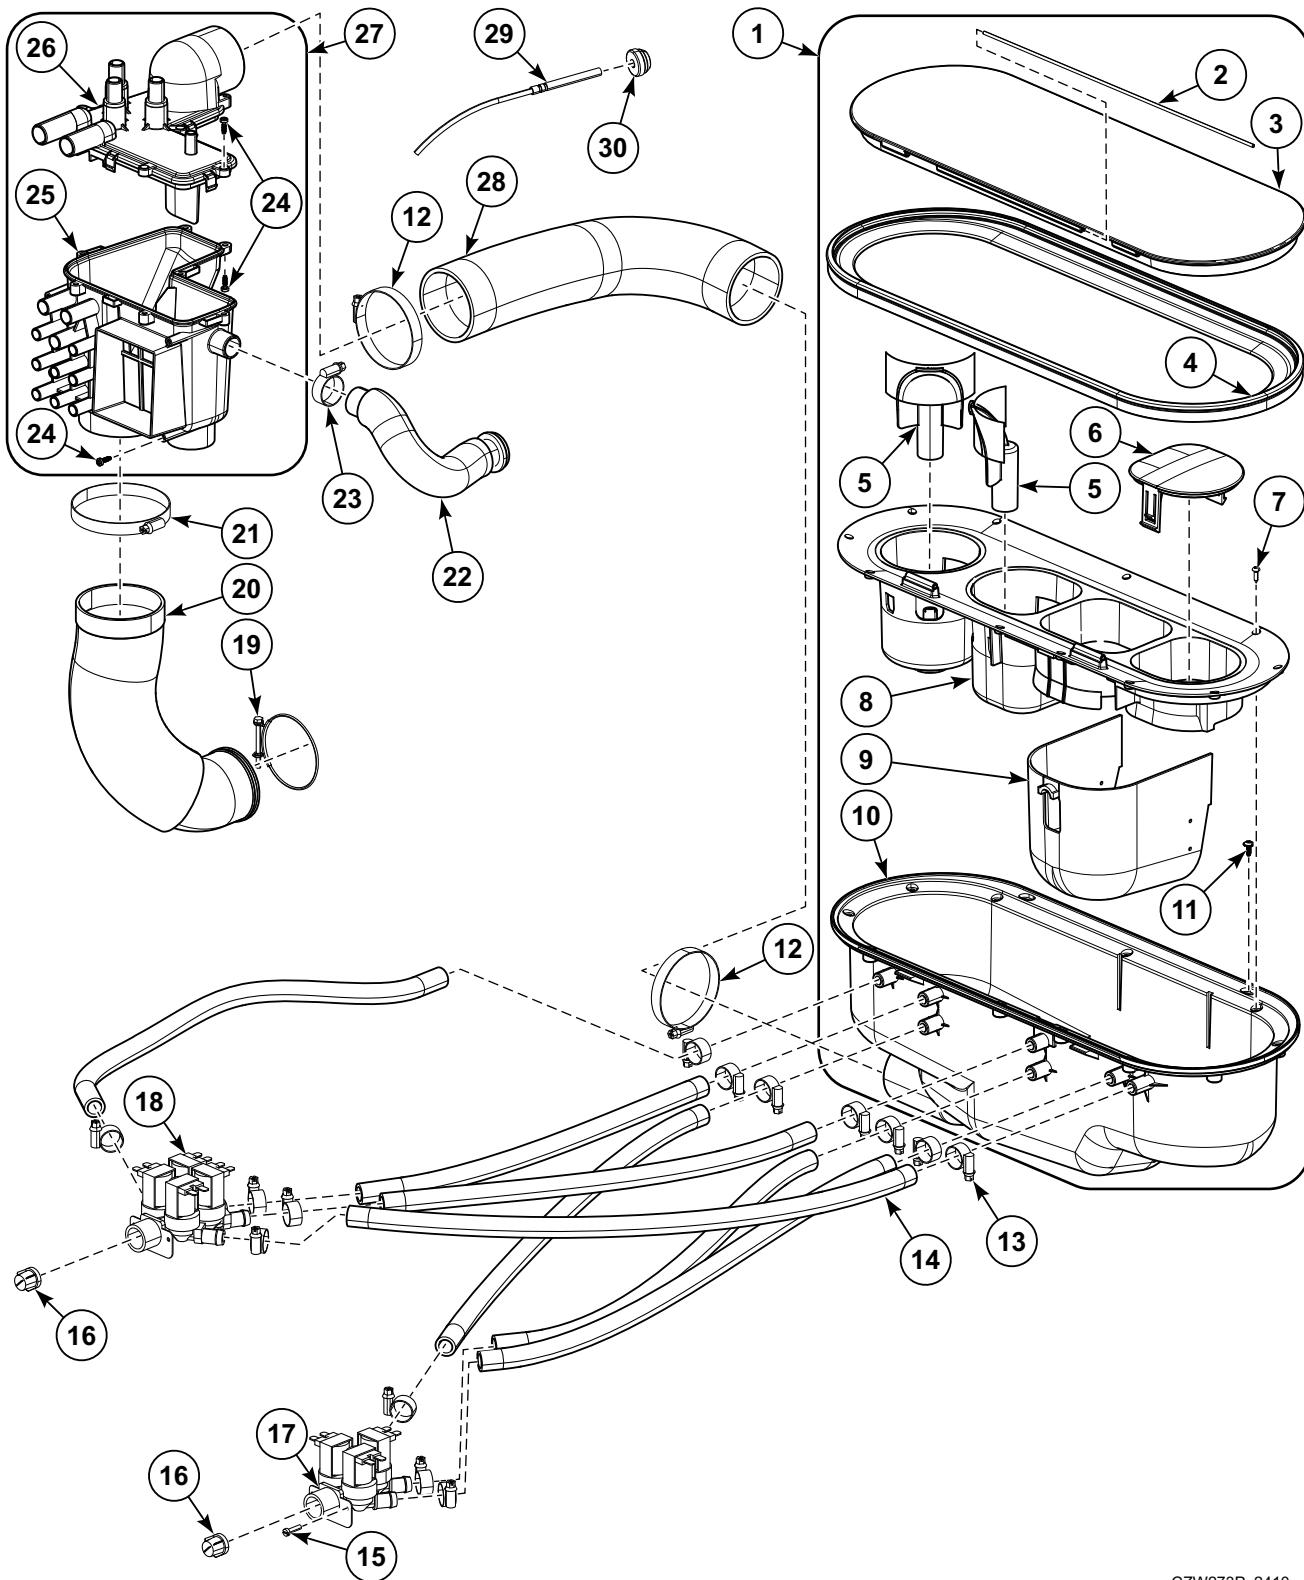


CZW273P\_2410

## Two Water Inlet System

REF	PART NO.	DESCRIPTION	COMMENTS
	SPPRI505000054	Filling Hose Pipe	Used with cold water and with SPPRI520001009 Seal
	SP547980	Filling Hose Pipe	Used with hot water and with SPPRI520001009 Seal
	SP101621	Filling Hose Pipe	Valid for water approval WRAS; Used with SPPRI520001009 Seal
	F200164	Water Hose	CSA models; Used with SPPRI520001009 Seal and 567174 Reduction
<b>1</b>	SP540111	Soap Hopper	
<b>2</b>	SP540117	Pin	
<b>3</b>	SP526461	Dispenser Lid	
	573922	Dispenser Lid	CSA models
<b>4</b>	SP540158	Dispenser Seal	
<b>5</b>	SP540113	Flap	
<b>6</b>	SP526468	Soap Hopper Plug	
<b>7</b>	SP309798124313	Screw	ST3.5x13
<b>8</b>	SP540112	Soap Hopper Upper Cover	
<b>9</b>	SP540122	Internal Vessel	
<b>10</b>	SP540115	Main Vessel	
<b>11</b>	SP529206	Screw	
<b>12</b>	SPPRI240000021	Hose Clamp	60-80
<b>13</b>	SPPRI240000002	Hose Clamp	12-22
<b>14</b>	SPPRI540000014	Hose	13-19
	SP101745	Hose Pipe	Used with Water Approval WRAS
<b>15</b>	SP309084000416	Bolt	M4x16
<b>16</b>	SPPRI340004030	Filter	
<b>17</b>	SP547959	3-Way Valve	3/4 inch
<b>18</b>	SP548933	4-Way Valve	3/4 inch
<b>19</b>	SP526491	Hose Clamp	62-70
<b>20</b>	SP526506	Filling Elbow Pipe	
<b>21</b>	SPPRI240000007	Hose Clamp	70-90
<b>22</b>	SP526482	Vent Hose	
<b>23</b>	SPPRI240000003	Hose Clamp	
<b>24</b>	SP526497	Screw	4x12
<b>25</b>	SP526565	Mixer Body	
<b>26</b>	SP526557	Mixer Lid	
<b>27</b>	SP526558	Mixer	
<b>28</b>	SP526488	Dispenser Pipe	
<b>29</b>	503839	Temperature Sensor	
<b>30</b>	SP526439	Temperature Sensor Seal	

# Three Water Inlet System

Models with V in 7th position of the model number

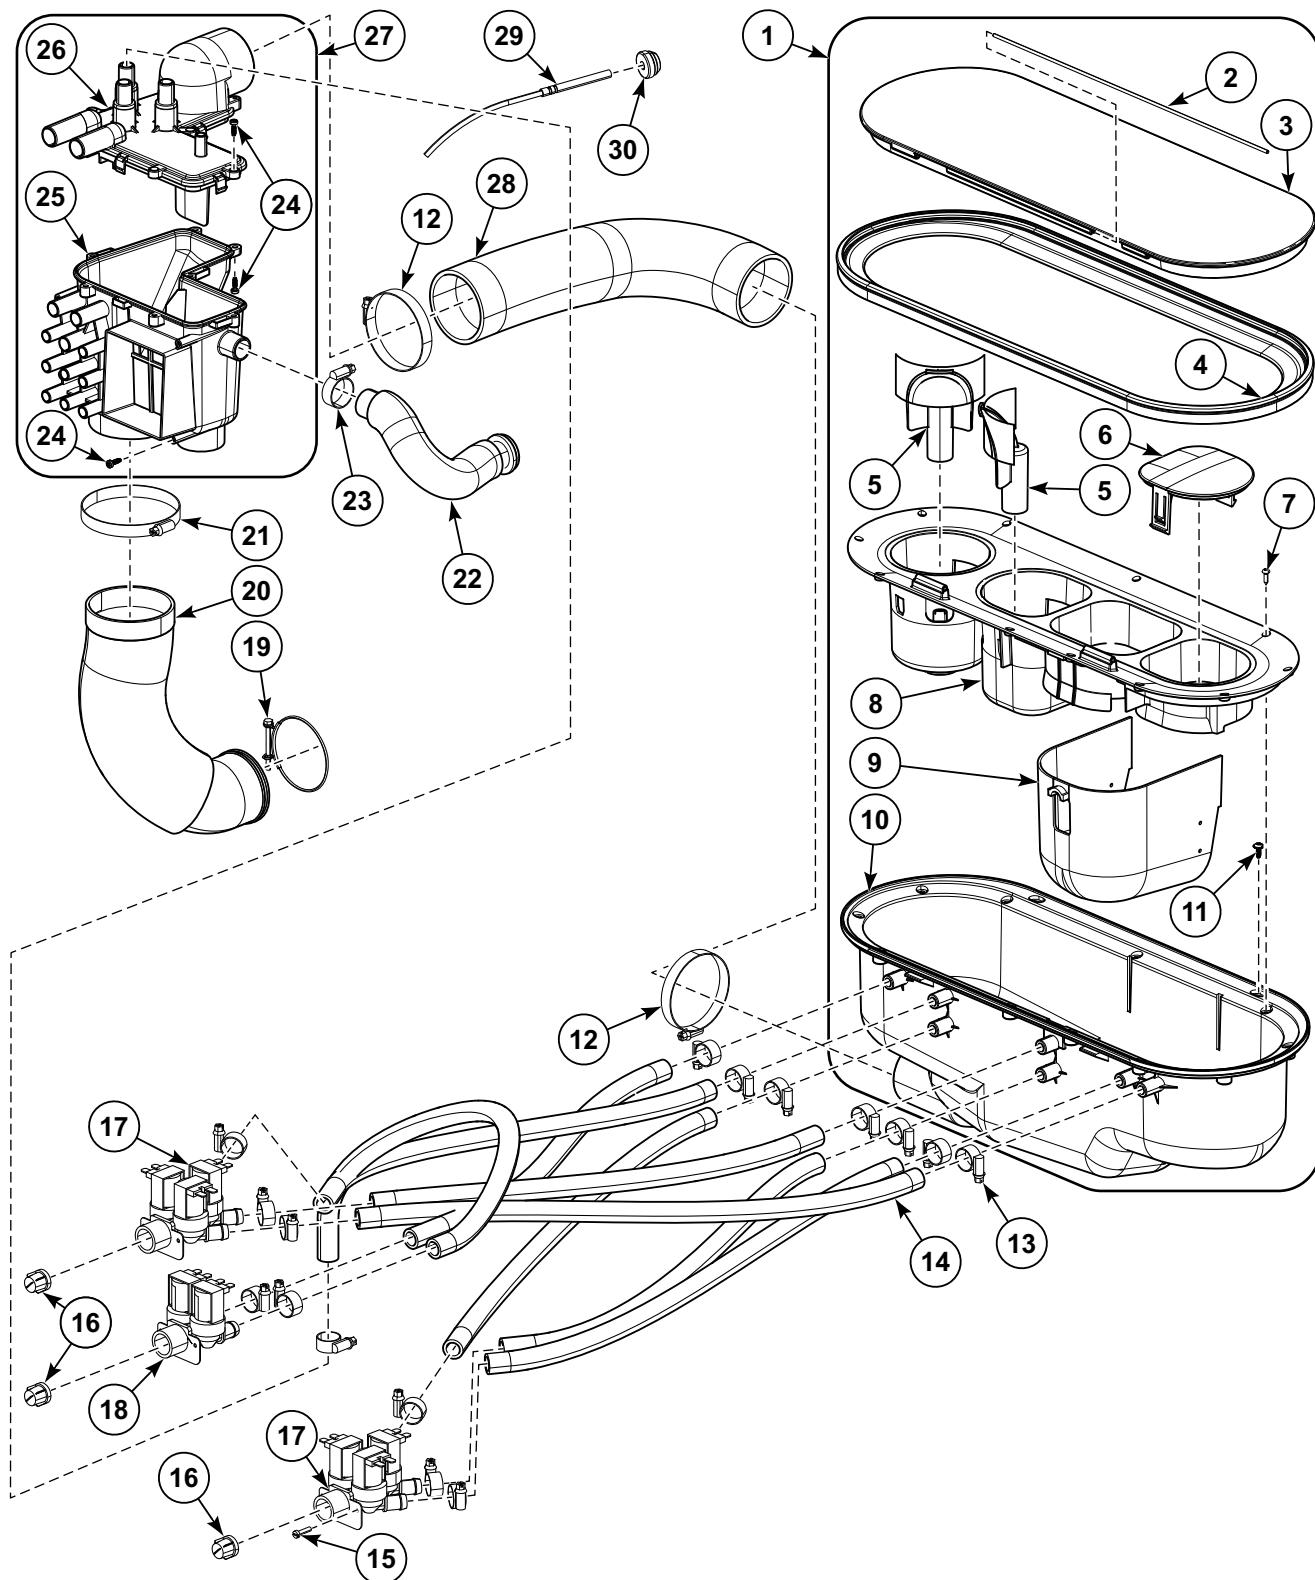


CZW274P\_D2410

## Three Water Inlet System

REF	PART NO.	DESCRIPTION	COMMENTS
	SPPRI505000054	Filling Hose Pipe	Used with cold water and with SPPRI520001009 Seal
	SP547980	Filling Hose Pipe	Used with hot water and with SPPRI520001009 Seal
	SP101621	Filling Hose Pipe	Valid for water approval WRAS; Used with SPPRI520001009 Seal
	F200164	Water Hose	CSA models; Used with SPPRI520001009 Seal and 567174 Reduction
<b>1</b>	SP540111	Soap Hopper	
<b>2</b>	SP540117	Pin	
<b>3</b>	SP526461	Dispenser Lid	
	573922	Dispenser Lid	CSA models
<b>4</b>	SP540158	Dispenser Seal	
<b>5</b>	SP540113	Flap	
<b>6</b>	SP526468	Soap Hopper Plug	
<b>7</b>	SP309798124313	Screw	ST3.5x13
<b>8</b>	SP540112	Soap Hopper Upper Cover	
<b>9</b>	SP540122	Internal Vessel	
<b>10</b>	SP540115	Main Vessel	
<b>11</b>	SP529206	Screw	
<b>12</b>	SPPRI240000021	Hose Clamp	60-80
<b>13</b>	SPPRI240000002	Hose Clamp	12-22
<b>14</b>	SPPRI540000014	Hose	13-19
	SP101745	Hose Pipe	Used with Water Approval WRAS
<b>15</b>	SP309084000416	Bolt	M4x16
<b>16</b>	SPPRI340004030	Filter	
<b>17</b>	SP547959	3-Way Valve	3/4 inch
<b>18</b>	SP547958	2-Way Valve	3/4 inch
<b>19</b>	SP526491	Hose Clamp	62-70
<b>20</b>	SP526506	Filling Elbow Pipe	
<b>21</b>	SPPRI240000007	Hose Clamp	70-90
<b>22</b>	SP526482	Vent Hose	
<b>23</b>	SPPRI240000003	Hose Clamp	
<b>24</b>	SP526497	Screw	4x12
<b>25</b>	SP526565	Mixer Body	
<b>26</b>	SP526557	Mixer Lid	
<b>27</b>	SP526558	Mixer	
<b>28</b>	SP526488	Dispenser Pipe	
<b>29</b>	503839	Temperature Sensor	
<b>30</b>	SP526439	Temperature Sensor Seal	

# Drain System (Drawing 1 of 2)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

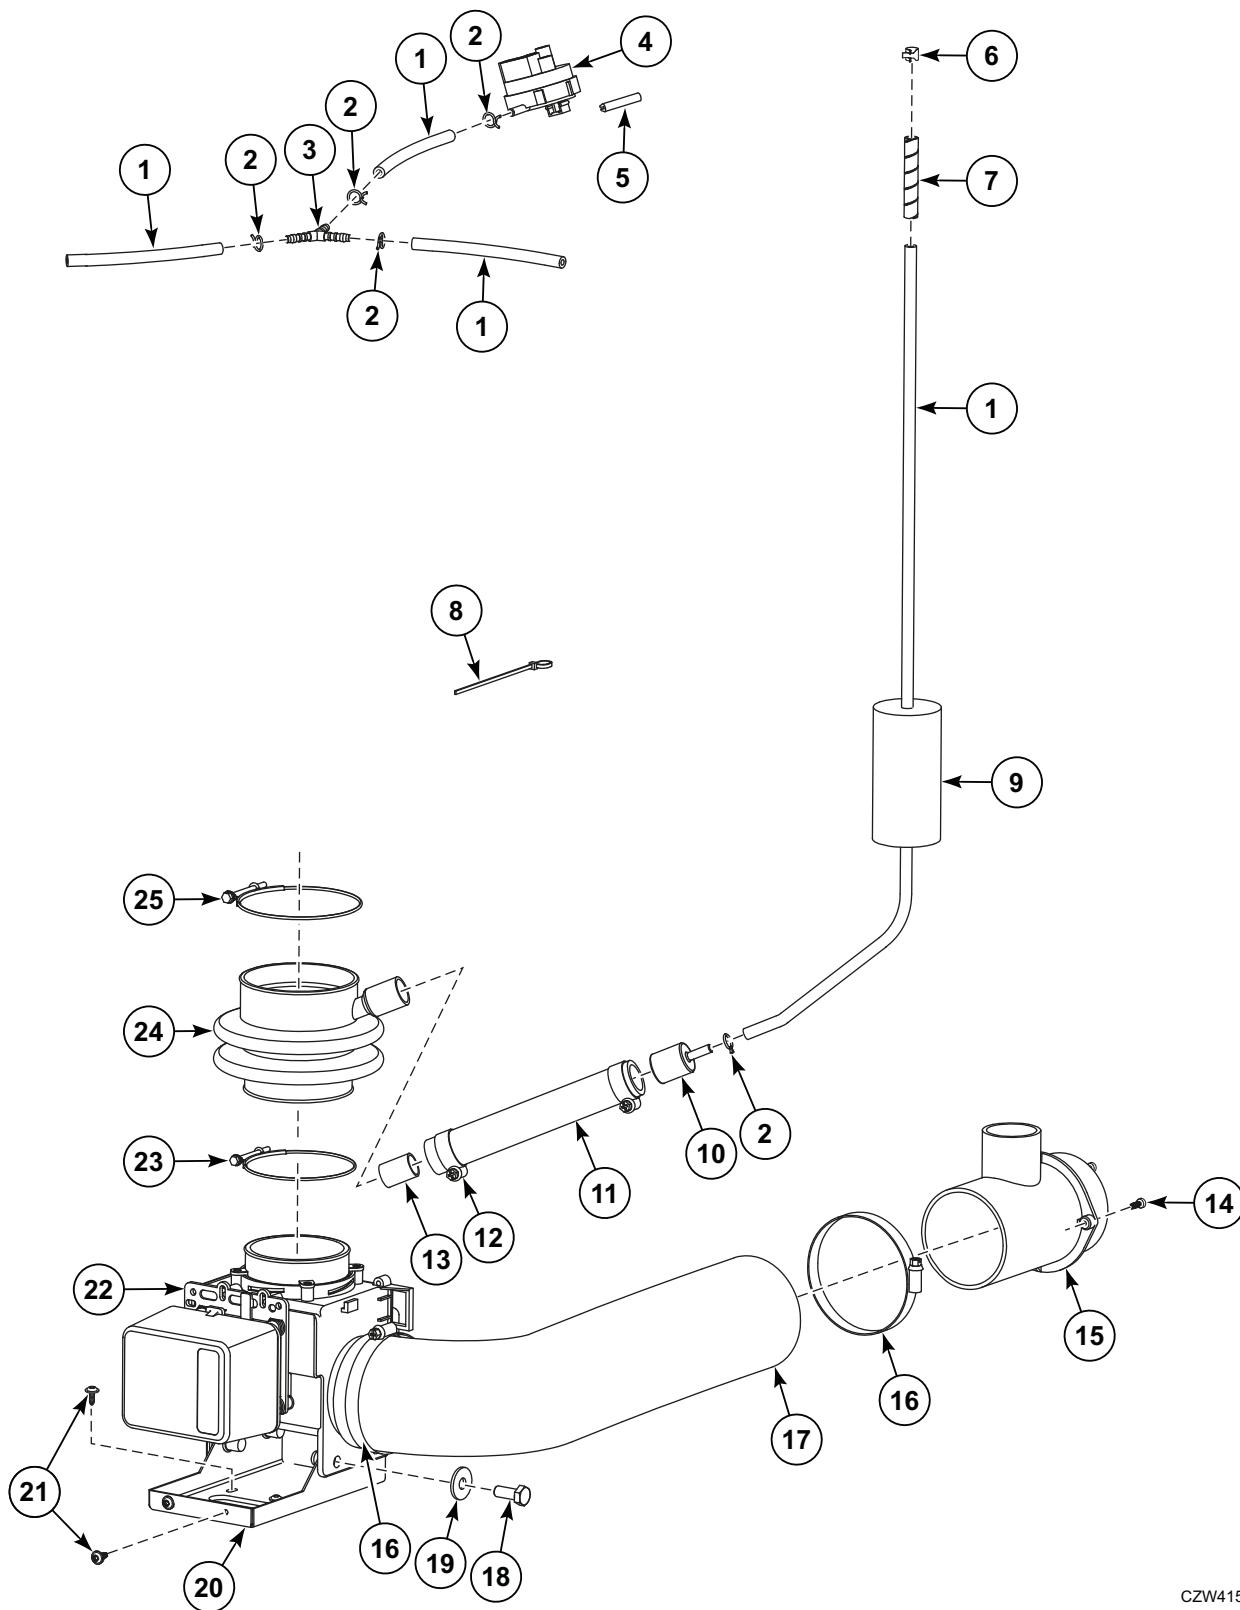


CZW415P\_D2410

# Drain System (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	567128	Reduction	J, FX135_BUPA_X_CONTROL and FX135_BUPA_X_CONTROL_PLUS models; CE from 3 inches to 2 inches
	SPPRI505000087	Drain Hose Pipe	Model SY135_KIS_PHOTO-ME; l=230mm; Used with SPPRI240000007 Hose Claamp
1	SPPRI540001003	Water Level Switch Hose	
2	SPPRI241000017	Hose Clamp	A5.5
3	SPPRI503000028	Y-Piece	J models
4	SP562709	Waters Level Sensor	J models
5	SPPRI505000058	Profiled Sealing	J models
6	SP540183	Spring Clamp	
7	SP283449080200	Spiral	
8	SP345000626088	Binding Strip	
9	SP100188	Foam Roller	
10	SPPRI503000027	Air Trap Reduction	
11	SPPRI503002049	Hose	Air trap
12	SPPRI240000003	Hose Clamp	20-32
13	SP500125	Reinforcement Tube	
14	SP526497	Screw	4x12
15	SP526454	Tee	
16	SPPRI240000007	Hose Clamp	70-90
17	SP526498	Drain Elbow	
18	SP309933000820	Bolt	M8x20
19	SP311902100008	Washer	8
20	SP526512	Drain Valve Holder	
21	SP529206	Screw	4x11
22	SP526460	Drain Valve	Black; Includes 553195 Drain Valve Chamber, SPPRI340002051 Drain Valve Motor and 554276 Drain Valve Seal
	553195	Drain Valve Chamber	Black
	SPPRI340002051	Drain Valve Motor	Includes gear box
	SP547821	Reverse Function Drain Valve	CE and Watermark; Black; Includes 553195 Drain Valve Chamber, SPPRI340002051 Drain Valve Motor and 554276 Drain Valve Seal
	554276	Drain Valve Seal	
23	576096	Hose Clamp	78-55
24	SP526492	Drain Hose Pipe	
25	SP526532	Hose Clamp	82-90

## Drain System (Drawing 2 of 2)

Models with V in 7th position of the model number

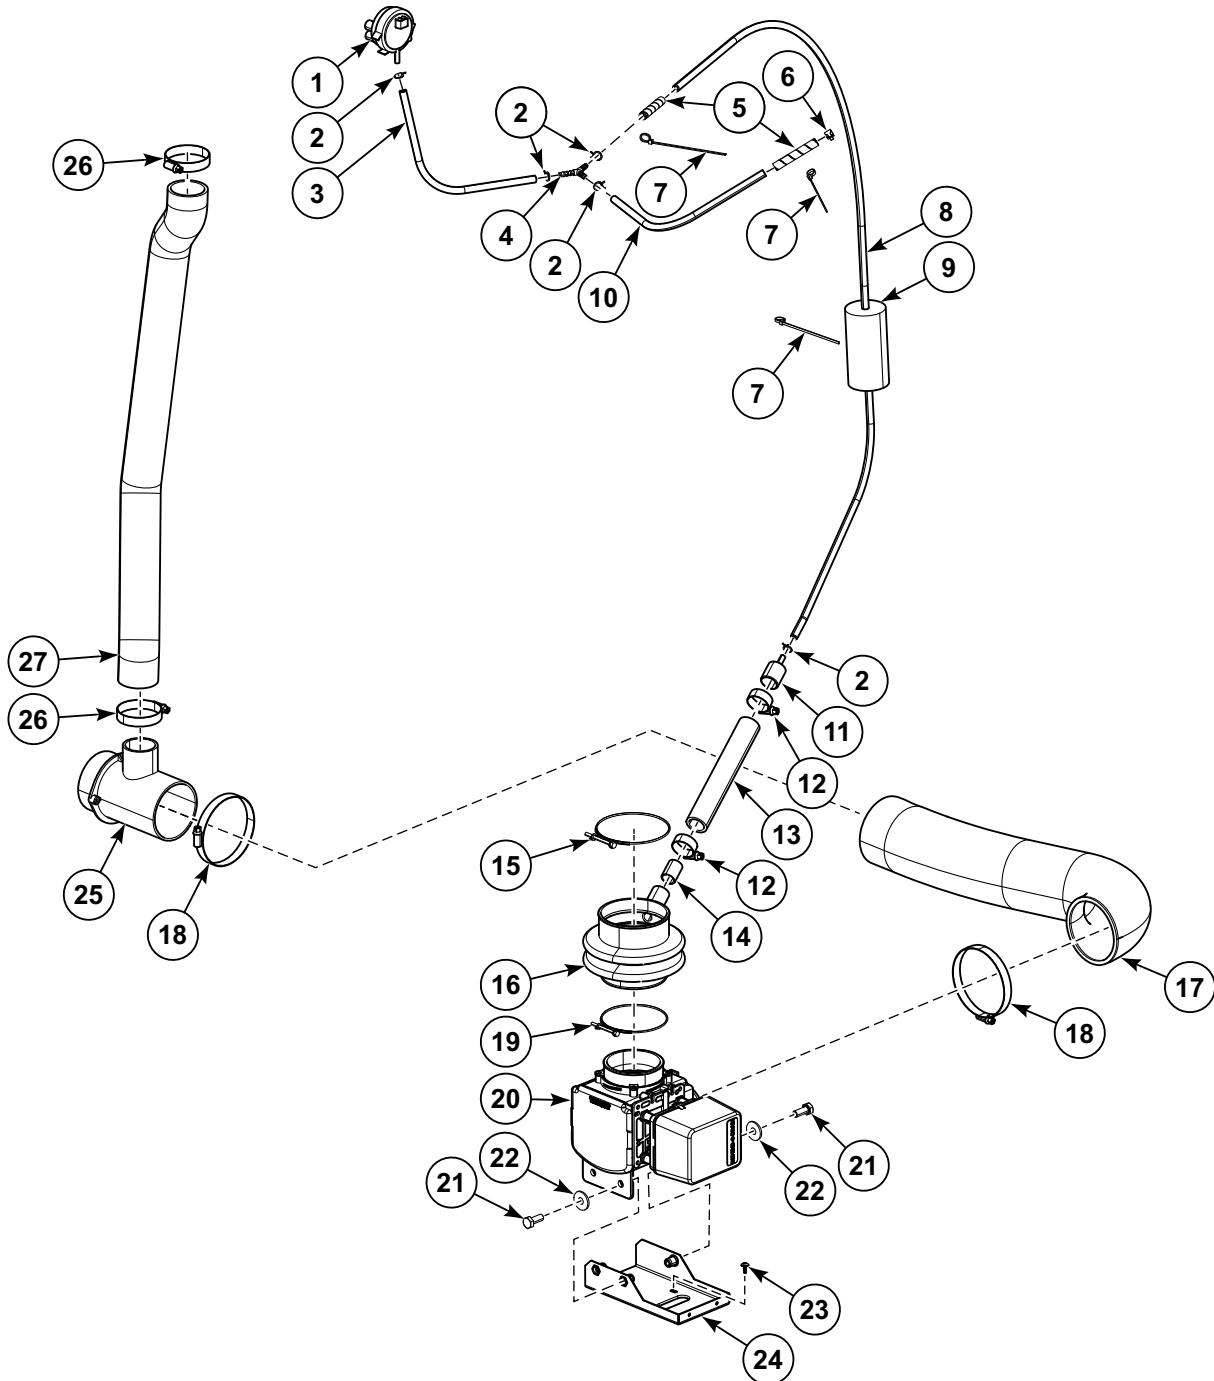


CZW416P\_D2410

## Drain System (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	570315	Water Level Switch	
2	SPPRI241000017	Hose Clamp	A5.5
3	SPPRI540001003	Water Level Switch Hose	12.2 inch (0.31 m)
4	SPPRI503000028	Y-Piece	
5	SP283449080200	Spiral	
6	SP540183	Spring Clamp	
7	SP345000626088	Binding Strip	
8	SPPRI540001003	Water Level Switch Hose	31.5 inch (0.8 m)
9	SP100188	Foam Roller	
10	SPPRI540001003	Water Level Switch Hose	11.42 inch (0.29 m)
11	SPPRI503000027	Air Trap Reduction	
12	SPPRI240000003	Hose Clamp	20-32
13	SPPRI503002049	Hose	Air trap
14	SP500125	Reinforcement Tube	
15	SP526532	Hose Clamp	82-90
16	SP526492	Drain Hose Pipe	
17	SP526498	Drain Elbow	
18	SPPRI240000007	Hose Clamp	70-90
19	576096	Hose Clamp	78-85
20	SP526460	Drain Valve	Black; Includes SPPRI340002051 Drain Valve Motor and 554276 Drain Valve Seal
	SP547821	Reverse Function Drain Valve	Black; Includes SPPRI340002051 Drain Valve Motor and 554276 Drain Valve Seal
	SPPRI340002051	Drain Valve Motor	Includes gear box
	554276	Drain Valve Seal	
21	SP309933000820	Bolt	M8x20
22	SP311902100008	Washer	8
23	SP529206	Screw	4x11
24	SP526512	Drain Valve Holder	
25	SP526454	Tee	
26	SPPRI240000017	Hose Clamp	40-60
27	SP526480	Overflow Tube	

## Drain System - J Models with V in 7th Position

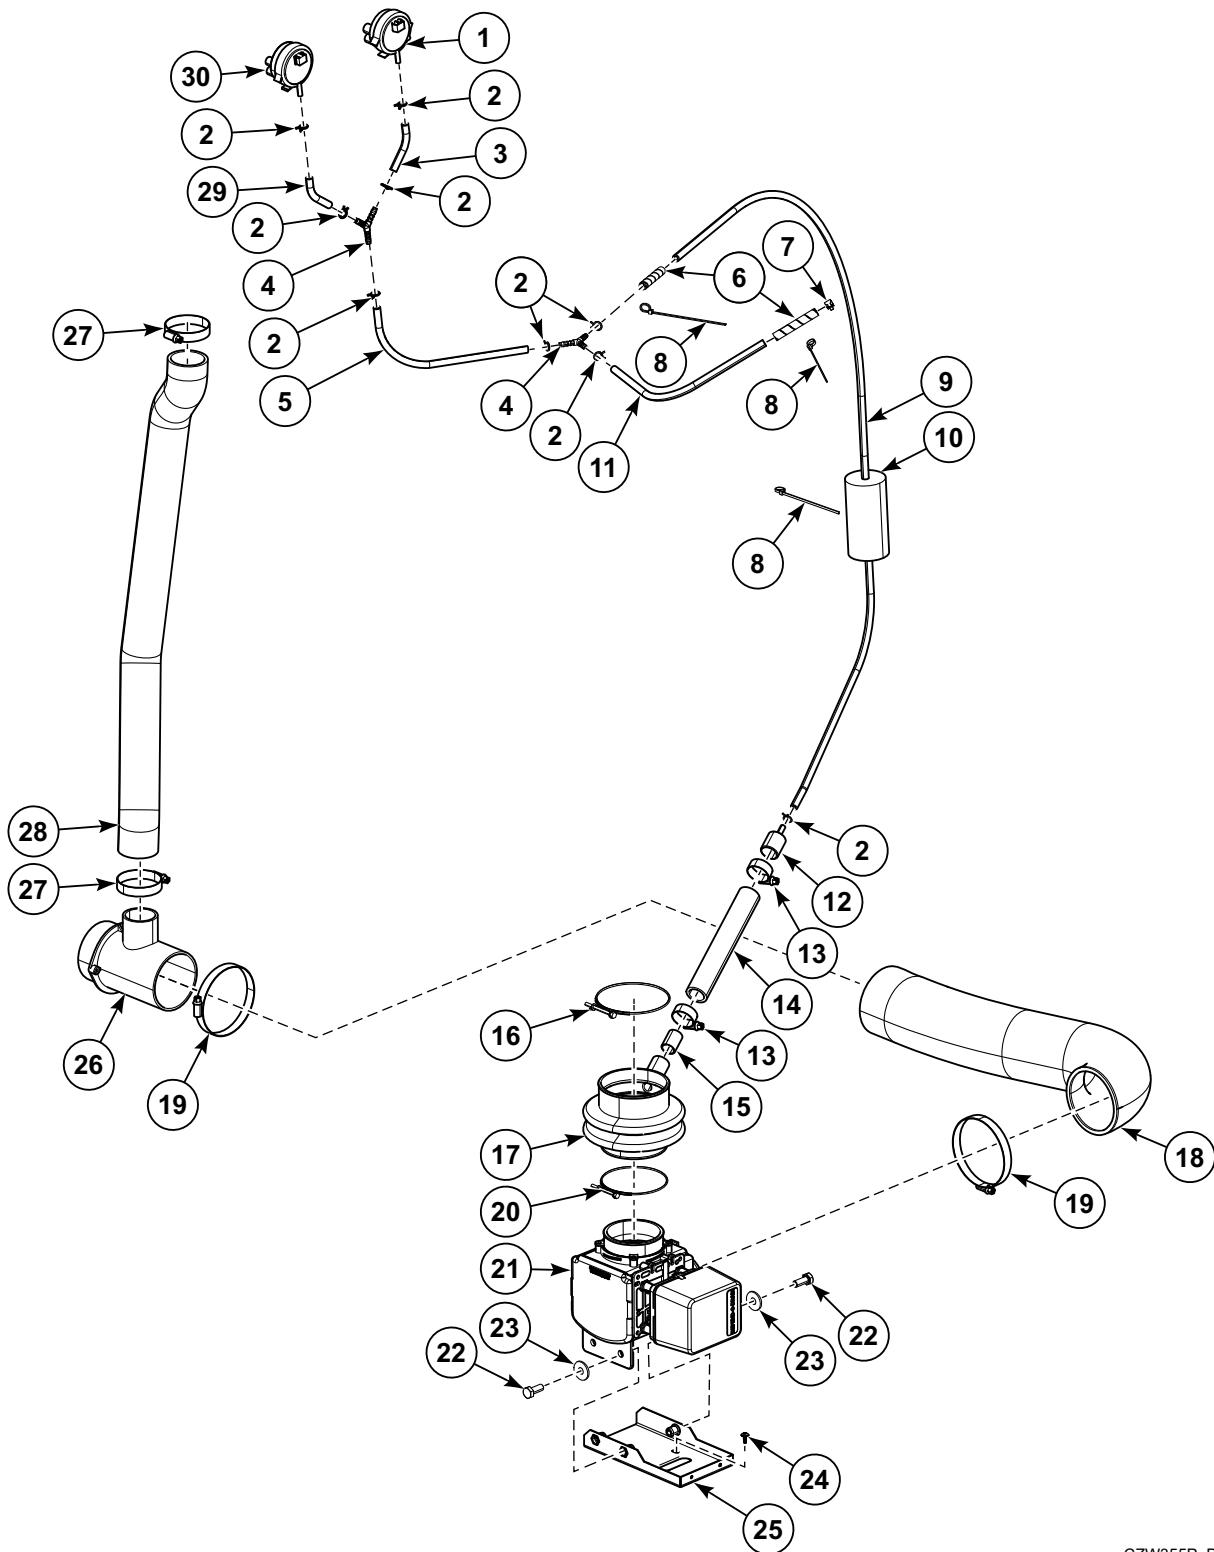


CZW355P\_D2410

## Drain System - J Models with V in 7th Position

REF	PART NO.	DESCRIPTION	COMMENTS
1	570315	Water Level Switch	
2	SPPRI241000017	Hose Clamp	A5.5
3	SPPRI540001003	Water Level Switch Hose	2.76 inch (0.07 m)
4	SPPRI503000028	Y-Piece	
5	SPPRI540001003	Water Level Switch Hose	7.87 inch (0.2 m)
6	SP283449080200	Spiral	
7	SP540183	Spring Clamp	
8	SP345000626088	Binding Strip	
9	SPPRI540001003	Water Level Switch Hose	37.4 inch (0.95 m)
10	SP100188	Foam Roller	
11	SPPRI540001003	Water Level Switch Hose	12.20 inch (0.31 m)
12	SPPRI503000027	Air Trap Reduction	
13	SPPRI240000003	Hose Clamp	20-32
14	SPPRI503002049	Hose	Air trap
15	SP500125	Reinforcement Tube	
16	SP526532	Hose Clamp	82-90
17	SP526492	Drain Hose Pipe	
18	SP526498	Drain Elbow	
19	SPPRI240000007	Hose Clamp	70-90
20	576096	Hose Clamp	78-85
21	SP526460	Drain Valve	Black; Includes SPPRI340002051 Drain Valve Motor and 554276 Drain Valve Seal
	SP547821	Reverse Function Drain Valve	Black; Includes SPPRI340002051 Drain Valve Motor and 554276 Drain Valve Seal
	SPPRI340002051	Drain Valve Motor	Includes gear box
	554276	Drain Valve Seal	
22	SP309933000820	Bolt	M8x20
23	SP311902100008	Washer	8
24	SP529206	Screw	4x11
25	SP526512	Drain Valve Holder	
26	SP526454	Tee	
27	SPPRI240000017	Hose Clamp	40-60
28	SP526480	Overflow Tube	
29	SPPRI540001003	Water Level Switch Hose	2.76 inch (0.07 m)
30	562709	Water Level Switch	

## Rear Panel (Drawing 1 of 3)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

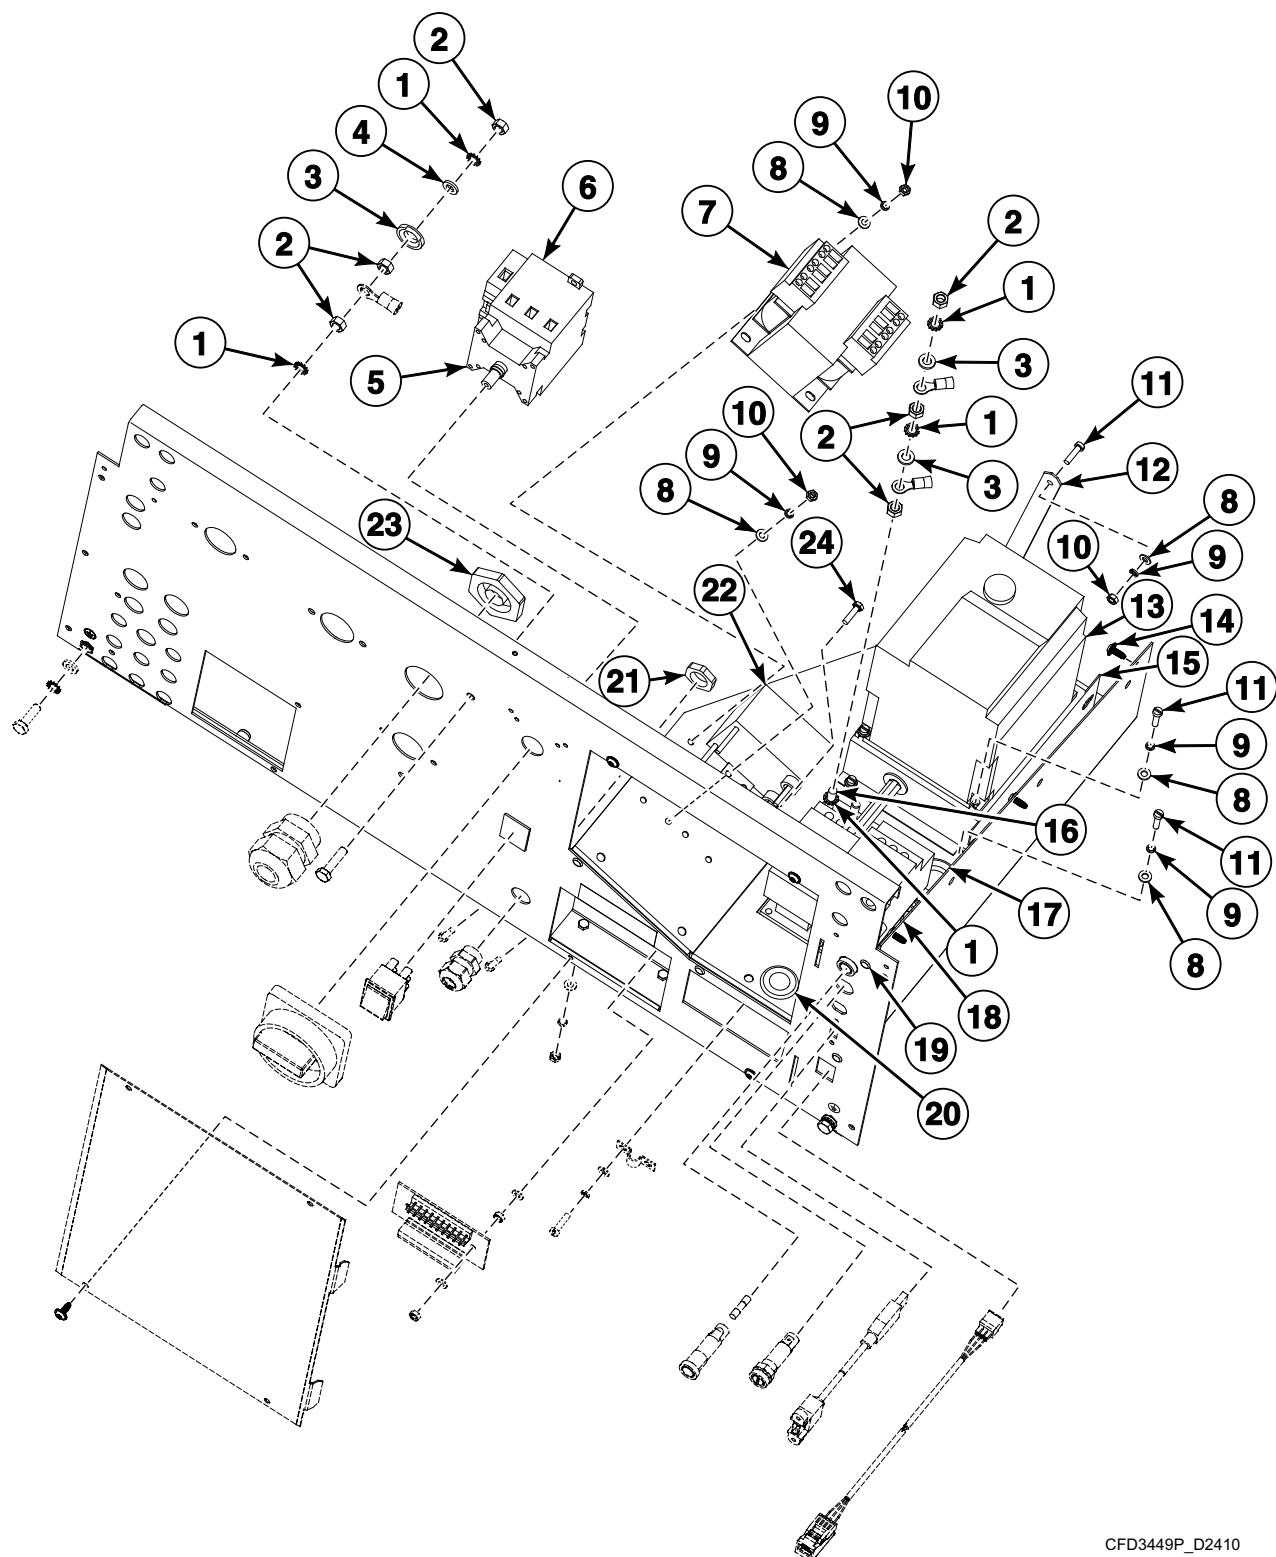


CFD3449P\_D2410

## Rear Panel (Drawing 1 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
	SP557768	Main Wiring	
	SP552475	Main Wiring	
	SP540180	Liquid Soap Supply Connection Kit	
	SPPRI350012007	Isolation Paper	
1	SP311679824006	Washer	M6
2	SP310934100006	Nut	M6
3	563361	Washer	CSA
4	SP311125100006	Washer	6.4
5	SP506407	Main Switch	25A; Fourth Pole
	SPPRI404001098	Main Switch	32A; Fourth Pole
	SPPRI404001099	Main Switch	63A; Fourth Pole
6	SPPRI404000098	Main Switch	32A
	SPPRI404000097	Main Switch	25A
	SPPRI404000099	Main Switch	63A
7	SP516648	Transformer	
8	SP311125000004	Washer	4.3
9	SP311127000004	Washer	4
10	SP310934000004	Nut	M4
11	SP309084000416	Bolt	M4x16
12	SP526474	Holder Partition	
	SP554382	Holder Partition	AF Non-Brand, H, HY, IY, J, LP, NY, SY and UY models
	SP540167	Holder Partition	AF, FX, HX, LY, MWF, PY, QW and SW models
13	571472	Frequency Inverter	FR-D720S-070
	571474	Frequency Inverter	FR-D740-036
	SP528323	Communication Cable	
	SP528325	Communication Cable	Model SY135_KIS_PHOTO-ME
14	SP529206	Screw	4x11
15	SP525935	Filter	FR-D740-xxx
16	SP309933100625	Bolt	M6x25
17	SP273121022002	Cable Passage	22x2; AF, FX, HX, LY, MWF, PY, QW and SW models through Serial No.135FX011672MB; AF Non-Brand, H, HY, IY, J, LP, NY, SY and UY models through Serial No. 135FX011416KZ
18	SPPRI345002019	Contactor	LC1D32M7
	SP514043	Contactor	LC1D50M7
	SP514038	Contactor	LC1-D09M7
	SP514042	Contactor	LC1D18M7
19	SP313250004007	Rivet	4x7
20	SP273121015002	Cable Passage	15x2; AF, FX, HX, LY, MWF, PY, QW and SW models through Serial No.135FX011672MB; AF Non-Brand, H, HY, IY, J, LP, NY, SY and UY models through Serial No. 135FX011416KZ
21	SP101416	Nut	M16
22	SP516012	Filter	FR-D720S-xxx
23	SP101419	Nut	M32
24	SP309933000416	Bolt	M4x16

## Rear Panel (Drawing 2 of 3)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

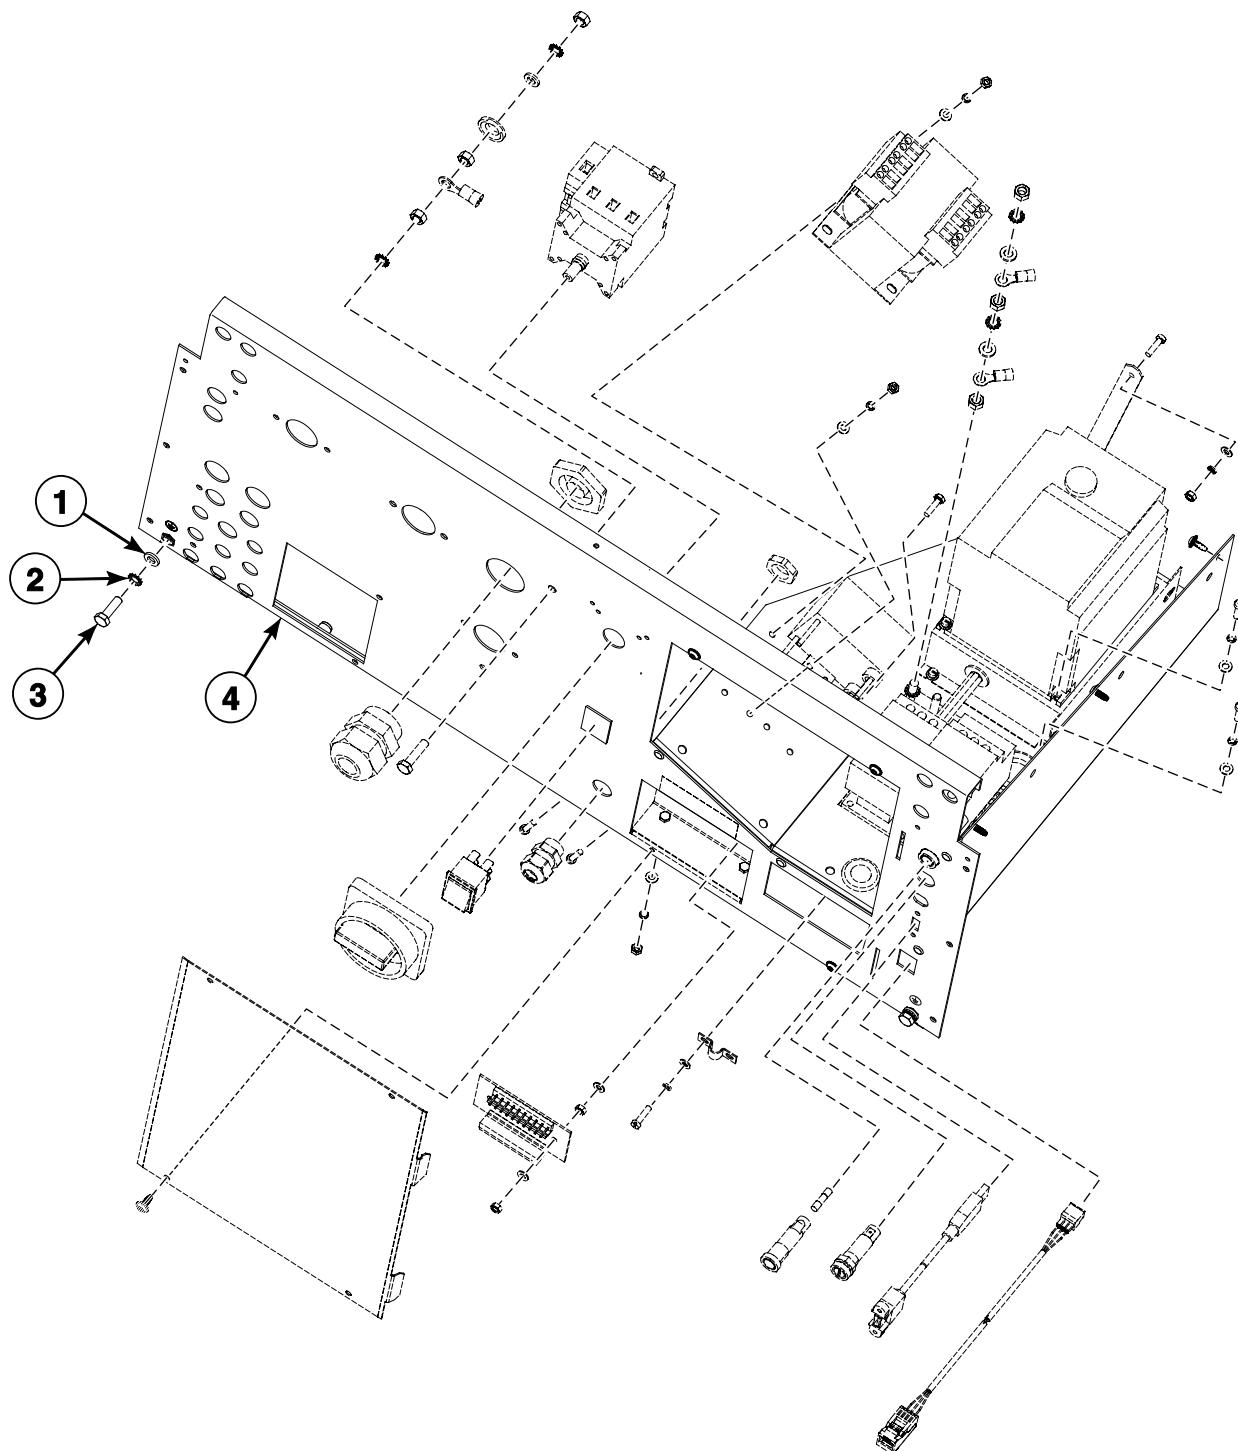


CFD3450P\_D2410

## Rear Panel (Drawing 2 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
	557982	Cable	Extra price option
	SP506575	Terminal Board	Extra price option
	557981	Label	Extra price option
	SP514057	Relay	RT424524; FX, IY, PY, SY and UY models; SoftWash with built-in recirculation pump; CE
	SP506586	Relay Case	RT78626; FX, IY, PY, SY and UY models; SoftWash with built-in recirculation pump; CE
	SP514135	Relay Clamp	FX, IY, PY, SY and UY models; SoftWash with built-in recirculation pump; Models through July 31, 2023; CE
	552482	Fuse Housing	RT17017; FX, IY, PY, SY and UY models; SoftWash with built-in recirculation pump; CE
	552483	End Cover	FX, IY, PY, SY and UY models; SoftWash with built-in recirculation pump; CE
	SPPRI401001021	Fuse	FX, IY, PY, SY and UY models; SoftWash with built-in recirculation pump; CE
	568308	Sticker	FX, IY, PY, SY and UY models; SoftWash with built-in recirculation pump; CE
	528169	Interconnection	5x20mm F4A/250V; FX, IY, PY, SY and UY models; SoftWash with built-in recirculation pump; CE
	SP545220	Interconnection	FX, IY, PY, SY and UY models; SoftWash with built-in recirculation pump; CE
	505448	Conductor	1-120V; FX, IY, PY, SY and UY models; SoftWash with built-in recirculation pump; CE
	SP505446	Conductor	1-160V; FX, IY, PY, SY and UY models; SoftWash with built-in recirculation pump; CE
	557936	Isolation Cavity	Black; FX, IY, PY, SY and UY models; SoftWash with built-in recirculation pump; CE
	345000966067	Isolation Cavity	Blue; FX, IY, PY, SY and UY models; SoftWash with built-in recirculation pump; CE
	345000034150	Cable Eye	Wire size range 0.34mm; FX, IY, PY, SY and UY models; SoftWash with built-in recirculation pump; CE
	SP503817	Binding Strip	Wire size range 0.75mm; FX, IY, PY, SY and UY models; SoftWash with built-in recirculation pump; CE
	SP534500062608	Binding Strip	M6/0.75; FX, IY, PY, SY and UY models; SoftWash with built-in recirculation pump; CE
	SP528313	Cable Holder	AMP 4-160974-1; 4.8x200; FX, IY, PY, SY and UY models; SoftWash with built-in recirculation pump; CE
1	SP311125240006	Washer	6.4
2	SP311679824006	Washer	M6
3	SP309933000620	Bolt	M6x20
4	SP554381	Rear Panel	AF Non-Brand, H, HY, IY, J, LP, NY, SY and UY models
	SP540149	Rear Panel	AF, FX, HX, LY, MWF, PY, QW and SW models

## Rear Panel (Drawing 3 of 3)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

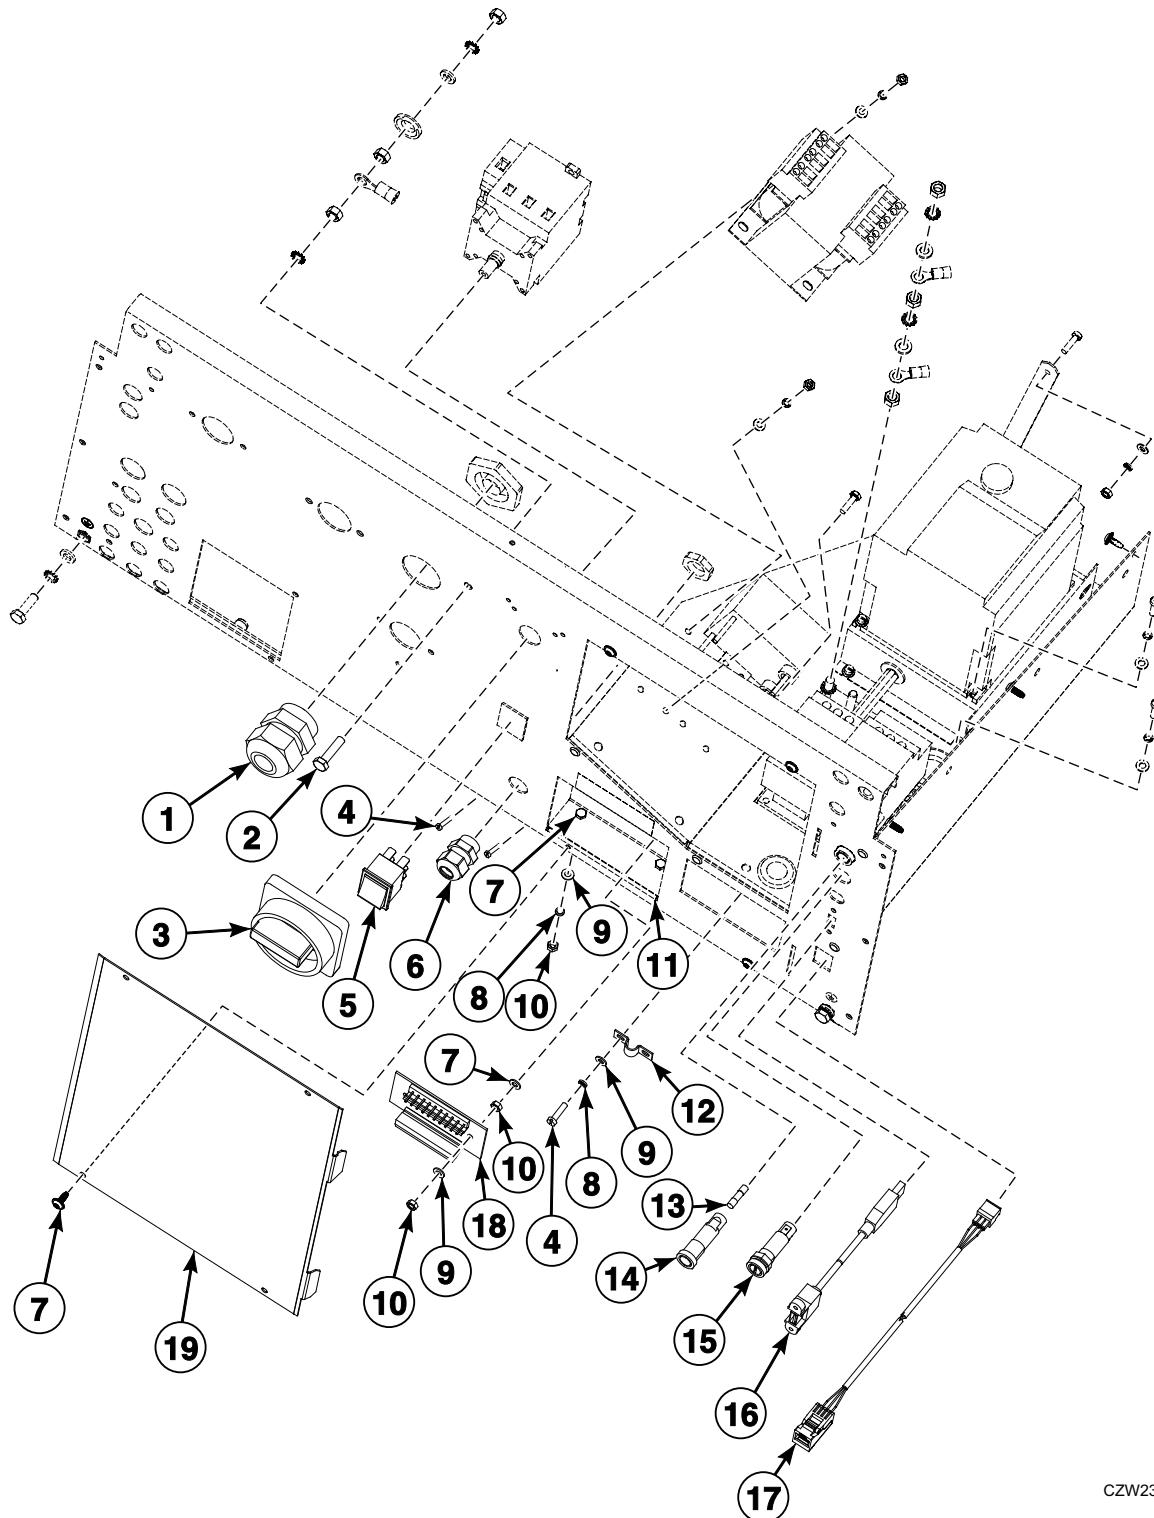


CZW23P\_D2410

## Rear Panel (Drawing 3 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP101409	Bushing	M32x1.5
	SP557952	Cable Bushing Insert	M32
2	SP309933100625	Bolt	M6x25
3	SPPRI404000095	Main Switch Knob	
4	SP309084000416	Bolt	M4x16
5	SP100388	Switch	
6	SP101406	Bushing	M16
7	SP529206	Screw	4x11
	SP309933240408	Bolt	M4x8
8	SP311127000004	Washer	4
9	SP311125000004	Washer	4.3
10	SP310934000004	Nut	M4
11	SP540123	Liquid Detergent Box	
12	SP528392	Cable Clamp	
13	SP345805005020	Fuse	5x20mm, T0.5A/250V
	SP345805163032	Fuse	6.3x32mm, T1A/500V
14	SPPRI401003020	Fuse Housing	6.3x32
15	SPPRI401001020	Fuse Holder	
16	SP547006	USB Cable	Rear panel connection
17	SP545234	Cable	RS485; With connectors
18	SP524714	Soap Relay Board	
	SP528149	Pump Relay Board to LED Terminal Cable	
	SP557944	Soap Link Kit	
	SP557947	External Block Signal Cable	2.8m
19	SP540121	Rear Panel Lid	

## Rear Panel - 230-400V with Neutral (Drawing 1 of 2)

AF, IY and NY Models with J, R, T or X in 7th position of the model number and with G, H, J or K in 13th position of the model number

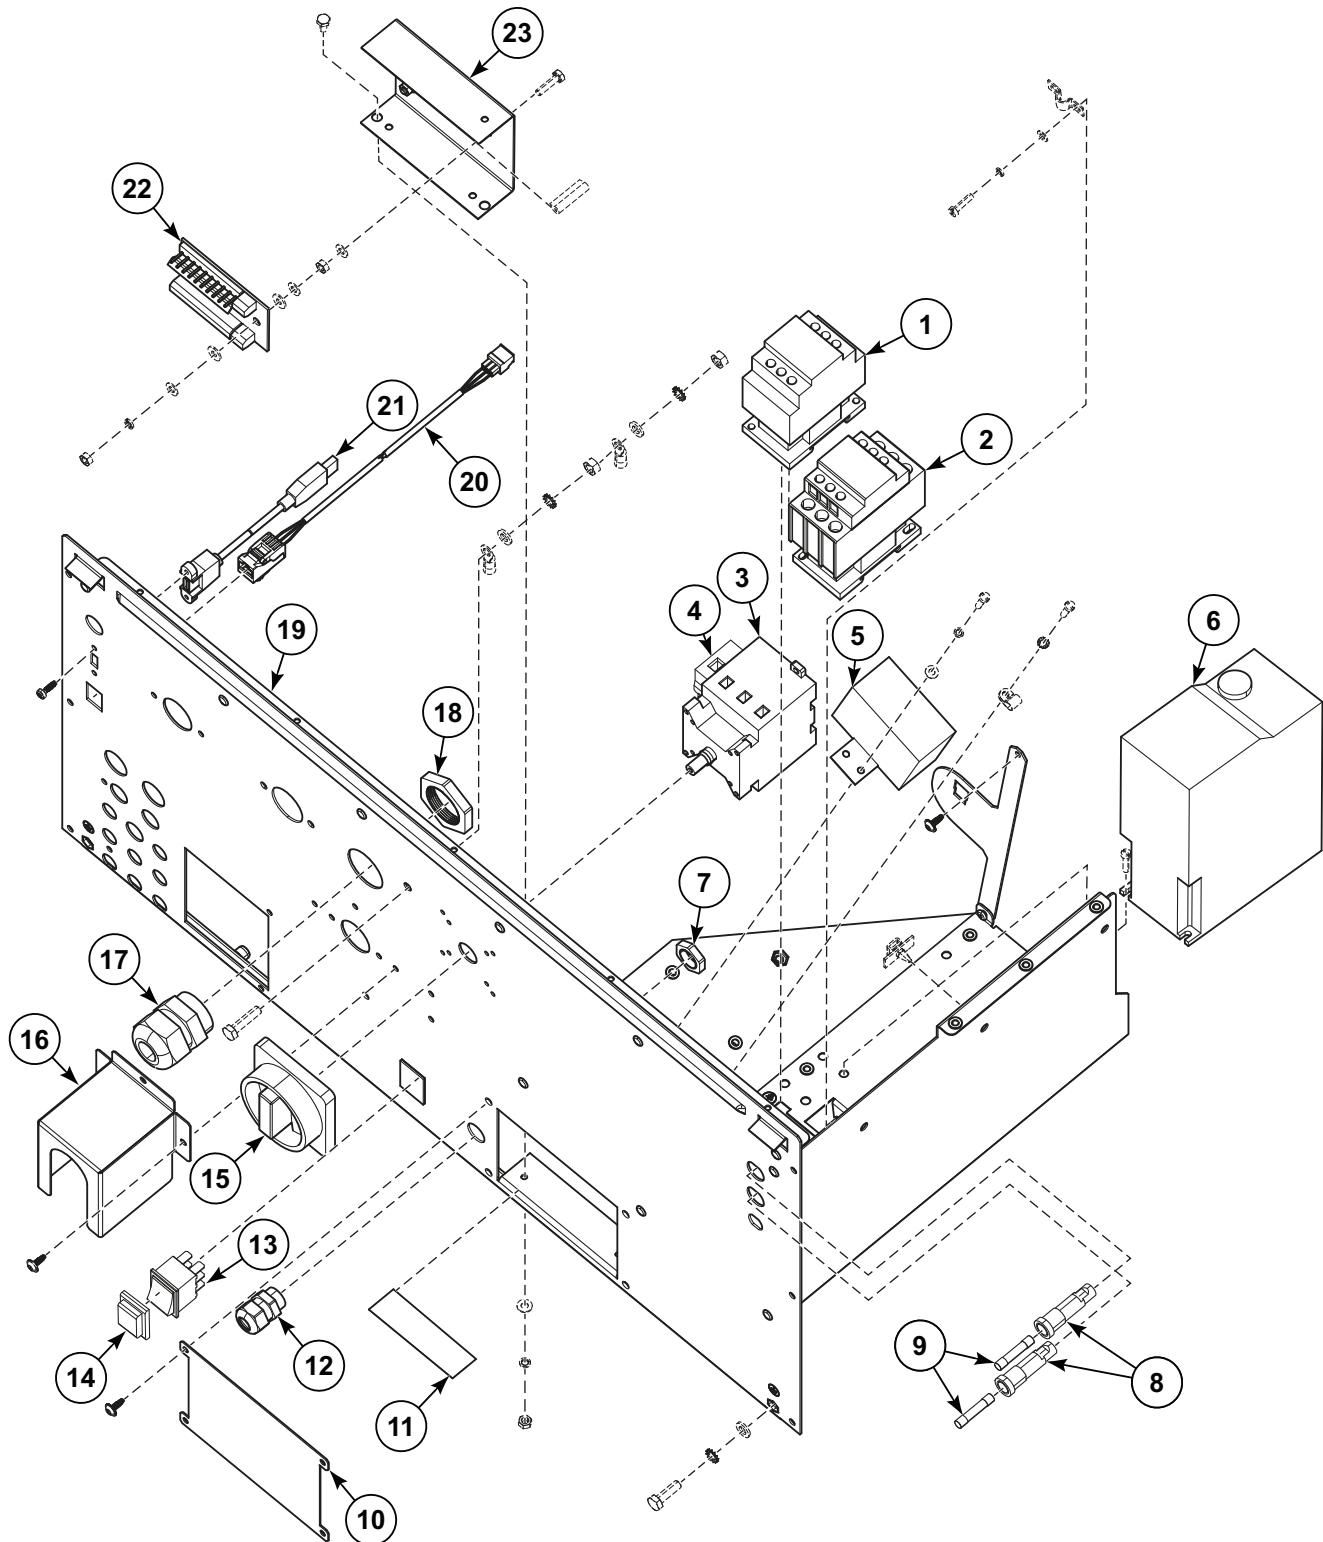


CZW604P\_D2410

## Rear Panel - 230-400V with Neutral (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP514038	Contactor	LC1-D09M7; Used with Frequency Inverter
2	SP514038	Contactor	LC1-D09M7; Electric heating; 6kW, 9kW, 12kW 400V / 440V
	SP514042	Contactor	LC1D18M7; Electric heating 9kW 230V
	SPPRI345002019	Contactor	LC1D3201; Electric heating 12kW, 13.8kW 230V
3	SPPRI404000097	Main Switch	25A; used with SP506407 Main Switch Fourth Pole 25A
	SPPRI404000098	Main Switch	32A; used with SPPRI404001098 Main Switch Fourth Pole 32A
	SPPRI404000099	Main Switch	63A; used with SPPRI404001099 Main Switch Fourth Pole 63A
4	SP506407	Main Switch	25A; Fourth pole
	SPPRI404001098	Main Switch	32A; Fourth pole
	SPPRI404001099	Main Switch	63A; Fourth pole
5	SP516012	Filter	16A / 250V
6	571472	Frequency Inverter	1.5kW; 230V / 400V+N; FR-D720S-070-SC-E8
	571474	Frequency Inverter	1.5kW; 400V / 440V; FR-D740-036-SC-E8
	557961	Ferrite Core	Used with frequency inverter
7	SP101416	Nut	M16
8	SPPRI401003020	Fuse Housing	2 pieces
9	SP345805163032	Fuse	6.3x32mm, T1A/500V; 2 pieces
10	566549	Cover	
11	524740	Label	
12	SP101406	Bushing	M16
13	SP100388	Switch	
14	SPPRI543000003	Push Bottom Cover	
15	SPPRI404000095	Main Switch Knob	
16	582259	Cover	
17	SP101409	Bushing	M32x1.5
18	SP101419	Nut	M32
19	577194	Rear Panel	Assembly
20	SP545234	Cable	RS485; With connectors
21	SP547006	USB Cable	Rear panel connection; Optional
22	524714	Soap Relay Board	Used with SP528149 Pump Relay Board Flat Cable, l=1.8m
	SP557944	Soap Link Kit	
	SP557947	External Block Signal Cable	2.8m
23	540123	Holder	

## Rear Panel - 230-400V with Neutral (Drawing 2 of 2)

AF, IY and NY Models with J, R, T or X in 7th position of the model number and with G, H, J or K in 13th position of the model number

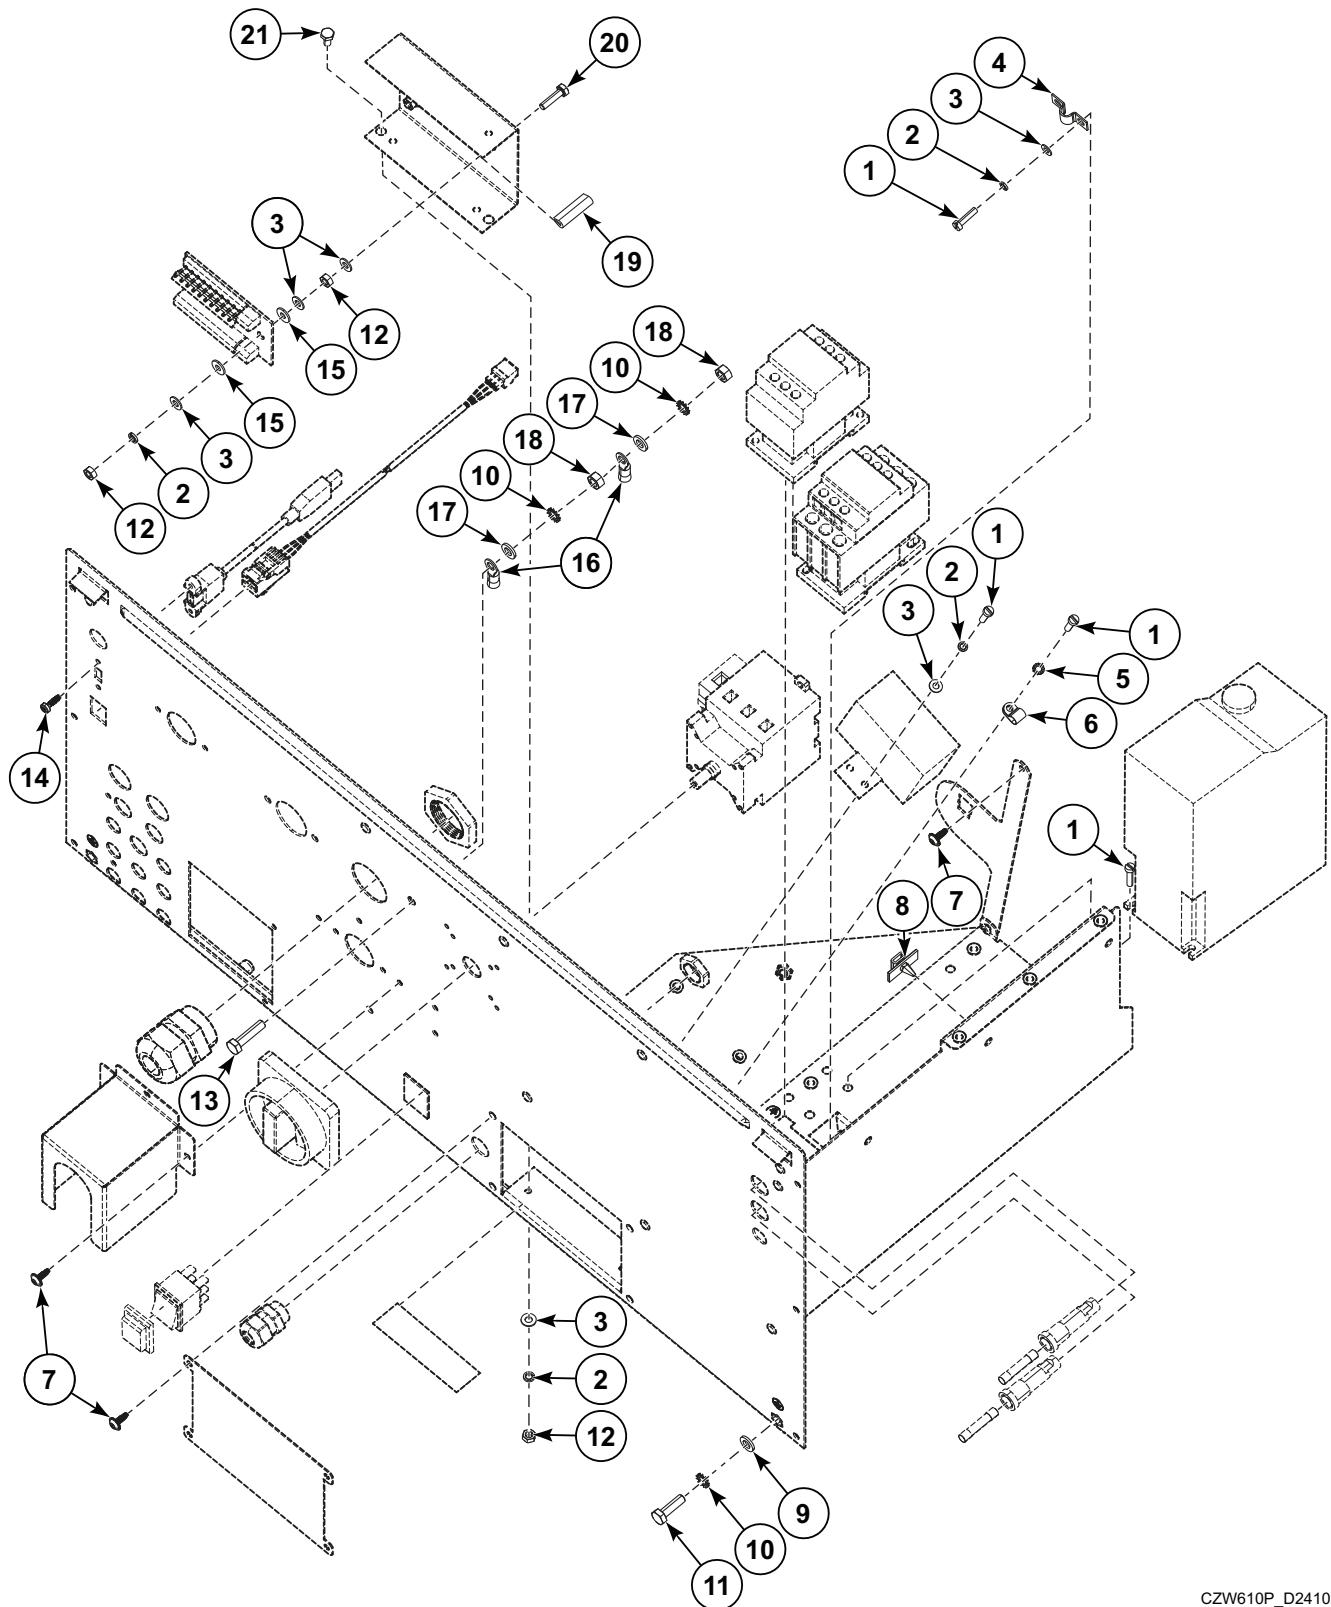


CZW610P\_D2410

## Rear Panel - 230-400V with Neutral (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP309084000416	Bolt	M4x16
2	SP311127000004	Washer	4
3	SP311125000004	Washer	4.3
4	SP528392	Cable Clamp	
5	SP311679800004	Washer	M4
6	SP502214	Clip	
7	SP529206	Screw	4x11
8	SP528313	Cable Holder	
9	SP311125240006	Washer	6
10	SP311679824006	Washer	6
11	SP309933000620	Bolt	M6x20
12	SP310934000004	Nut	M4
13	SP309933100625	Bolt	M6x25
14	SP526497	Screw	4x12
15	SPPRI52300007	Washer	M4
16	345000165034	Cable Eye	
17	SP311125100006	Washer	
18	SP310934100006	Nut	M6
19	SPPRI50500058	Profiled Sealing	
20	SP309933000416	Bolt	M4x16
21	SP309933240408	Bolt	M4x8

## Rear Panel - 400-440V (Drawing 1 of 2)

AF, IY and NY Models with J, R, T or X in 7th position of the model number and with G, H, J or K in 13th position of the model number

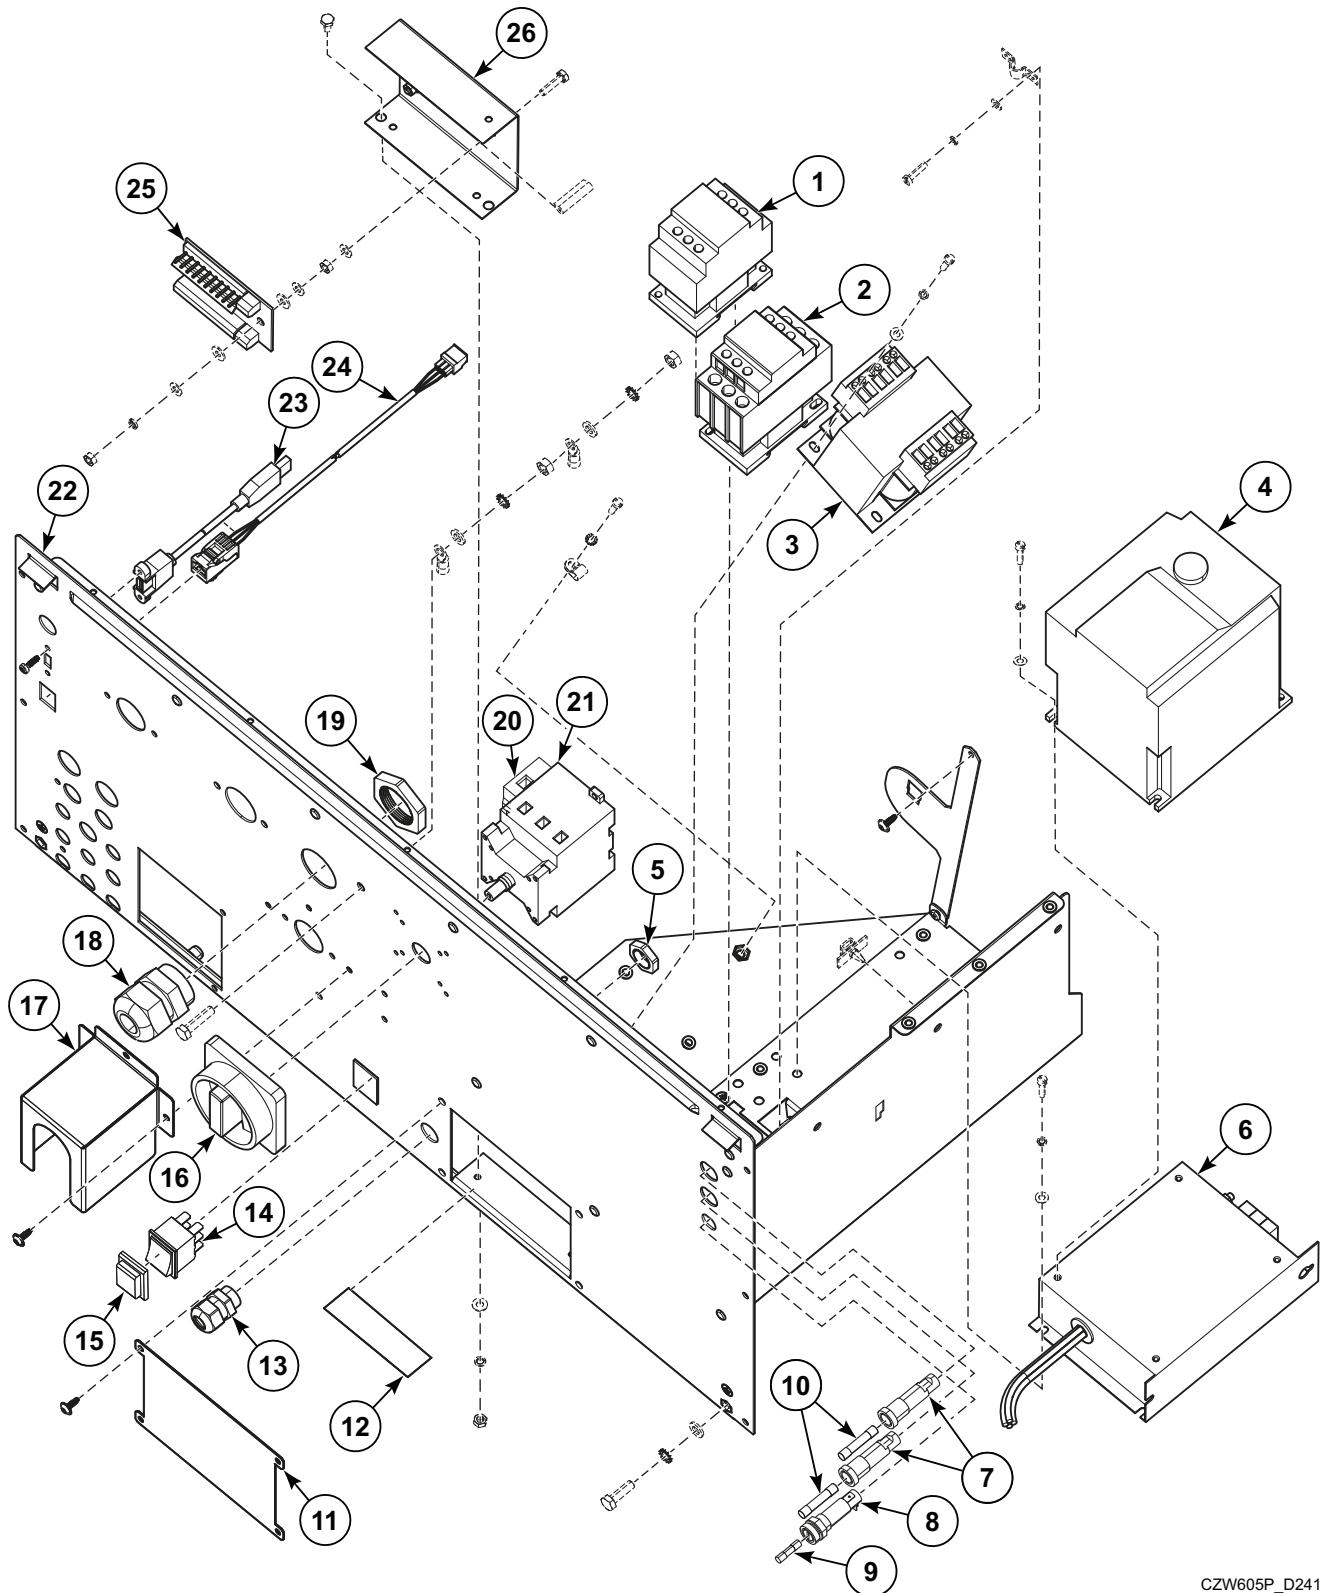


CZW605P\_D2410

## Rear Panel - 400-440V (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP514038	Contactor	LC1-D09M7; Used with frequency inverter
2	SP514038	Contactor	LC1-D09M7; Electric heating; 6kW, 9kW, 12kW 400V / 440V
	SP514042	Contactor	LC1D18M7; Electric heating 9kW 230V
	SPPRI345002019	Contactor	LC1D3201; Electric heating 12kW, 13.8kW 230V
3	SP516648	Transformer	
4	571474	Frequency Inverter	1.5kW; 400V / 440V; FR-D740-036-SC-E8
	557961	Ferrite Core	Used with frequency inverter
5	SP101416	Nut	M16
6	525935	Filter	16A
7	SPPRI401003020	Fuse Housing	2 pieces
8	SPPRI401001020	Fuse Holder	
9	SP345805005020	Fuse	
10	SP345805163032	Fuse	6.3x32mm, T1A/500V; 2 pieces
11	566549	Cover	
12	524740	Label	
13	SP101406	Bushing	M16
14	SP100388	Switch	
15	SPPRI543000003	Push Bottom Cover	
16	SPPRI404000095	Main Switch Knob	
17	582259	Cover	
18	SP101409	Bushing	M32x1.5
19	SP101419	Nut	M32
20	SP506407	Main Switch	25A; Fourth pole
	SPPRI404001098	Main Switch	32A; Fourth pole
	SPPRI404001099	Main Switch	63A; Fourth pole
21	SPPRI404000097	Main Switch	25A; Used with SP506407 Main Switch Fourth Pole 25A
	SPPRI404000098	Main Switch	32A; Used with SPPRI404001098 Main Switch Fourth Pole 32A
	SPPRI404000099	Main Switch	63A; Used with SPPRI404001099 Main Switch Fourth Pole 63A
22	577194	Rear Panel	Assembly
23	SP547006	USB Cable	Rear panel connection; Optional
24	SP545234	Cable	RS485; With connectors
25	524714	Soap Relay Board	Used with SP528149 Pump Relay Board Flat Cable, l=1.8m
	SP557944	Soap Link Kit	
	SP557947	External Block Signal Cable	2.8m
26	540123	Holder	

## Rear Panel - 400-440V (Drawing 2 of 2)

AF, IY and NY Models with J, R, T or X in 7th position of the model number and with G, H, J or K in 13th position of the model number

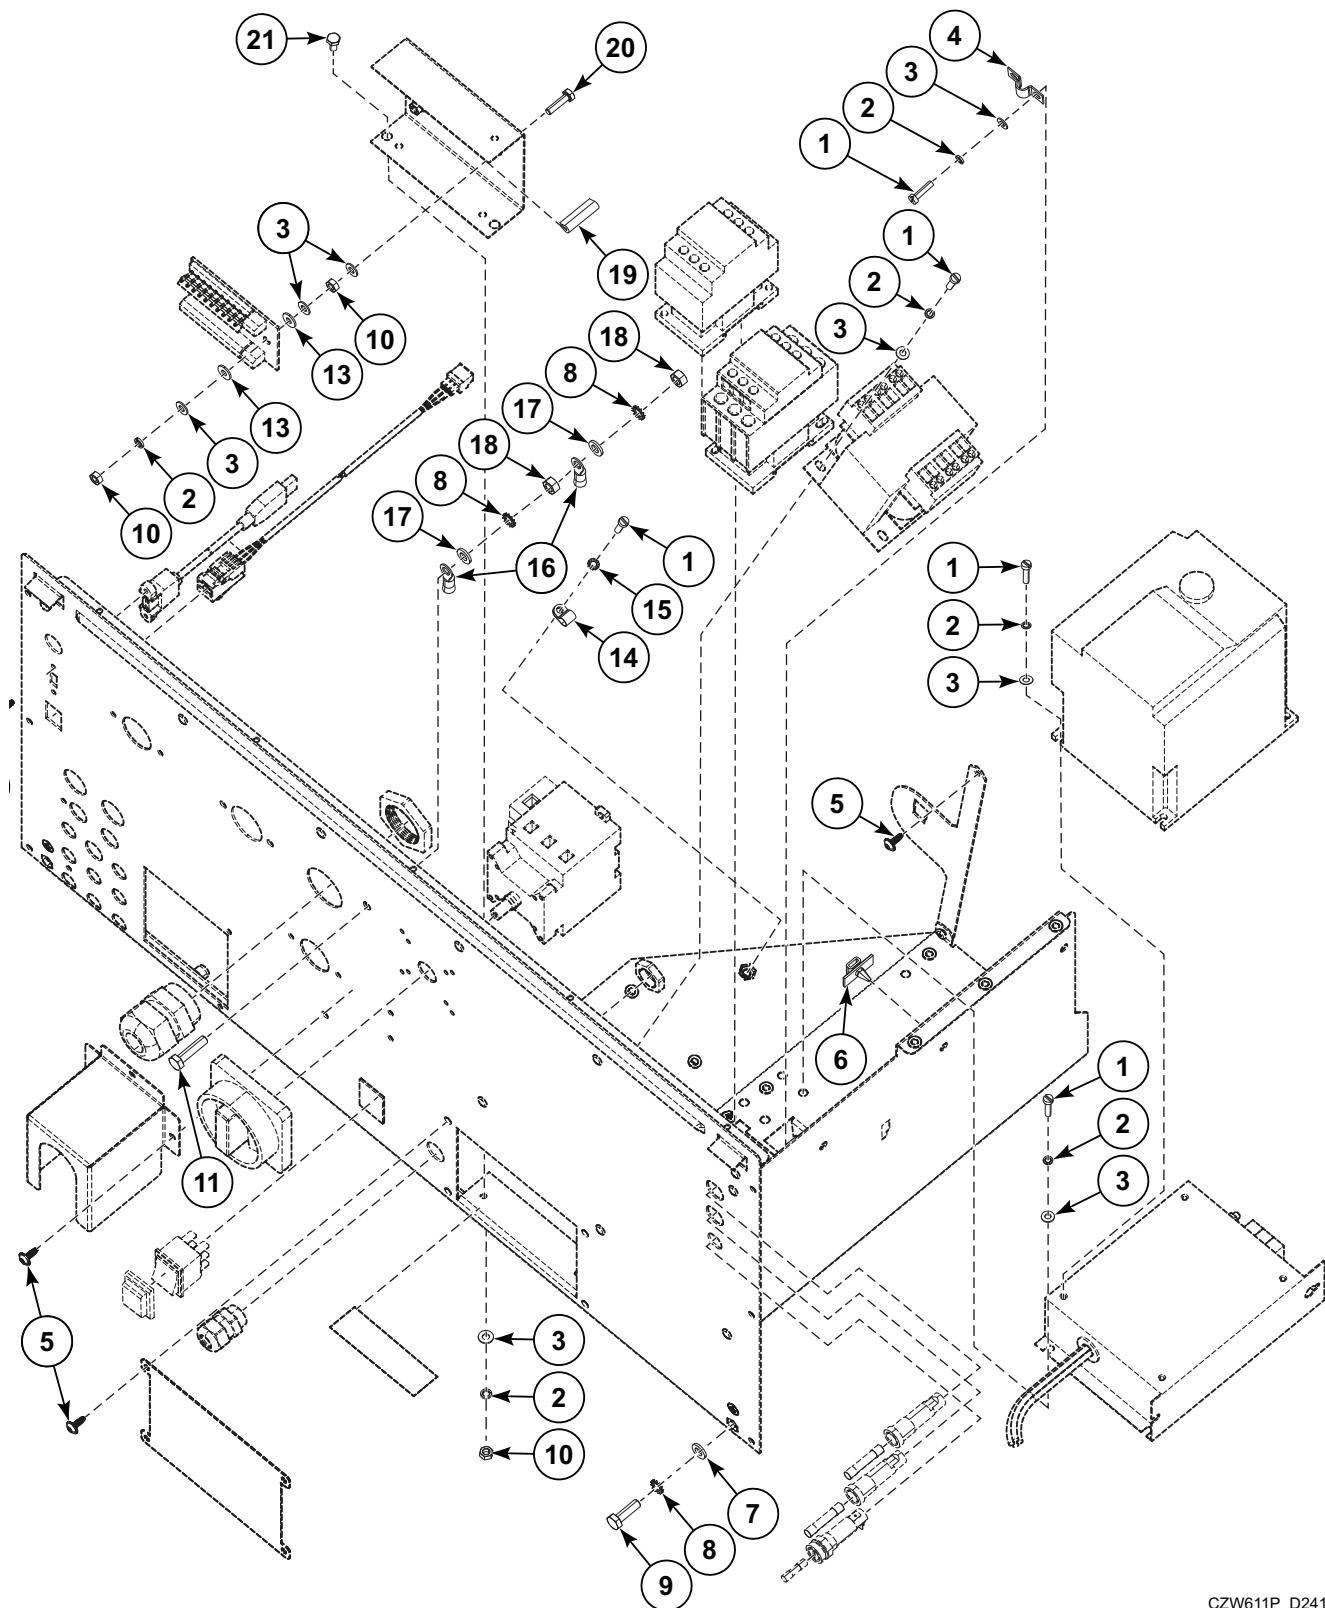


CZW611P\_D2410

## Rear Panel - 400-440V (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP309084000416	Bolt	M4x16
2	SP311127000004	Washer	4
3	SP311125000004	Washer	4.3
4	SP528392	Cable Clamp	
5	SP529206	Screw	4x11
6	SP528313	Cable Holder	
7	SP311125240006	Washer	6
8	SP311679824006	Washer	6
9	SP309933000620	Bolt	M6x20
10	SP310934000004	Nut	M4
11	SP309933100625	Bolt	M6x25
12	SP526497	Screw	4x12
13	SPPRI52300007	Washer	M4
14	SP502214	Clip	
15	SP311679800004	Washer	M4
16	345000165034	Cable Eye	
17	SP311125100006	Washer	
18	SP310934100006	Nut	M6
19	SPPRI505000058	Profiled Sealing	
20	SP309933000416	Bolt	M4x16
21	SP309933240408	Bolt	M4x8

# Rear Panel - CE Models 230-400V with Neutral (Drawing 1 of 2)

AF, IY, NY and J Models with V in 7th position of the model number

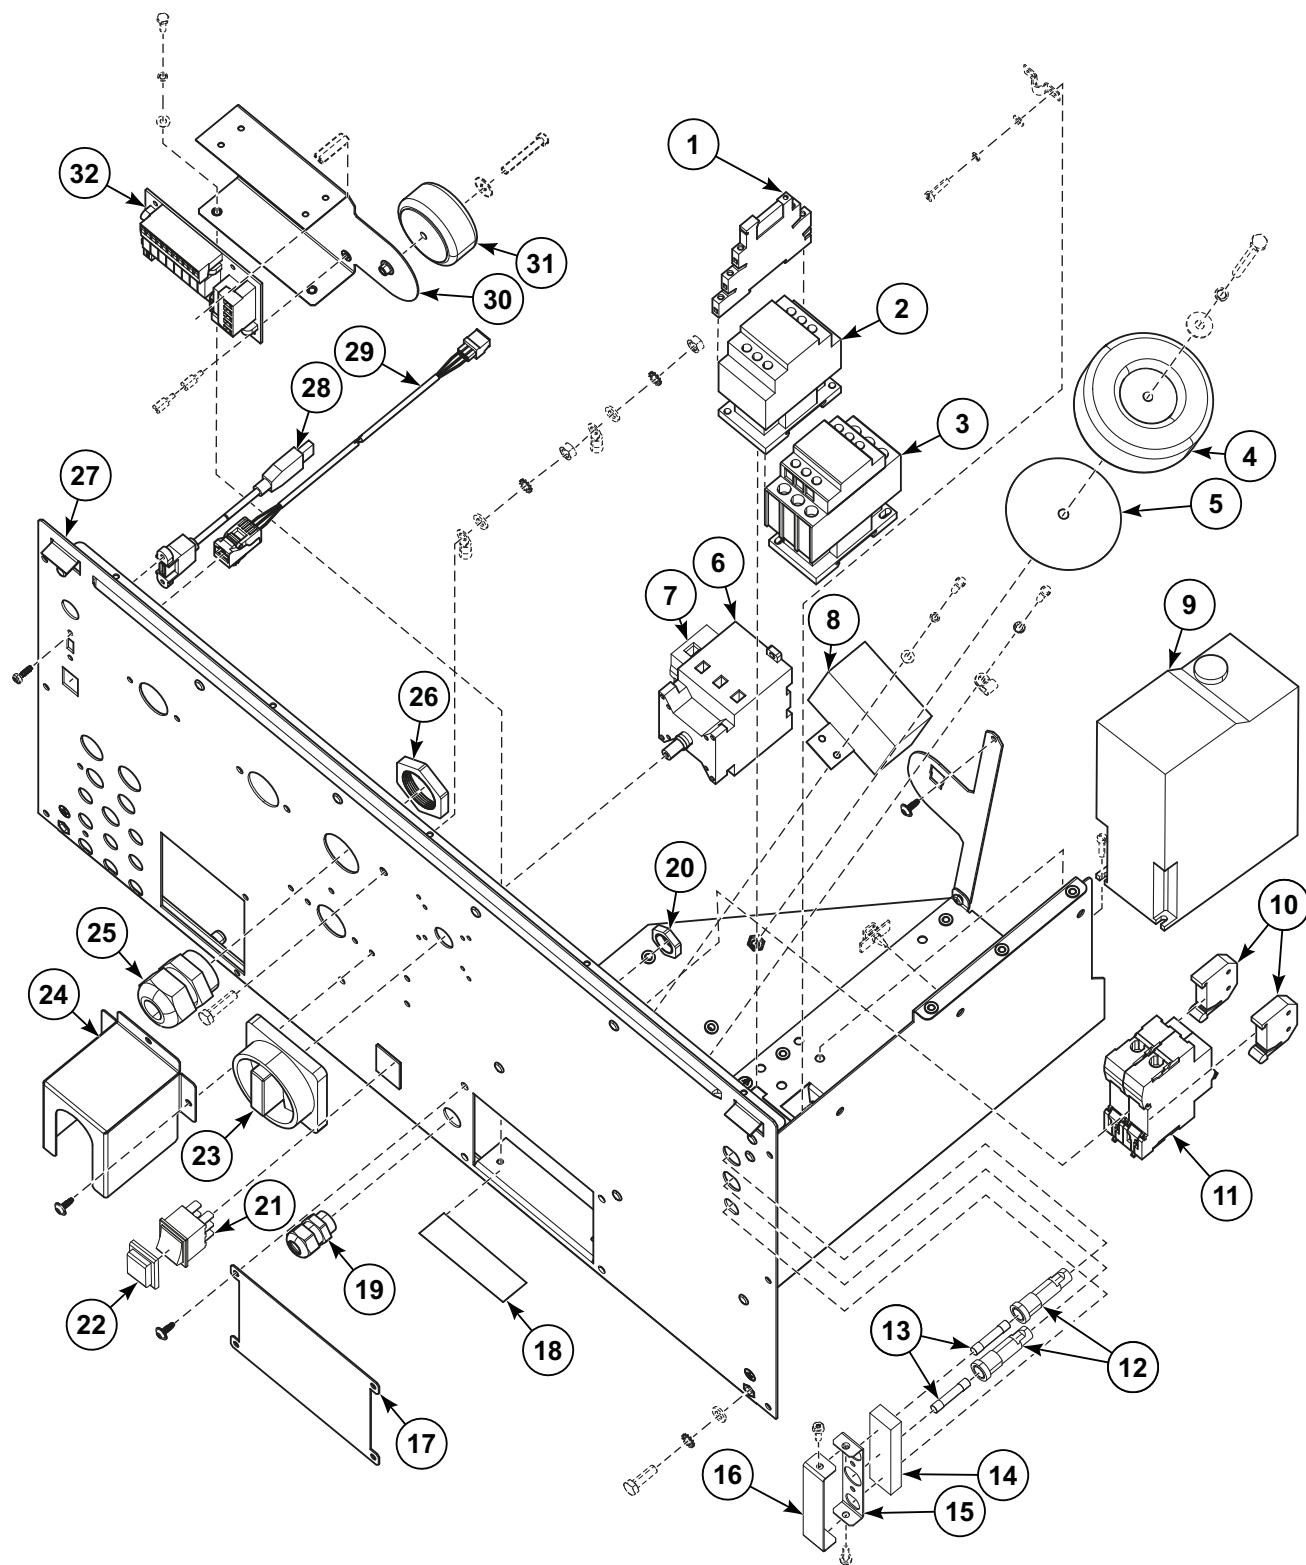

CZW606P\_D2410


# Rear Panel - CE Models 230-400V with Neutral (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	N/A	Relay	
2	SP514038	Contactor	LC1-D09M7; Used with Frequency Inverter
3	SP514038	Contactor	LC1-D09M7; Electric heating; 6kW, 9kW, 12kW 400V / 440V
	SP514042	Contactor	LC1D18M7; Electric heating 9kW 230V
	SPPRI345002019	Contactor	LC1D3201; Electric heating 12kW, 13.8kW, 230V
4	571455	DC Choke	4mH; Supply 230V, 380-415V+N
5	571458	Insulation Washer	
6	SPPRI404000097	Main Switch	25A; used with SP506407 Main Switch Fourth Pole 25A
	SPPRI404000098	Main Switch	32A; used with SPPRI404001098 Main Switch Fourth Pole 32A
	SPPRI404000099	Main Switch	63A; used with SPPRI404001099 Main Switch Fourth Pole 63A
7	SP506407	Main Switch	25A; Fourth pole
	SPPRI404001098	Main Switch	32A; Fourth pole
	SPPRI404001099	Main Switch	63A; Fourth pole
8	568380	Filter	20A / 250V
9	571472	Frequency Inverter	1.5kW; 230V / 400V+N; FR-D720S-070-SC-E8
	571474	Frequency Inverter	1.5kW; 400V / 440V; FR-D740-036-SC-E8
	557961	Ferrite Core	Used with frequency inverter
10	SP346000209101	End Stop	
11	571463	Circuit Breaker	
12	SPPRI401003020	Fuse Housing	2 pieces
13	SP345805163032	Fuse	6.3x32mm, T1A/500V; 2 pieces
14	570387	Self-Adhesive Profile	
15	SP554310	Fuse Holder	
16	SP554311	Fuse Cover	
17	566549	Cover	
18	570371	Label	Models with Transformer
	579019	Label	Models without Transformer
19	SP101406	Bushing	M16
20	SP101416	Nut	M16
21	SP100388	Switch	
22	SPPRI543000003	Push Bottom Cover	
23	SPPRI404000095	Main Switch Knob	
24	582259	Cover	
25	SP101409	Bushing	M32x1.5
26	SP101419	Nut	M32
27	567946	Rear Panel	Assembly
28	SP547006	USB Cable	Rear panel connection; Optional
29	SP545234	Cable	RS485; With connectors
30	570382	Holder	
31	564561	Transformer	
	579014	Transformer	Models without Transformer
32	553187	Soap Relay Board	Used with 569737 Pump Relay Board Flat Cable, 2m long

N/A = Part no longer available

# Rear Panel - CE Models 230-400V with Neutral (Drawing 2 of 2)

AF, IY, NY and J Models with V in 7th position of the model number

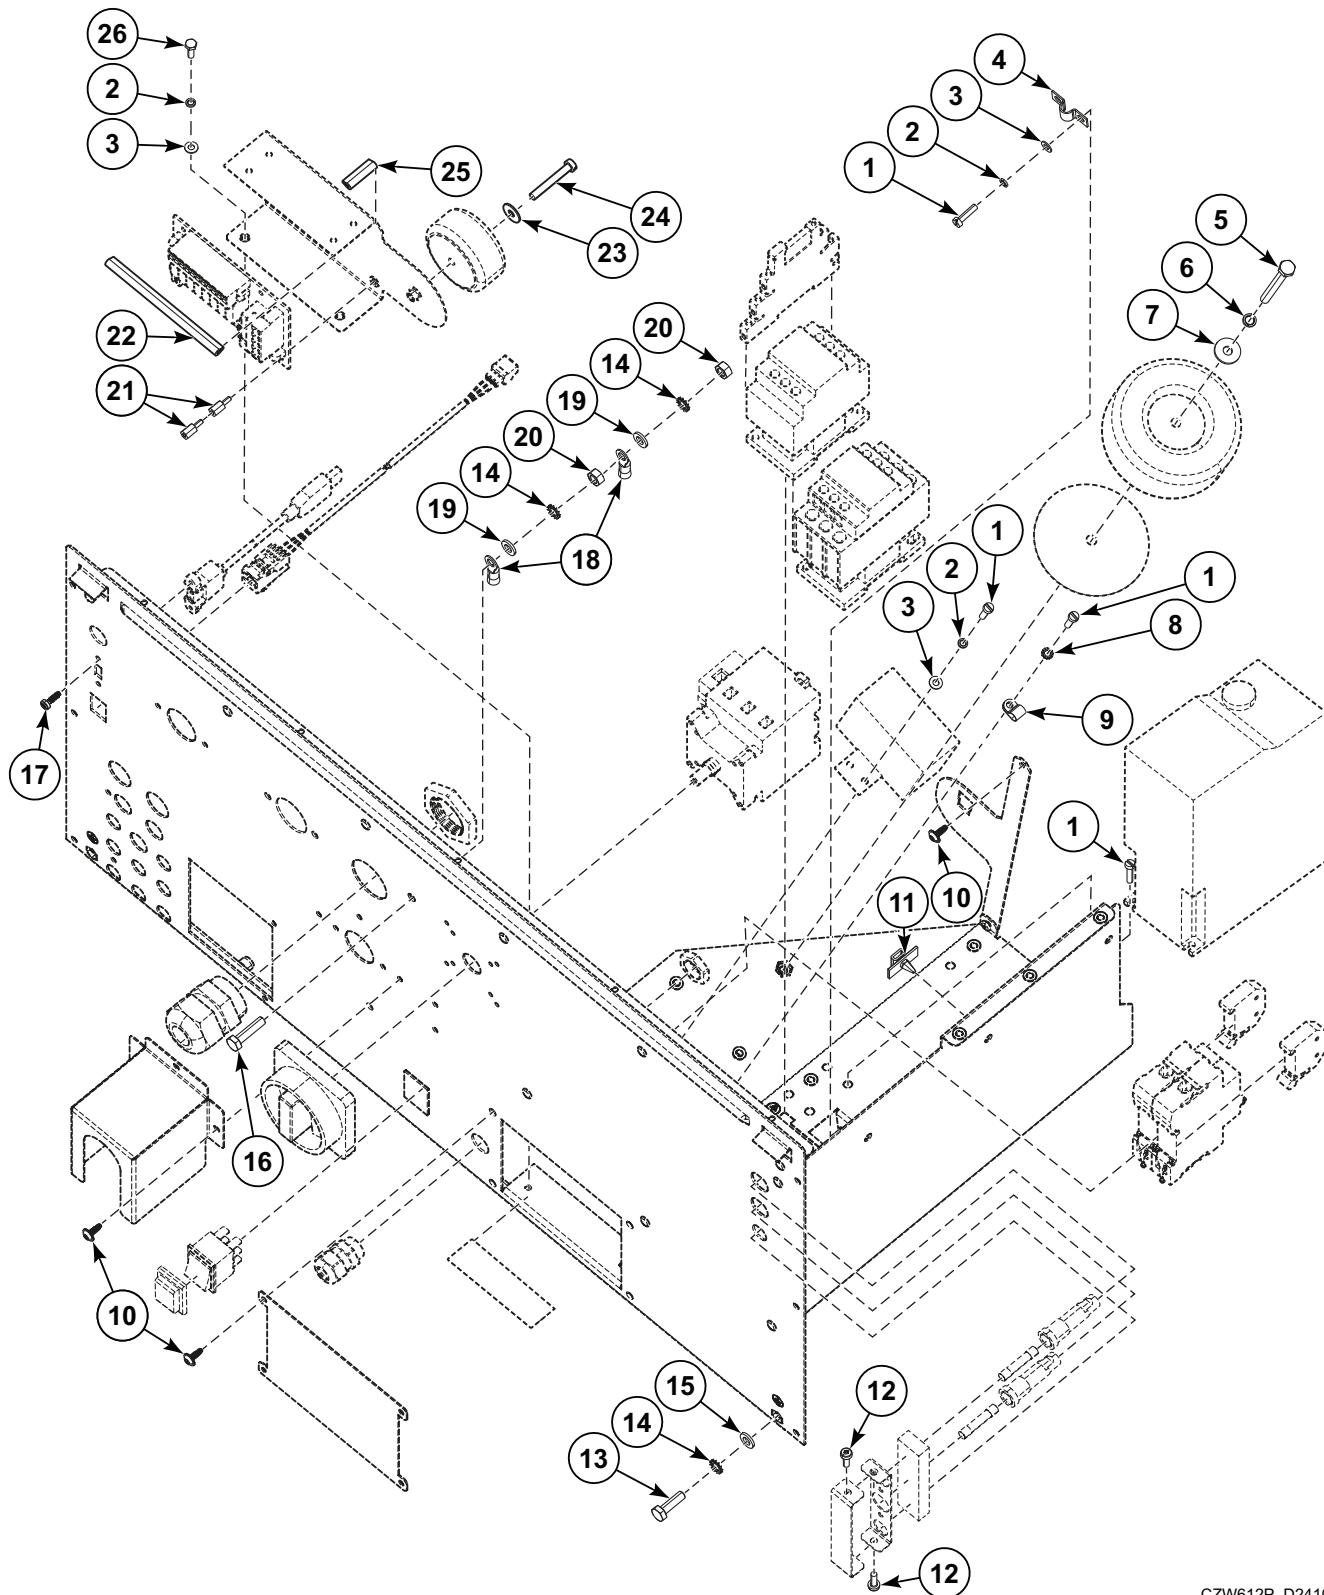


CZW612P\_D2410

## Rear Panel - CE Models 230-400V with Neutral (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP309084000416	Bolt	M4x16
2	SP311127000004	Washer	4
3	SP311125000004	Washer	4.3
4	SP528392	Cable Clamp	
5	SP309933000660	Bolt	M6x60
6	SP311127000006	Washer	6
7	SP311902100006	Washer	6
8	SP311679800004	Washer	M4x16
9	SP502214	Clip	
10	SP529206	Screw	4x11
11	SP528313	Cable Holder	
12	SP555504	Bolt	
13	SP309933000620	Bolt	M6x20
14	SP311679824006	Washer	6
15	SP311125240006	Washer	6
16	SP309933100625	Bolt	M6x25
17	SP526497	Screw	4x12
18	345000165034	Cable Eye	
19	SP311125100006	Washer	6
20	SP310934100006	Nut	M6
21	570381	Hex Pillar	M3
22	SPPRI505000058	Profiled Sealing	0.105m
23	SP505430	Washer	5
24	309084000535	Bolt	M5x35
25	SPPRI505000058	Profiled Sealing	0.025m
26	SP309933240412	Bolt	M4x12

# Rear Panel - CE Models 400-440V (Drawing 1 of 2)

AF, IY, NY and J Models with V in 7th position of the model number

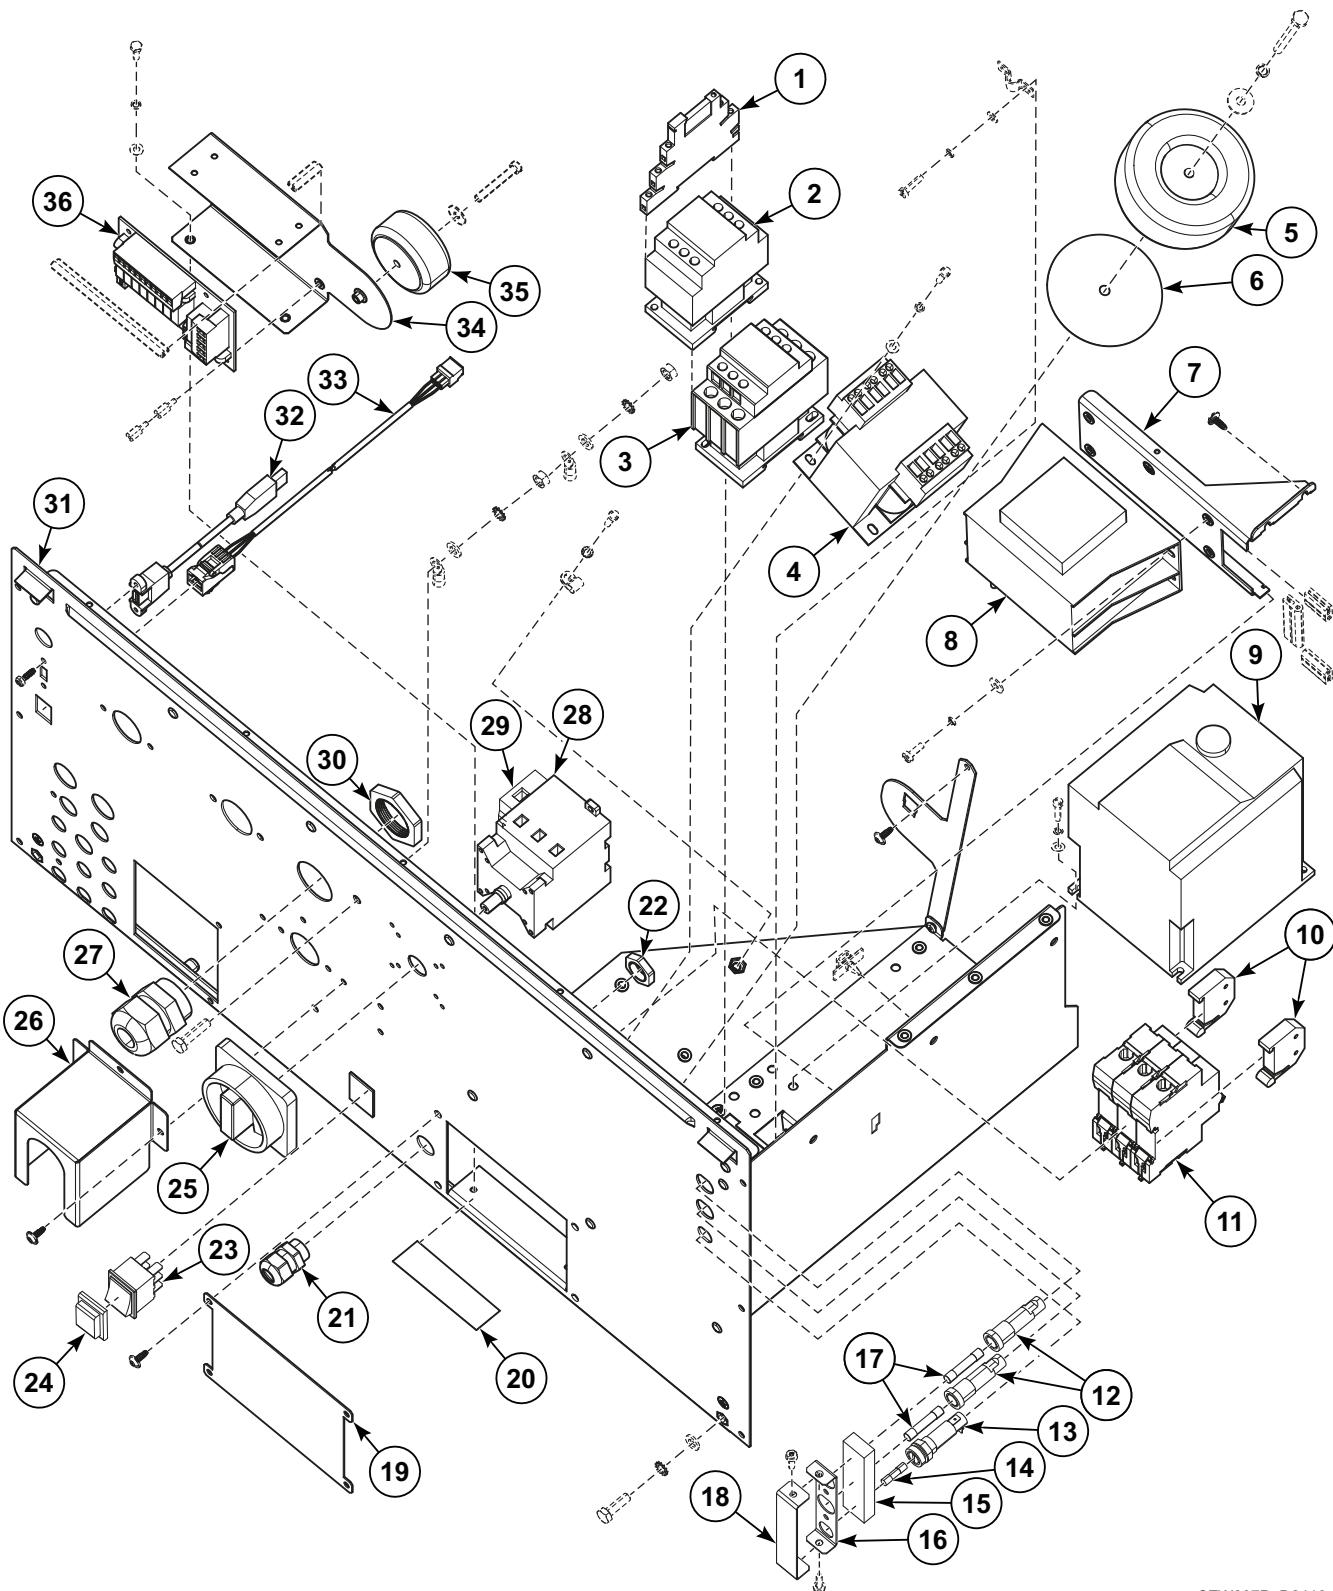

CZW607P\_D2410


## Rear Panel - CE Models 400-440V (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	N/A	Relay	
2	SP514038	Contactor	LC1-D09M7; Used with Frequency Inverter
3	SP514038	Contactor	LC1-D09M7; Electric heating; 6kW, 9kW, 12kW 400V / 440V
	SP514042	Contactor	LC1D18M7; Electric heating 9kW 230V
	SPPRI345002019	Contactor	LC1D3201; Electric heating 12kW, 13.8kW, 230V
4	SP516648	Transformer	
5	571455	DC Choke	4mH; Supply 230V / 400V+N
6	571458	Insulation Washer	
7	572126	Filter Holder	Used with SP313251002104 Nut
8	SP557932	Frequency Inverter Filter	3x400V
9	571474	Frequency Inverter	1.5kW; 400V / 440V; FR-D740-036-SC-E8
	557961	Ferrite Core	Used with frequency inverter
10	SP346000209101	End Stop	
11	571464	Circuit Breaker	
12	SPPRI401003020	Fuse Housing	2 pieces
13	SPPRI401001020	Fuse Holder	
14	SP345805005020	Fuse	Without neutral
15	570387	Self-Adhesive Profile	
16	SP554310	Fuse Holder	
17	SP345805163032	Fuse	6.3x32mm, T1A/500V; 2 pieces
18	SP554311	Fuse Cover	
19	566549	Cover	
20	570371	Label	Models with Transformer
	579019	Label	Models without Transformer
21	SP101406	Bushing	M16
22	SP101416	Nut	M16
23	SP100388	Switch	
24	SPPRI543000003	Push Bottom Cover	
25	SPPRI404000095	Main Switch Knob	
26	582259	Cover	
27	SP101409	Bushing	M32x1.5
28	SPPRI404000097	Main Switch	25A
	SPPRI404000098	Main Switch	32A
	SPPRI404000099	Main Switch	63A
29	SP506407	Main Switch	25A; Fourth pole
	SPPRI404001098	Main Switch	32A; Fourth pole
	SPPRI404001099	Main Switch	63A; Fourth pole
30	SP101419	Nut	M32
31	567946	Rear Panel	Assembly
32	SP547006	USB Cable	Rear panel connection; Optional
33	SP545234	Cable	RS485; With connectors
34	570382	Holder	
35	564561	Transformer	
	579014	Transformer	Models without Transformer
36	553187	Soap Relay Board	Used with 569737 Pump Relay Board Flat Cable, 2m long

**N/A = Part no longer available**

## Rear Panel - CE Models 400-440V (Drawing 2 of 2)

AF, IY, NY and J Models with V in 7th position of the model number

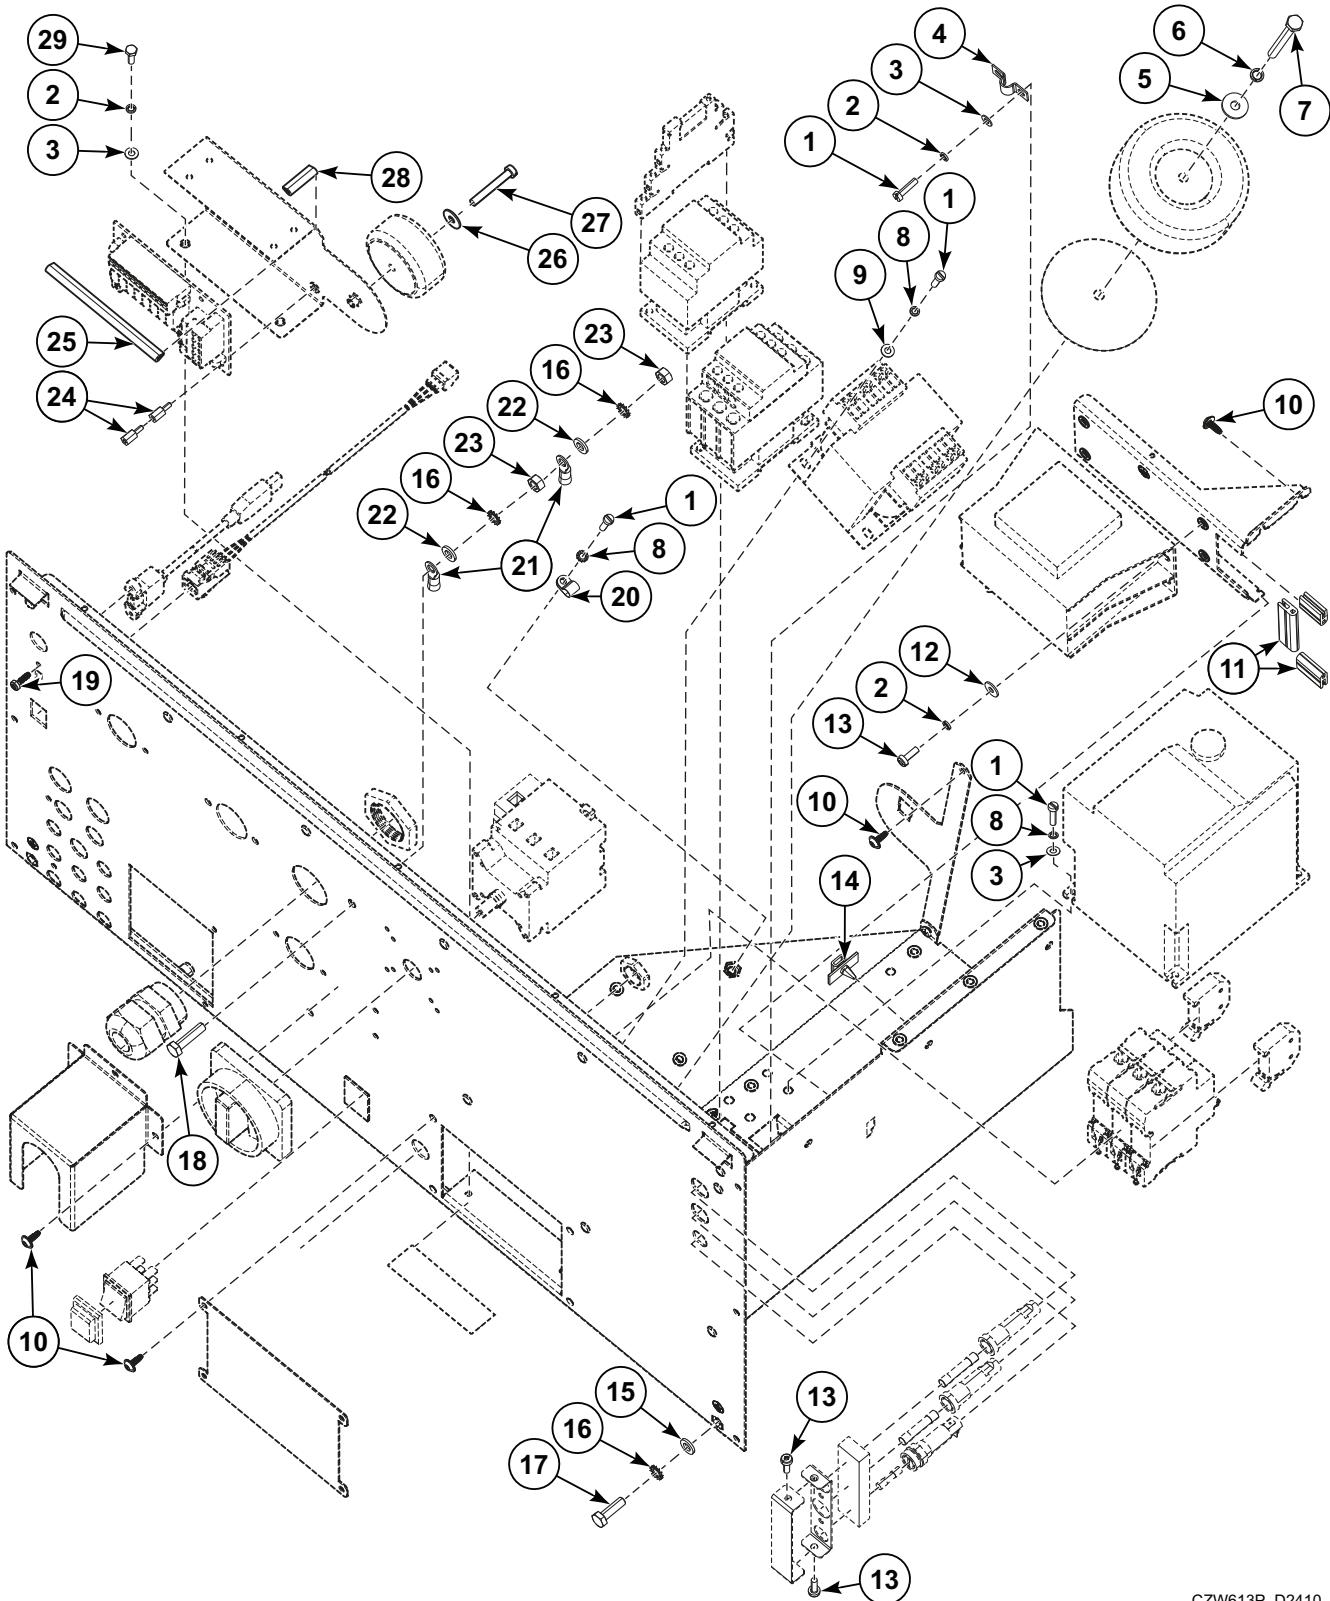


CZW613P\_D2410

## Rear Panel - CE Models 400-440V (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP309084000416	Bolt	M4x16
2	SP311127000004	Washer	4
3	SP311125000004	Washer	4.3
4	SP528392	Cable Clamp	
5	SP311902100006	Washer	6
6	SP311127000006	Washer	6
7	SP309933000660	Bolt	M6x60
8	SP311679800004	Washer	M4x16
9	SP311125000004	Washer	4.3
10	SP529206	Screw	4x11
11	SP529068	Edge Protection	
12	SP311902100004	Washer	4
13	SP555504	Bolt	4x12
14	SP528313	Cable Holder	
15	SP311125240006	Washer	6
16	SP311679824006	Washer	6
17	SP309933000620	Bolt	M6x20
18	SP309933100625	Bolt	M6x25
19	SP526497	Screw	4x12
20	SP502214	Clip	
21	345000165034	Cable Eye	
22	SP311125100006	Washer	6
23	SP310934100006	Nut	M6
24	570381	Hex Pillar	M3
25	SPPRI505000058	Profiled Sealing	0.105m
26	SP505430	Washer	5
27	309084000535	Bolt	M5x35
28	SPPRI505000058	Profiled Sealing	0.025m
29	SP309933240412	Bolt	M4x12

# Rear Panel - 230V/400V + N (Drawing 1 of 2)

FX and PY Models with V in 7th position of the model number

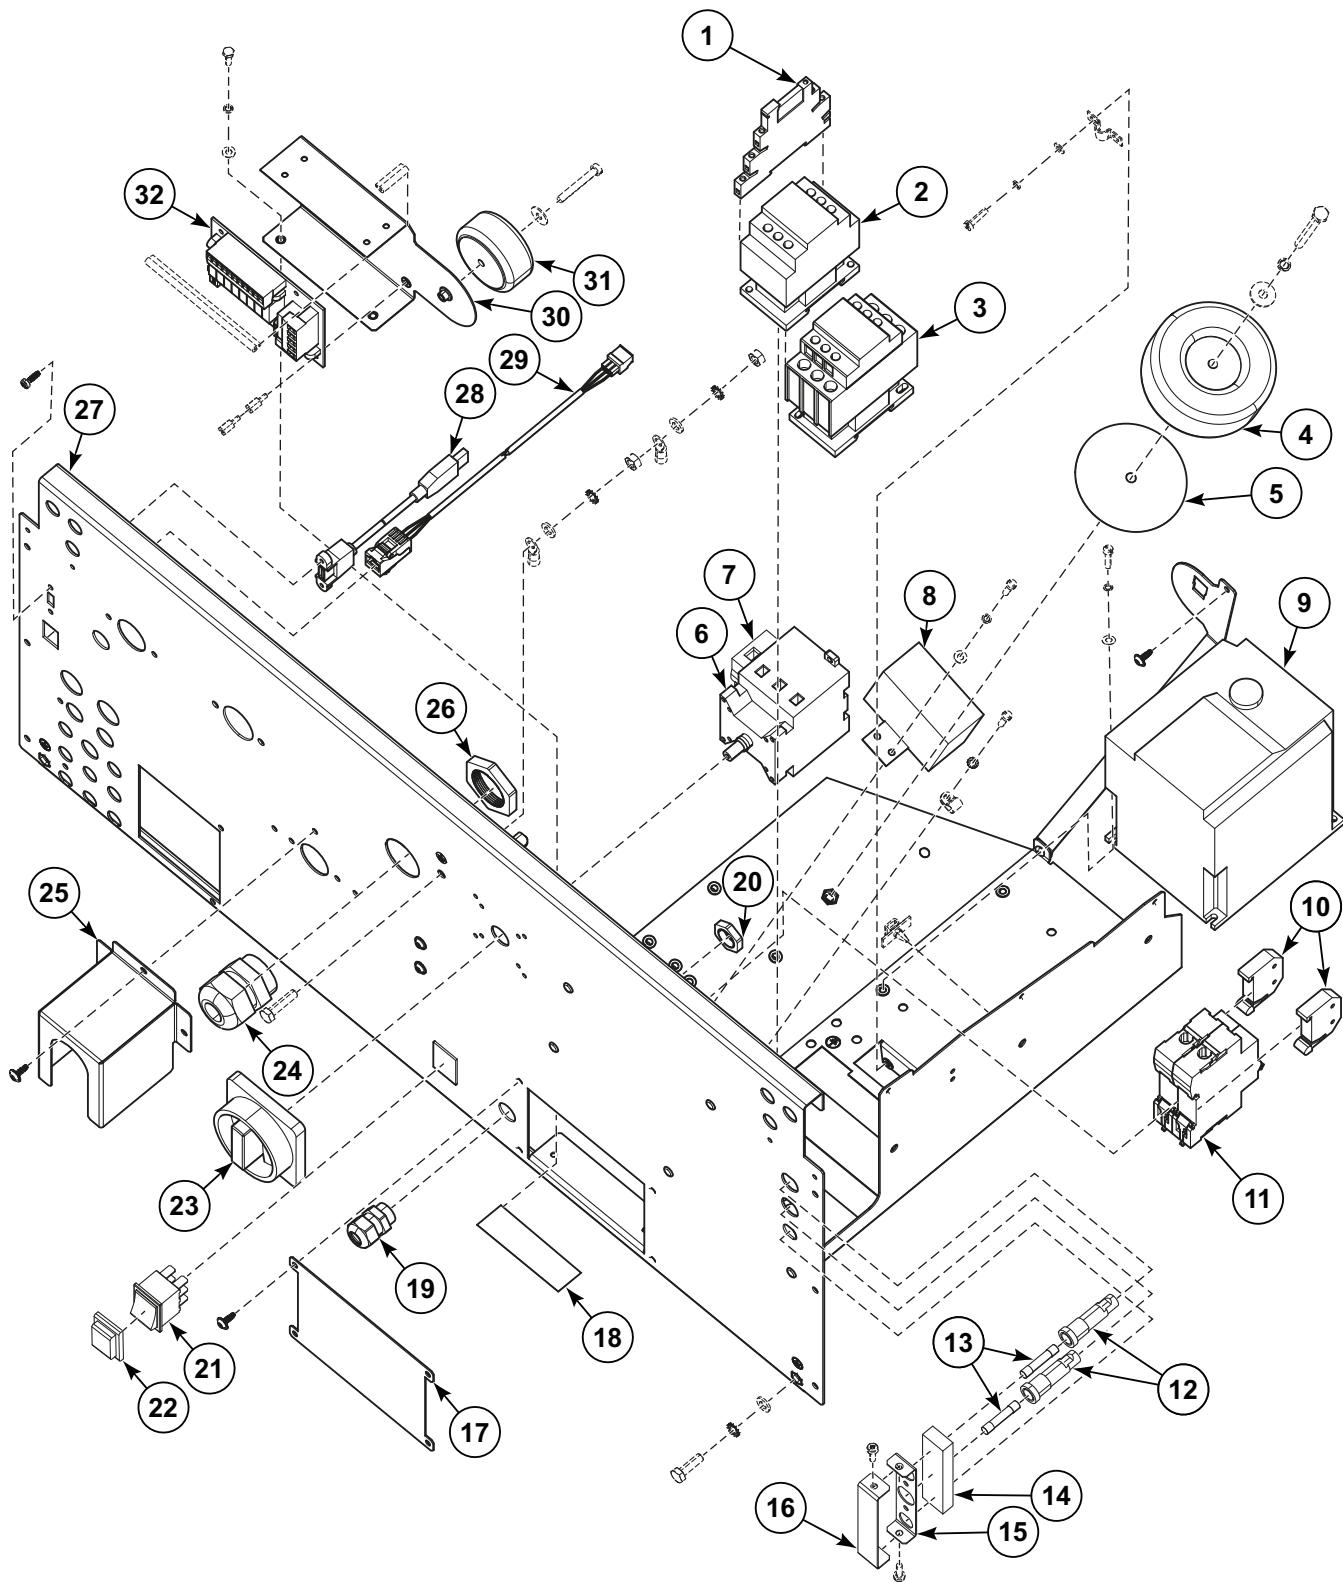


CZW608P\_D2410

## Rear Panel - 230V/400V + N (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	N/A	Relay	
2	SP514038	Contactor	LC1-D09M7; Used with Frequency Inverter
3	SP514038	Contactor	LC1-D09M7; Electric heating; 6kW, 9kW, 12kW 400V / 440V
	SP514042	Contactor	LC1D18M7; Electric heating 9kW 230V
	SPPRI345002019	Contactor	LC1D3201; Electric heating 12kW, 13.8kW, 230V
4	571454	DC Choke	9.7mH; Supply 400 / 440V
	571455	DC Choke	4mH; Supply 230V, 380-415V+N
5	571458	Insulation Washer	
6	SPPRI404000097	Main Switch	25A; used with SP506407 Main Switch Fourth Pole 25A
	SPPRI404000098	Main Switch	32A; used with SPPRI404001098 Main Switch Fourth Pole 32A
	SPPRI404000099	Main Switch	63A; used with SPPRI404001099 Main Switch Fourth Pole 63A
7	SP506407	Main Switch	25A; Fourth pole
	SPPRI404001098	Main Switch	32A; Fourth pole
	SPPRI404001099	Main Switch	63A; Fourth pole
8	568380	Filter	20A / 250V
9	571472	Frequency Inverter	1.5kW; 230V / 400V+N; FR-D720S-070-SC-E8
	557961	Ferrite Core	Used with frequency inverter
10	SP346000209101	End Stop	
11	571463	Circuit Breaker	
12	SPPRI401003020	Fuse Housing	2 pieces
13	SP345805163032	Fuse	6.3x32mm, T1A/500V; 2 pieces
14	570387	Self-Adhesive Profile	
15	SP554310	Fuse Holder	
16	SP554311	Fuse Cover	
17	566549	Cover	
18	570371	Label	Models with Transformer
	579019	Label	Models without Transformer
19	SP101406	Bushing	M16
20	SP101416	Nut	M16
21	SP100388	Switch	
22	SPPRI543000003	Push Bottom Cover	
23	SPPRI404000095	Main Switch Knob	
24	SP101409	Bushing	M32x1.5
25	582259	Cover	
26	SP101419	Nut	M32
27	574118	Rear Panel	Assembly
28	SP547006	USB Cable	Rear panel connection; Optional
29	SP545234	Cable	RS485; With connectors
30	570382	Holder	
31	564561	Transformer	
	579014	Transformer	Models without Transformer
32	553187	Soap Relay Board	Used with 569737 Pump Relay Board Flat Cable, 2m long

## Rear Panel - 230V/400V + N (Drawing 2 of 2)

FX and PY Models with V in 7th position of the model number

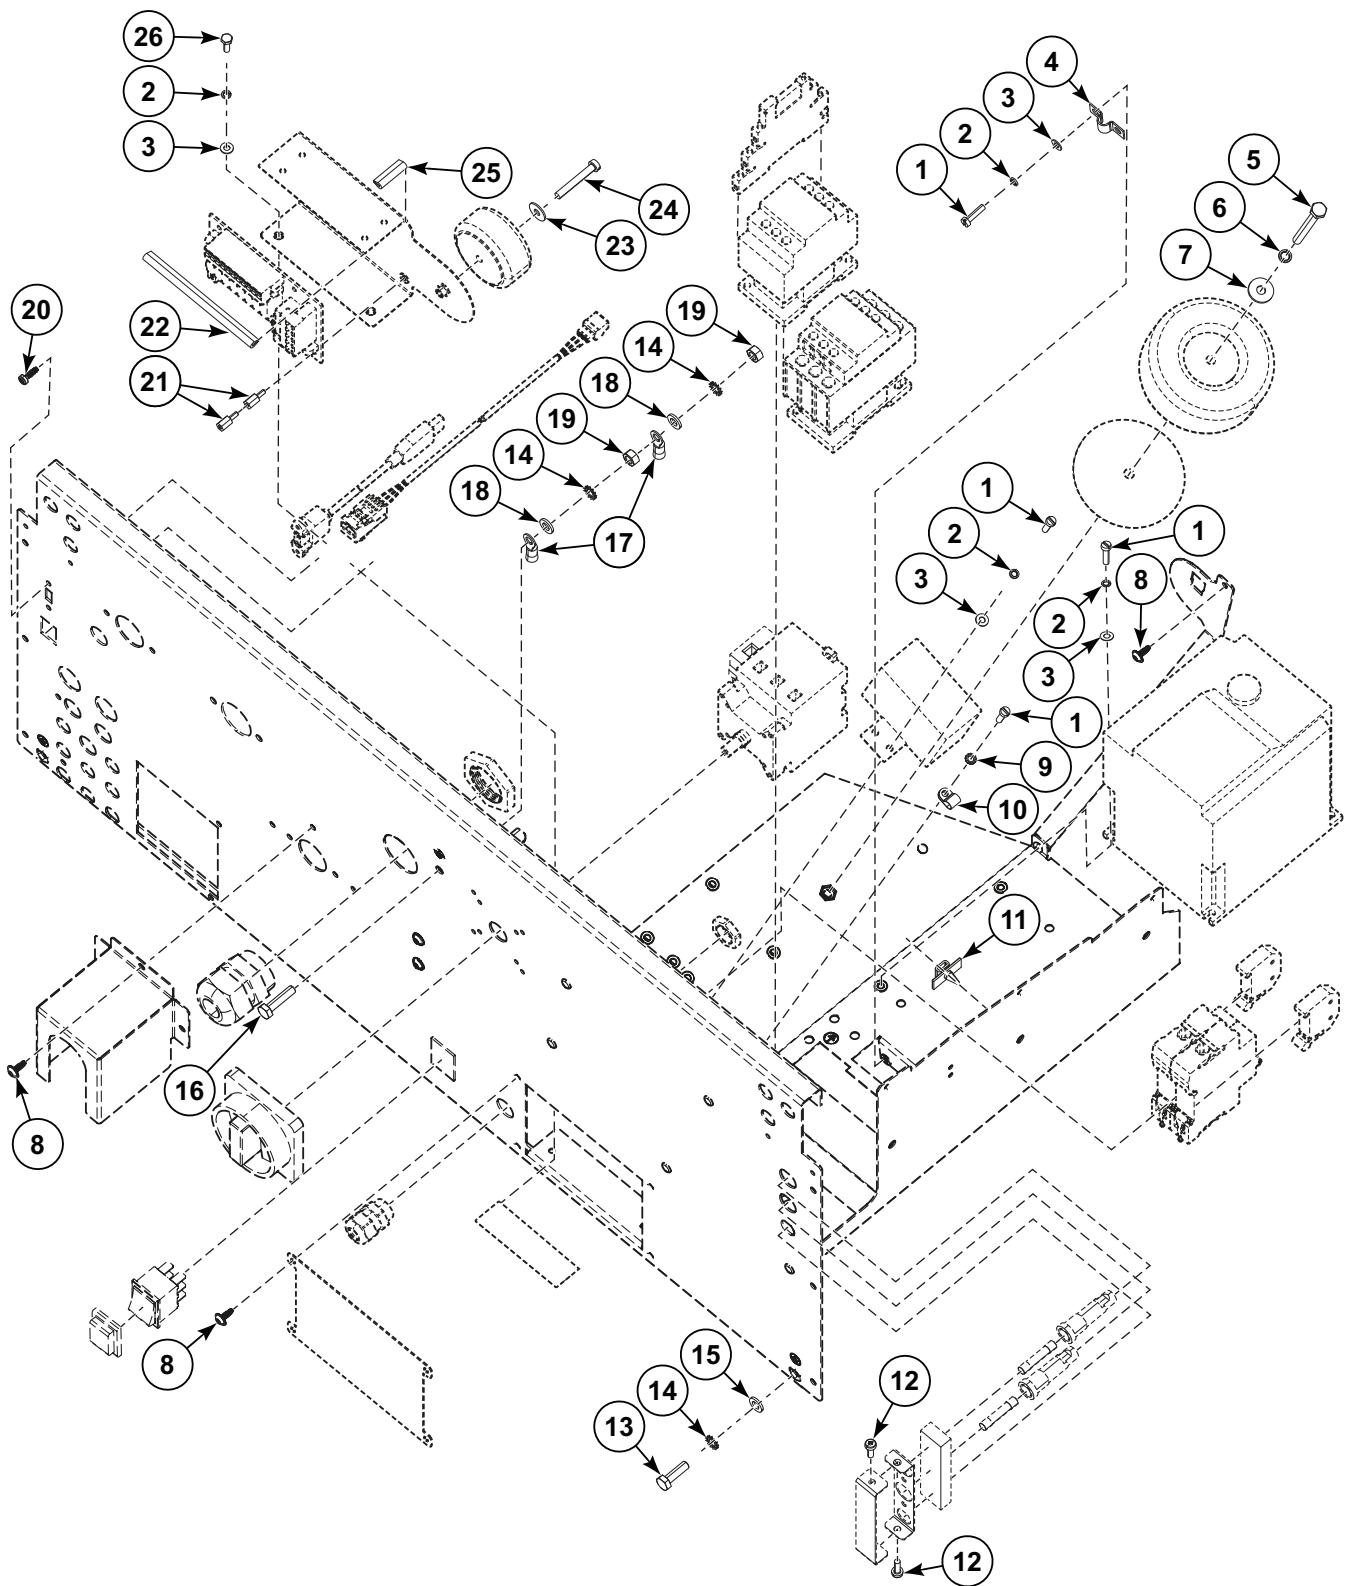


CZW614P\_D2410

## Rear Panel - 230V/400V + N (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP309084000416	Bolt	M4x16
2	SP311127000004	Washer	4
3	SP311125000004	Washer	4.3
4	SP528392	Cable Clamp	
5	SP309933000660	Bolt	M6x60
6	SP311127000006	Washer	6
7	SP311902100006	Washer	6
8	SP529206	Screw	4x11
9	SP311679800004	Washer	M4x16
10	SP502214	Clip	
11	SP528313	Cable Holder	
12	SP555504	Bolt	M4x12
13	SP309933000620	Bolt	M6x20
14	SP311679824006	Washer	6
15	SP311125240006	Washer	6
16	SP309933100625	Bolt	M6x25
17	345000165034	Cable Eye	
18	SP311125100006	Washer	6
19	SP310934100006	Nut	M6
20	SP526497	Screw	4x12
21	570381	Hex Pillar	M3
22	SPPRI505000058	Profiled Sealing	0.105m
23	SP505430	Washer	5
24	309084000535	Bolt	M5x35
25	SPPRI505000058	Profiled Sealing	0.025m
26	SP309933240412	Bolt	M4x12

# Rear Panel - 400/440V-480V (Drawing 1 of 2)

FX and PY Models with V in 7th position of the model number

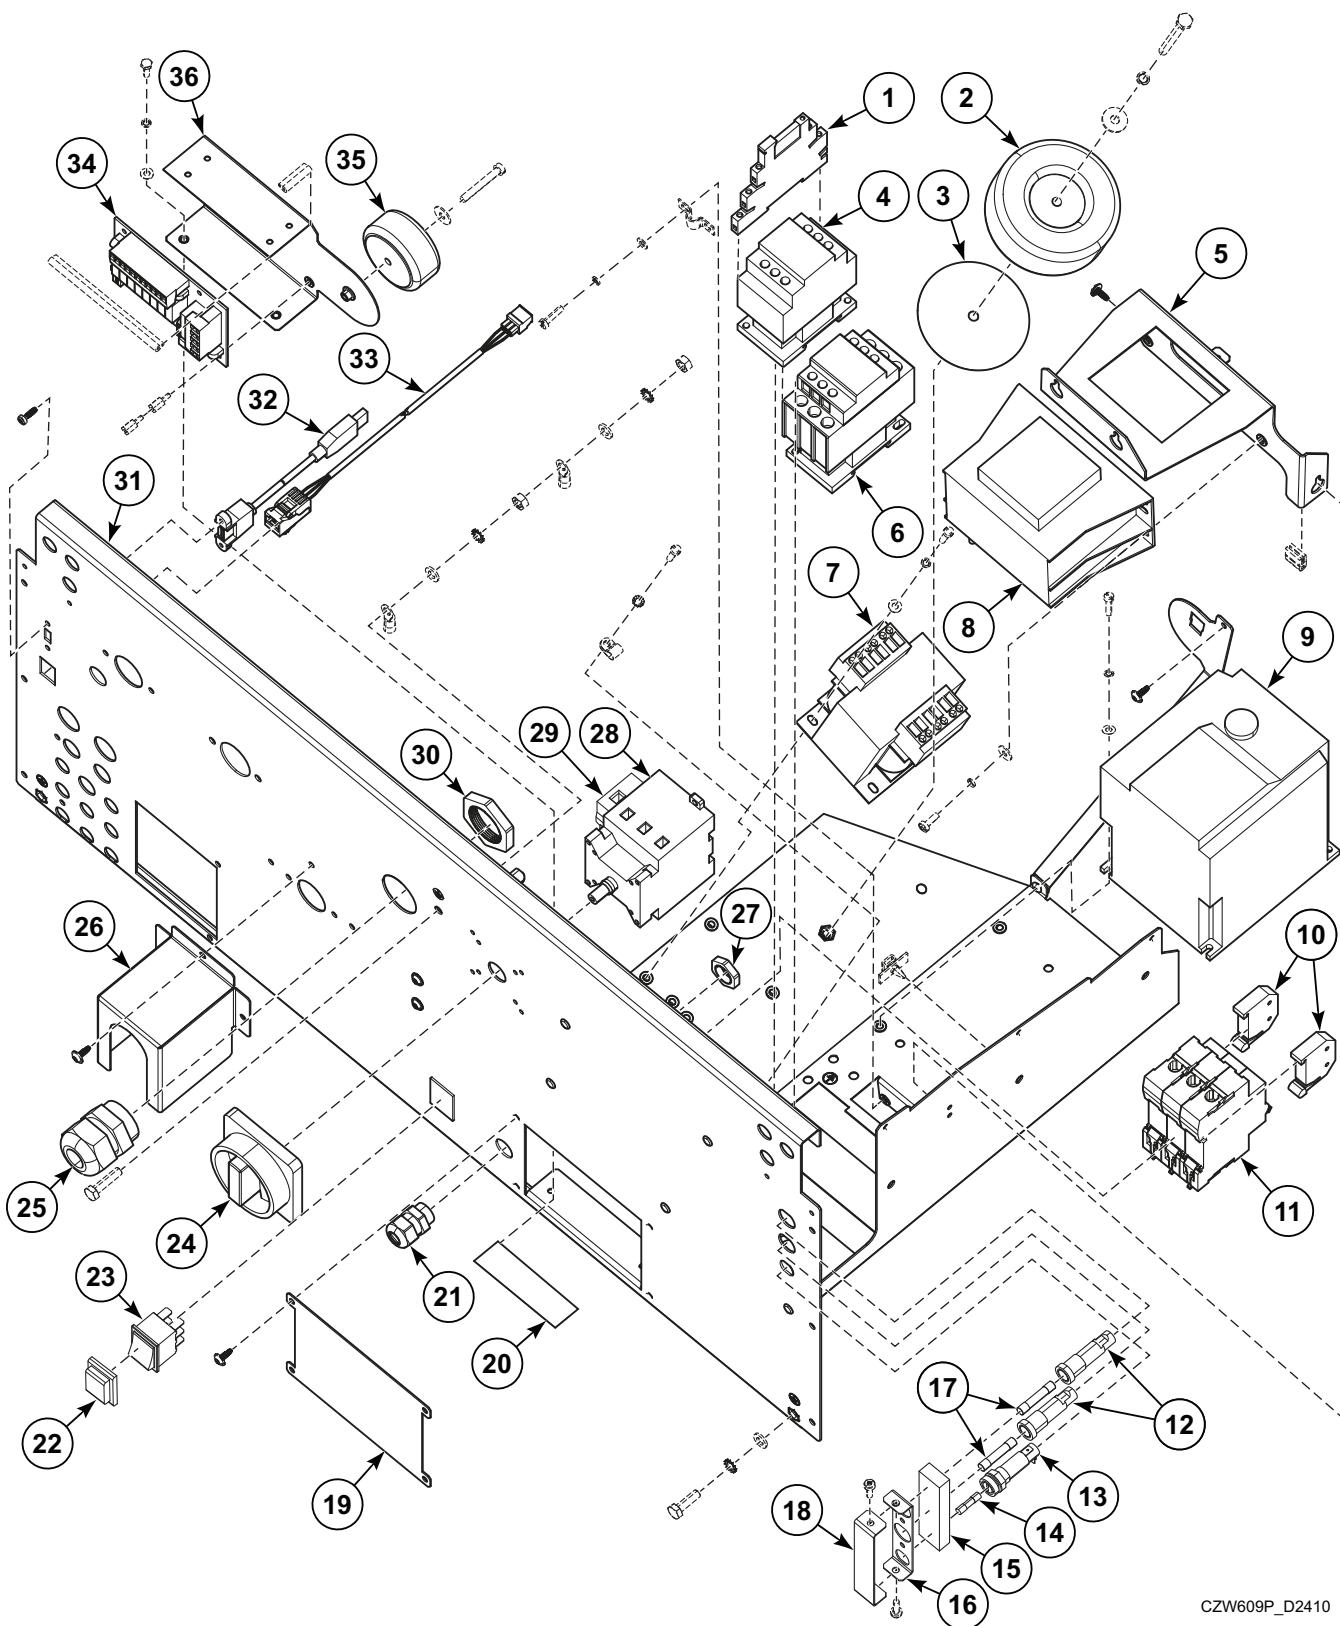

CZW609P\_D2410


## Rear Panel - 400/440V-480V (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	N/A	Relay	
2	571454	DC Choke	9.7mH; Supply 400V / 440V
3	571458	Insulation Washer	
4	SP514038	Contactor	LC1-D09M7; Used with Frequency Inverter
5	574850	Filter Holder	Used with SP313251002104 Nut
6	SP514038	Contactor	LC1-D09M7; Electric heating; 6kW, 9kW, 12kW 400V / 440V
	SP514042	Contactor	LC1D18M7; Electric heating 9kW 230V
	SPPRI345002019	Contactor	LC1D3201; Electric heating 12kW, 13.8kW, 230V
7	SP516648	Transformer	
8	SP557932	Frequency Inverter Filter	3x400V
9	571474	Frequency Inverter	1.5kW; 400V / 440V; FR-D740-036-SC-E8
	557961	Ferrite Core	Used with frequency inverter
10	SP346000209101	End Stop	
11	571464	Circuit Breaker	
12	SPPRI401003020	Fuse Housing	2 pieces
13	SPPRI401001020	Fuse Holder	
14	SP345805005020	Fuse	Without Neutral
15	570387	Self-Adhesive Profile	
16	SP554310	Fuse Holder	
17	SP345805163032	Fuse	6.3x32mm, T1A/500V; 2 pieces
18	SP554311	Fuse Cover	
19	566549	Cover	
20	570371	Label	Models with Transformer
	579019	Label	Models without Transformer
21	SP101406	Bushing	M16
22	SPPRI543000003	Push Bottom Cover	
23	SP100388	Switch	
24	SPPRI404000095	Main Switch Knob	
25	SP101409	Bushing	M32x1.5
26	582259	Cover	
27	SP101416	Nut	M16
28	SPPRI404000097	Main Switch	25A
	SPPRI404000098	Main Switch	32A
	SPPRI404000099	Main Switch	63A
29	N/A	Main Switch	25A; Fourth pole
	N/A	Main Switch	32A; Fourth pole
	N/A	Main Switch	63A; Fourth pole
30	SP101419	Nut	M32
31	574118	Rear Panel	
32	SP547006	USB Cable	Rear panel connection; Optional
33	SP545234	Cable	RS485; With connectors
34	553187	Soap Relay Board	Used with 569737 Pump Relay Board Flat Cable, 2m long
35	564561	Transformer	
	579014	Transformer	Models without Transformer
36	570382	Holder	

N/A = Part no longer available

## Rear Panel - 400/440V-480V (Drawing 2 of 2)

FX and PY Models with V in 7th position of the model number

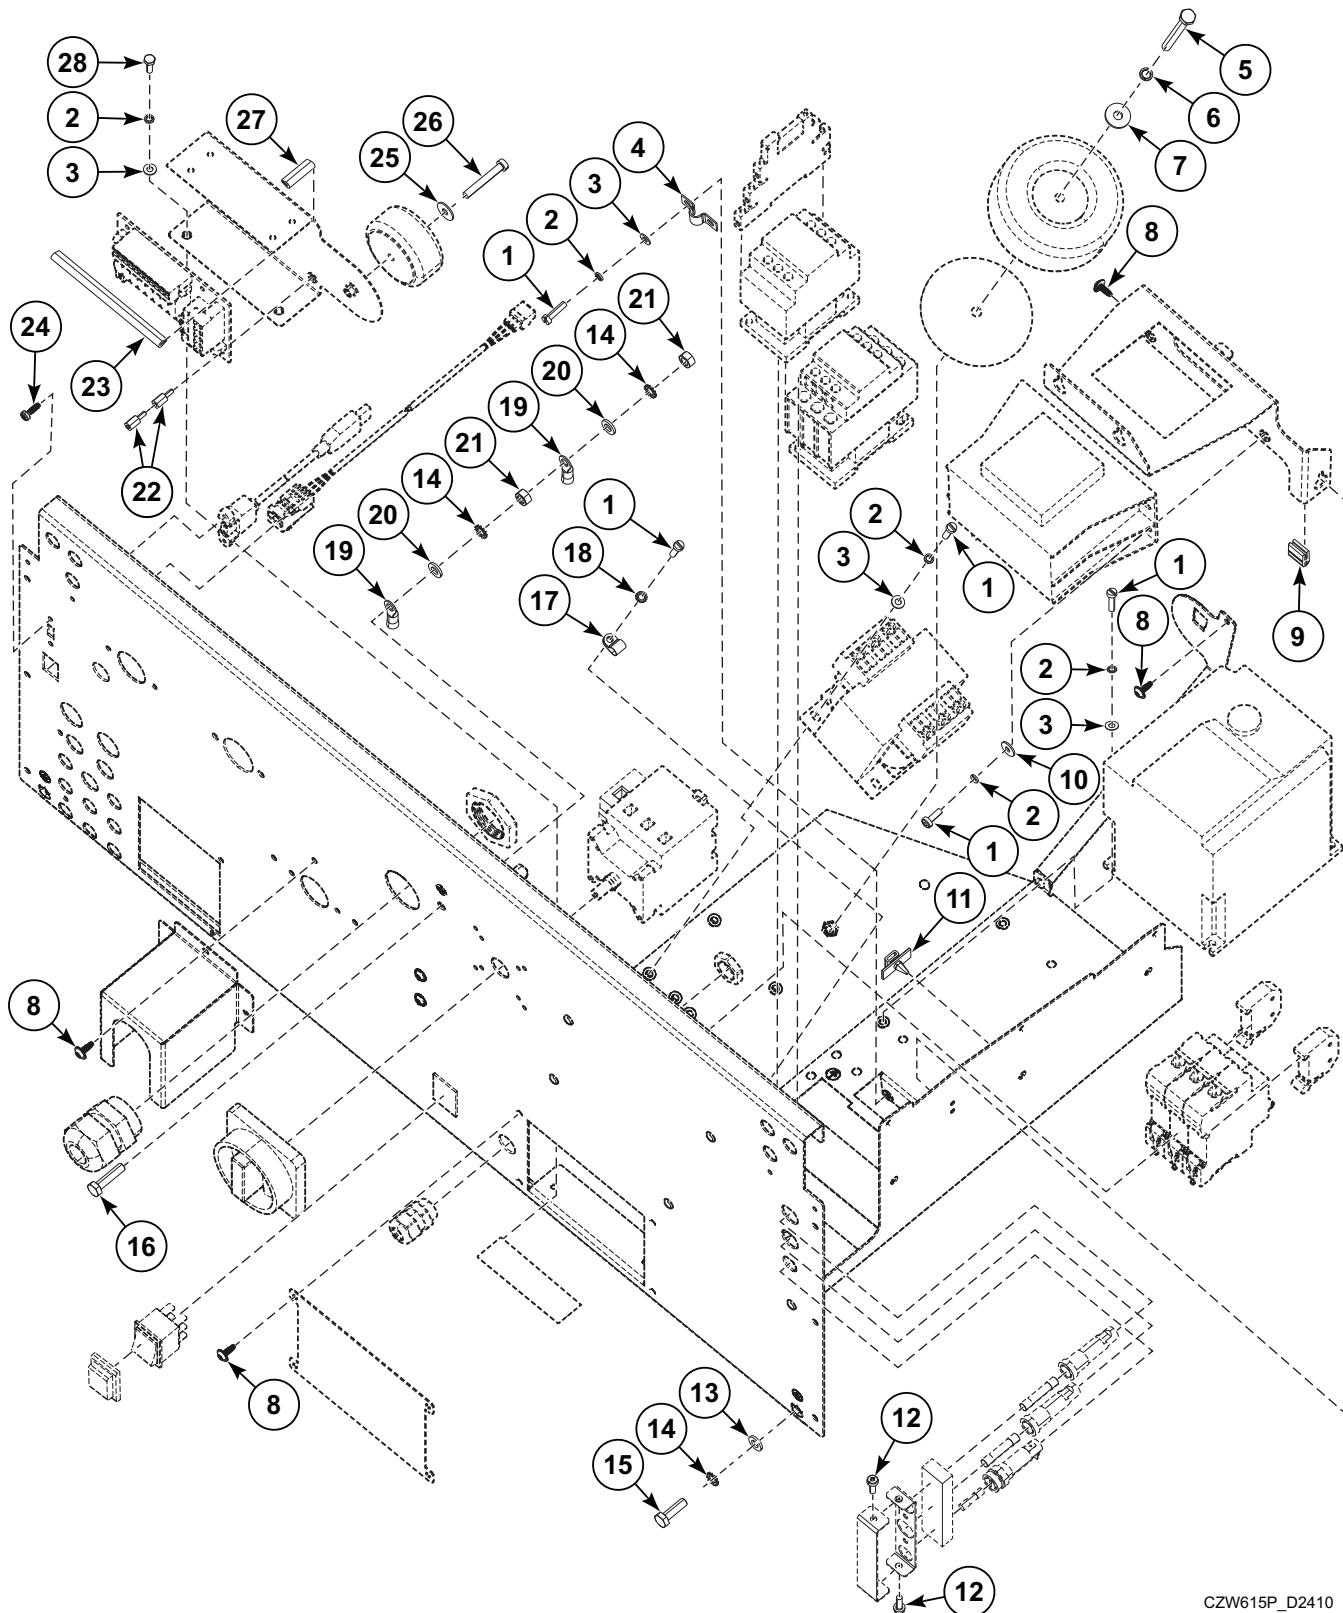


CZW615P\_D2410

## Rear Panel - 400/440V-480V (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP309084000416	Bolt	M4x16
2	SP311127000004	Washer	4
3	SP311125000004	Washer	4.3
4	SP528392	Cable Clamp	
5	SP309933000660	Bolt	M6x60
6	SP311127000006	Washer	6
7	SP311902100006	Washer	6
8	SP529206	Screw	4x11
9	SP529068	Edge Protection	0.014m
10	SP311679800004	Washer	M4
11	SP528313	Cable Holder	
12	SP555504	Bolt	M4x12
13	SP311125240006	Washer	6
14	SP311679824006	Washer	6
15	SP309933000620	Bolt	M6x20
16	SP309933100625	Bolt	M6x25
17	SP502214	Clip	
18	SP311679800004	Washer	M\$
19	345000165034	Cable Eye	
20	SP311125100006	Washer	6
21	SP310934100006	Nut	M6
22	570381	Hex Pillar	M3
23	SPPRI505000058	Profiled Sealing	0.105m
24	SP526497	Screw	4x12
25	SP505430	Washer	5
26	309084000535	Bolt	M5x35
27	SPPRI505000058	Profiled Sealing	0.025m
28	SP309933240412	Bolt	M4x12

# Steam Heating

Models with A, D, F, I, J, R, T or X in 7th position of the model number

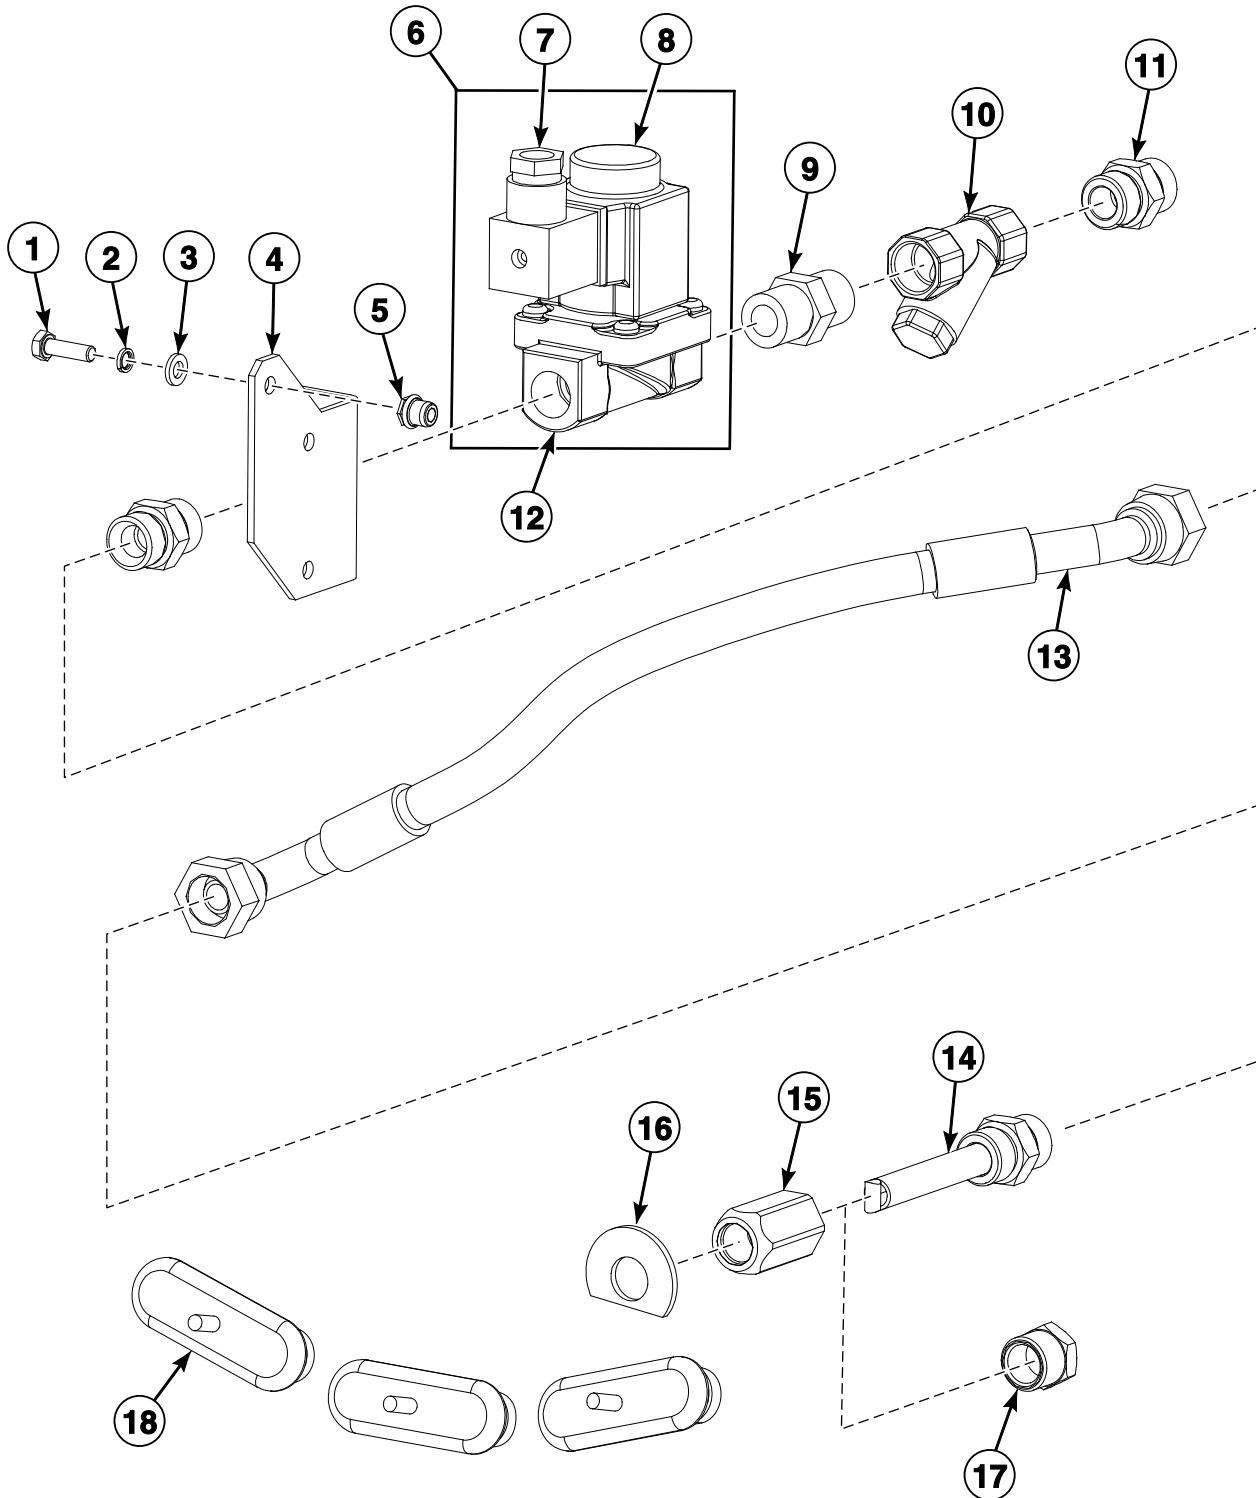


CFD2852P\_D2410

## Steam Heating

REF	PART NO.	DESCRIPTION	COMMENTS
	SP526564	Seal	
	SP101403	Adhesive	Loctite 5366
	SP245704000603	Adhesive	Loctite 603
	SP559314	Steam Kit	
1	SP309933000620	Bolt	M6x20
2	SP311127000006	Washer	6
3	SP311125000006	Washer	6.4
4	SP526531	Steam Valve Support	
5	SP313251000006	Nut	M6
6	SP514164	Steam Valve	1/2 inch
7	SP554156	Connector	
8	SP554110	Coil	50/60Hz
9	SP319428324012	Adapter	1/2 inch
10	SP405054120215	Steam Filter	1/2 inch
11	SPR22112000114	Pipe Nipple	1/2 inch
12	SP514165	Steam Valve Body	
13	SP526528	Steam Hose	1/2 inch, l=520mm
14	SP526525	Steam Injector	
15	SP547968	Adapter	G3/8 inch / G1/2 inch
16	SP547981	Washer	
17	SPPRI426001268	Plug	1/2 inch; Prep for electric and steam heat
18	SPPRI342001016	Heating Element Hole Plug	

# Steam Heating

Models with V in 7th position of the model number

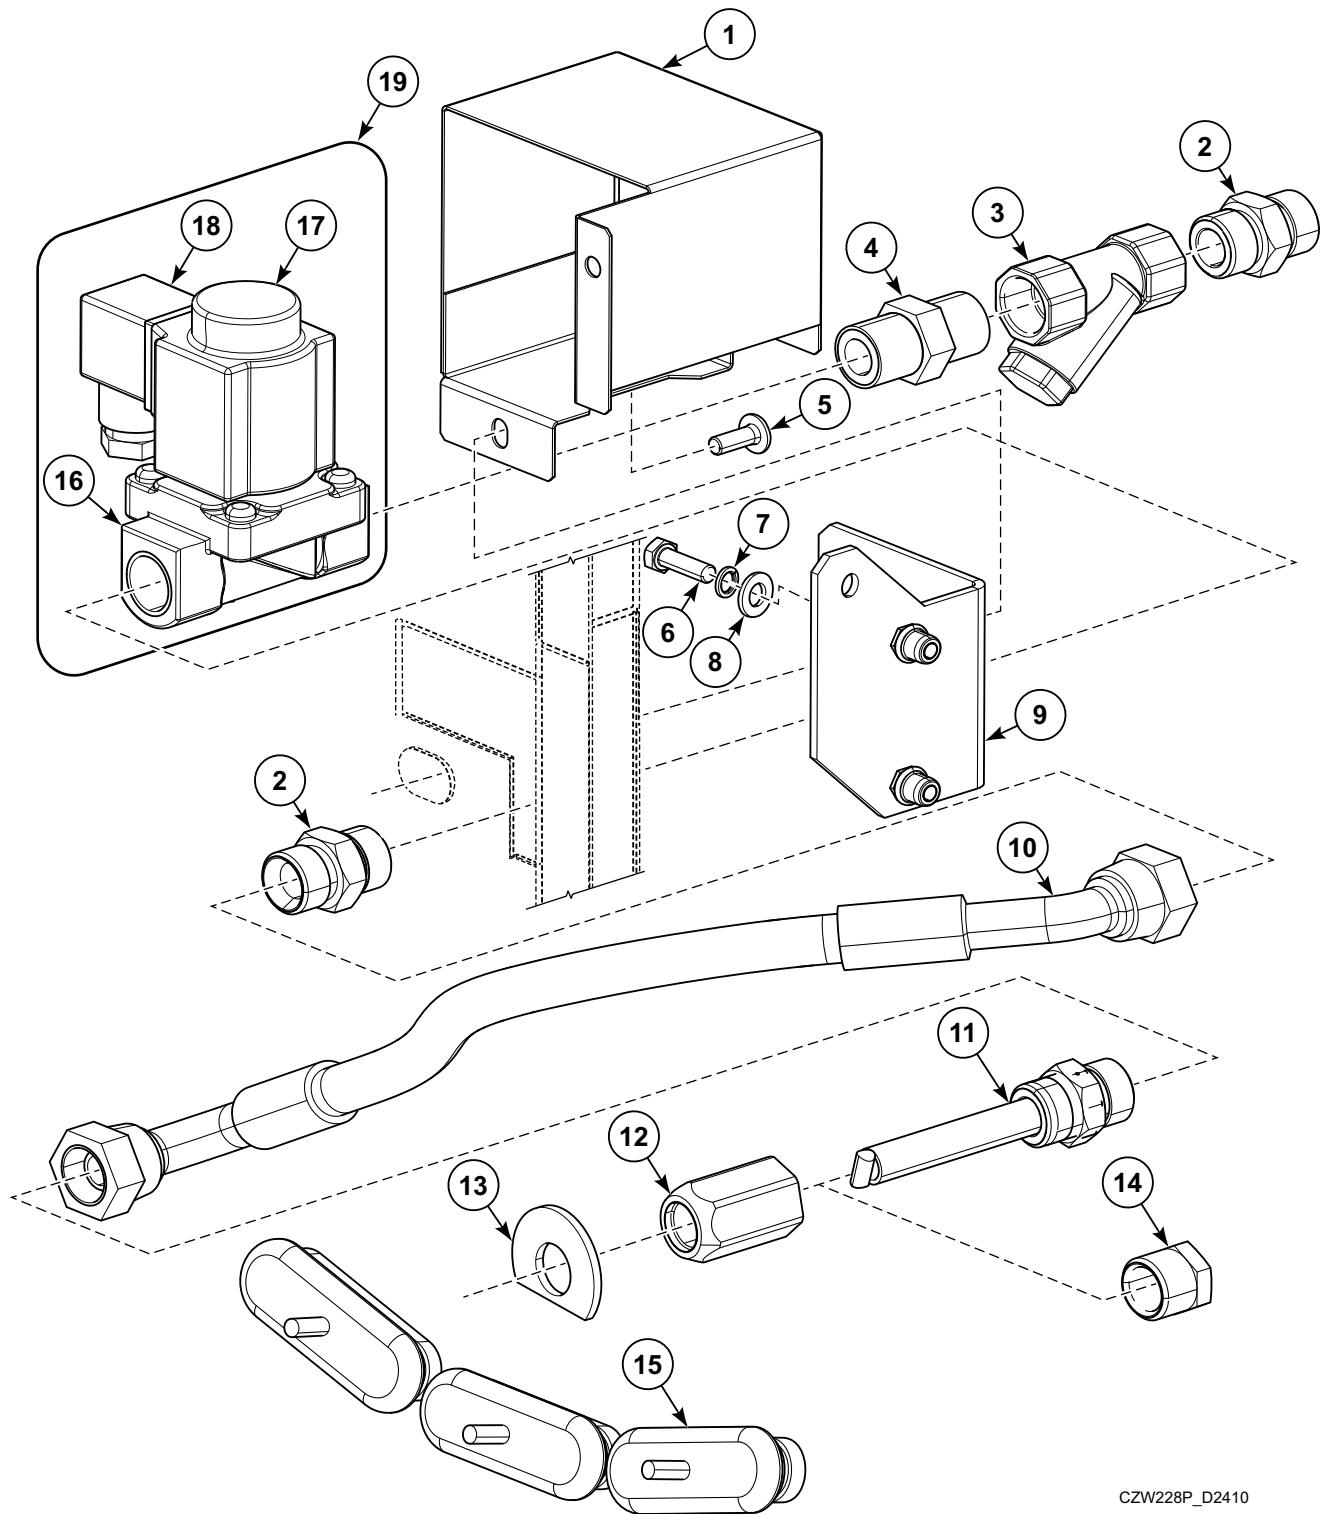


CZW228P\_D2410

## Steam Heating

REF	PART NO.	DESCRIPTION	COMMENTS
	555354	Steam Kit	
	SP101403	Adhesive	Loctite 5366
	SP245704000603	Adhesive	Loctite 603
1	570436	Steam Valve Cover	
2	SPR22112000114	Pipe Nipple	1/2 inch
3	SP405054120215	Steam Filter	1/2 inch
4	SP319428324012	Adapter	1/2 inch
5	SP555658	Bolt	M6x16
6	SP309933000620	Bolt	M6x20
7	SP311127000006	Washer	6
8	SP311125000006	Washer	6
9	SP526531	Steam Valve Support	
10	SP526528	Steam Hose	1/2 inch, l=520mm
11	SP526525	Steam Injector	
12	SP547968	Adapter	G3/8 inch / G1/2 inch
13	SP547981	Washer	
14	SPPRI426001268	Plug	1/2 inch; Prep for electric and steam heat
15	SPPRI342001016	Heating Element Hole Plug	
16	SP514165	Steam Valve Body	
17	SP554110	Coil	50/60Hz
18	SP554156	Connector	
19	SP514164	Steam Valve	1/2 inch

# Washing Drum and Tub (Drawing 1 of 2)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

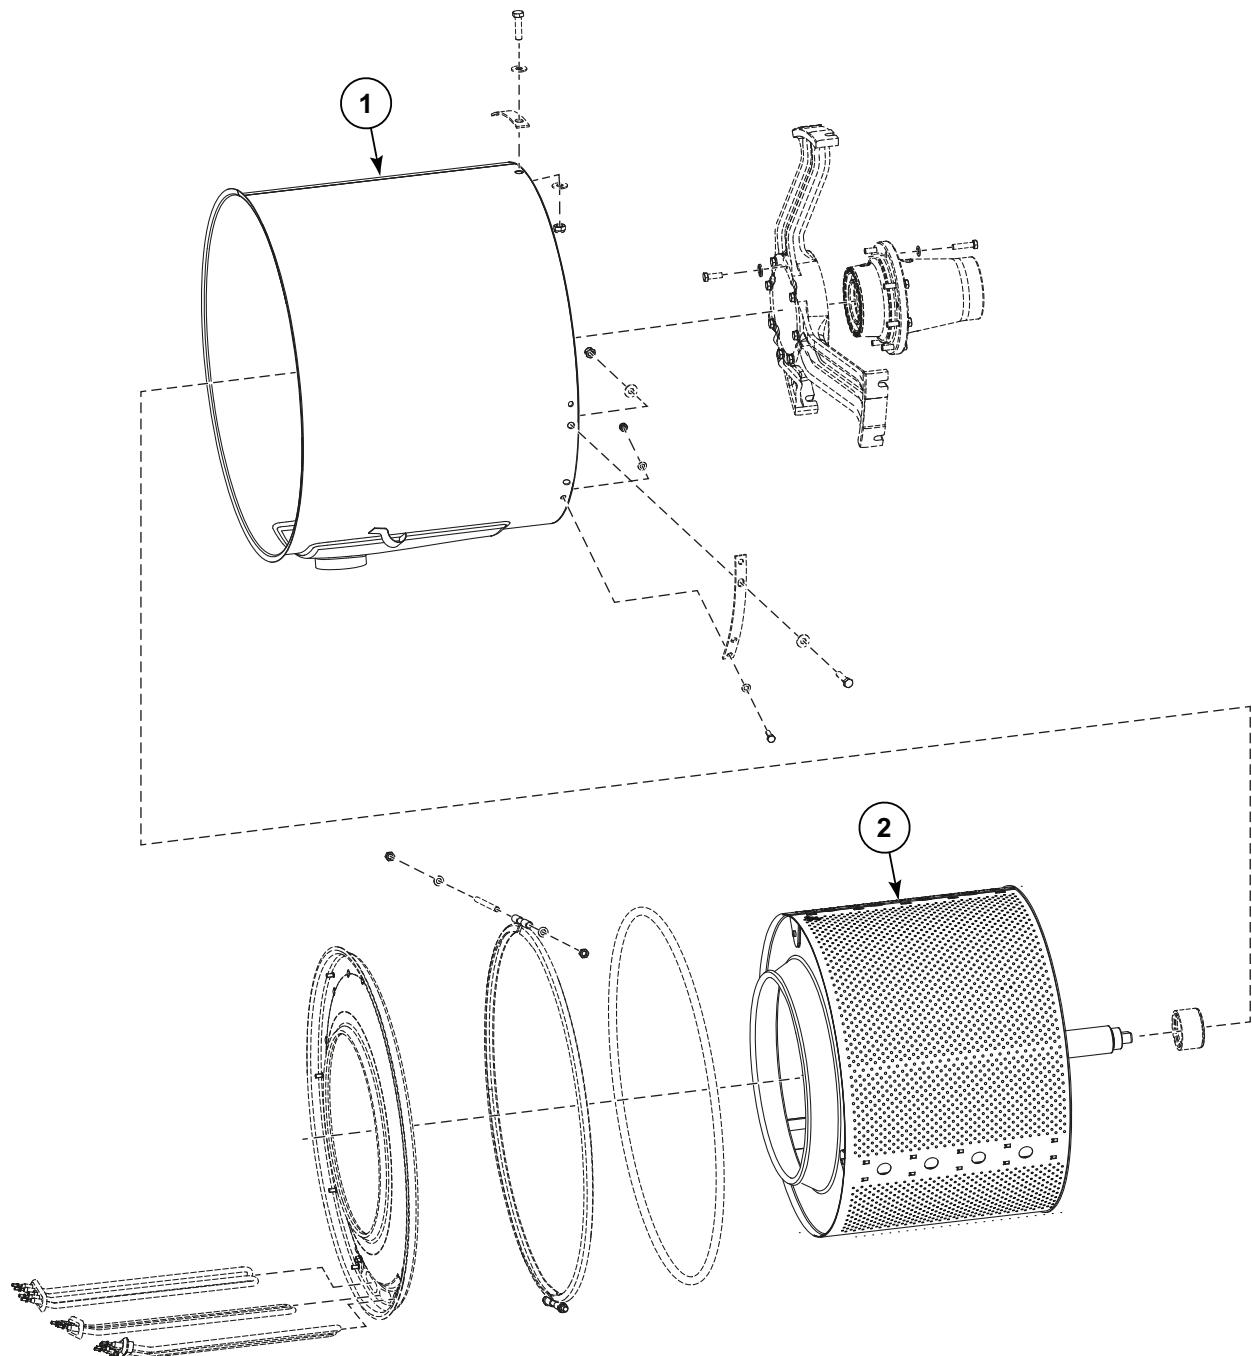


CZW600P\_D2410

## Washing Drum and Tub (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP537764	External Tub	Models Through Serial No 135FX019973WB; Steam heating
	582286	External Tub	Models Starting Serial No 135FX019974WB; Steam heating
	SP537918	External Tub	Models Through Serial No 135FX019973WB; Electric heating
	582287	External Tub	Models Starting Serial No 135FX019974WB; Electric heating
	567158	External Tub	Models Through Serial No 135FX019973WB; Used with SoftWash and built-in recirculation pump; Steam heating
	582288	External Tub	Models Starting Serial No 135FX019974WB; Used with SoftWash and built-in recirculation pump; Steam heating
	567197	External Tub	Models Through Serial No 135FX019973WB; Used with SoftWash and built-in recirculation pump; Electric heating
	582289	External Tub	Models Starting Serial No 135FX019974WB; Used with SoftWash and built-in recirculation pump; Electric heating
2	537766P	Washing Drum	Models Through Serial No 135FX019973WB; Cascade; Includes SP537843 Shaft Ring
	579033P	Washing Drum	Models Starting Serial No 135FX019974WB; Cascade; Includes SP537843 Shaft Ring
	563266P	Washing Drum	AF, IY and NY models with "G", "H", "J" or "K" in 13th position of the model number through Serial No 135FX019973WB; Flat; Includes SP537843 Shaft Ring
	579136P	Washing Drum	AF, IY and NY models with "G", "H", "J" or "K" in 13th position of the model number starting Serial No 135FX019974WB; Flat; Includes SP537843 Shaft Ring
	563246P	Washing Drum	Models Through Serial No 135FX019973WB; Normal spin; 7mm perforation; Includes SP537843 Shaft Ring
	579190P	Washing Drum	Models Starting Serial No 135FX019974WB; Normal spin; 7mm perforation; Includes item SP537843 Shaft Ring

## Washing Drum and Tub (Drawing 2 of 2)

Models with A, D, F, I, J, R, T or X in 7th position of the model number

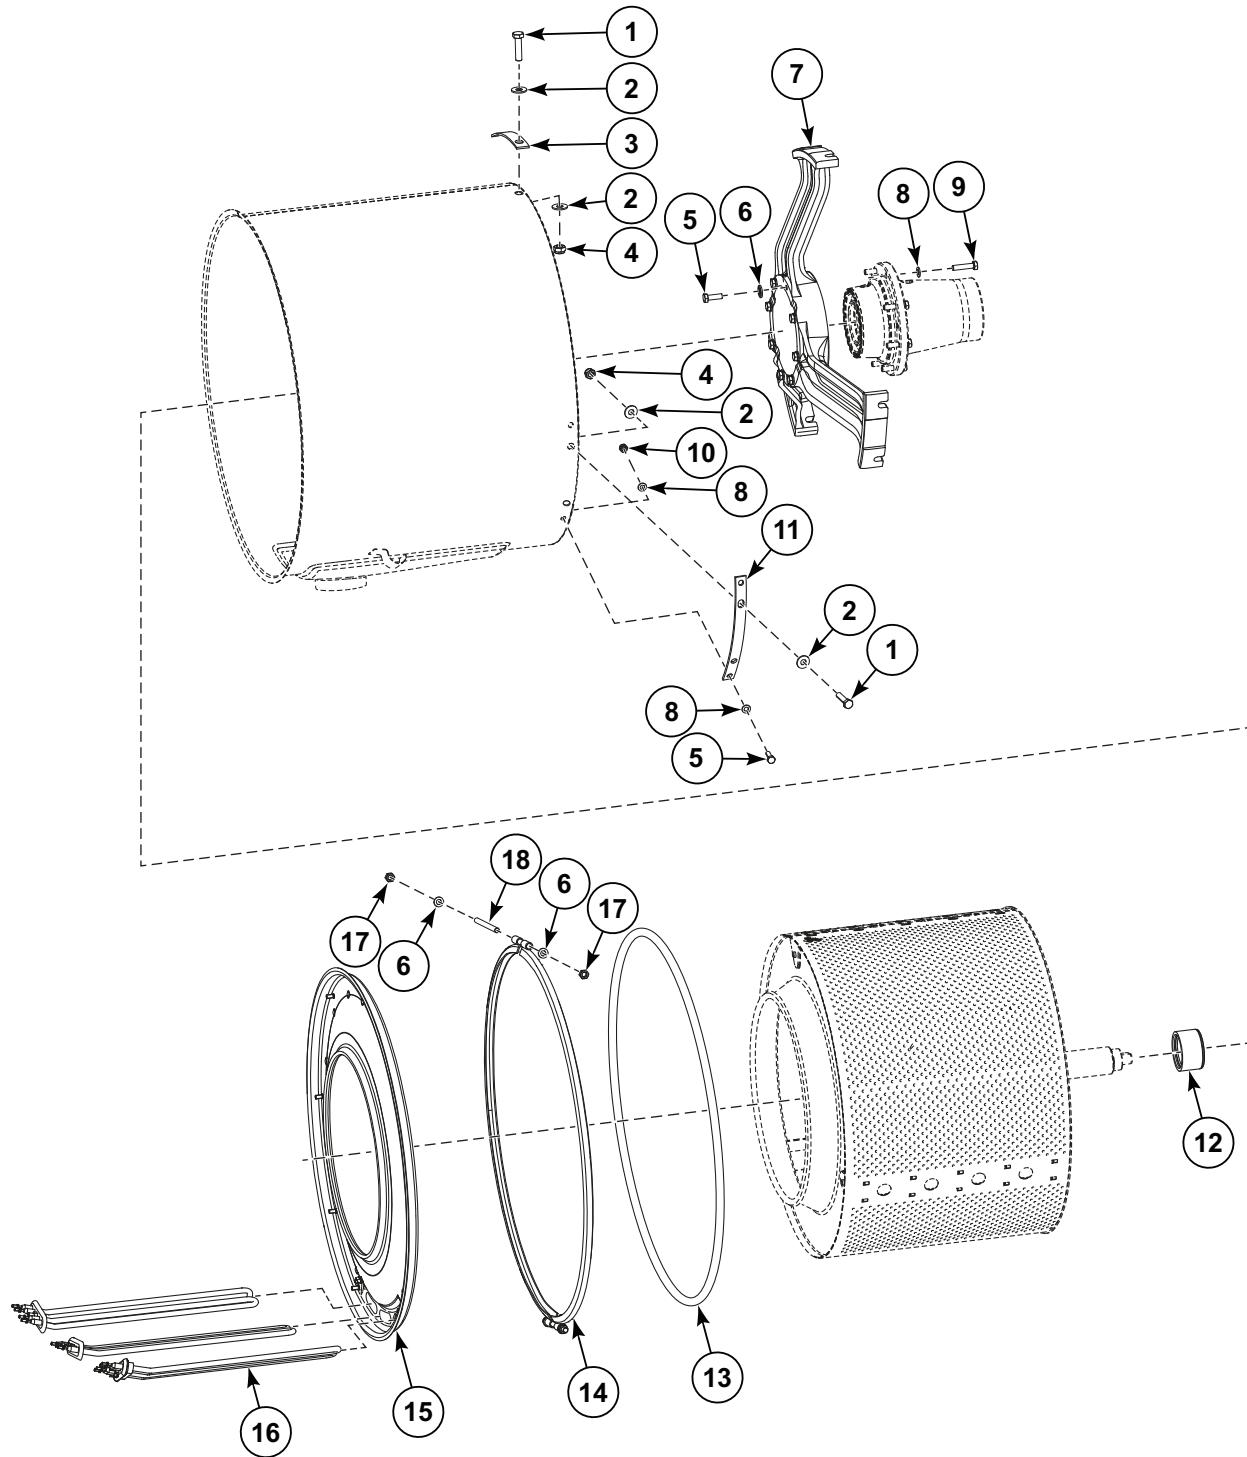


CZW584P\_D2410

## Washing Drum and Tub (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	SP245704003021	Adhesive	Loctite 243; Used with bolt
	SPPRI704000053	Sealant	
	SP245704000050	Adhesive	
	SP510889	Anticorrosive Agent	
1	SP527420	Bolt	M10x40
2	SP311737000010	Washer	M10
3	SP537885	Washer	Models Through Serial No 135FX019973WB; 3pcs
4	SP310985000010	Nut	M10
5	SP309933240825	Bolt	M8x25
6	SP311125240008	Washer	8; (Used with SPF02119000415 Bolt); (Used with SP537730 Cross Piece models Through Serial No 135FX019973WB)
7	SP537730	Cross Piece	
8	SP311125000008	Washer	M8
9	SP309933000835	Bolt	M8x35
10	SP310985000008	Nut	M8; Models Starting Serial number 135FX019974WB
11	582275	Washer	Models Starting Serial No 135FX019974WB; 3pcs
12	SP537843	Shaft Ring	
13	SP537739	Seal	d10-2100mm
14	SP537737	Clamp	
15	SP537742	External Tub Front Plate	
16	SP540144	Heating Element	3000W, l=325mm
	SP540145	Heating Element	2x1500kW, l=325mm
	SP540146	Heating Element	2x2000W, l=335mm
17	SP310934240008	Nut	M8
18	SPF02119000415	Bolt	M8

# Washing Drum and Tub (Drawing 1 of 3)

Models with V in 7th position of the model number

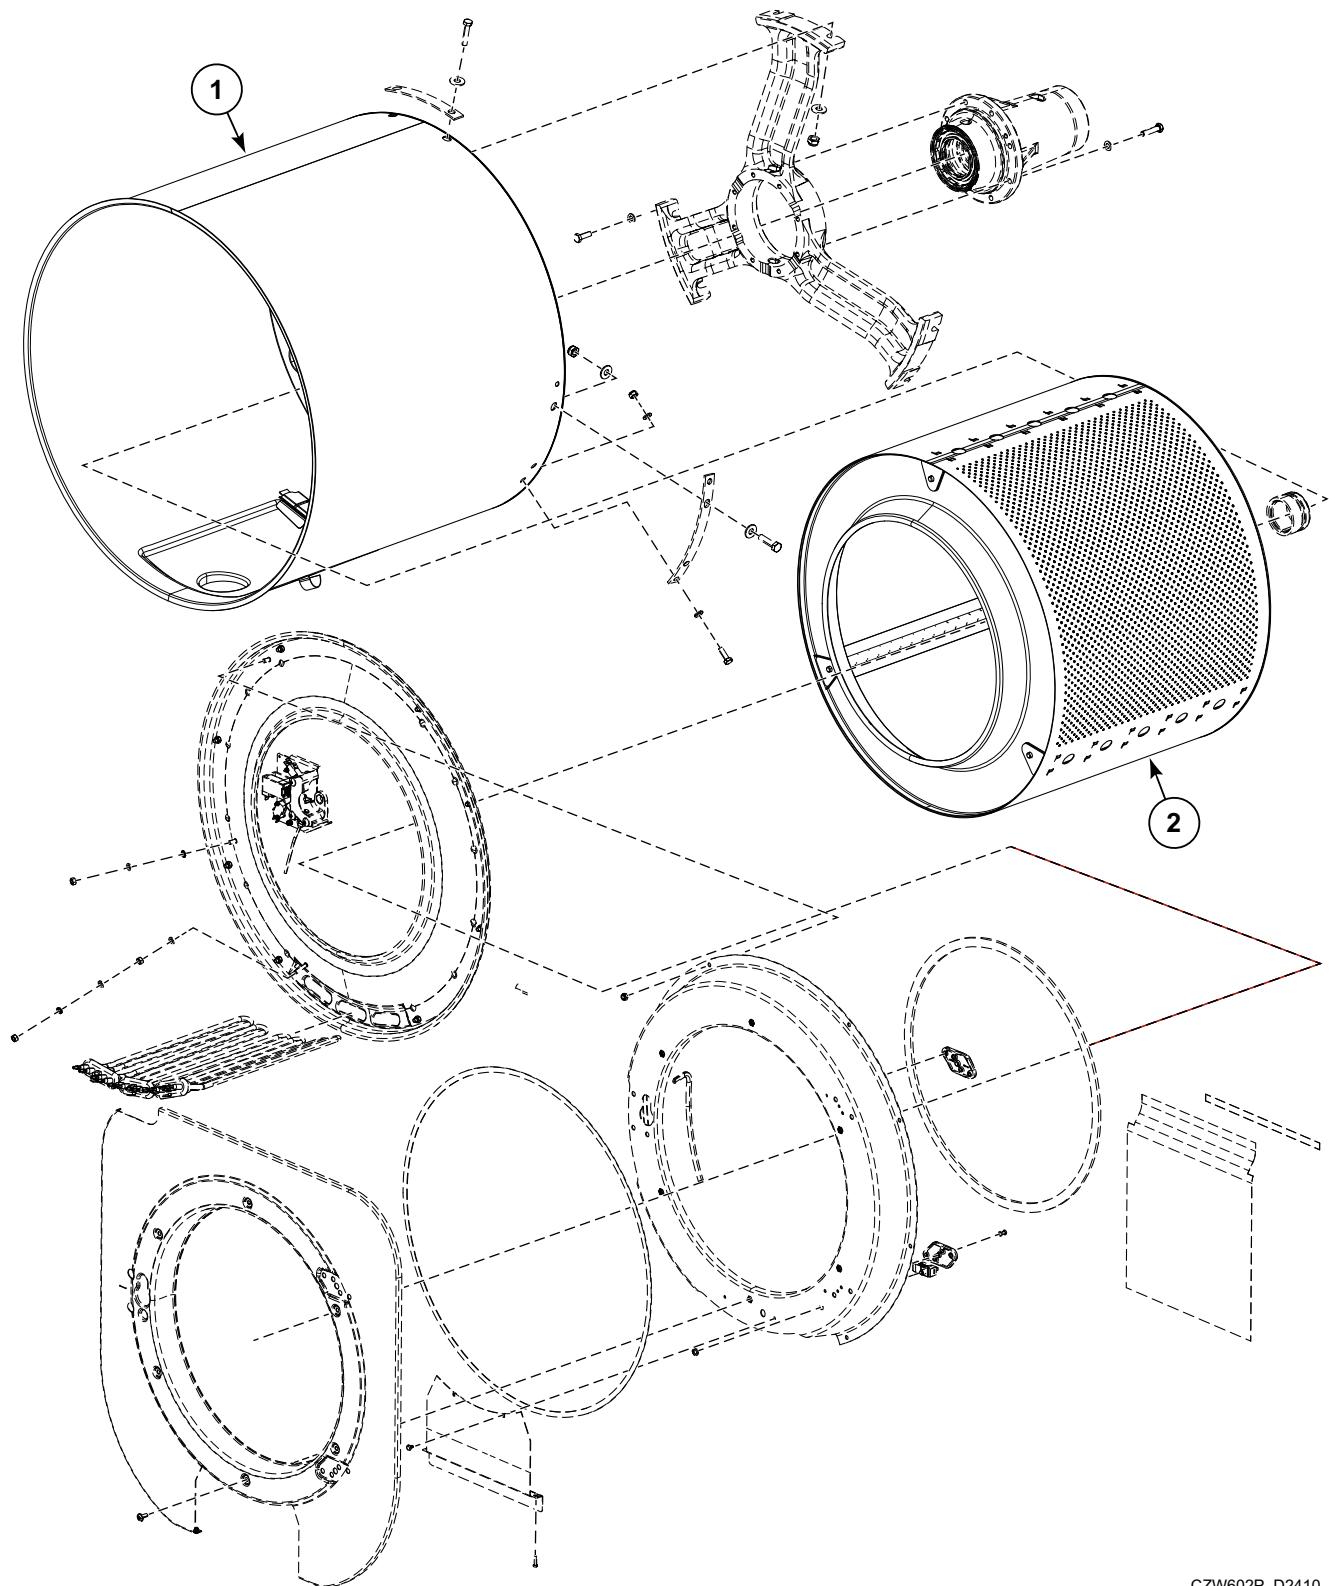


CZW602P\_D2410

## Washing Drum and Tub (Drawing 1 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP537764	External Tub	Models Through Serial No 135FX019973WB; Steam heating
	582286	External Tub	Models Starting Serial No 135FX019974WB; Steam heating
	SP537918	External Tub	Models Through Serial No 135FX019973WB; Electric heating
	582287	External Tub	Models Starting Serial No 135FX019974WB; Electric heating
	567158	External Tub	Models Through Serial No 135FX019973WB; Used with SoftWash and built-in recirculation pump; Steam heating
	582288	External Tub	Models Starting Serial No 135FX019974WB; Used with SoftWash and built-in recirculation pump; Steam heating
	567197	External Tub	Models Through Serial No 135FX019973WB; Used with SoftWash and built-in recirculation pump; Electric heating
	582289	External Tub	Models Starting Serial No 135FX019974WB; Used with SoftWash and built-in recirculation pump; Electric heating
2	537766P	Washing Drum	Models Through Serial No 135FX019973WB; Cascade; Includes SP537843 Shaft Ring
	579033P	Washing Drum	Models Starting Serial No 135FX019974WB; Cascade; Includes SP537843 Shaft Ring
	563266P	Washing Drum	Models Through Serial No 135FX019973WB; Flat; Includes SP537843 Shaft Ring
	579136P	Washing Drum	Models Starting Serial No 135FX019974WB; Flat; Includes SP537843 Shaft Ring
	563246P	Washing Drum	Models Through Serial No 135FX019973WB; Normal spin; 7mm perforation; Includes SP537843 Shaft Ring
	579190P	Washing Drum	Models Starting Serial No 135FX019974WB; Normal spin; 7mm perforation; Includes item SP537843 Shaft Ring

## Washing Drum and Tub (Drawing 2 of 3)

Models with V in 7th position of the model number

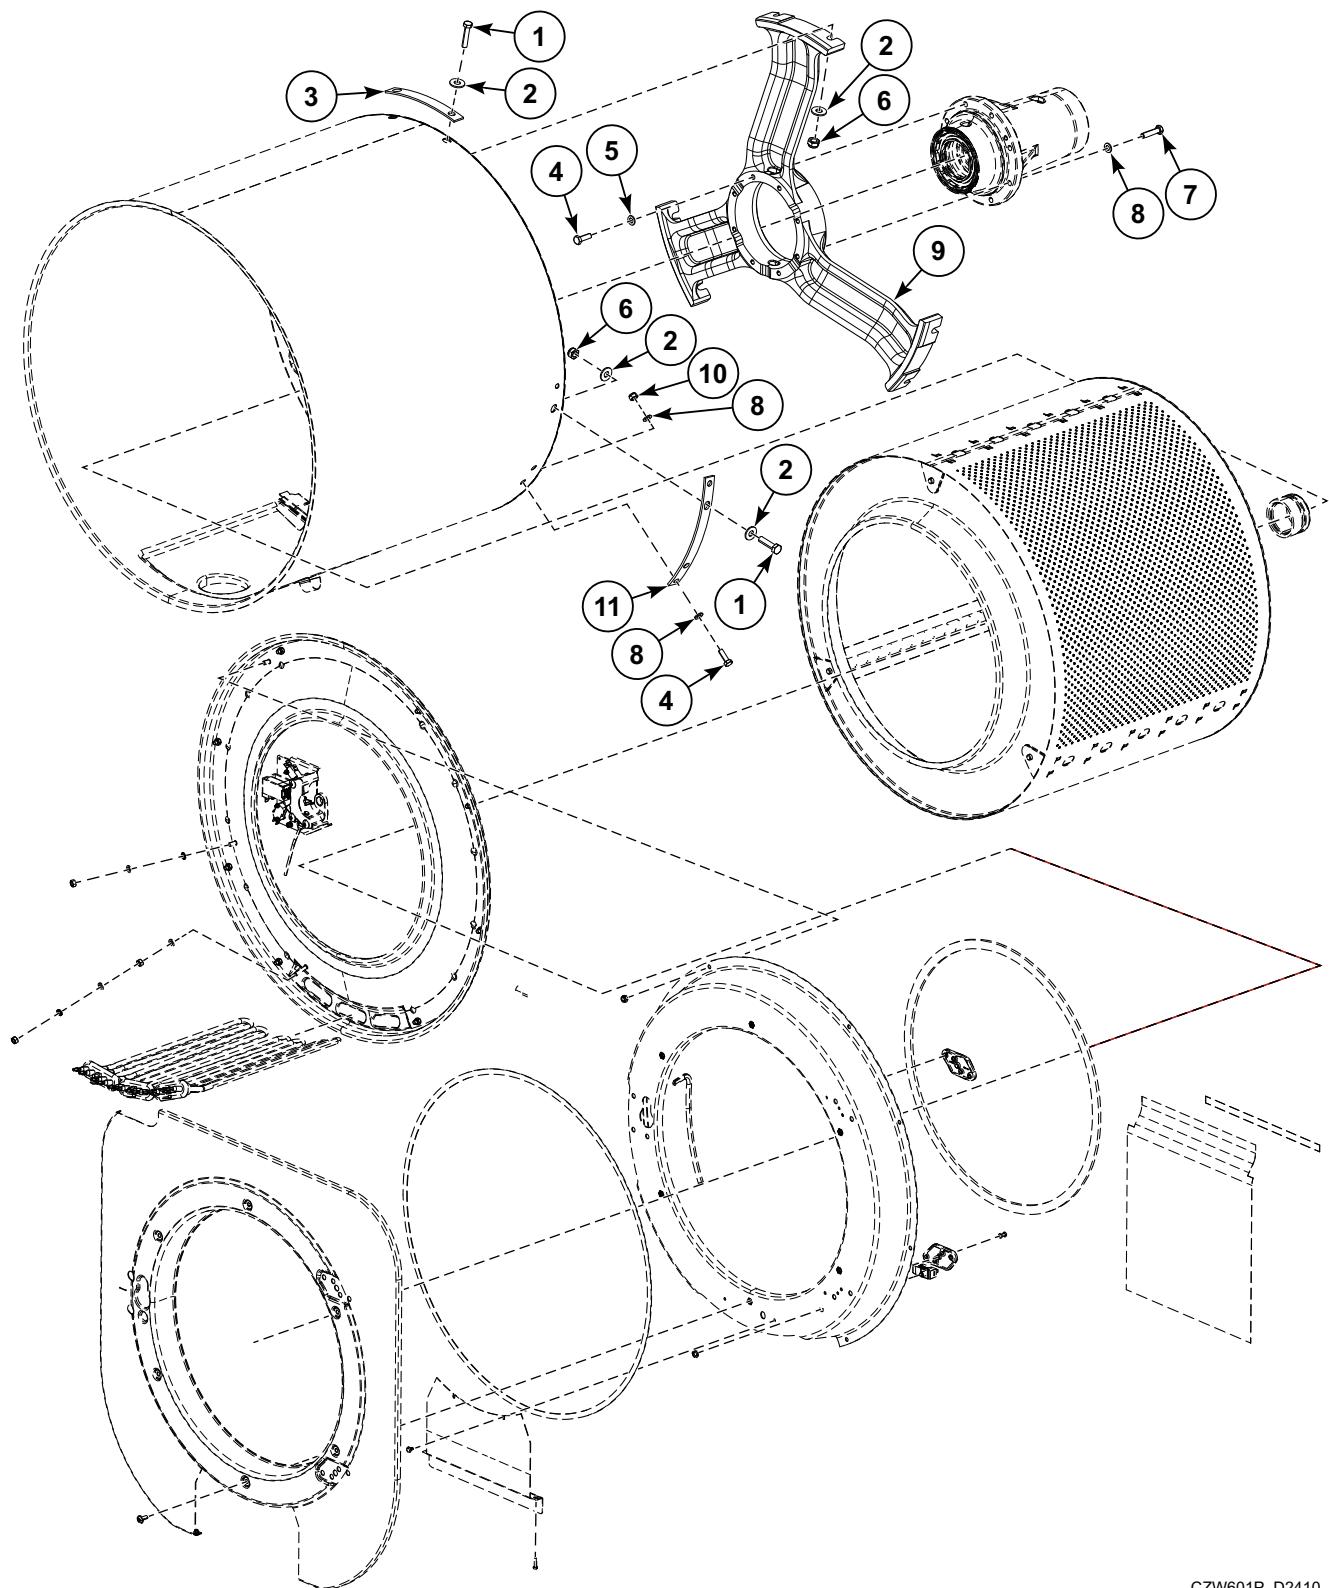


CZW601P\_D2410

## **Washing Drum and Tub (Drawing 2 of 3)**

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP527420	Bolt	M10x40
2	SP311737000010	Washer	M10
3	SP537885	Washer	Models Through Serial No 135FX019973WB; 3pcs
4	SP309933240825	Bolt	M8x25
5	SP311125240008	Washer	8; Models Through Serial No 135FX019973WB
6	SP310985000010	Nut	M10
7	SP309933000835	Bolt	M8x35
8	SP311125000008	Washer	8
9	SP537730	Cross Piece	
10	SP310985000008	Nut	M8; Models Starting Serial No 135FX019974WB
11	582275	Washer	Models Starting Serial No 135FX019974WB; 3pcs

# Washing Drum and Tub (Drawing 3 of 3)

Models with V in 7th position of the model number

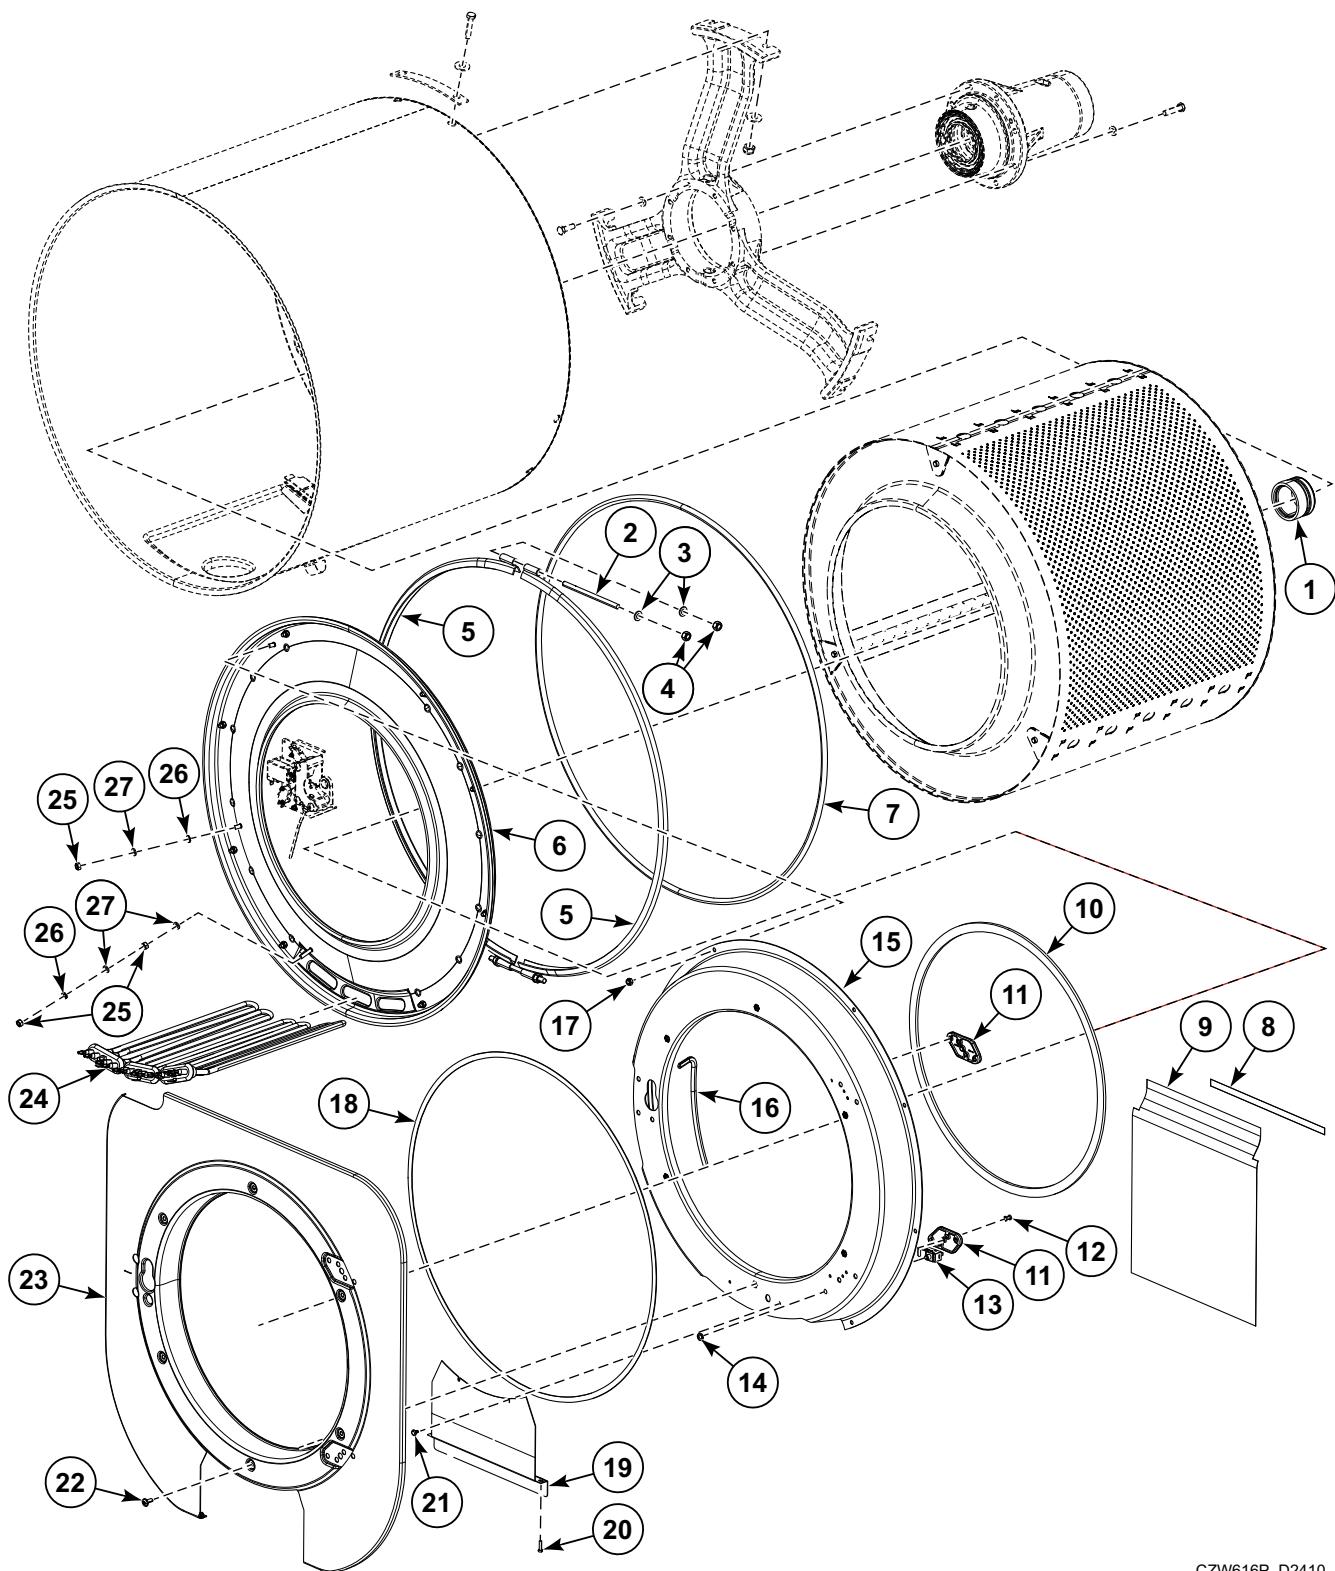


CZW616P\_D2410

## Washing Drum and Tub (Drawing 3 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP537843	Shaft Ring	
2	SPF02119000415	Bolt	M8
3	SP311125240008	Washer	M8
4	SP310934240008	Nut	M8
5	SP537737	Clamp	
6	SP571607	External Tub Front Plate	
7	SP537739	Seal	d10-2100mm
8	SP537896	Adhesive	
9	568938	Heating Element Cover	
10	SP522450	Profile	l=1.45m
11	SP537849	Hinge Spacer	
12	SP547779	Rivet	4x16.7
13	571634	Microswitch	Models through 28 February 2021
14	571635	Nut	M10; Models through 28 February 2021
15	568906	Door Lock Holder	Models through 28 February 2021
	SP537853	Door Lock Holder	Models starting 1 March 2021
16	SPPRI505000058	Profiled Sealing	
17	SP310985000006	Nut	M8
18	SP284000012003	Tape	
19	568986	Heating Element Front Cover	Stainless
	SP563274	Heating Element Front Cover	Black
20	SP309084000416	Bolt	M4x16
21	SP537856	Connector	
22	SP537854	Bolt	M6x14
23	571725	Front Panel	Stainless; Models starting 1 March 2021
	571722	Front Panel	Black; Models starting 1 March 2021
	568999	Front Panel	Stainless; Models through 28 February 2021
	568976	Front Panel	Black; Models through 28 February 2021
24	SP540144	Heating Element	3000W, l=325mm
	SP540143	Heating Element	2000W, l=325mm
	SP540145	Heating Element	2x1500W, l=325mm
	SP540142	Heating Element	
	SP540146	Heating Element	2x2000W, l=335mm
25	SP310934240006	Nut	M6
26	SP311679800006	Washer	6
27	SP311125240006	Washer	6

## Drive

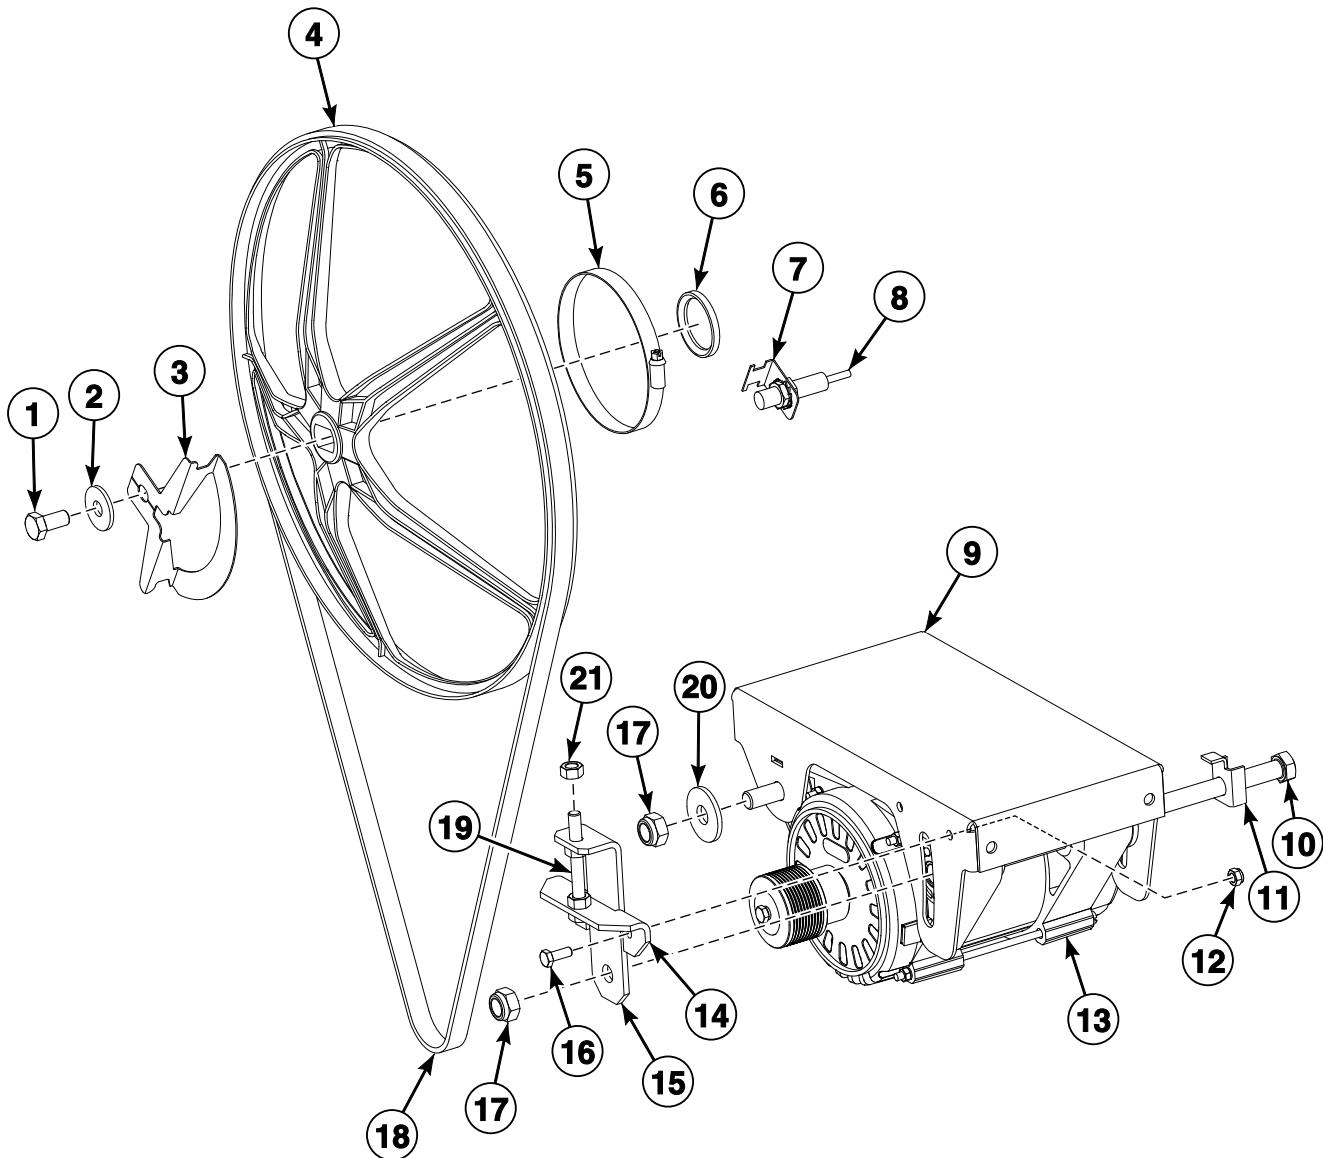


CFD2853P\_D2410

## Drive

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP309933001020	Bolt	M10x20
2	SP311902100010	Washer	
3	SP555545	Speed Sensor Plate	
4	SP509819	Drum V-Pulley	
5	SPPRI240000015	Hose Clamp	
6	SP556149	Pulley Ring	
7	SP555547	Speed Sensor Holder	
8	SP557701	Speed Sensor	
9	SP533781	Motor Holder	
10	SP533394	Bolt	M12x220
11	SP533742	Cage	1
12	SP310985000006	Nut	M6
13	SP555582	Motor and Pulley	1.5kW, 230V/75Hz; CE; Includes 528423 Motor; Applicable for power supply 200V-240V, 50/60Hz, 1/3ph and 380-415V+N, 50/60Hz, 3ph
	SP555585	Motor and Pulley	1.5kW, 400V/76Hz; CE; Includes 552413 Motor; Applicable for power supply 400V, 50/60Hz, 3ph without Neutral and 440-480V, 50/60Hz, 3ph
	SP557451	Motor and Pulley	1.5kW, 230V/75Hz; CSA; Includes 528423 Motor; Applicable for power supply 200V-240V, 50/60Hz, 1/3ph and 380-415V+N, 50/60Hz, 3ph
	SP557454	Motor and Pulley	1.5kW, 400V/76Hz; CSA; Includes 552413 Motor; Applicable for power supply 400V, 50/60Hz, 3ph without Neutral and 440-480V, 50/60Hz, 3ph
	571447	Motor and Pulley	Models with V in 7th position; 1.5kW, 230V/75Hz; Includes 568373 Motor; Applicable for power supply 200V-240V, 50/60Hz, 1/3ph and 380-415V+N, 50/60Hz, 3ph
	571448	Motor and Pulley	Models with V in 7th position; 1.5kW, 400V/76Hz; Includes 568383 Motor; Applicable for power supply 400V, 50/60Hz, 3ph without Neutral and 440-480V, 50/60Hz, 3ph
14	SP533326	Tensioning Angle Piece	Fixed
15	SP533327	Tensioning Angle Piece	Movable
16	SP309933000616	Bolt	M6x16
17	SP310985000012	Nut	M12
18	SP533157	Belt	
19	SP309933000870	Bolt	M8x70
20	SP311902100012	Washer	12
21	SP310934000008	Nut	M8

## Bearing Housing

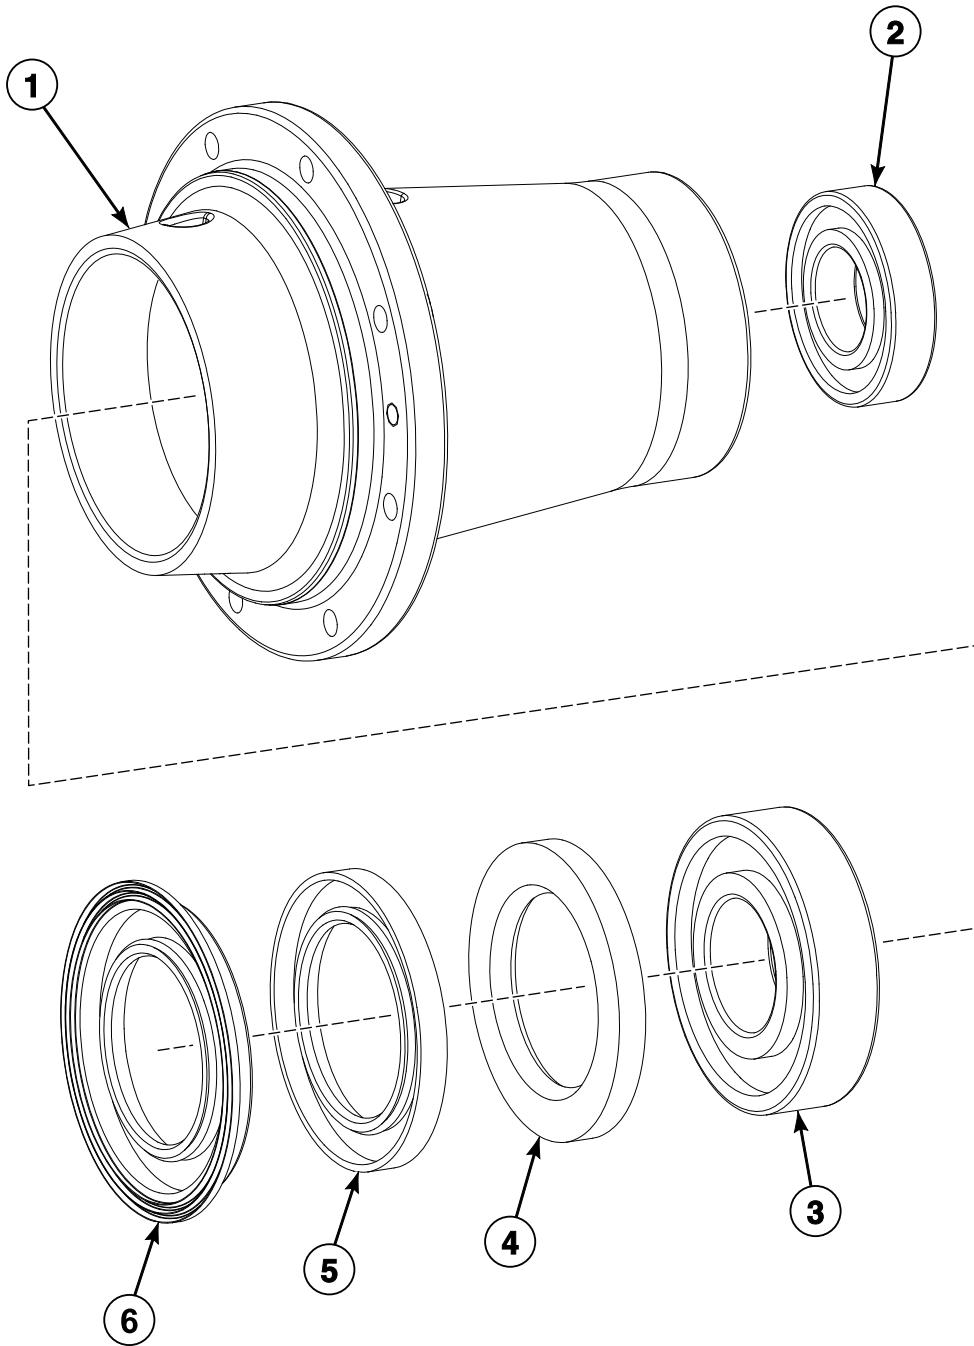


CZW564P\_D2410

## Bearing Housing

REF	PART NO.	DESCRIPTION	COMMENTS
	SP245704000603	Adhesive	Loctite 603
	SP111313000002	Lubrication Grease	
	SP538787	Bearing Replacement Tool Kit	
	SP537756	Bearing Housing Assembly	
1	SP537754	Bearing Housing	
2	582251	Bearing	6308-2RS1 / C3wt
3	582252	Bearing	6309-2RS1 / C3wt; Includes 1 piece, 2 pieces required
4	582325	Sealing Ring	65x100x10; without spring
5	SP525813	Sealing Ring	65x100x10; with spring
6	SP537848	Sealing Ring	65x100/114x9/12

## Elevated Base Frame

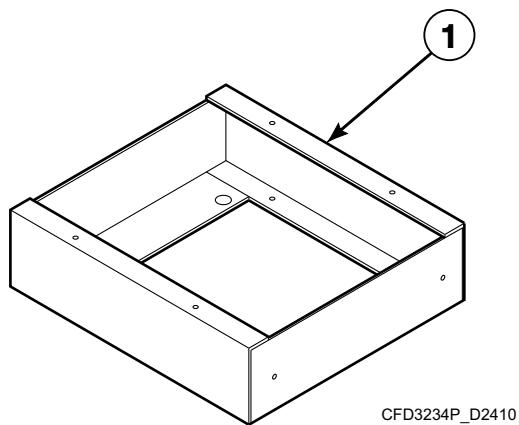


## Elevated Base Frame

REF	PART NO.	DESCRIPTION	COMMENTS
1	551916	Elevated Base Frame	For mounting one machine; 135mm; Refer to NOTE*
	551917	Elevated Base Frame	For mounting two machines; 135mm; Refer to NOTE*
	551918	Elevated Base Frame	For mounting three machines; 135mm; Refer to NOTE*
	551919	Elevated Base Frame	For mounting four machines; 135mm; Refer to NOTE*
	551920	Elevated Base Frame	For mounting five machines; 135mm; Refer to NOTE*
	SP547734	Elevated Base Frame	For mounting one machine; 200mm; Refer to NOTE*
	SP547732	Elevated Base Frame	For mounting two machines; 200mm; Refer to NOTE*
	SP547729	Elevated Base Frame	For mounting three machines; 200mm; Refer to NOTE*
	SP547736	Elevated Base Frame	For mounting four machines; 200mm; Refer to NOTE*
	SP547737	Elevated Base Frame	For mounting five machines; 200mm; Refer to NOTE*

\* NOTE: Part can only be ordered through the Equipment Order Desk.

## Soft Wash With Built-In Recirculation Pump

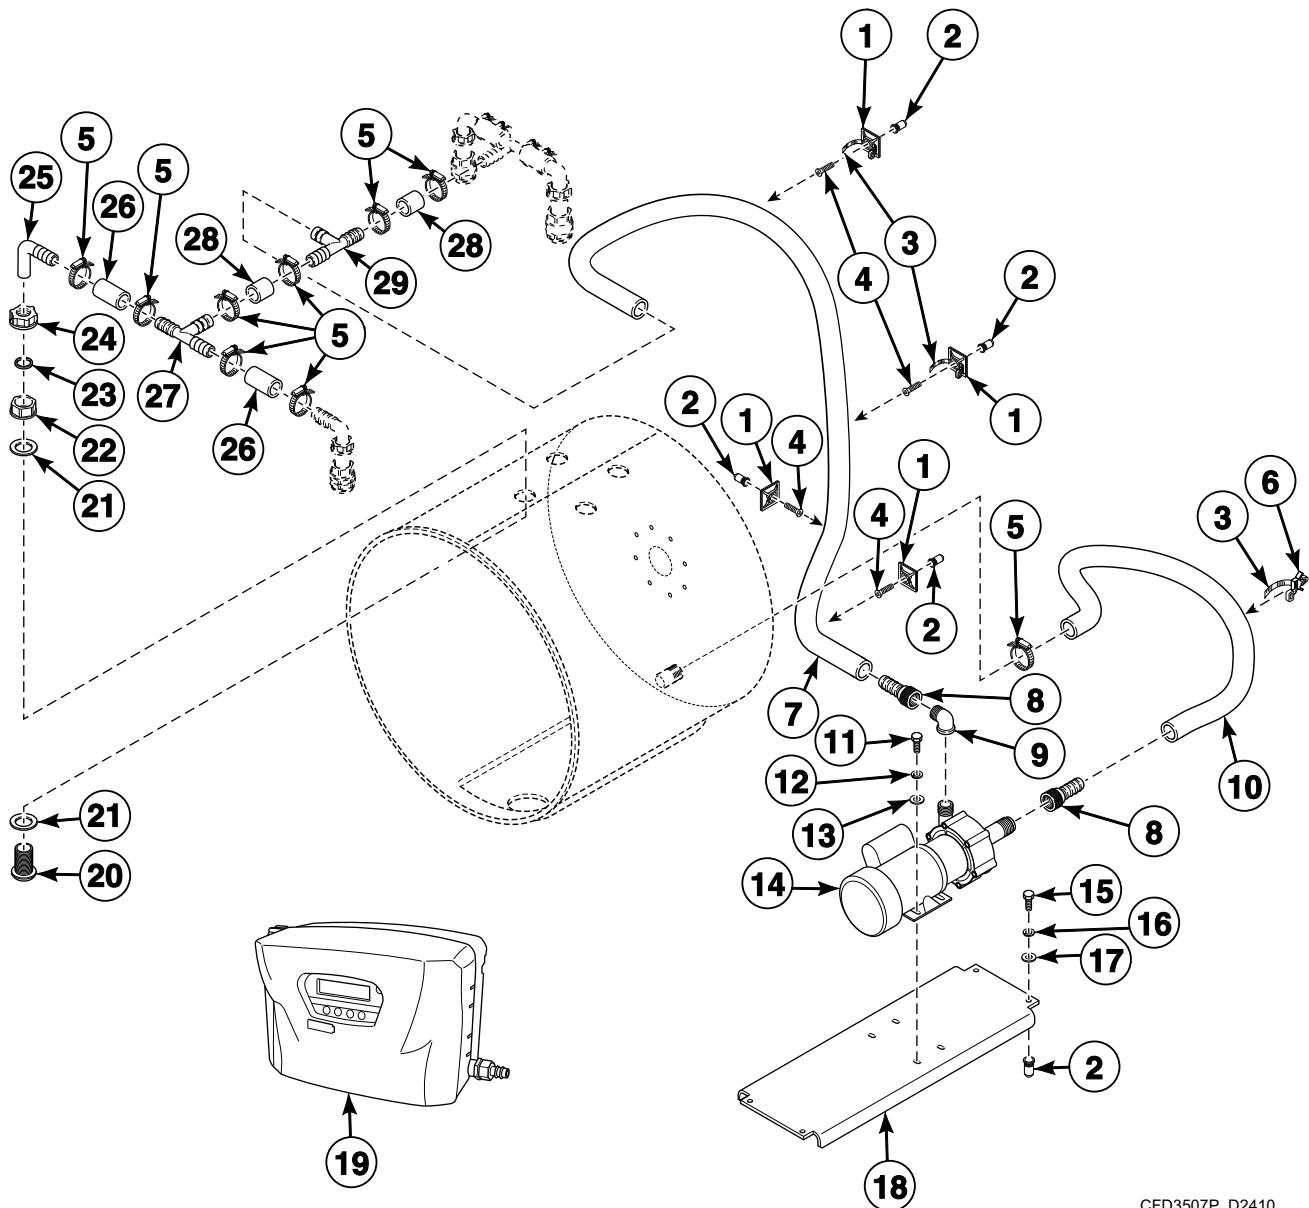


CFD3507P\_D2410

## Soft Wash With Built-In Recirculation Pump

REF	PART NO.	DESCRIPTION	COMMENTS
	SP562749	Water Heater	6kW, 50/60Hz, 230V; Optional
	SP562736	Water Heater	8.8kW, 50/60Hz, 230V; Optional
	SP562737	Water Softener	AMVE 305; Optional
	SP562750	Water Softener	AMVE 505; Optional
1	SPPRI350003050	Adhesive Fixing Index Plate	Models through 11 March 2021
2	SP313251002104	Nut	M4; Models through 11 March 2021
3	SP503817	Binding Strip	178 x 4.8
4	SP309965240408	Bolt	M4x8; Models through 11 March 2021
5	SPPRI240000003	Hose Clamp	20-30
6	SP528313	Cable Holder	
7	567180	Hose Pharmasteel	25/33; 1.6m
8	567152	Thorn	25-IG10; With sleeve nut
9	567181	Elbow	Inner/External thread G1 inch; 90 inch
10	567180	Hose Pharmasteel	25/33; 0.75m
11	SP309933000620	Bolt	M6x20
12	SP311127000006	Washer	6
13	SP311902100006	Washer	6
14	567151	Pump	NH 125 PS
15	SP309933000416	Bolt	M4x16
16	SP311127000004	Washer	4
17	SP311902100004	Washer	4
18	567113	Pump Board	Complete
19	SP567105	Soap Pump Kit	Four pumps; Includes suction hoses and tubes
	SP567106	Soap Pump Kit	Six pumps; Includes suction hoses and tubes
20	567167	Drain Jet	3/4 inch
21	567168	O-Ring	Flat; 40x27x2.5
22	567166	Nut	Flat; 3/4 inch; Sleeve
23	567169	O-Ring	Flat; 17x24x2.5
24	567170	Nut	3/4 inch; Sleeve
25	567171	Hose End	90 inch
26	SPPRI540001019	Hose	19/27; 0.06m
27	567172	T-Part	20; PE coupling
28	SPPRI540001019	Hose	19/27; 0.05m
29	567173	Hose Coupling	T3/4 x 1 inch

## Soft Wash - Without Built-In Recirculation Pump

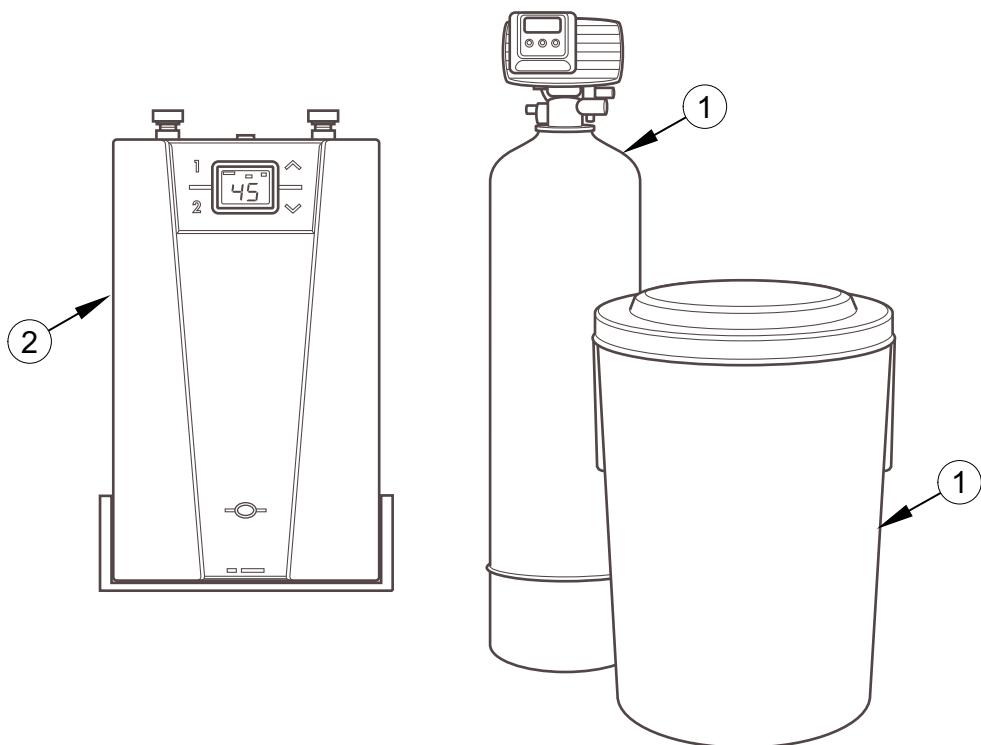


C-CZW57P\_D2410

## Soft Wash - Without Built-In Recirculation Pump

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP562737	Water Softener	AMVE 305; Optional; CE and Watermark; Optional
	SP562750	Water Softener	AMVE 505; Optional; CE and Watermark; Optional
2	SP562749	Water Heater	6kW; 50/60Hz; 230V; Optional; CE and Watermark
	SP562736	Water Heater	8.8kW; 50/60Hz; 230V; Optional; CE and Watermark

## Liquid Soap Supply System - Pumps

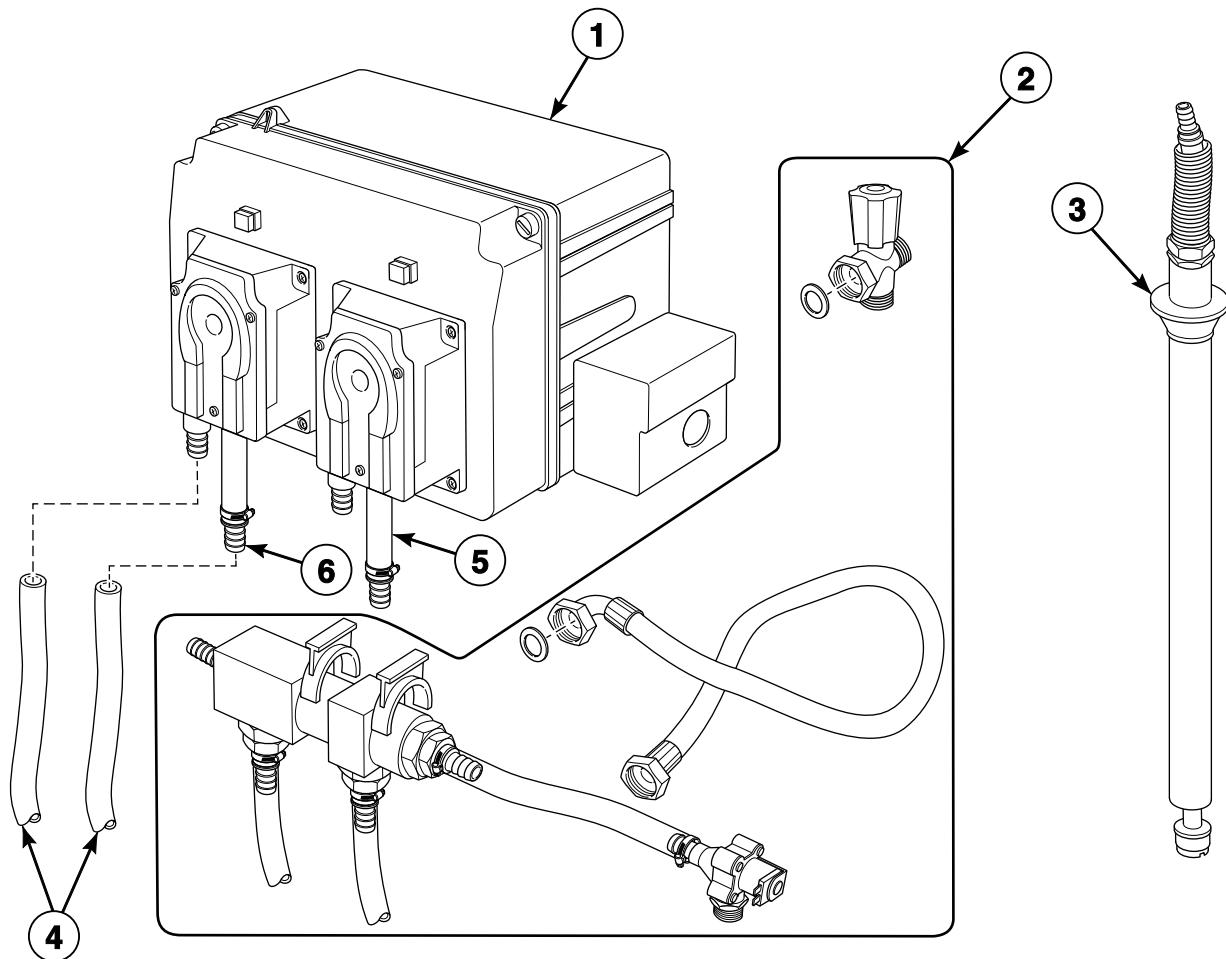


CZW45P\_D2410

## Liquid Soap Supply System - Pumps

REF	PART NO.	DESCRIPTION	COMMENTS
	MB90-Z40	Supply Pump Kit	For two pumps
	MB90-Z41	Supply Pump Kit	For three pumps
	MB90-Z42	Supply Pump Kit	For four pumps
	MB90-Z43	Supply Pump Kit	For five pumps
	MB90-Z44	Supply Pump Kit	For six pumps
1	529742	Pump	Two
	529743	Pump	Three
	529744	Pump	Four
	529745	Pump	Five
	529746	Pump	Six
2	529789	Manifold Flush Kit	For two pumps
	529797	Manifold Flush Kit	For three pumps
	529798	Manifold Flush Kit	For four pumps
	529799	Manifold Flush Kit	For five pumps
	529800	Manifold Flush Kit	For six pumps
3	529787	Suction Tube	
4	SPPRI540020005	Hose	d10/14
5	529747	Hose	Spare hose for pump
6	547808	Connection	

## Base Frame with Built-In Filter

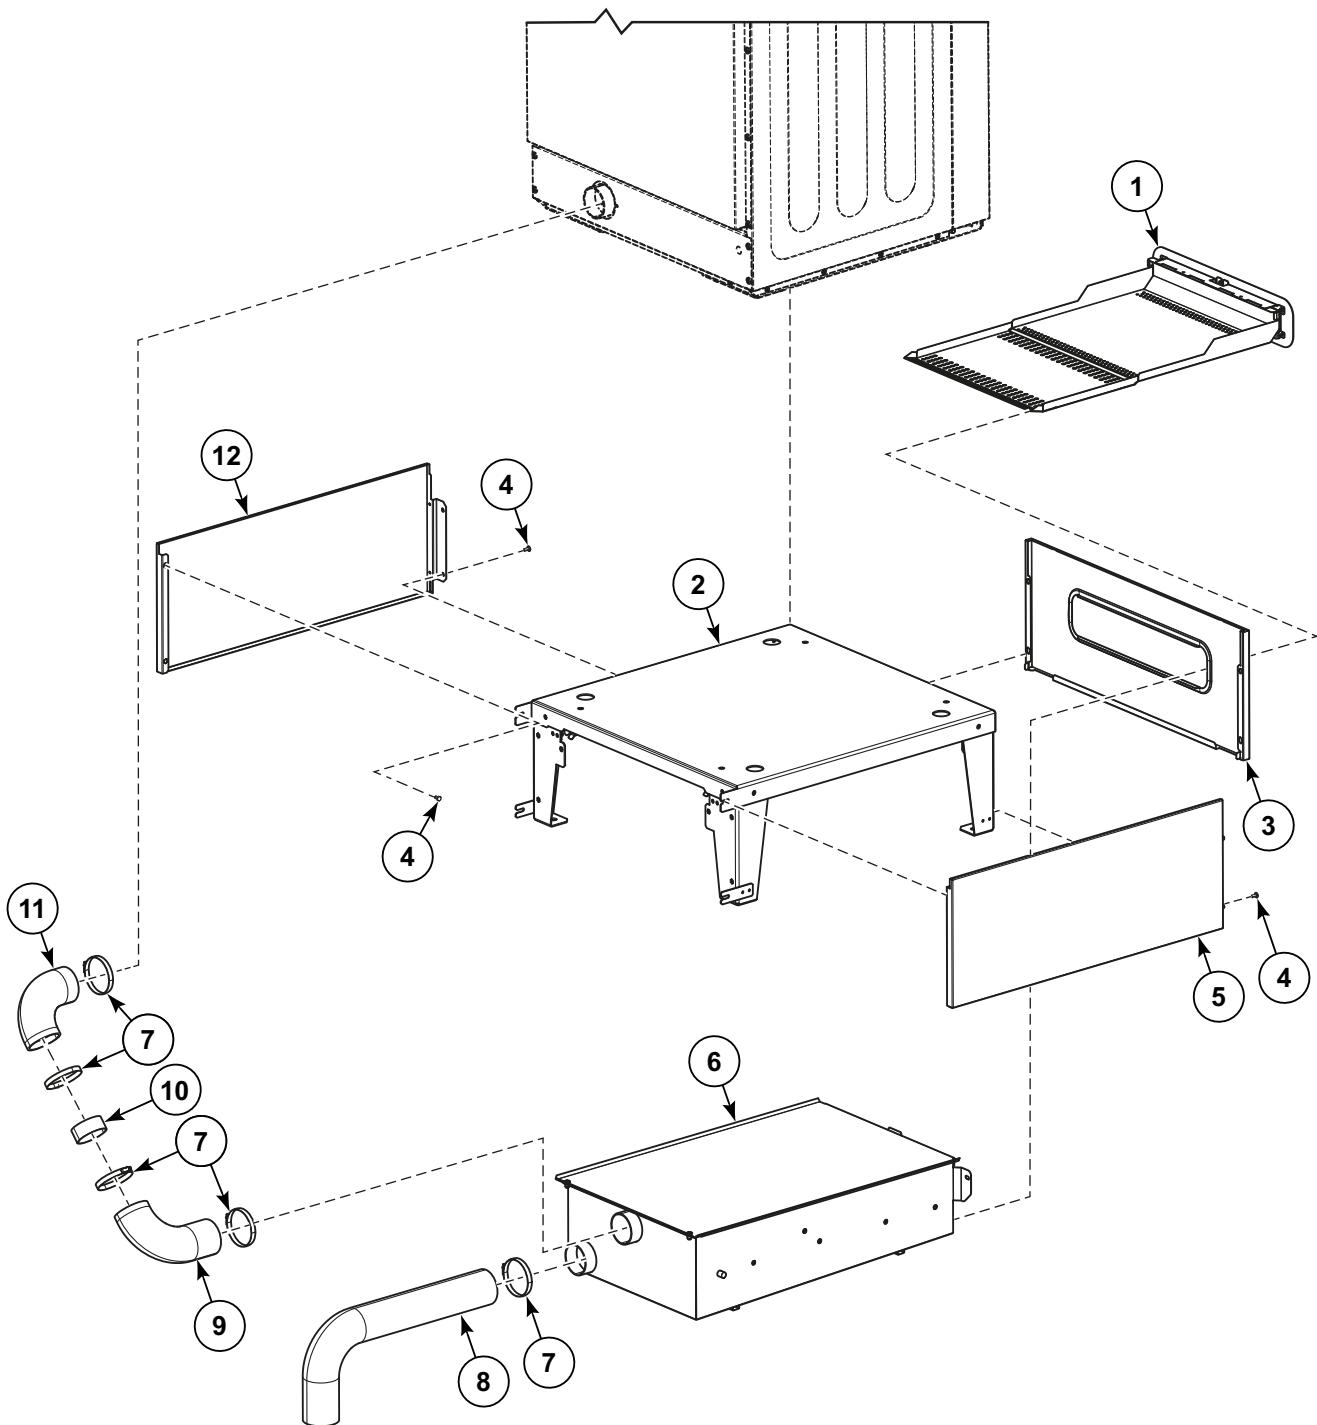


CZW320P\_D2409

## Base Frame with Built-In Filter

REF	PART NO.	DESCRIPTION	COMMENTS
1	574721	Filter	Assembly
2	573818	Base Frame	
3	574768	Front Panel	
4	SP537854	Bolt	M6x14
5	574784	Left Cover	Assembly
6	574702	Box	Assembly
7	SPPRI240000007	Hose Clamp	
8	SP519463	Drain Elbow	
9	574841	Elbow	
10	570807	Pipe	
11	574840	Elbow	
12	574790	Right Cover	Assembly

## Filter Tank

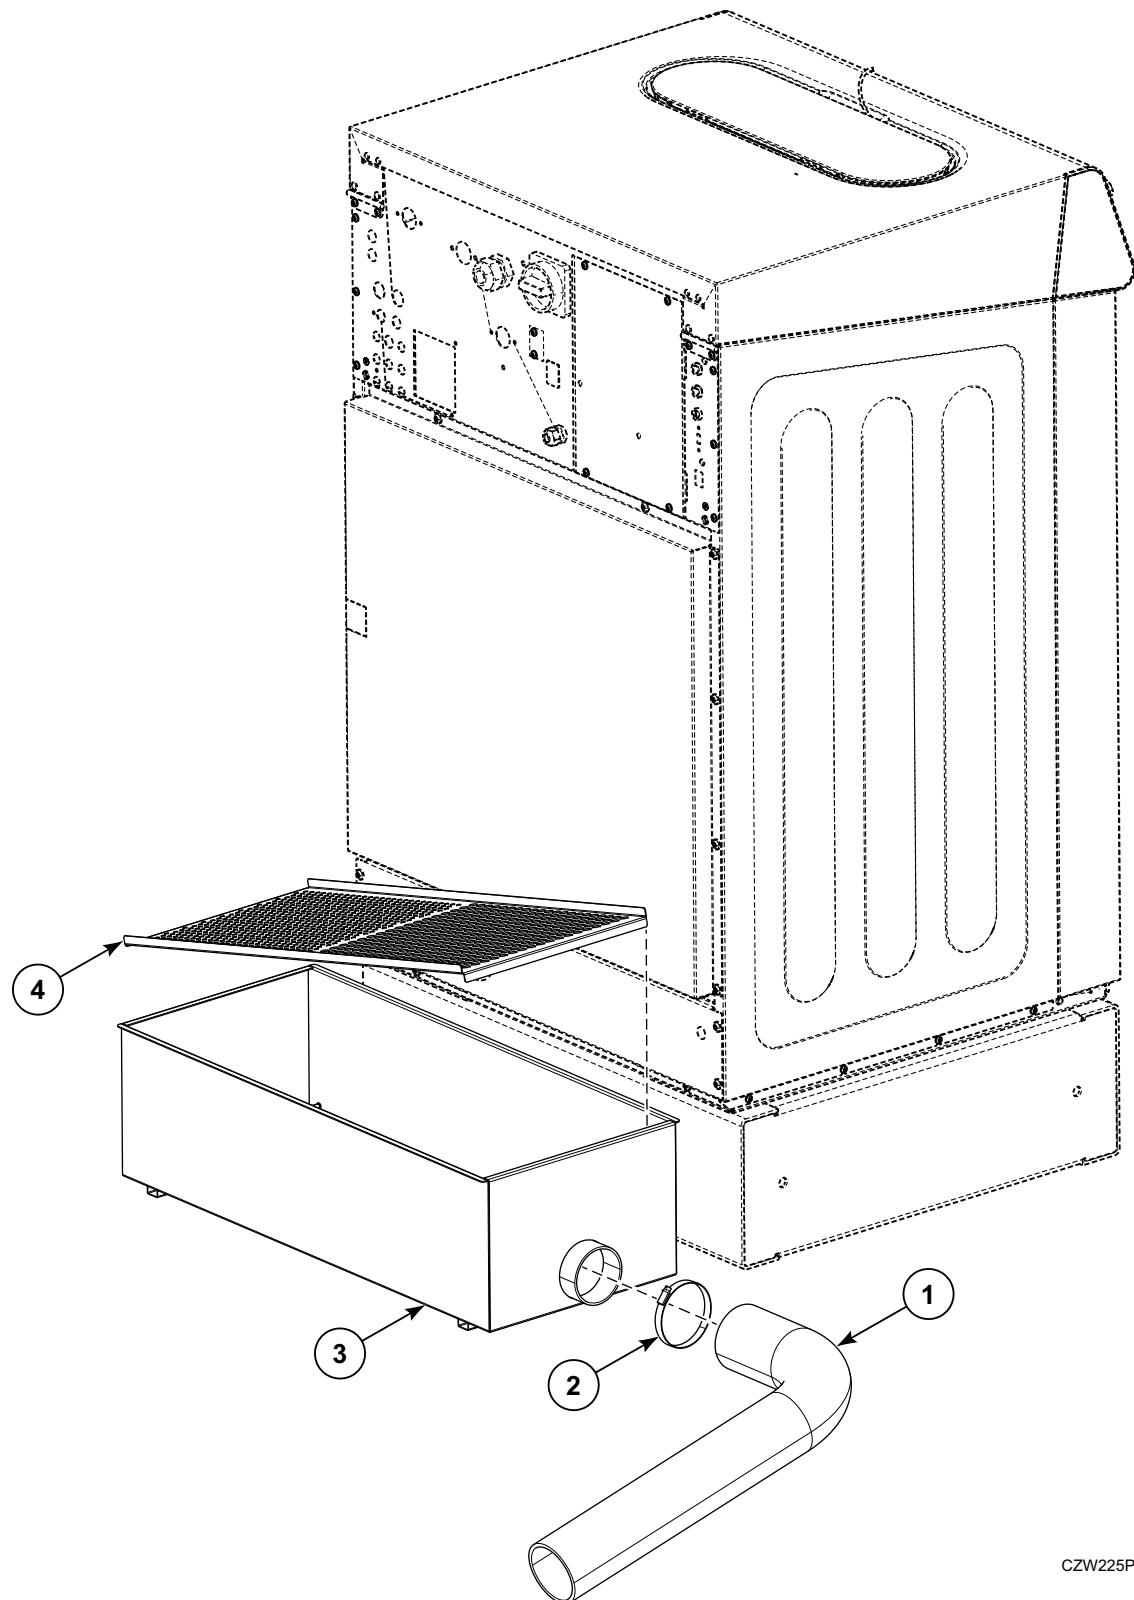


CZW225P\_D2410

## Filter Tank

REF	PART NO.	DESCRIPTION	COMMENTS
	570846	Filter Tank	Used with elevated base frame 200mm tall
1	SP519463	Drain Elbow	
2	SPPRI240000007	Hose Clamp	
3	570840	Collector Weldment	
4	570835	Filter	

## Cabinet Reinforcement without Soap Hopper

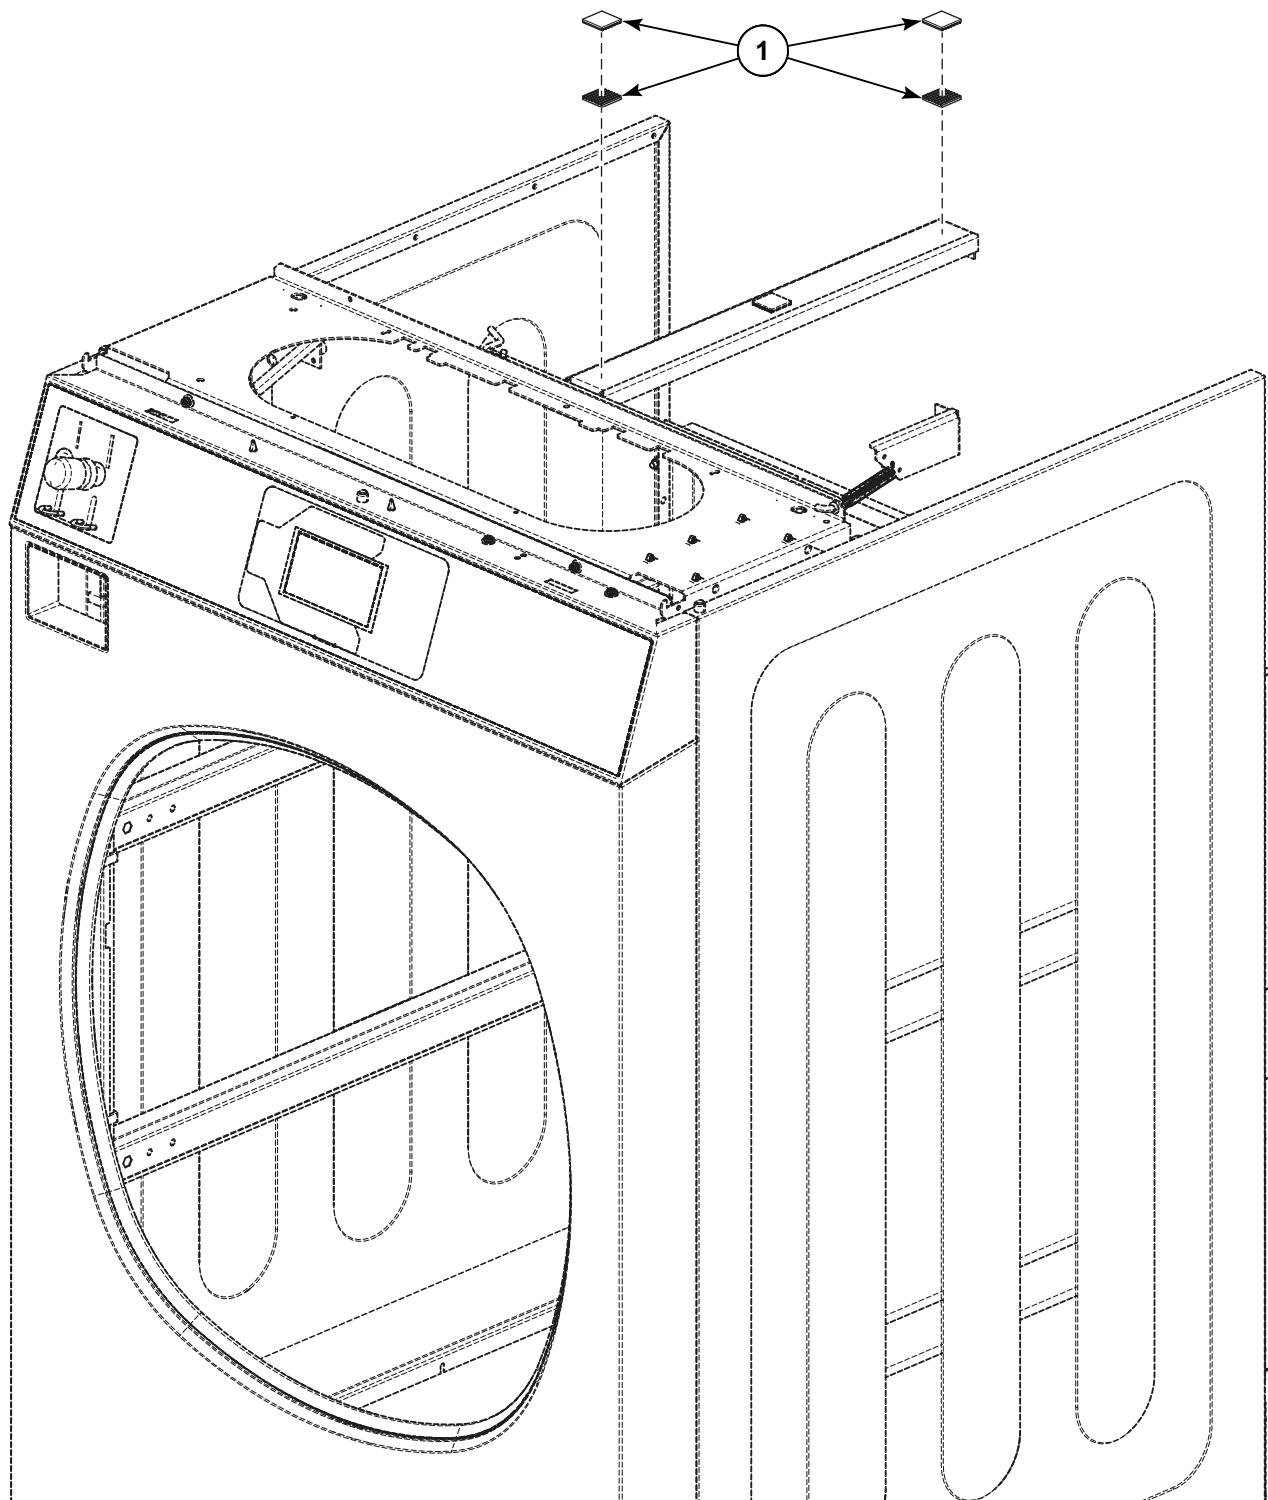


CZW348P\_D2410

## Cabinet Reinforcement without Soap Hopper

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP550115	Fastener	

## Two Water Inlet System without Soap Hopper

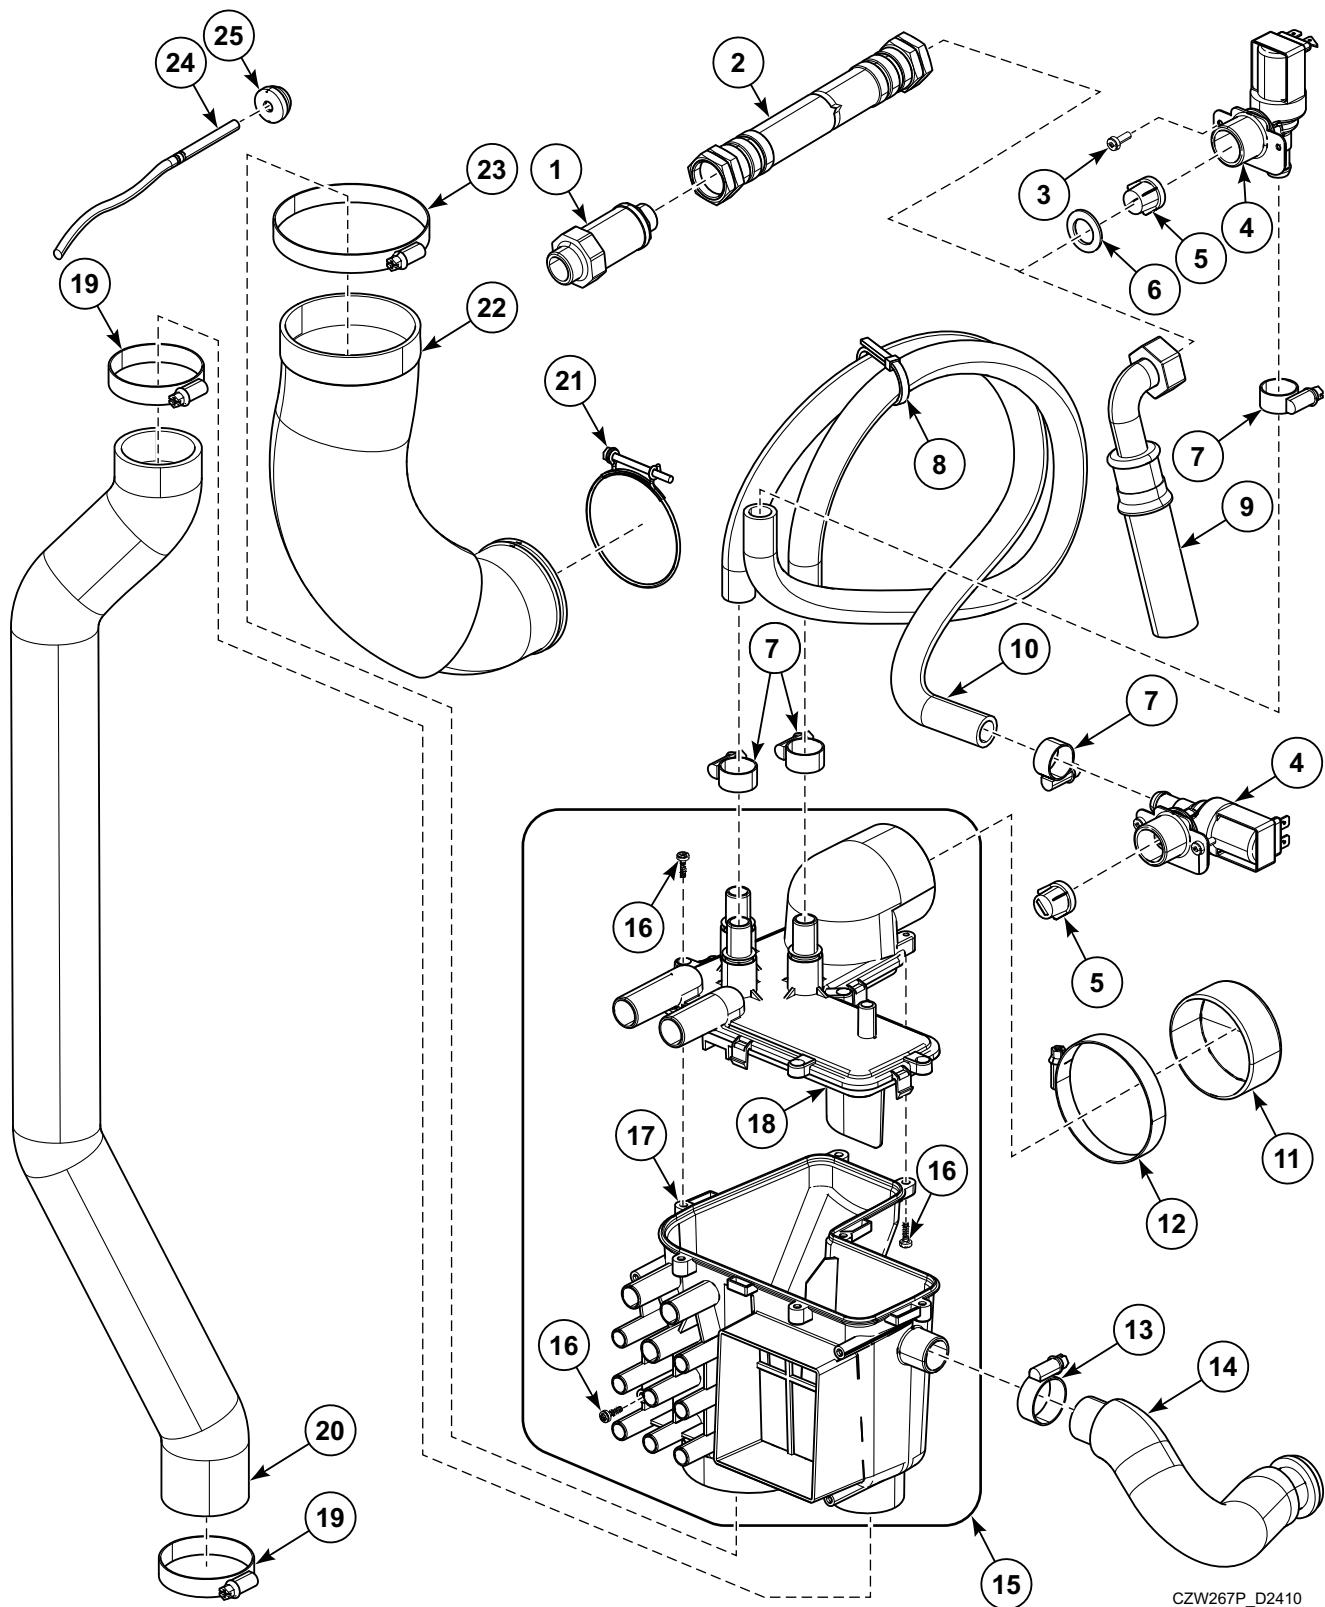


CZW267P\_D2410

## Two Water Inlet System without Soap Hopper

REF	PART NO.	DESCRIPTION	COMMENTS
1	RSPB12543901	Double Reverse Valve	IYA, IYY, LYY, NYA, NYY, PYA, PYY, SYY and UYY models
2	F200166	Filling Hose Pipe	IYA, IYY, LYY, NYA, NYY, PYA, PYY, SYY and UYY models
3	SP555504	Bolt	M4x12
4	570195	1-Way Valve	3/4 inch
5	SPPRI340004030	Filter	
6	SPPRI520001009	Seal	
7	SPPRI240000002	Hose Clamp	
8	SP503817	Binding Strip	
9	SPPRI505000054	Filling Hose Pipe	Used with cold water
	SP547980	Filling Hose Pipe	Used with hot water
	SP101621	Filling Hose Pipe	Valid for water approval
10	SPPRI540000014	Hose	
11	567053	Plug	
12	SPPRI240000021	Hose Clamp	60-80
13	SPPRI240000003	Hose Clamp	20-32
14	SP526482	Vent Hose	
15	SP526558	Mixer	
16	SP526497	Screw	4x12
17	SP526565	Mixer Body	
18	SP526557	Mixer Lid	
19	SPPRI240000017	Hose Clamp	40-60
20	SP526480	Overflow Tube	
21	SP526491	Hose Clamp	62-70
22	SP526506	Filling Elbow Pipe	
23	SPPRI240000007	Hose Clamp	70-90
24	SP503839	Temperature Sensor	
25	SP526439	Temperature Sensor Seal	

## Three Water Inlet System without Soap Hopper

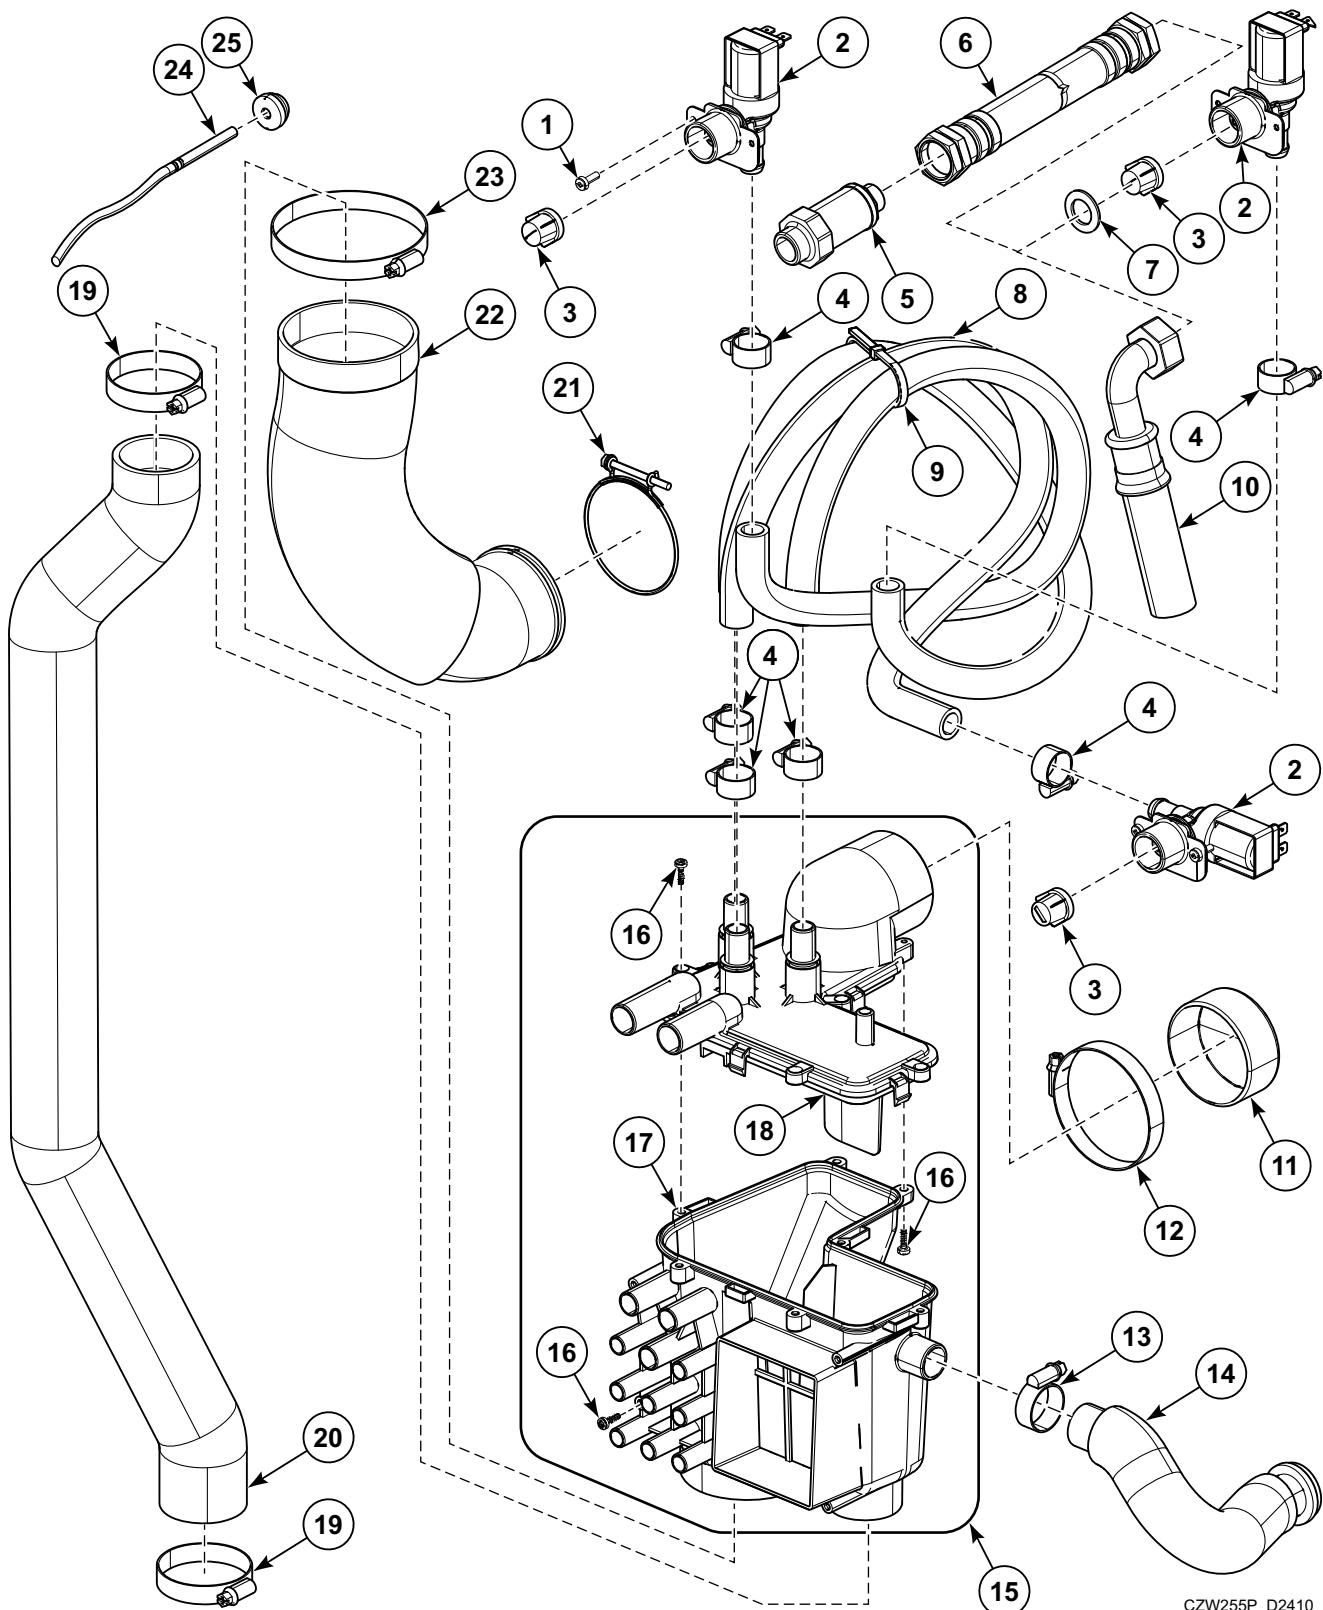

CZW255P\_D2410

## Three Water Inlet System without Soap Hopper

REF	PART NO.	DESCRIPTION	COMMENTS
1	SP555504	Bolt	M4x12
2	570195	1-Way Valve	3/4 inch
3	SPPRI340004030	Filter	
4	SPPRI24000002	Hose Clamp	
5	RSPB12543901	Double Reverse Valve	IYA, IYY, LYY, NYA, NYY, PYA, PYY, SYY and UYY models
6	F200166	Filling Hose Pipe	IYA, IYY, LYY, NYA, NYY, PYA, PYY, SYY and UYY models
7	SPPRI520001009	Seal	
8	SPPRI540000014	Hose	
9	SP503817	Binding Strip	
10	SPPRI505000054	Filling Hose Pipe	Used with cold water
	SP547980	Filling Hose Pipe	Used with hot water
	SP101621	Filling Hose Pipe	Valid for water approval
11	567053	Plug	
12	SPPRI240000021	Hose Clamp	60-80
13	SPPRI240000003	Hose Clamp	20-32
14	SP526482	Vent Hose	
15	SP526558	Mixer	
16	SP526497	Screw	4x12
17	SP526565	Mixer Body	
18	SP526557	Mixer Lid	
19	SPPRI240000017	Hose Clamp	40-60
20	SP526480	Overflow Tube	
21	SP526491	Hose Clamp	62-70
22	SP526506	Filling Elbow Pipe	
23	SPPRI240000007	Hose Clamp	70-90
24	503839	Temperature Sensor	
25	SP526439	Temperature Sensor Seal	

## Wire Harnesses

PART NO.	DESCRIPTION	COMMENTS
552495	Transformer Connection	CSA
528064	Steam Heat Wiring	Steam heat
SPPRI351000161	Steam Valve Cable	CE and Watermark; Steam heat
552466	Wireless Reader Wiring	Vended; CSA
PRI351107209	Heating Contactor Wiring	CE and Watermark; 2.5mm <sup>2</sup> ; l=440mm; For 4.6kW, 6kW, 9kW; CE
PRI351108209	Heating Contactor Wiring	CE and Watermark; 4mm <sup>2</sup> ; l=440mm; For 9kW; CE
SP547075	RS485 External Interconnection	For RS485 external interconnection to PC
528393	Wiring Steam - Electrical Heating	Steam - electrical heating modification
528328	Heating Wiring	CE and Watermark; 2.5mm <sup>2</sup>
528335	Heating GND Wiring	CE and Watermark
528205	Frame GND Interconnection	
528350	Transformer Connection	400-480V, 3AC -N; CE and Watermark
568392	Main Wiring	
569749	Door Lock Wiring	l=1.7m
569751	Door Lock Cable	l=0.24m
SP528323	Communication Cable	
568397	Motor Temperatuer Protect Cable	
528330	Heating Wiring	6kW / 230V / 400V; 9kW / 440V; 12kW / 400V 440V; 13.8kW / 400V
528331	Heating Wiring	7kW / 440V; 9kW / 230V; 9kW / 440V; 12kW / 230V; 13.8kW / 230V
528080	Frame GND Interconnection	
552477	Inlet Valve Extension Wiring	
SP557947	External Block Signal Cable	Length = 110.24 inches (2.8 m)
557948	External Block Signal Cable	Length = 169.29 inches (4.3m)
569701	Cable	CPU - I/O board interconnection
PRI351105209	Heating Contactor Wiring	6mm <sup>2</sup> ; l=540mm; 12kW / 230V

# Parts Index

---

## A

Adapter	
SP319428324012	173, 175
SP547968	173, 175
Adhesive	
SP101403	173, 175
SP245704000050	179
SP245704000603	115, 173, 175, 189
SP245704003021	11, 115, 179
SP537896	35, 115, 185
Adhesive Fixing Index Plate	
SPPRI350003050	193
Adjustable Foot	
SPPRI504000001	13
Air Trap Reduction	
SPPRI503000027	137, 139, 141
Anticorrosive Agent	
SP510889	179
Automatic Door Opening Module Wiring	
SP552455	33
Automatic Unlocking Module Assembly	
SP552489	23, 27, 31, 35
545238	23, 27, 31

---

## B

Base Frame	
573818	199
Bearing	
SP532949	189
582252	189
Bearing Housing	
SP537754	189
Bearing Housing Assembly	
SP537756	189
Bearing Replacement Tool Kit	
SP538787	189
Belt	
SP533157	187
Binding Strip	
SP345000626088	137, 139, 141, 145
SP503817	145, 193, 205, 207
Board Interconnection Cable	
SP537995	63
SP547005	45, 55, 63
Bolt	
F8270701	127
SPF02119000415	179, 185
SP309084000320	79, 85, 91
SP309084000408 ..	25, 27, 31, 43, 79, 81, 83, 85, 87, 89, 91, 93, 95
SP309084000416 ..	11, 13, 117, 131, 133, 135, 143, 147, 151, 155, 159, 163, 167, 171, 185
SP309084240325	13
SP309798500306	35, 43, 45, 55, 63, 67, 69, 71
SP309933000416 ..	79, 85, 91, 97, 99, 143, 151, 155, 193
SP309933000616	23, 27, 187
SP309933000618	11

---

SP309933000620	145, 151, 155, 159, 163, 167, 171, 173, 175, 193
SP309933000660	159, 163, 167, 171
SP309933000820	11, 13, 137, 139, 141
SP309933000835	179, 183
SP309933000845	11
SP309933000870	187
SP309933000880	11
SP309933001020	187
SP309933100625	143, 147, 151, 155, 159, 163, 167, 171
SP309933240408	147, 151, 155
SP309933240412 ..	81, 83, 87, 89, 93, 95, 159, 163, 167, 171
SP309933240825	179, 183
SP309965240408	73, 75, 77, 193
SP506013	43
SP506431	31, 43
SP506432	13
SP527084	35
SP527420	13, 179, 183
SP533394	187
SP533717	11
SP533726	13
SP53479	119, 123, 125
SP537854	117, 185, 199
SP537864	119, 123, 125
SP550482	33, 43
SP555504 ..	35, 45, 55, 63, 73, 75, 77, 159, 163, 167, 171, 205, 207
SP555658	25, 29, 31, 33, 35, 43, 175
SP556137	117
309084000535	159, 163, 167, 171
309500240408	73, 75, 77
568968	127
569655	73, 75, 77
577761	63
577762	63
577763	63
582307	83, 89, 95
582341	121
Box	
574702	199
Bushing	
SP101406	147, 149, 153, 157, 161, 165, 169
SP101409	147, 149, 153, 157, 161, 165, 169

---

## C

Cable	
SP545234	97, 147, 149, 153, 157, 161, 165, 169
557982	145
569701	208
Cable Bushing Insert	
SP557952	147
Cable Clamp	
SP528392	147, 151, 155, 159, 163, 167, 171
Cable Eye	
345000034150	145
345000165034	151, 155, 159, 163, 167, 171
Cable Holder	
SP528313 ..	35, 45, 55, 145, 151, 155, 159, 163, 167, 171, 193

N/A items do not appear in index.

Cable Passage		47, 107
SP273121005052	23, 27, 31, 43	
SP273121015002	143	
SP273121022002	143	
Cage		
SP533742	187	
Casing		
SP529739	119, 123, 125	
Check Valve		
B12543901	131	
Circuit Breaker		
571463	157, 165	
571464	161, 169	
Clamp		
SP537737	179, 185	
Clip		
SP502214	151, 155, 159, 163, 167, 171	
Coil		
SP554110	173, 175	
568942	127	
Coin Meter		
SP537996	49, 109	
SP547600	47, 107	
SP547601	47, 107	
SP547602	47, 107	
SP547603	47, 107	
SP547604	47, 107	
SP547605	47, 107	
SP547606	47, 107	
SP547607	47, 107	
SP547608	47, 107	
SP547609	47, 107	
SP547610	47, 107	
SP547611	47, 107	
SP547612	47, 107	
SP547613	47, 107	
SP547614	47, 107	
SP547615	47, 107	
SP547616	47, 107	
SP547617	47, 107	
SP547618	47, 107	
SP547619	47, 107	
SP547620	47, 107	
SP547621	47, 107	
SP547622	47, 107	
SP547623	47, 107	
SP547624	47, 107	
SP547625	47, 107	
SP547626	47, 107	
SP547627	47, 107	
SP547628	47, 107	
SP547629	47, 107	
SP547630	47, 107	
SP547631	47, 107	
SP547634	47, 107	
SP547635	47, 107	
SP547636	47, 107	
SP547637	47, 113	
SP547638	47, 107	
SP547639	47, 107	
SP547640	47, 113	
SP547641	49, 109	
SP547642	49, 109	
SP547643	49, 109	
SP547644	49, 109	
SP547645	49, 109	
SP547646	49, 109	
SP547647	47, 107	
SP547648		
SP547649	49, 109	
SP547651	49, 109	
SP547652	47, 107	
SP547653	49, 109	
SP547654	49, 109	
SP547656	47, 107	
SP547657	49, 109	
SP547658	49, 109	
SP547659	49, 109	
SP547660	49, 109	
SP547661	49, 109	
SP547662	49, 109	
SP547663	49, 109	
SP547664	49, 109	
SP547665	47, 107	
SP547666	47, 107	
SP547667	49, 109	
SP547668	49, 109	
SP547669	49, 109	
SP547670	49, 109	
SP547671	49, 109	
SP547672	49, 109	
SP547673	49, 109	
SP547674	49, 109	
SP547675	49, 109	
SP555502	49, 109	
SP555543	49, 109	
SP555546	49, 109	
SP555549	49, 109	
SP555550	49, 109	
SP555558	49, 109	
SP555559	49, 109	
SP555578	49, 109	
SP555579	49, 109	
SP555666	49, 109	
SP558958	57	
SP558959	57	
SP559933	57	
SP559934	57	
SP559938	57	
SP559949	57	
SP559969	57	
SP560071	59	
SP560073	51	
SP560075	59	
SP560082	51, 111	
SP560083	51, 111	
SP560084	51, 111	
SP560085	51, 111	
SP560086	51, 111	
SP560087	57	
SP560089	49, 113	
SP560090	57	
SP560091	57	
SP560092	57	
SP560093	57	
SP560094	57	
SP560100	57	
SP560309	57	
SP560310	57	
SP560311	57	
SP560312	57	
SP560405	57	
SP560406	57	
SP560407	57	
SP560408	57	
SP560409	57	
SP560410	57	

N/A items do not appear in index.

SP560411.....	57
SP560412.....	57
SP560413.....	57
SP560414.....	57
SP560415.....	57
SP560416.....	57
SP560417.....	57
SP560418.....	57
SP560419.....	57
SP560420.....	57
SP560421.....	57
SP560422.....	57
SP560423.....	57
SP560424.....	57
SP560425.....	57
SP560426.....	57
SP560427.....	57
SP560428.....	57
SP560429.....	57
SP560432.....	57
SP560744.....	49, 109
SP560745.....	57
SP560751.....	57
SP561496.....	51, 111
SP564484.....	51, 111
SP564486.....	51, 111
SP564489.....	51, 111
SP568002.....	101
SP568003.....	101
SP568004.....	101
SP568005.....	101
SP568006.....	101
SP568007.....	101
SP568008.....	101
SP568009.....	101
SP568010.....	101
SP568011.....	101
SP568012.....	101
SP568013.....	101
SP568014.....	101
SP568015.....	101
SP568016.....	101
SP568017.....	101
553150 .....	51, 111
553151 .....	51, 111
553156 .....	59
560073 .....	111
561378 .....	51, 111
561497 .....	59
563405 .....	59
564485 .....	59
564487 .....	59
568002 .....	103
569901 .....	51, 111
569905 .....	59
569911 .....	59
569912 .....	51, 111
569918 .....	51, 111
569919 .....	59
569921 .....	47, 107
569922 .....	57
569924 .....	51, 111
569925 .....	59
569927 .....	51, 111
569928 .....	59
569930 .....	51, 111
569931 .....	59
569933 .....	49, 109
569934 .....	57
569936 .....	51, 111
569937 .....	59
569939 .....	49, 109
569940 .....	57
569942 .....	51, 111
569943 .....	59
569945 .....	51, 111
569946 .....	59
569948 .....	49, 109
569949 .....	59
569951 .....	49, 109
569952 .....	59
569954 .....	51, 111
569955 .....	59
569961 .....	51, 111
569962 .....	59
569964 .....	49, 109
569965 .....	57
569967 .....	51, 111
569968 .....	59
569970 .....	51, 111
569971 .....	59
569973 .....	51, 111
569974 .....	59
569979 .....	51, 111
569980 .....	59
569987 .....	51, 111
569988 .....	59, 61
569993 .....	59
569995 .....	59
569998 .....	53, 111
569999 .....	61
570000 .....	61
572301 .....	53, 111
572302 .....	61
572304 .....	53, 111
572305 .....	61
572307 .....	53, 111
572308 .....	61
572310 .....	53, 111
572311 .....	61
572313 .....	53, 111
572314 .....	61
572317 .....	53, 111
572318 .....	61
572320 .....	53, 111
572321 .....	61
572323 .....	53, 113
572324 .....	61
572326 .....	53, 113
572327 .....	61
572339 .....	53, 111
572342 .....	53, 111
572355 .....	61
572358 .....	111, 113
572359 .....	61
572383 .....	113
572384 .....	61
572386 .....	105
572391 .....	113
575201 .....	101
575202 .....	101
575203 .....	101
575204 .....	101
575205 .....	101
575206 .....	101
575207 .....	101
575208 .....	101
575209 .....	101

N/A items do not appear in index.

575210 .....	101
575211 .....	101
575212 .....	101
575213 .....	101
575214 .....	101
575215 .....	101
575216 .....	101
575217 .....	101
575218 .....	101
575219 .....	101
575220 .....	101
575221 .....	101
575222 .....	101
575223 .....	101
575224 .....	101
575225 .....	101
575226 .....	101
575227 .....	101
575228 .....	101
575229 .....	101
575230 .....	101
575231 .....	103
575232 .....	103
575233 .....	103
575234 .....	103
575235 .....	103
575236 .....	103
575237 .....	103
575238 .....	103
575239 .....	103
575240 .....	103
575241 .....	103
575242 .....	103
575243 .....	103
575244 .....	103
575245 .....	103
575246 .....	103
575247 .....	103
575248 .....	103
575249 .....	103
575250 .....	103
575251 .....	103
575252 .....	103
575253 .....	103
575254 .....	103
575255 .....	103
575256 .....	103
575257 .....	103
575258 .....	103
575259 .....	103
575260 .....	103
575261 .....	103
575262 .....	105
575263 .....	105
575264 .....	105
575265 .....	105
575266 .....	105
575267 .....	105
575268 .....	105
575269 .....	105
575270 .....	105
575271 .....	105
575272 .....	105
575273 .....	105
575274 .....	105
575275 .....	105
575276 .....	61
575277 .....	61
575278 .....	103
575279 .....	103
579808 .....	53, 113
579809 .....	61
579811 .....	105
Coin Meter Box	
SP102532.....	97
100498 .....	97
568036 .....	99
Coin Meter Case	
571049 .....	97
571055 .....	97
573009 .....	99
Coin Meter Cover	
567924 .....	67, 73
Coin Meter Cover Plate	
SP558929.....	45, 55
Coin Meter Covering Plate	
SP547565.....	63
Coin Vault Plate	
SP533103.....	25, 27, 31
566737 .....	41
Collector Weldment	
570840 .....	201
Communication Cable	
SP528323.....	143, 208
SP528325.....	143
Compression Spring	
SP535406.....	121
Conductor	
505446 .....	145
505448 .....	145
Connection	
547808 .....	197
Connector	
SP537856.....	117, 185
SP554156.....	173, 175
Contactor	
SPPRI345002019..	143, 149, 153, 157, 161, 165, 169
SP514038.....	143, 149, 153, 157, 161, 165, 169
SP514042.....	143, 149, 153, 157, 161, 165, 169
SP514043.....	143
Control	
575632 .....	73, 75, 77, 79, 81, 85, 87, 91, 93
582285 .....	83, 89, 95
Control Board	
SP547001.....	63
SP553411.....	45, 55, 63
SP553412.....	45
SP553419.....	55, 67, 69, 71
553411.....	67, 69, 71
Control Board I/O	
575630 .....	35, 41
Control Board Power	
SP547002.....	63
SP553405.....	35, 45, 55, 63
Control Holder	
571041 .....	73, 75, 77
Control Panel	
SP557614.....	45
SP558894.....	55
573062 .....	69
573064 .....	67
573074 .....	71
573117 .....	73
573119 .....	75, 77

N/A items do not appear in index.

Control Panel Frame	
573025 .....	37, 73, 75, 77
Cover	
SPPRI543000004 .....	45, 55, 63
552972 .....	117
566549 .....	149, 153, 157, 161, 165, 169
568938 .....	117
569656 .....	35
582259 .....	149, 153, 157, 161, 165, 169
Cover Plate	
SP550149 .....	63
Cover Strip Pin	
SP533738 .....	11
CPS Cover Plate	
SP558930 .....	45, 55
Cross Piece	
SP537730 .....	179, 183

---

## D

Damper	
SP533715 .....	13
SP533716 .....	13
DC Choke	
571454 .....	165, 169
571455 .....	157, 161, 165
Dispenser Lid	
SP526461 .....	131, 133, 135
SP551695 .....	131
573922 .....	133, 135
Dispenser Pipe	
SP526488 .....	131, 133, 135
Dispenser Seal	
SP540158 .....	131, 133, 135
Distance Case	
SP515274 .....	11
Distinguishing Ring	
SP535437 .....	121
571733 .....	121, 123
582329 .....	121, 125
Door	
SP535426 .....	119
SP535428 .....	119
SP553526 .....	119, 125
568837 .....	119, 123
Door and Lock Holder	
SP537853 .....	117
568906 .....	117
Door Assembly	
535415 .....	115
535434 .....	115
556253 .....	115
556271 .....	115
562705 .....	115
563371 .....	115
571638 .....	115
571764 .....	125
571767 .....	123
573185 .....	115
574098 .....	115
582300 .....	115
Door Frame Sheet	
571633 .....	123, 125

Door Glass	
SP535417 .....	117, 125
SP556227 .....	117
SP562702 .....	117
556227 .....	123
573191 .....	117
Door Level	
571762 .....	125
573009 .....	123
Door Lock Assembly	
SP537760 .....	129
576085 .....	127
Door Lock Cable	
569751 .....	208
Door Lock Catch	
576084 .....	127
Door Lock Holder	
SP537853 .....	185
568906 .....	185
Door Lock Plate	
568971 .....	127
Door Lock Wiring	
SP528270 .....	115
SP552453 .....	115
SP552454 .....	115
569723 .....	115
569749 .....	208
Door Seal	
563297 .....	119
Door-glass Insulation	
582319 .....	115
Double Check Valve	
F8301201 .....	119, 131
Double Reverse Valve	
RSPB12543901 .....	205, 207
Drain Cover	
SP527088 .....	37
Drain Elbow	
SP519463 .....	199, 201
SP526498 .....	137, 139, 141
Drain Hose Pipe	
SPPRI505000087 .....	137
SP526492 .....	137, 139, 141
Drain Jet	
567167 .....	193
Drain Pump Cover	
SP521511 .....	37
Drain Valve	
SP526460 .....	137, 139, 141
Drain Valve Chamber	
553195 .....	137
Drain Valve Holder	
SP526512 .....	137, 139, 141
Drain Valve Motor	
SPPRI340002051 .....	137, 139, 141
Drain Valve Seal	
554276 .....	137, 139, 141
Drum V-Pulley	
SP509819 .....	187

N/A items do not appear in index.

---

**E**

Edge Protection	
SP529068 .....	25, 29, 33, 35, 41, 163
Elbow	
567181 .....	193
574840 .....	199
574841 .....	199
Elevated Base Frame	
SP547729 .....	191
SP547732 .....	191
SP547734 .....	191
SP547736 .....	191
SP547737 .....	191
551916 .....	191
551917 .....	191
551918 .....	191
551919 .....	191
551920 .....	191
Emergency Stop Connector	
SP528311.....	45, 55, 63, 67, 73, 79, 81, 83
Emergency Stop Interconnection	
SP520033 .....	45, 55, 63, 85, 87
571485 .....	91, 93
Emergency Stop Knob	
SP528310 .....	45, 55, 63, 67, 73, 79, 81, 83
Emergency Stop Label	
SPPRI551005248 .....	67, 73
Emergency Stop Wiring	
SP520032 .....	45, 55, 63
End Cover	
552483 .....	145
End Stop	
SP346000209101 .....	157, 161, 165, 169
External Block Signal Cable	
SP557947 .....	147, 149, 153, 208
557948 .....	208
External Tub	
SP537764 .....	177, 181
SP537918 .....	177, 181
567158 .....	177, 181
567197 .....	177, 181
582286 .....	177, 181
582287 .....	177, 181
582288 .....	177, 181
582289 .....	177, 181
External Tub Front Plate	
SP537742 .....	179
SP571607 .....	185

---

**F**

Fastener	
SP550115... 23, 27, 31, 35, 43, 67, 69, 71, 73, 75, 77, 203	
Ferrite Core	
557961 .....	149, 153, 157, 161, 165, 169
Filling Elbow Pipe	
SP526506 .....	131, 133, 135, 205, 207
Filling Hose Pipe	
F200166.....	131, 205, 207
SPPRI505000054 .....	131, 133, 135, 205, 207
SP101621 .....	131, 133, 135, 205, 207

N/A items do not appear in index.

SP547980.....	131, 133, 135, 205, 207
Filter	
SPPRI340004030.....	131, 133, 135, 205, 207
SP516012.....	143, 149
SP525935.....	143
525935 .....	153
568380 .....	157, 165
570835 .....	201
574721 .....	199
Filter Holder	
572126 .....	161
574850 .....	169
Filter Tank	
570846 .....	201
Fixed Hinge	
568982 .....	123
Fixed Lower Hinge	
568982 .....	119, 125
568984 .....	119
Fixed Upper Hinge	
568979 .....	119, 123, 125
568981 .....	119
Flap	
SP540113.....	131, 133, 135
Foam Roller	
SP100188.....	137, 139, 141
Frame GND Interconnection	
528080 .....	208
528205 .....	208
Frequency Inverter	
571472 .....	143, 149, 157, 165
571474 .....	143, 149, 153, 157, 161, 169
Frequency Inverter Filter	
SP557932.....	161, 169
Front Cover	
SP564368.....	37
573014 .....	37
Front Panel	
SP547744.....	33
SP547746.....	33
SP547752.....	25, 33
SP547754.....	25, 33
SP557056.....	29
SP557057.....	29
SP562724.....	29
SP562725.....	29
563458 .....	25, 33
563460 .....	25, 33
568976 .....	117, 185
568999 .....	117, 185
571073 .....	37
571722 .....	117, 185
571725 .....	117, 185
572472 .....	25
572474 .....	25
572535 .....	41
572536 .....	41
572537 .....	41
572538 .....	41
574091 .....	37
574768 .....	199
579114.....	117
Front Spring Holder	
SP550447.....	17
Fuse	
SPPRI401001021.....	145

SP345805005020 .....	147, 153, 161, 169
SP345805163032 .	147, 149, 153, 157, 161, 165, 169
Fuse Cover	
SP554311.....	157, 161, 165, 169
Fuse Holder	
SPPRI401001020 .....	147, 153, 161, 169
SP554310 .....	157, 161, 165, 169
Fuse Housing	
SPPRI401003020 .	147, 149, 153, 157, 161, 165, 169
552482 .....	145
<hr/>	
<b>H</b>	
Handle	
SP552908 .....	121
SP552909 .....	121
SP556297 .....	121
562898 .....	121
569335 .....	121
571780 .....	125
571781 .....	123
571788 .....	121
582330 .....	121
Handle Ball	
SP535407 .....	121
Handle Lower Part	
SP535429 .....	121
571779 .....	123, 125
Handle Torsion Spring	
SP535402 .....	119, 123, 125
Heating Contactor Wiring	
PRI351105209 .....	208
PRI351107209 .....	208
PRI351108209 .....	208
Heating Element	
SP540142 .....	185
SP540143 .....	185
SP540144 .....	179, 185
SP540145 .....	179, 185
SP540146 .....	179, 185
Heating Element Cover	
568938 .....	185
Heating Element Front Cover	
SP563274 .....	117, 185
568986 .....	117, 185
579088 .....	117
Heating Element Hole Plug	
SPPRI342001016 .....	173, 175
Heating GND Wiring	
528335 .....	208
Heating Wiring	
528328 .....	208
528330 .....	208
528331 .....	208
Hex Pillar	
570381 .....	159, 163, 167, 171
Hinge	
SP516832 .....	23, 27, 31, 43
Hinge Spacer	
SP535421 .....	119, 123, 125
SP537849 .....	117, 185
Hinges	
570553 .....	119
570554 .....	119

Holder	
SPPRI326002004.....	23, 27, 31, 35
540123 .....	149, 153
570382 .....	157, 161, 165, 169
582260 .....	83, 89, 95
Holder Cover	
SP535430.....	121, 125
SP535438.....	121, 123
SP556278.....	121
569331 .....	121
Holder Partition	
SP526474.....	143
SP540167.....	143
SP554382.....	143
Hook	
SPPRI551016250.....	23, 27, 31, 43
Hook Lock	
SPPRI610002007.....	23, 27, 35, 63, 85, 87, 89
Hose	
SPPRI503002049.....	137, 139, 141
SPPRI540000014.....	131, 133, 135, 205, 207
SPPRI540001019.....	193
SPPRI540020005.....	197
529747 .....	197
Hose Clamp	
SPPRI240000002.....	131, 133, 135, 205, 207
SPPRI240000003.	131, 133, 135, 137, 139, 141, 193,
205, .....	207
SPPRI240000007.	131, 133, 135, 137, 139, 141, 199,
201, .....	205, 207
SPPRI240000015.....	187
SPPRI240000017.....	131, 139, 141, 205, 207
SPPRI240000021.....	131, 133, 135, 205, 207
SPPRI241000017.....	137, 139, 141
SP526491.....	131, 133, 135, 205, 207
SP526532.....	137, 139, 141
576096 .....	137, 139, 141
Hose Coupling	
567173 .....	193
Hose End	
567171 .....	193
Hose Pharmasteel	
567180 .....	193
Hose Pipe	
SP101745.....	131, 133, 135
<hr/>	
<b>I</b>	
Inlet Valve Extension Wiring	
552477 .....	208
Insulation Washer	
571458 .....	157, 161, 165, 169
Interconnection	
SP545220.....	145
528169 .....	145
Internal Vessel	
SP540122.....	131, 133, 135
Isolation Cavity	
345000966067 .....	145
557936 .....	145
Isolation Paper	
SPPRI350012007.....	97, 99, 143

N/A items do not appear in index.

## K

Key	SP550616 .....	23, 27, 63, 85, 87, 89
Keyboard	SP537994 .....	65
	SP547011.....	65
	SP547012.....	65
	SP547013.....	65
	SP547014.....	65
	SP547023.....	45, 65
	SP547024.....	45, 65
	SP547025.....	45, 65
	SP547026.....	45, 65
	SP547035.....	65
	SP547036.....	65
	SP547037.....	65
	SP547038.....	65
	SP552911.....	65
	SP556112.....	65
	SP557566.....	67, 69, 71
	SP557569.....	55
	SP557570.....	55
	SP557575.....	45
	SP557576.....	45
	SP557580.....	45
	SP557583.....	45
	SP559375.....	55
	SP559378.....	55
	SP560755.....	65
	SP560761.....	55
	SP560762.....	55
	547087 .....	67
	547088 .....	67, 69, 71
Kit of Hinges	570553 .....	123, 125

## L

Label	SP563291 .....	65
	SP564831 .....	119
	524740 .....	149, 153
	557981 .....	145
	560786 .....	31
	570371 .....	157, 161, 165, 169
	572486 .....	9
	572487 .....	9
	576337 .....	9
	579019 .....	157, 161, 165, 169
Label Covering	567925 .....	73
Latch	SP527083 .....	37
Leading Pin	SP550113.....	45, 55, 73, 75, 77
Left Cover	574784 .....	199
Liquid Detergent Box	SP540123 .....	147
Liquid Soap Supply Connection Kit	SP540180 .....	143
Locating Segment	SP529710 .....	121

N/A items do not appear in index.

571773 .....	123, 125	
Lock23	SP537760.....	119
	SP547527.....	23, 27, 35, 63, 85, 87, 89
Lock Pin	SP537933.....	119
Logo	567887 .....	83, 89, 95
Lower Frame	SP533771.....	13
Lower Hinge	575963 .....	119, 123, 125
	575965 .....	119
Lower Lath	SP547515.....	63
Lower Rear Cover	SP533382.....	29
	SP533383.....	25, 33, 37, 41
Lower Weight	SP533737.....	11
	SP533753.....	11
	SP533784.....	11
Lubrication Grease	SP111313000002 .....	189

## M

Main Switch	SPPRI404000097..143, 149, 153, 157, 161, 165, 169	
	SPPRI404000098..143, 149, 153, 157, 161, 165, 169	
	SPPRI404000099..143, 149, 153, 157, 161, 165, 169	
	SPPRI404001098.....143, 149, 153, 157, 161, 165	
	SPPRI404001099.....143, 149, 153, 157, 161, 165	
	SP506407.....143, 149, 153, 157, 161, 165	
Main Switch Knob	SPPRI404000095..147, 149, 153, 157, 161, 165, 169	
Main Vessel	SP540115 .....	131, 133, 135
Main Wiring	SP552475.....	143
	SP557768.....	143
	568392 .....	208
Manifold Flush Kit	529789 .....	197
	529797 .....	197
	529798 .....	197
	529799 .....	197
	529800 .....	197
Microswitch	SP528309.....	13
	568978 .....	127
	571634 .....	185
Mixer	SP526558.....	131, 133, 135, 205, 207
Mixer Body	SP526565.....	131, 133, 135, 205, 207
Mixer Lid	SP526557.....	131, 133, 135, 205, 207
Module	553189 .....	41
Motor and Pulley	SP555582.....	187
	SP555585.....	187
	SP557451.....	187

SP557454 .....	187
571447 .....	187
571448 .....	187
Motor Holder	
SP533781 .....	187
Motor Temperatuer Protect Cable	
568397 .....	208

---

## N

Network Installation Kit	
569593 .....	45, 55, 63
Nose Assembly	
572582 .....	79
573954 .....	91
574126 .....	85
574235 .....	79
574238 .....	85
574241 .....	91
576034 .....	81
576037 .....	87
576040 .....	93
576043 .....	81
576046 .....	87
576049 .....	93
579187 .....	83
581632 .....	89
581638 .....	95

## Nut

F430225 .....	127
F430232 .....	127
SP101416 .....	143, 149, 153, 157, 161, 165, 169
SP101419 .....	143, 149, 153, 157, 161, 165, 169
SP309084000308 .....	79, 81, 85, 87, 91, 93
SP310934000003 .....	13
SP310934000004 ..	45, 55, 63, 67, 69, 71, 73, 75, 77,
79, ...	81, 83, 85, 87, 89, 91, 93, 95, 97, 99, 143, 147,
151, .....	155
SP310934000008 .....	187
SP310934000010 .....	13
SP310934000020 .....	13
SP310934100006 .	143, 151, 155, 159, 163, 167, 171
SP310934240004 .....	127
SP310934240006 .....	185
SP310934240008 .....	179, 185
SP3109850000611, 31, 43, 117, 121, 123, 125, 185,	187
SP310985000008 .....	11, 13, 179, 183
SP310985000010 .....	13, 179, 183
SP310985000012 .....	187
SP313251000006 .....	23, 27, 31, 35, 43, 173
SP313251002104 .....	117, 193
SP510923 .....	13
SP514193 .....	29, 35
567170 .....	193
571635 .....	185

---

## O

O-Ring	
567168 .....	193
567169 .....	193
Oscillation Limiter	
SP533388 .....	11

Overflow Tube	
SP526480 .....	131, 139, 141, 205, 207
Overlay	
573927 .....	79, 81
573935 .....	87
573936 .....	85
573950 .....	93
573951 .....	91
574217 .....	79, 81
574219 .....	87
574220 .....	85
574222 .....	93
574223 .....	91

---

## P

Panel Holder	
SP533293 .....	31
SP557621 .....	23
SP560302 .....	27
567960 .....	35
573938 .....	41
Pin	
SP540117 .....	131, 133, 135
Pin Insertion	
SP520408 .....	13, 23, 25, 27, 31, 35, 43, 45, 55
Pipe	
570807 .....	199
Pipe Nipple	
SPR22112000114 .....	173, 175
Plastic Window	
582274 .....	83, 89, 95
Plate of Closing	
568941 .....	127
Plug	
SPPRI426001268 .....	173, 175
567053 .....	205, 207
Profile	
SP522450 .....	185
SP527088 .....	37
522450 .....	37
Profiled Sealing	
SPPRI505000058 .....	13, 27, 137, 151, 155, 159, 163, 167, .....
.....	171, 185
Programmer Holder	
SP547510 .....	63
SP547513 .....	63
SP557618 .....	45
SP558896 .....	55
569578 .....	35
573934 .....	41
Programming Cable	
F8600501 .....	45, 55, 63
Pulley Ring	
SP556149 .....	187
Pump	
529742 .....	197
529743 .....	197
529744 .....	197
529745 .....	197
529746 .....	197
567151 .....	193
Pump Board	
567113 .....	193

N/A items do not appear in index.

Pump Relay Board to LED Terminal Cable	
SP528149 .....	147
Push Bottom Cover	
SPPRI543000003 .....	149, 153, 157, 161, 165, 169

---

## R

Rear Cover	
SP533143 .....	25, 27, 31
570468 .....	37, 41
Rear Panel	
SP540149 .....	145
SP554381 .....	145
567946 .....	157, 161
574118 .....	165, 169
577194 .....	149, 153
Rear Panel Lid	
SP540121 .....	147
Rear Spring Holder	
SP550449 .....	15, 17, 19, 21
Reduction	
567128 .....	137
567174 .....	131
Reinforcement	
SP558880 .....	23
SP558944 .....	27
Reinforcement Tube	
SP500125 .....	137, 139, 141
Relay	
SP514057 .....	145
Relay Case	
SP506586 .....	145
Relay Clamp	
SP514135 .....	145
Reverse Function Drain Valve	
SP547821 .....	137, 139, 141
Right Cover	
574790 .....	199
Rim	
SP562546 .....	119, 123
573188 .....	119
582298 .....	119
Ring	
SP527085 .....	35
Rivet	
SP313250004007 .....	143
SP313250004063 .....	35
SP313250048008 .....	23, 27, 31
SP313250048103 .....	43
SP521706 .....	35
SP54777913, 23, 25, 27, 31, 35, 43, 45, 55, 117, 185	
505479 .....	15, 17, 19, 21
Roller	
SP533727 .....	13
RS485 External Interconnection	
SP547075 .....	208

---

## S

Screw	
F430977 .....	127
SP309798124313 .....	131, 133, 135
SP520407 .....	81, 83, 87, 89, 93, 95

N/A items do not appear in index.

SP526497 .....	131, 133, 135, 137, 151, 155, 159, 163, 167, 171, 205, 207
SP529206 .....	11, 13, 23, 25, 27, 29, 31, 33, 35, 43, 83, 89, 95, 97, 99, 131, 133, 135, 137, 139, 141, 143, 147, 151, 155, 159, 163, 167, 171
582361 .....	83, 89, 95

## Seal

SPPRI520001009 .....	131, 205, 207
SP517232 .....	11, 23, 27, 33, 43
SP526564 .....	173
SP537739 .....	179, 185
564202 .....	35

## Sealant

SPPRI704000053 .....	179
----------------------	-----

## Sealing Ring

SP525813 .....	189
SP537848 .....	189

## Self-Adhesive Pad

SPMEC001410 .....	45, 55
-------------------	--------

## Self-Adhesive Profile

570387 .....	157, 161, 165, 169
--------------	--------------------

## Service Door Kit

568991 .....	115, 119, 123, 125
--------------	--------------------

## Shaft Ring

SP537843 .....	179, 185
----------------	----------

## Side Board

570391 .....	63
570392 .....	63

## Side Panel

SP550322 .....	31
SP550324 .....	33
SP550346 .....	31
SP550348 .....	33
SP557651 .....	23, 27
SP557653 .....	25, 29
SP558980 .....	27
SP558982 .....	29
563476 .....	31
563478 .....	33
563504 .....	23
563506 .....	25
572001 .....	39
572002 .....	39
573046 .....	39
573048 .....	39
574063 .....	39
574064 .....	39

## Side Panel Assembly

574143 .....	41
574144 .....	41
574147 .....	41
574148 .....	41

## Side Sheet Metal

SP547506 .....	63
SP547507 .....	63

## Sidewall

572571 .....	79, 85, 91
572572 .....	79, 91
572586 .....	79, 85, 91
572588 .....	79, 85, 91
573929 .....	79, 81, 85, 87, 91, 93
576069 .....	81, 83, 87, 89, 93, 95
576070 .....	81, 83, 87, 89, 93, 95

## Soap Hopper

SP540111 .....	131, 133, 135
SP554213 .....	131

Soap Hopper Plug	
SP526468	131, 133, 135
Soap Hopper Upper Cover	
SP540112	131, 133, 135
Soap Link Kit	
SP557944	147, 149, 153
Soap Pump Kit	
Sp567105	193
Sp567106	193
Soap Relay Board	
SP524714	147
527714	149, 153
553187	157, 161, 165, 169
Spacer	
F431901	127
Speed Sensor	
SP557701	187
Speed Sensor Holder	
SP555547	187
Speed Sensor Plate	
SP555545	187
Spiral	
SP283449080200	137, 139, 141
Spring	
SP505372	15, 17, 19, 21
SP527086	35
SP533768	13
SP533769	13
Spring Clamp	
SP540183	137, 139, 141
Spring Holder	
SP534977	13
SP534978	13
SP526482205, 207	
SP55936223	
Steam Filter	
SP405054120215	173, 175
Steam Heat Wiring	
528064	208
Steam Hose	
SP526528	173, 175
Steam Injector	
SP526525	173, 175
Steam Kit	
SP559314	173
555354	175
Steam Valve	
SP514164	173, 175
Steam Valve Body	
SP514165	173, 175
Steam Valve Cable	
SPPRI351000161	208
Steam Valve Cover	
570436	175
Steam Valve Support	
SP526531	173, 175
Sticker	
568308	145
Suction Tube	
529787	197
Supply Pump Kit	
MB90-Z40	197
MB90-Z41	197
MB90-Z42	197

MB90-Z43	197
MB90-Z44	197

Support	
580797	11
Switch	
SP100388	147, 149, 153, 157, 161, 165, 169
Switching Unit	
SP528312	45, 55, 63, 67, 73, 79, 81, 83

---

## T

Tape	
SP284000012003	31, 45, 55, 63, 67, 69, 71, 73, 75, 77, 83, 89, 95, 185
SP510846	45, 55, 63
Tee	
SP526454	137, 139, 141
Temperature Sensor	
SP503839	205
503839	131, 133, 135, 207
Temperature Sensor Seal	
SP526439	131, 133, 135, 205, 207
Tensioning Angle Piece	
SP533326	187
SP533327	187
Terminal Board	
SPPRI350000007	97, 99
SP506575	145
Thorn	
567152	193
Top Cover	
SP550305	31
SP551995	31
SP557637	23
SP558902	27
567875	23
567992	39
569647	39
572482	23
573313	23
574204	41
574253	41
Top Cover Reinforcement	
SP547704	23, 27, 31, 41
Torsion/Door Lock Spring	
571612	127
T-Part	
567172	193
Transformer	
SP516648	143
579014	157, 161, 165, 169
Transformer Connection	
528350	208
552495	208
Transformet	
SP516648	153, 161, 169
564561	157, 161, 165

---

## U

U Shape	
SP556983	29
SP556984	29

N/A items do not appear in index.

Upper Frame	11
SP533776	
Upper Hinge	
575960	119, 123, 125
575962	119
Upper Lid Prop	
SP533341	23, 27, 31, 41
USB Cable	
SP547006	147, 149, 153, 157, 161, 165, 169
569668	97
USB Connection	
SP557744	55

---

## V

Valve, 1-Way	
570195	205, 207
Valve, 2-Way	
SP547958	131, 135
Valve, 3-Way	
SP547959	131, 133, 135
Valve, 4-Way	
SP548933	131, 133
Vent Hose	205, 207
SP526482	131, 133, 135
Vibration Switch Assembly	
SP533391	13
Vibration Switch Holder	
SP533387	13

---

## W

Washer	
F8193101	127
PRI247000013	35
SPPRI522000012	23, 27
SPPRI523000007	151, 155
SP311125000003	13, 79, 81, 85, 87, 91, 93
SP311125000004	63, 73, 75, 77, 143, 147, 151, 155, 159, 163, 167, 171
SP311125000006	23, 173, 175
SP311125000008	11, 179, 183
SP311125100006	.. 143, 151, 155, 159, 163, 167, 171
SP311125240004	127
SP311125240006	145, 151, 155, 159, 163, 167, 171, 185
SP311125240008	179, 183, 185
SP311127000003	79, 81, 85, 87, 91, 93
SP311127000004	35, 73, 75, 77, 143, 147, 151, 155, 159, 163, 167, 171
SP311127000006	23, 27, 159, 163, 167, 171, 173, 175, 193
SP311679800003	13, 35, 43, 45, 55, 63, 67, 69, 71
SP311679800004	.. 11, 13, 33, 43, 45, 55, 63, 67, 69, 71, 73, 75, 77, 79, 81, 83, 85, 87, 89, 91, 93, 95, 151, 155, 159, 163, 167, 171
SP311679800006	185
SP311679824004	127
SP311679824006	143, 145, 151, 155, 159, 163, 167, 171
SP311737000010	179, 183
SP311902100004	.. 13, 29, 35, 45, 55, 63, 67, 73, 75, 77, 79, 81, 83, 85, 87, 89, 91, 93, 95, 163, 193
SP311902100006	.. 31, 43, 121, 123, 125, 159, 163,

N/A items do not appear in index.

167	.....	171, 193
SP311902100008	.....	137, 139, 141
SP311902100010	.....	13, 187
SP311902100012	.....	187
SP505430	.....	159, 163, 167, 171
SP525284	.....	11
SP527021	.....	35
SP527087	.....	35
SP537885	.....	179, 183
SP547981	.....	173, 175
550446	.....	25, 29, 33, 37, 41
563361	.....	143
571642	.....	119, 123, 125
576338	.....	43
582275	.....	179, 183
582327	.....	127

## Washing Drum

537766P	.....	177, 181
563246P	.....	177, 181
563266P	.....	177, 181
579033P	.....	177, 181
579136P	.....	177, 181
579190P	.....	177, 181

## Water Heater

SP562736	.....	193, 195
SP562749	.....	193, 195

## Water Hose

F200164	.....	131, 133, 135
---------	-------	---------------

## Water Level Switch

562709	.....	141
570315	.....	139, 141

## Water Level Switch Hose

SPPRI540001003	.....	137, 139, 141
----------------	-------	---------------

## Water Softener

SP562737	.....	193, 195
SP562750	.....	193, 195

## Waters Level Sensor

SP562709	.....	137
----------	-------	-----

## Wireless Reader Wiring

552466	.....	208
--------	-------	-----

## Wiring Steam - Electrical Heating

528393	.....	208
--------	-------	-----

---

## Y

### Y-Piece

SPPRI503000028	.....	137, 139, 141
----------------	-------	---------------

---

## Numerics

### 1

#### 111

1-Way Valve		
-------------	--	--

573621	.....	131
--------	-------	-----

---